

FIRSTECH, LLC.
SUPPORT • 1(888) 820-3690, EXT. 203

• FT-DAS Required for manual transmission.
 • BOTH Red & Red/White Must be connected with high current application.


Jumper Setting			
Parking Light	Accessory	Ignition (Default)	(+)Door Trigger In (-)Door Trigger In (Default)
Trunk	Starter	Parking Light (Default)	Starter Ignition Accessory (Default)

CM7000/7200
 Cut loop for A/T
 CMX


CM900AS/900S Jumper

START
 ACC
 IGN1

CM-900S/900AS

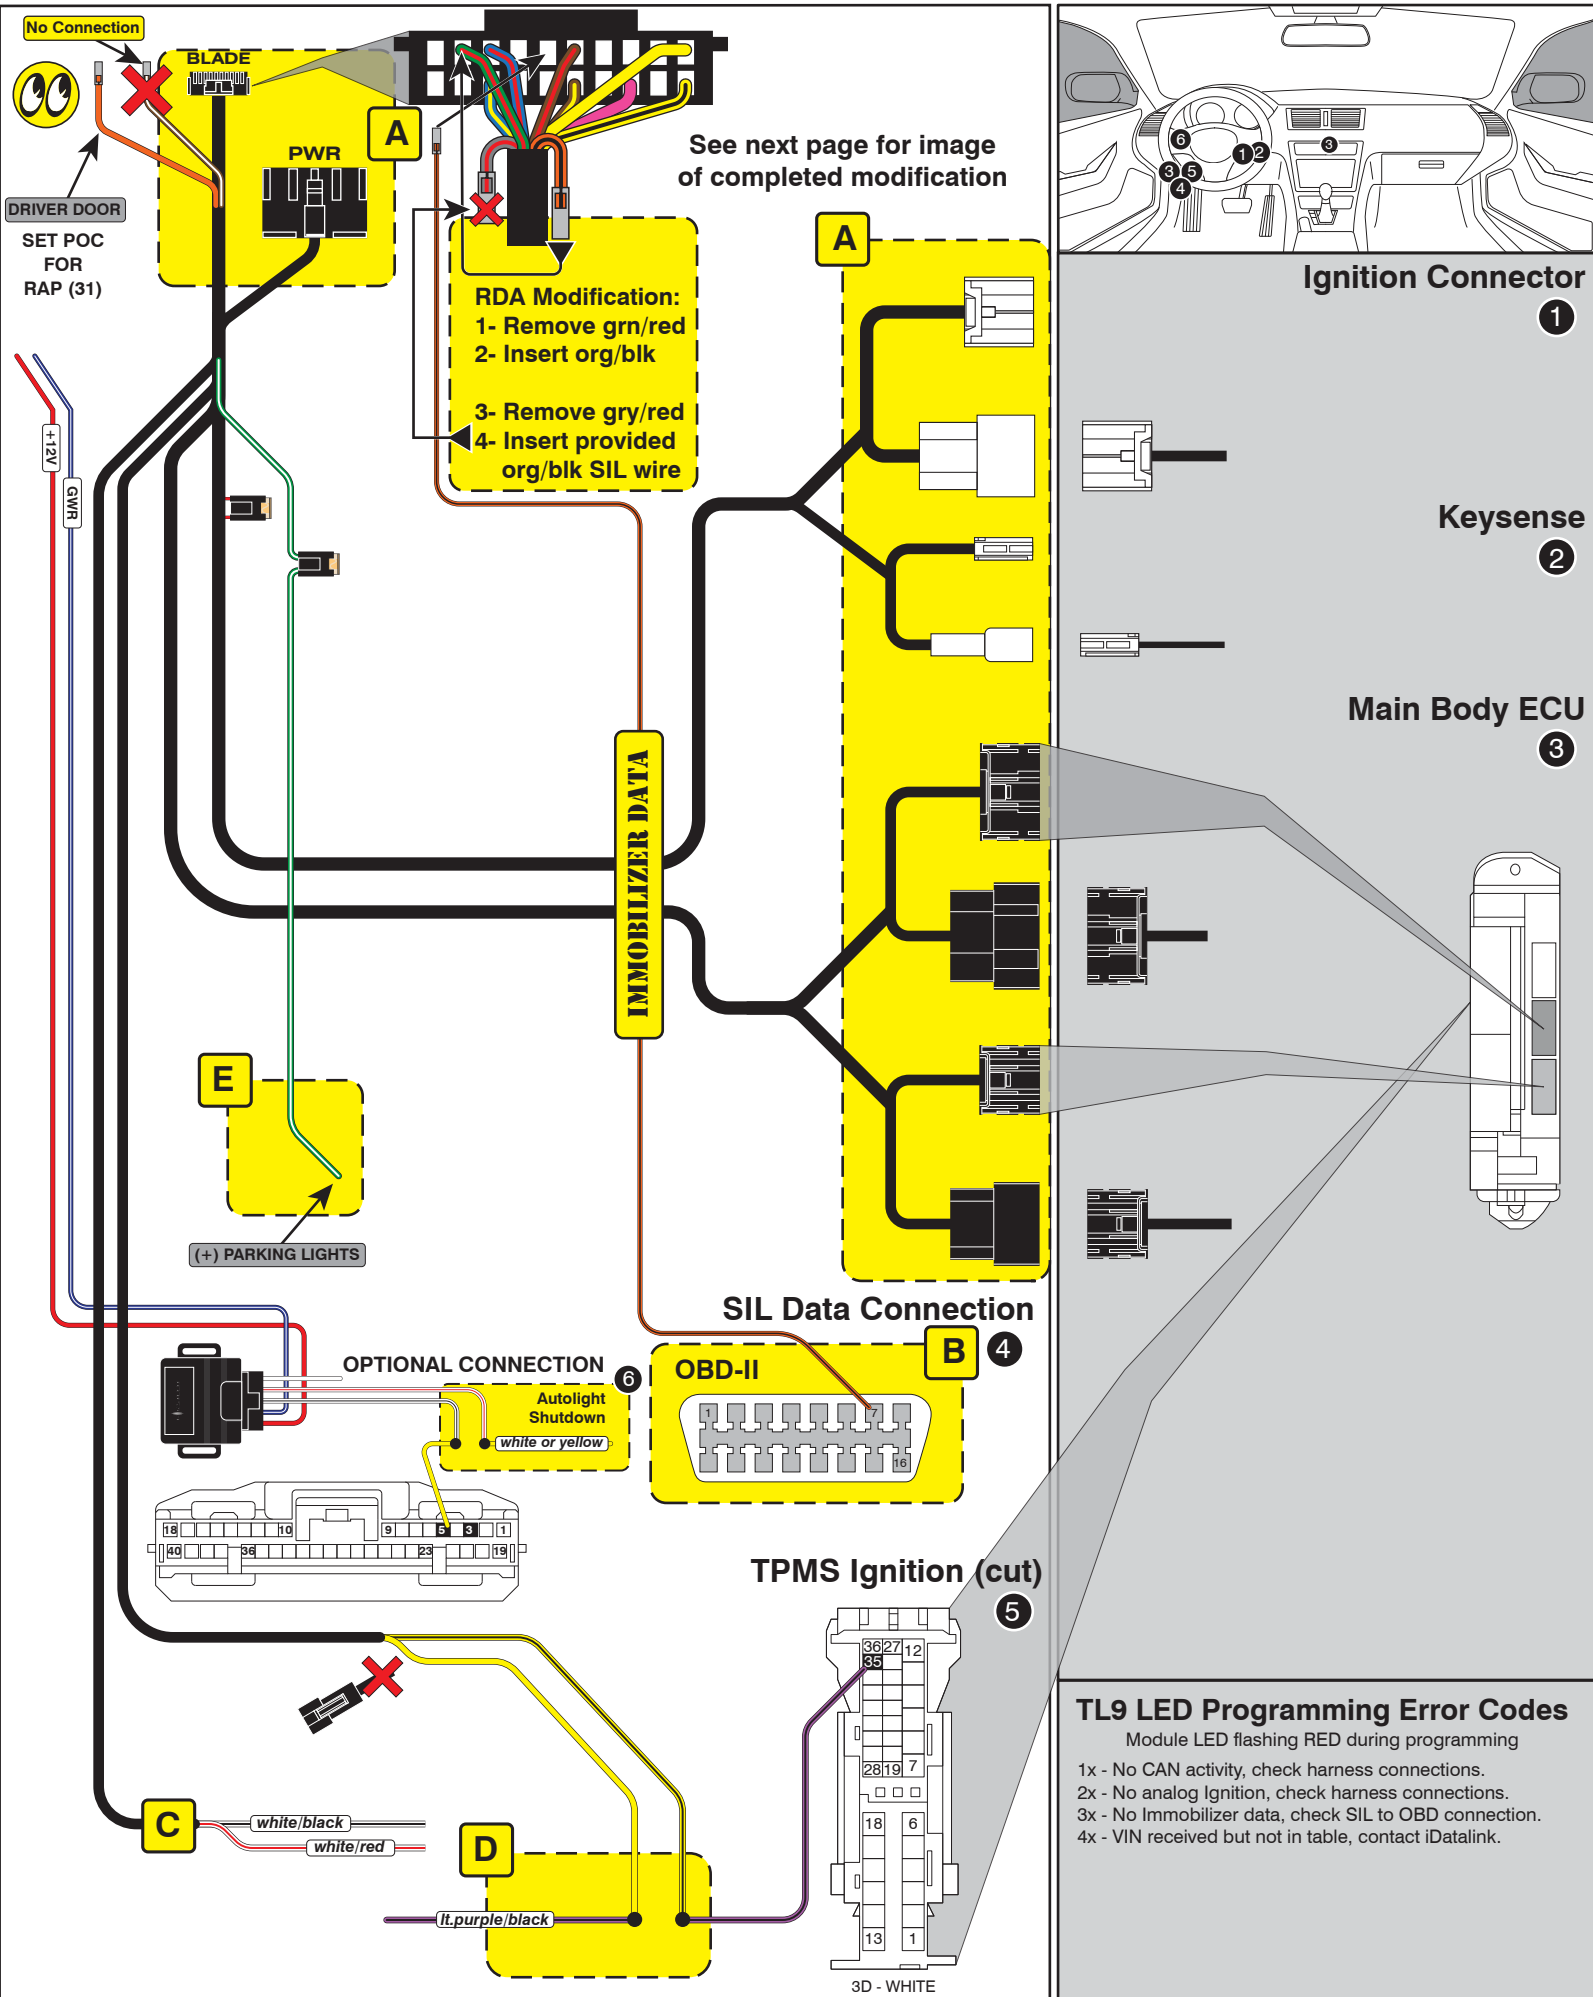

CARTRIDGE INSTALLATION

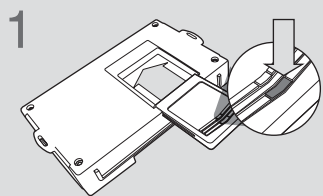

Slide cartridge into unit. Notice button under LED.


2

Ready for Module Programming Procedure.


MODULE PROGRAMMING PROCEDURE

NOTE

I IMPORTANT: The hood must be closed.

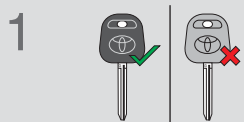


Use the BLACK key only.
DO NOT use the GRAY valet key.

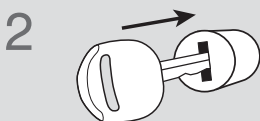

Insert key into ignition.




Turn key to ON position.




LED will turn solid RED.

5



Wait, LED will turn solid BLUE for 2 seconds.

6



Turn key to OFF position.

7

Module Programming Procedure completed.

Completed Modification

