

RX Wiring Kit



XE360 Von Duprin 99 Exit




Installation Instructions



Scan for user guide,
interactive instructions,
warranty and more!
alle.co/XE360

1 Route RX wires.


- 1a Route wires through channel beneath baseplate, as shown.
- 1b Trim the exit device RX wires as necessary and route up into center case area.

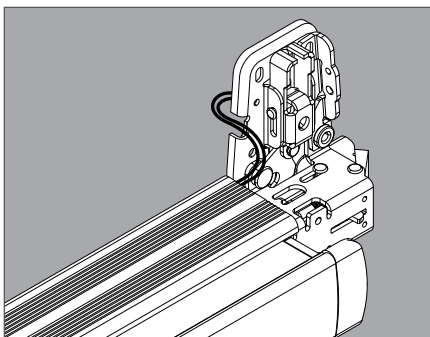

2 Connect wires and mount device.

- 2a Route the harness around the side of the center case.
- 2b Connect to the REX harness.
- 2c Make connections with provided Scotchlok connectors inside center case (color orientation does NOT matter)


REX harness

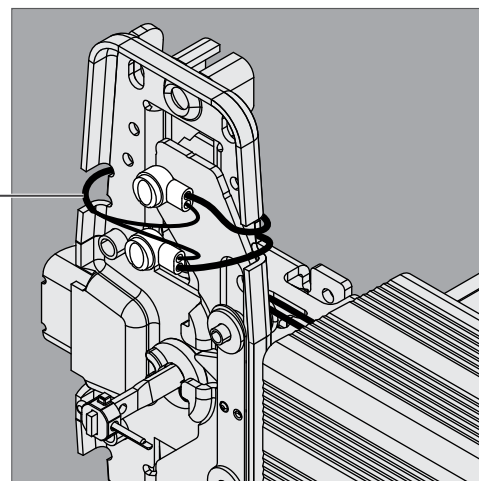

- 2d Finish mounting exit device.



© Allegion 2024
115867 Rev. 01/24-a

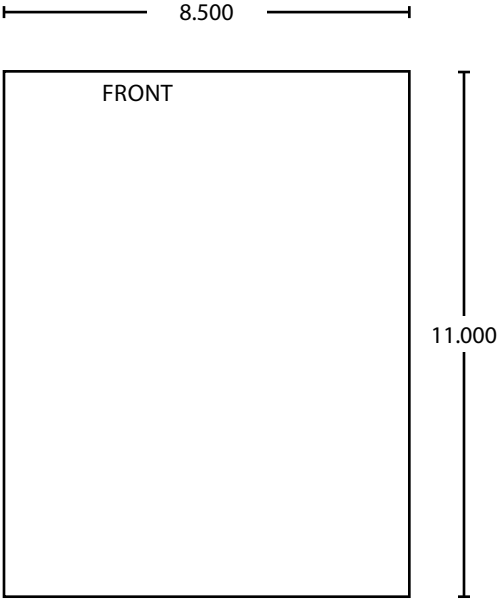

BEGINNING SHEET

Additional Notes:

Revision History						Revision Description: A > new artwork			
A	B	C	D	E	F				
xxxxx									
Material White Paper						Edited By	Approved By	EC Number	Release Date
						M. Sasso	D. Toppins	xxxxxx	01-30-24
Notes 1. printed two sides 2. printed black 3. tolerance ± .13 4. printed in country may vary 5. drawings not to scale						Title SHEET, INSTRUCTIONS, XE360 RX WIRING KIT			
						Creation Date 06-08-23	Number 115867		Revision A
						Created By M. Sasso	Activity 3899 Hancock Expwy Security, CO 80911		© Allegion 2024
						Software: InDesign CS6			