

# VEVOR


**Affordable. Reliable. Home Improvement.**

## HEAT TRANSFER VINYL

# VEVOR

Affordable. Reliable. Home Improvement.

## HEAT TRANSFER VINYL

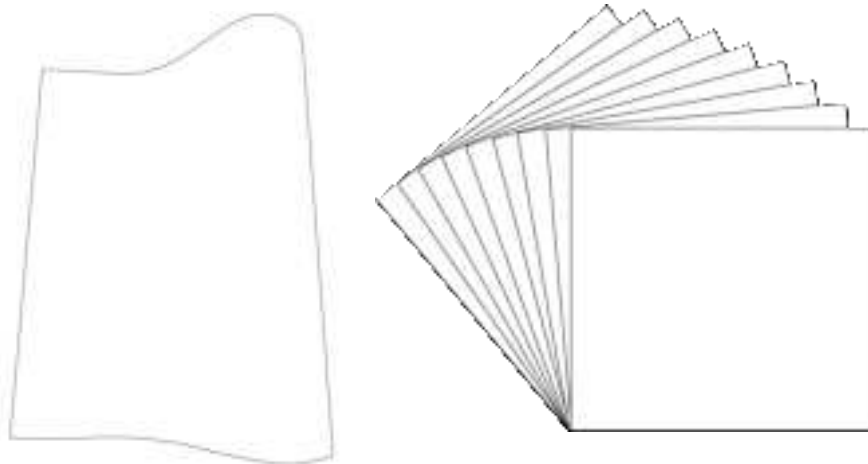

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

## 1.Precautions

To maintain the product's quality, it is recommended to clean with regular detergent. Do not dry clean or use bleach. Additionally, printing should not be applied to materials such as waterproof coatings, metal products, ceramics, plastics, or wooden items.

## 2.Parameter table

	MODEL	STYLE	SPECIFICATIONS	COLOUR
1	PVC-K2-25FT	ROLL	12"*25'	BLACK
2	PVC-K1-25FT	ROLL	12"*25'	WHITE
3	PVC-K1-50FT	ROLL	12"*50'	WHITE
4	PVC-K2-50FT	ROLL	12"*50'	BLACK
5	PVC-K2-70FT	ROLL	12"*70'	BLACK
6	PVC-K1-70FT	ROLL	12"*70'	WHITE
7	PVC-K-VINYL-80PCS	SHEET	12"*12"	MULTI-COLOR
8	PVC-K-VINYL-50PCS	SHEET	12"*12"	MULTI-COLOR
9	PVC-K-VINYL-30PCS	SHEET	12"*12"	MULTI-COLOR

## 3.Product Features

Made of new nanomaterial, bright color and soft, good elasticity, no fading, no cracking, good fit, easy to tear, reset, no warping, washable, yellowing resistance, smooth cutting, good waste discharge, convenient production and printing.

## 4.Heat transfer process

Heat press temperature setting: 150℃-160℃, pressing time: 5-10 seconds; medium pressure; hot peelable.

## 5.Vinyl Cutter Parameter Settings

For Cricut: Blade: Standard; Mode: Iron on+

For Cameo: Blade-10; Force-5; Speed-5; Passes-2; Material:Smooth

## 6.How to use Heat Transfer Vinyl

1.Use computer to create your design,be sure to cutthe mirror side (reversed).

2.Feed the vinyl into cutting machine clear film down.Be sure to test a small area first.

3.Remove the excess parts. (can use weeding tools such as a small knife).

4.Place the graphic on the target area. Make sure the surface is flat.

5.Hold steady your heat press at 300-330°F/5-15s. Advice heat press (302°F/150°C/10s) / iron at (302°F/150°C/15s) firmly press.

6.Hot peel and wait 24 hours before the first wash.If flipped,it means your pressure and temp not enough,increase them and try again.

**Manufacturer:** Shanghaimuxinmuyeyouxiangongsi

**Address:** Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

**Imported to AUS:** SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

**Imported to USA:** Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP
----	-----

YH CONSULTING LIMITED. C/O YH Consulting  
Limited Office 147, Centurion House, London  
Road, Staines-upon-Thames, Surrey, TW18 4AX

EC	REP
----	-----

E-CrossStu GmbH  
Mainzer Landstr.69,  
60329 Frankfurt am Main.

