


Notice

Before mounting the W790 WS motherboard into your case, please follow the instructions below.

Step 1

Locate the nine mounting holes on the motherboard.

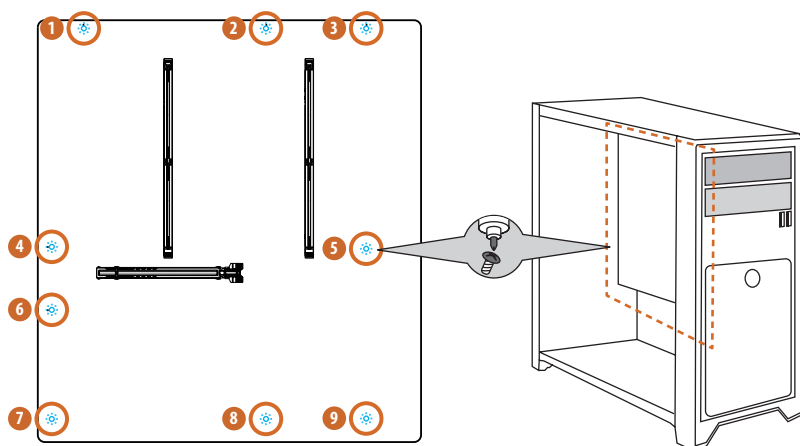

The illustration shown here is for reference only and may not be an exact representation of your motherboard's layout.

Step 2

Check whether or not the alignments and positions of the motherboard's mounting holes match the pre-installed standoffs on the motherboard tray in your case.

Step 3

Remove the uncorresponding standoffs before installing your motherboard.

**A standoff installed in the wrong place may cause electrical shorts and lead to unexpected malfunctions or other problems.*