


Sideboard

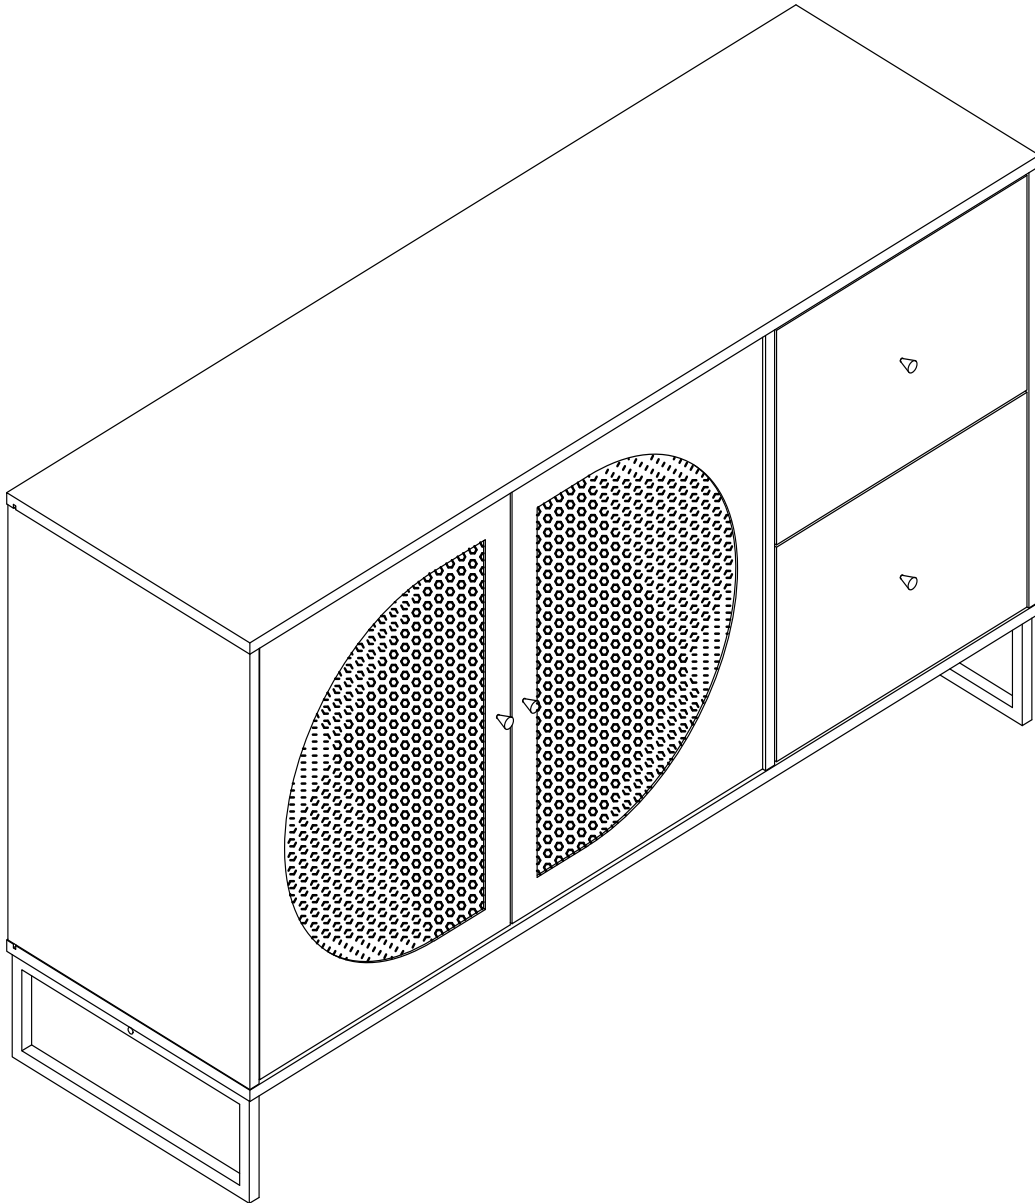

WF307220EAA
WF307221EAA

Safety and Care Advice

sembly.

Warning: This unit is relatively heavy. Please lift with care.

Check you have all the components and tools listed on pages 2 and 3.

Remove all fittings from the plastic bags and separate them into their groups.

Keep children and animals away from the work area, small parts could choke if swallowed.

Parts of the assembly will be easier with 2 people.

Make sure you have enough space to layout the parts before starting.

Do not stand or put weight on the product, this could cause damage.

Assemble the item as close as possible to its final position in the same room.

Assemble on a soft level surface to avoid damaging the unit or your floor use opened out unit carton.

Care and maintenance

bleach or abrasive cleaners.

From time to time check that there are no loose screws on this unit.

(Note)

If required the next page can be cut out and used as reference throughout the assembly.


Keep this page with these instructions for future reference Product Manual.

This product consists of 2 logistics packages, please check the number of your packages, if there is any missing, please contact the logistics.


Please read all precautions and instructions in this manual before using this product.

If you have any questions about this product, please contact your supplier in time.


WF307220EAA

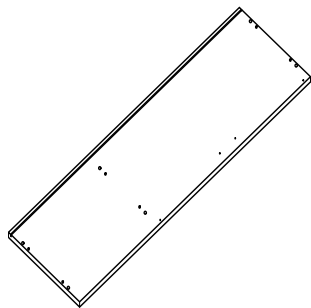


1*1

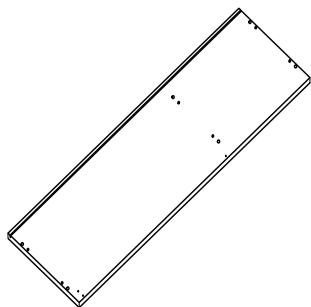


2*1

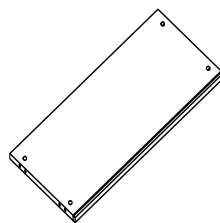


6*1

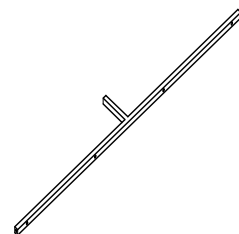


*1

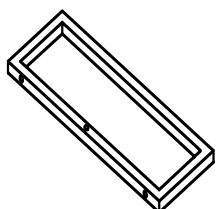


*2

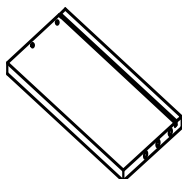


12*2

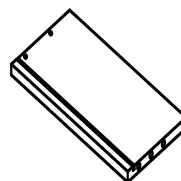


13*2

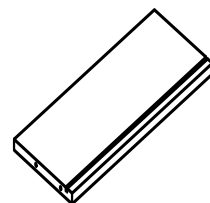


14*2

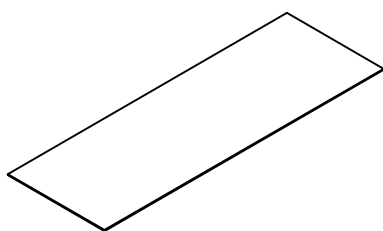


7*2



9*1

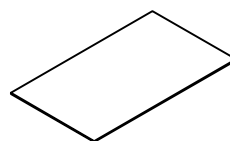


8*2

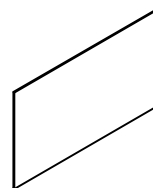


15*2


WF307221EAA

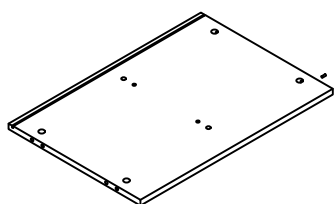


3*1

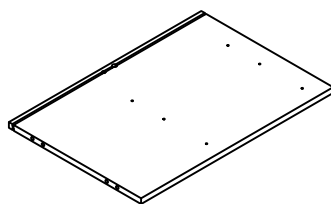


4*1

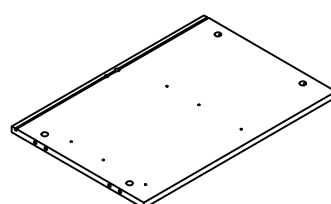


5*1

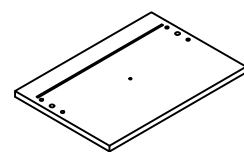


16*2

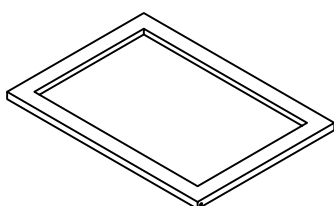


10*1

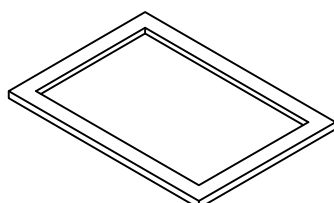

11*1

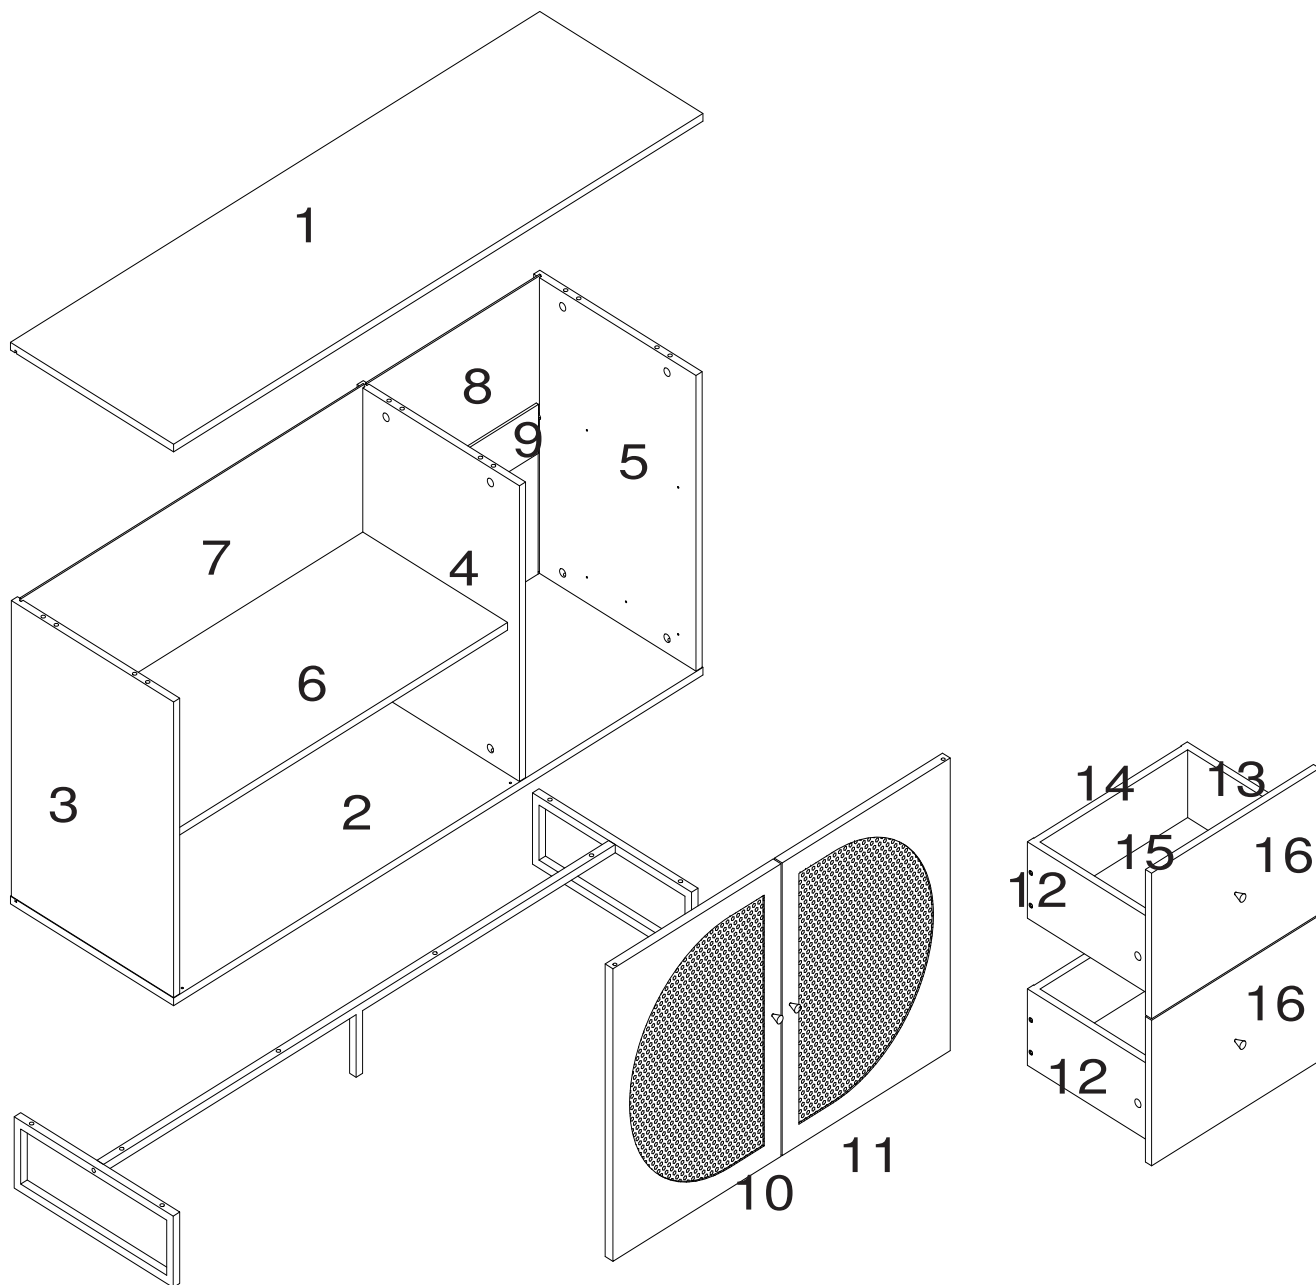

A* 26



Φ6*30

B* 26



Φ15*10

C* 26



Φ8*30

D* 8



Φ4*30

E* 24



Φ3.5*14


F* 4



G* 5




H* 10



I* 4




J* 2



18

K* 2



22



CL* 2




CR* 2




DL* 2



DR* 2










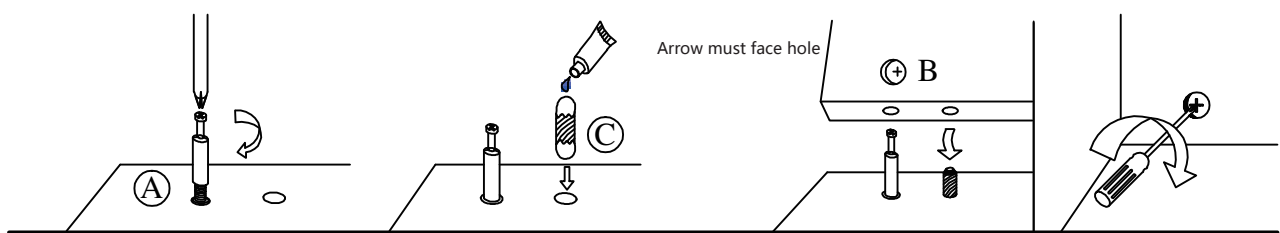


Gently screw cam bolt into the threaded anchor.


Lightly glue one end of the wood dowel and tap halfway into hole.

Lightly glue wood dowel and connect to second panel by inserting dowels into holes.

Screw the camlock firmly into locked position.

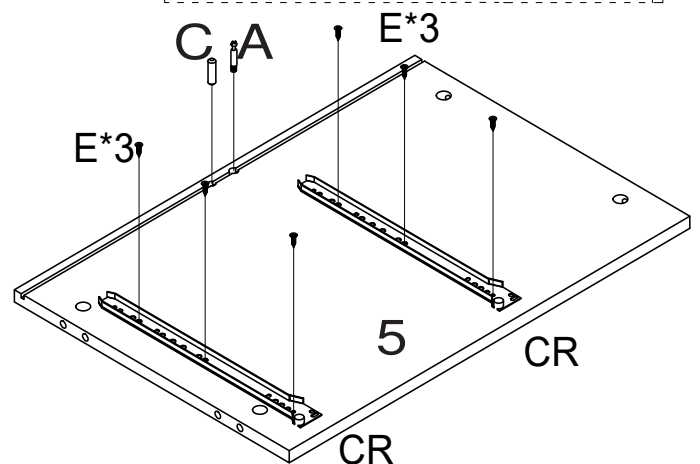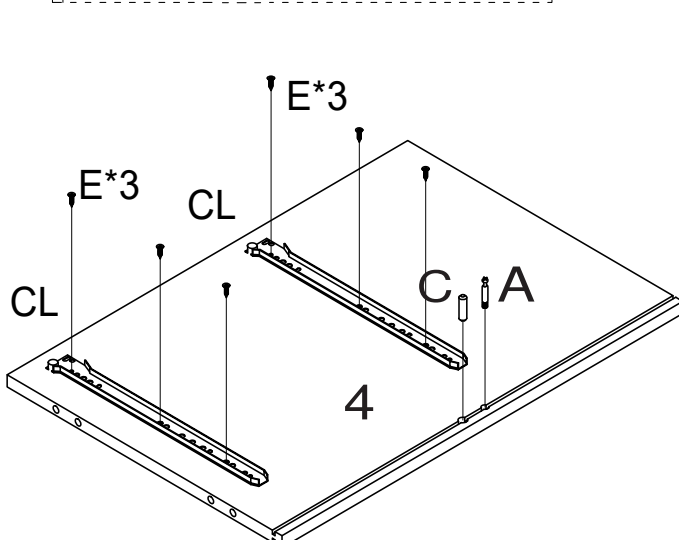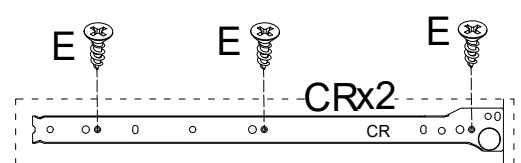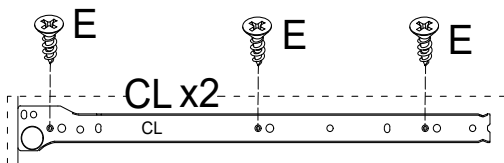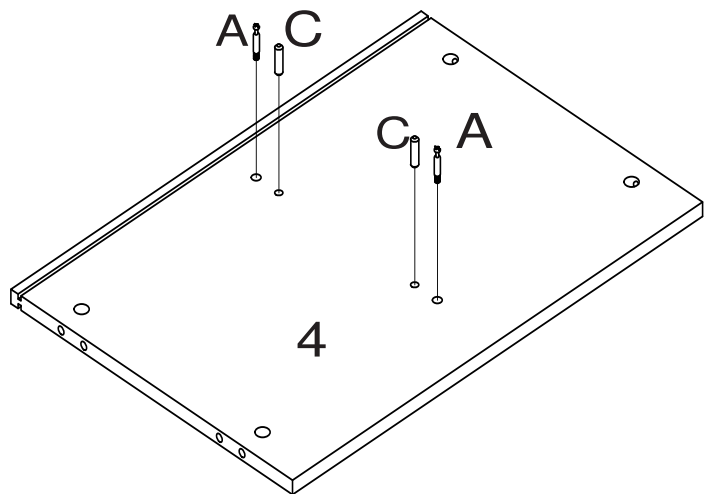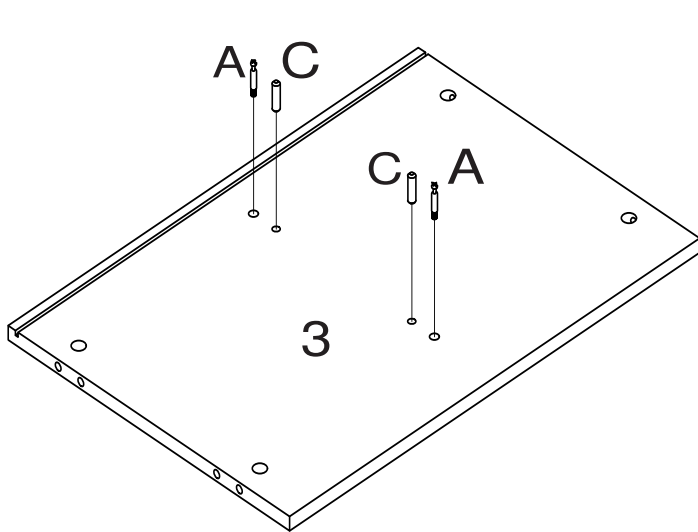

A*2



C*2






L*1






E*2



B*5


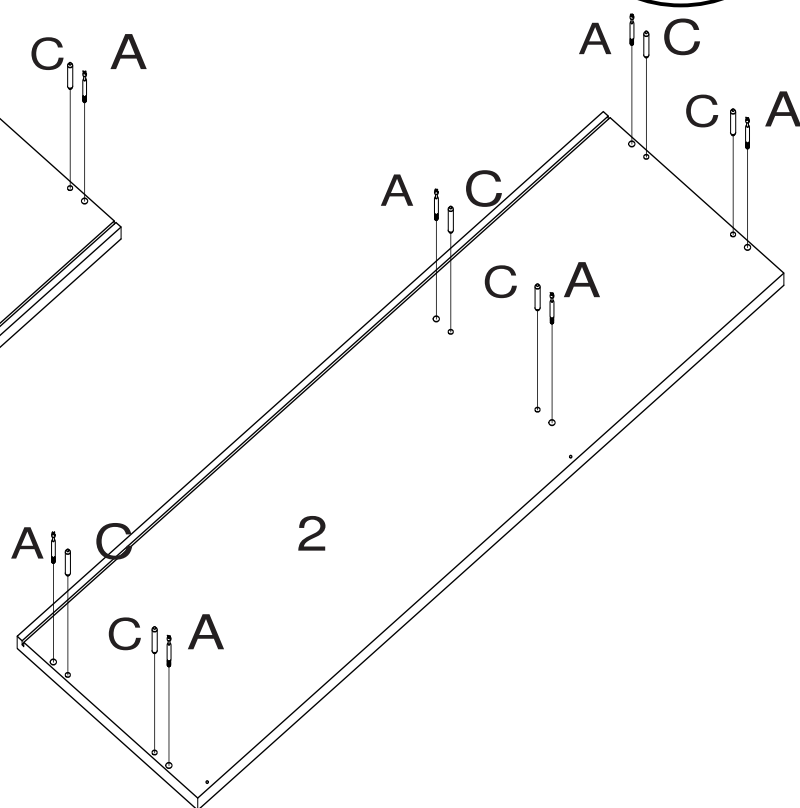
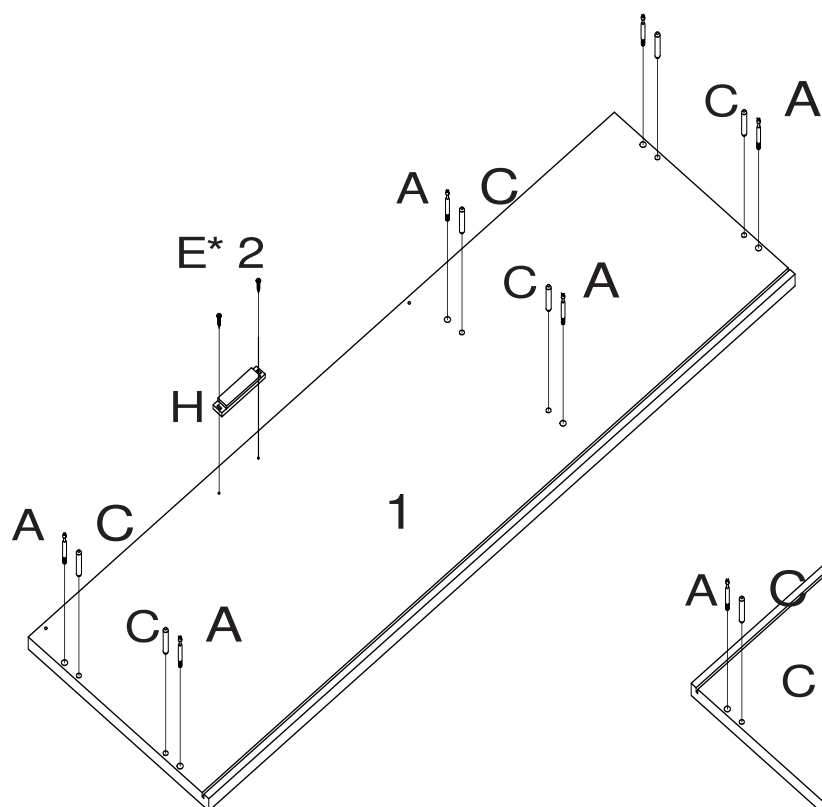
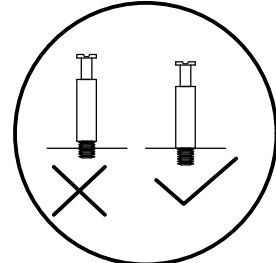



B* 4


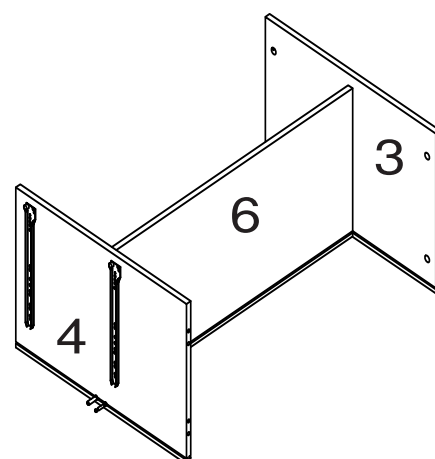

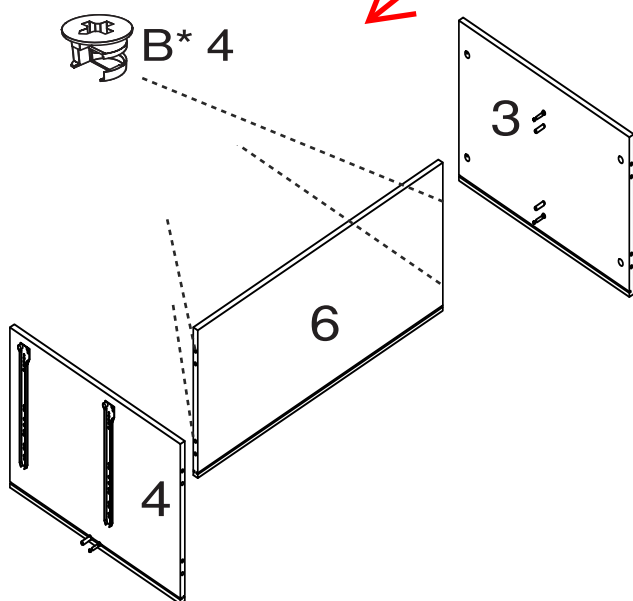




B* 1

B*7

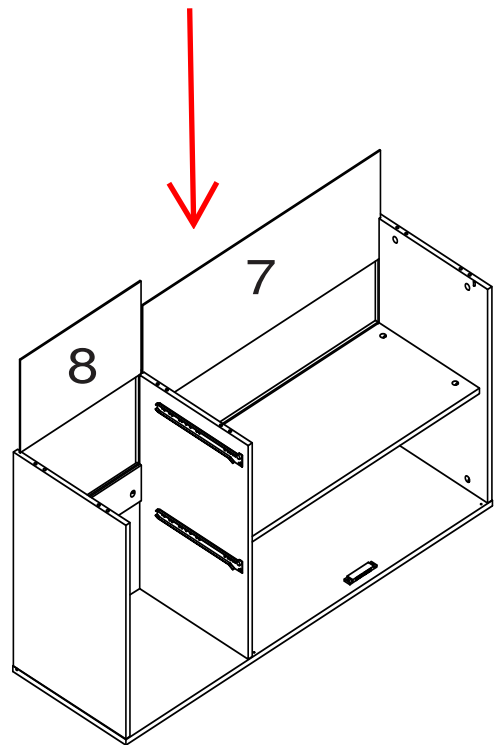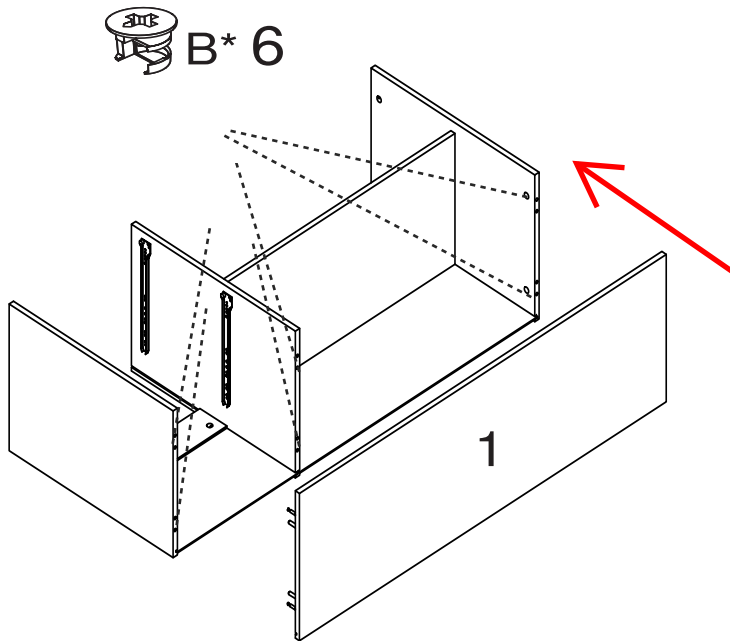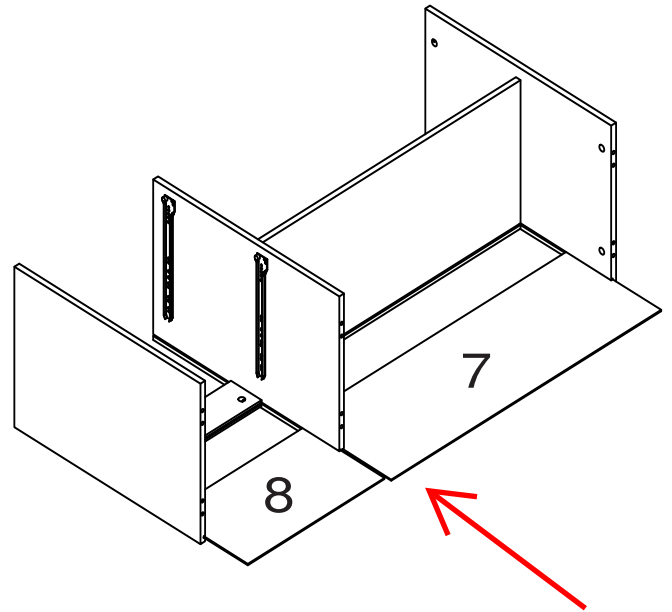
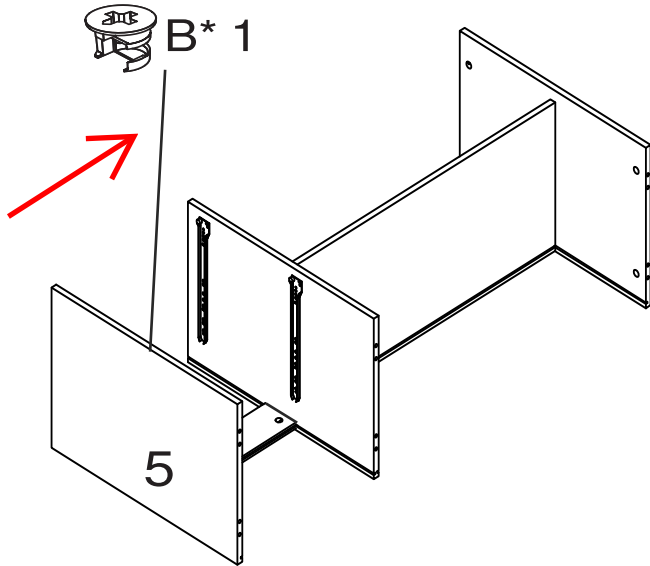


H*10 
O*5 
B*6 

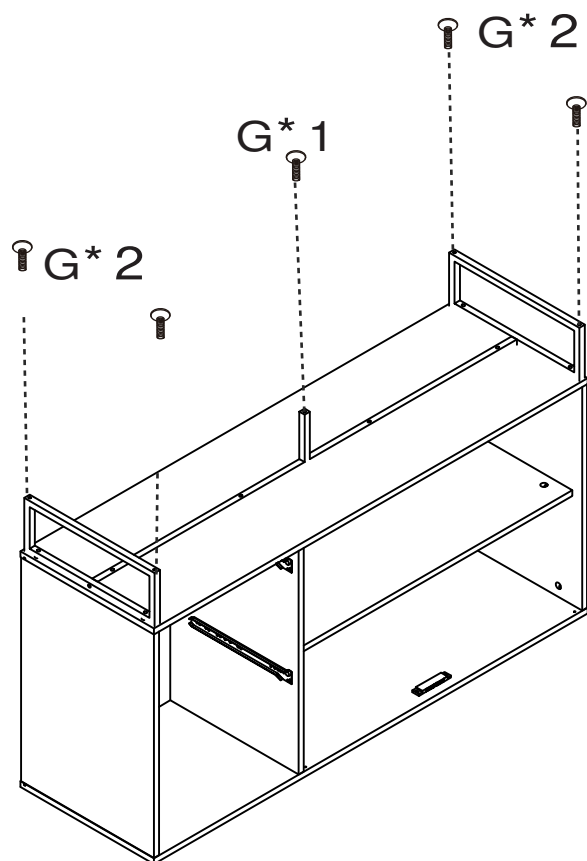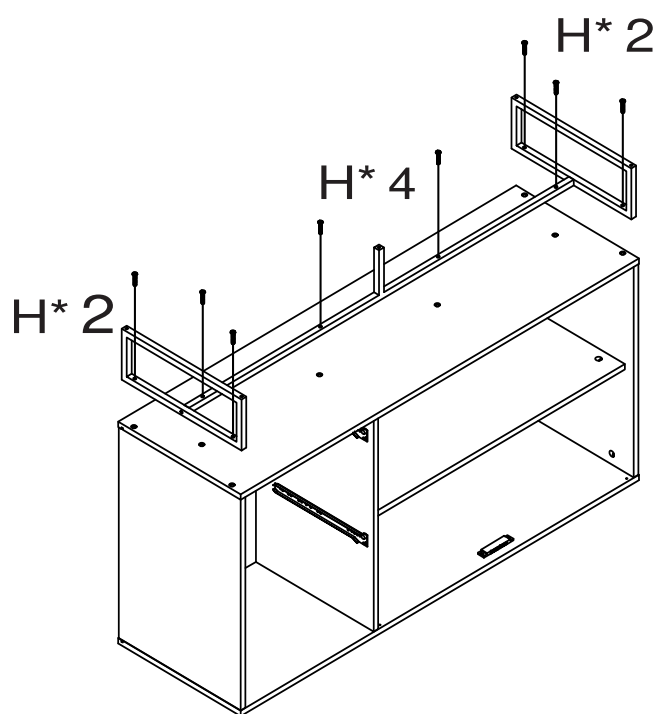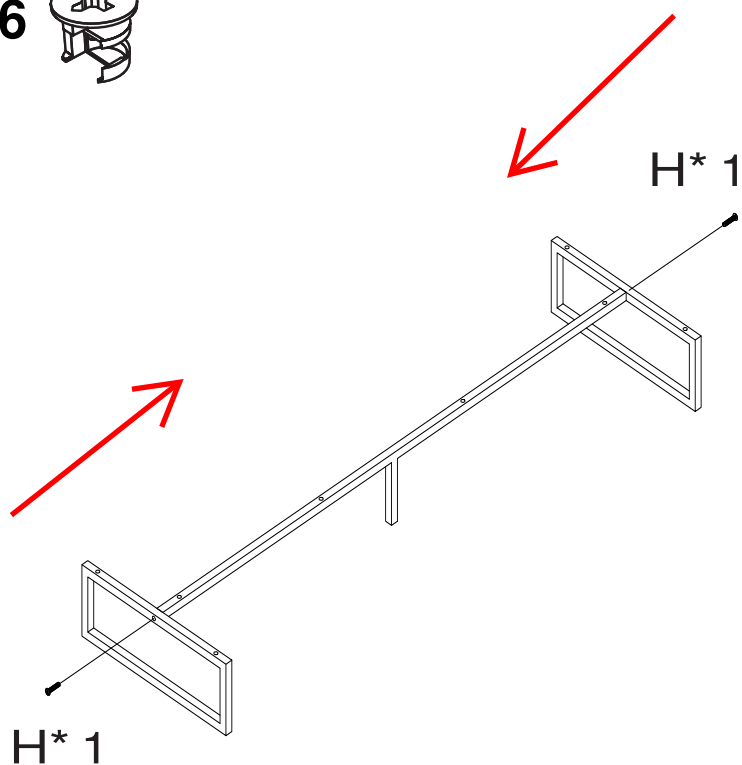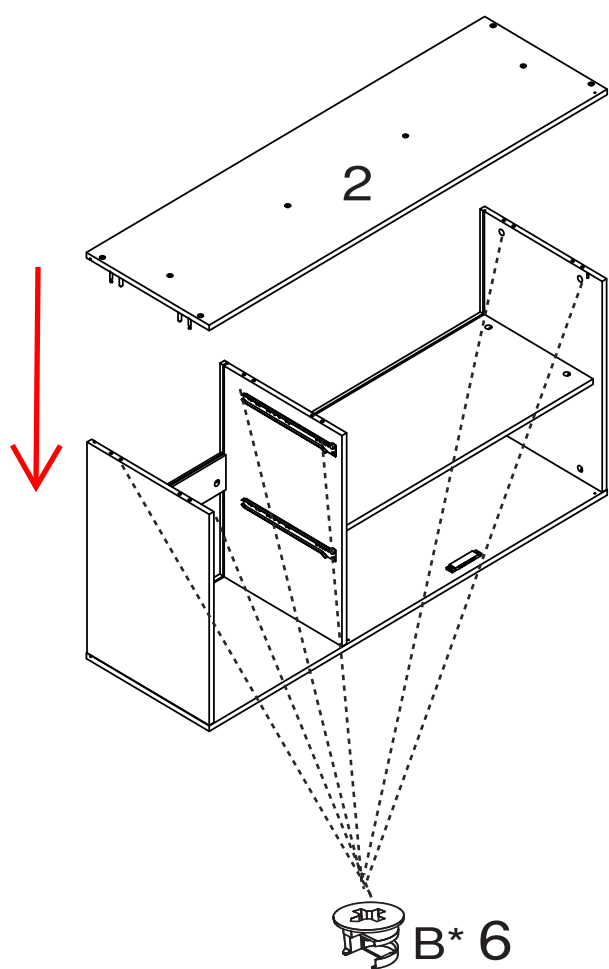

B*8 
A*8 
C*8 
F*2 
J*2 
D*8 

DL*2 
DR*2 

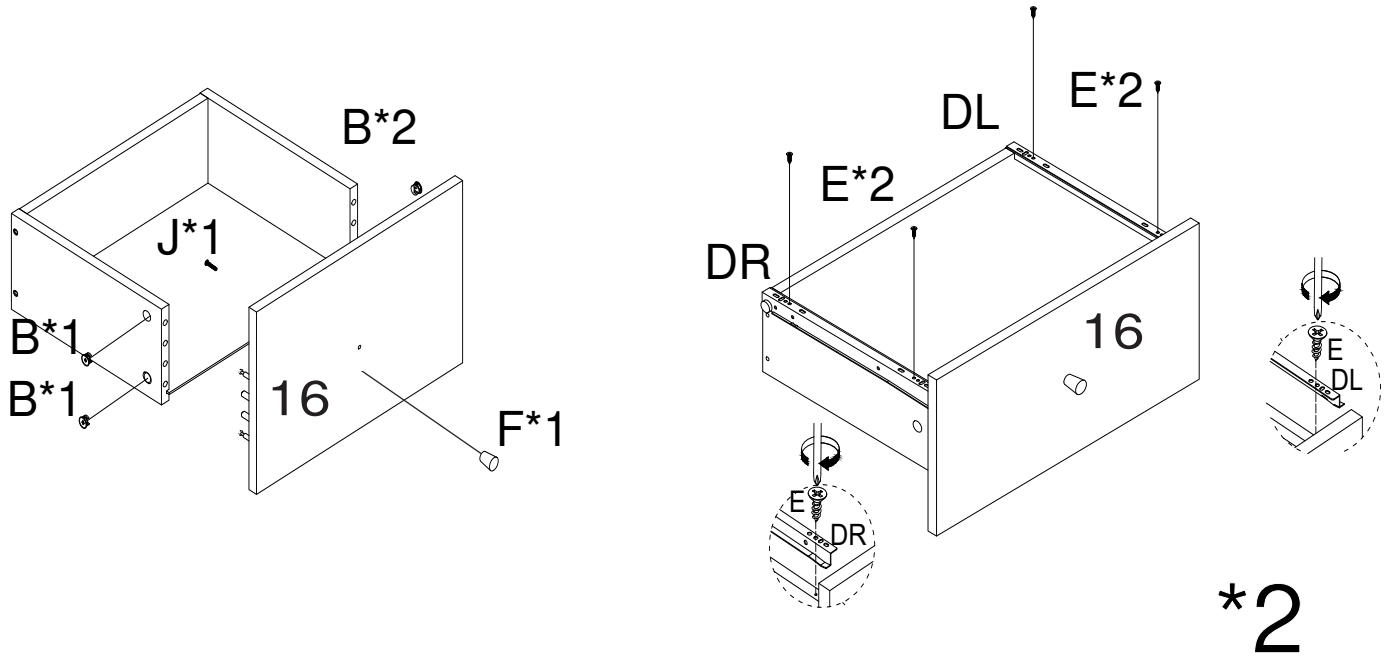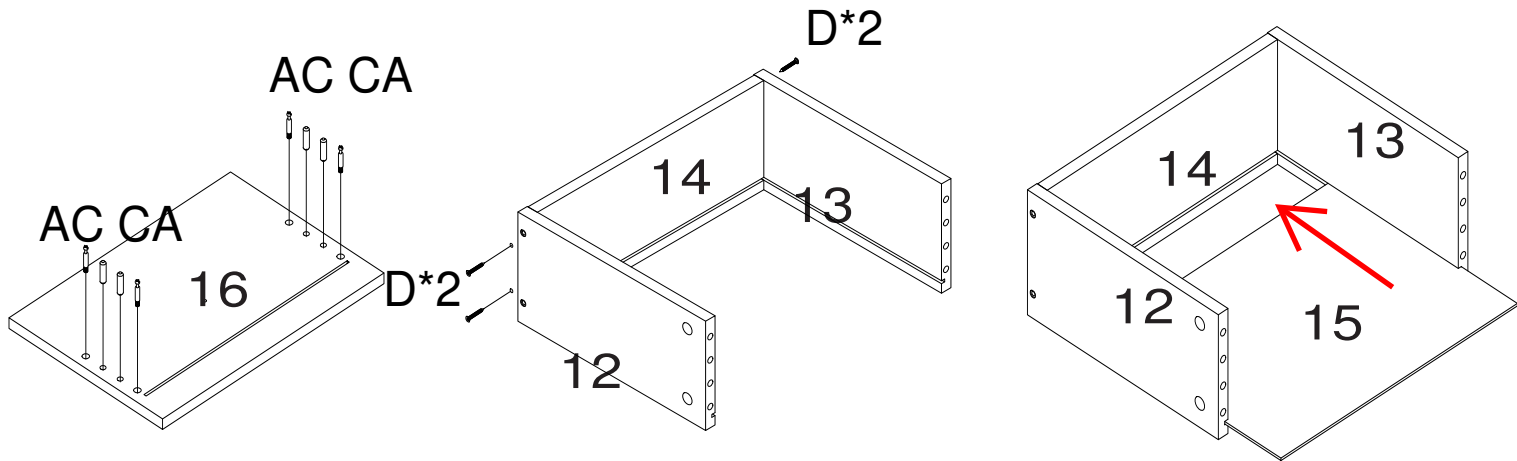

E*2




F*2



I*4



k*2



L*1

