


ASSEMBLY INSTRUCTIONS


DGHR-V1












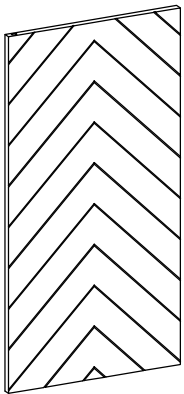
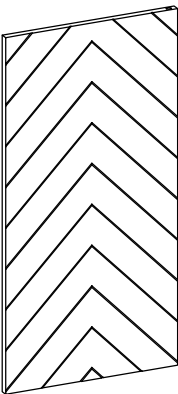


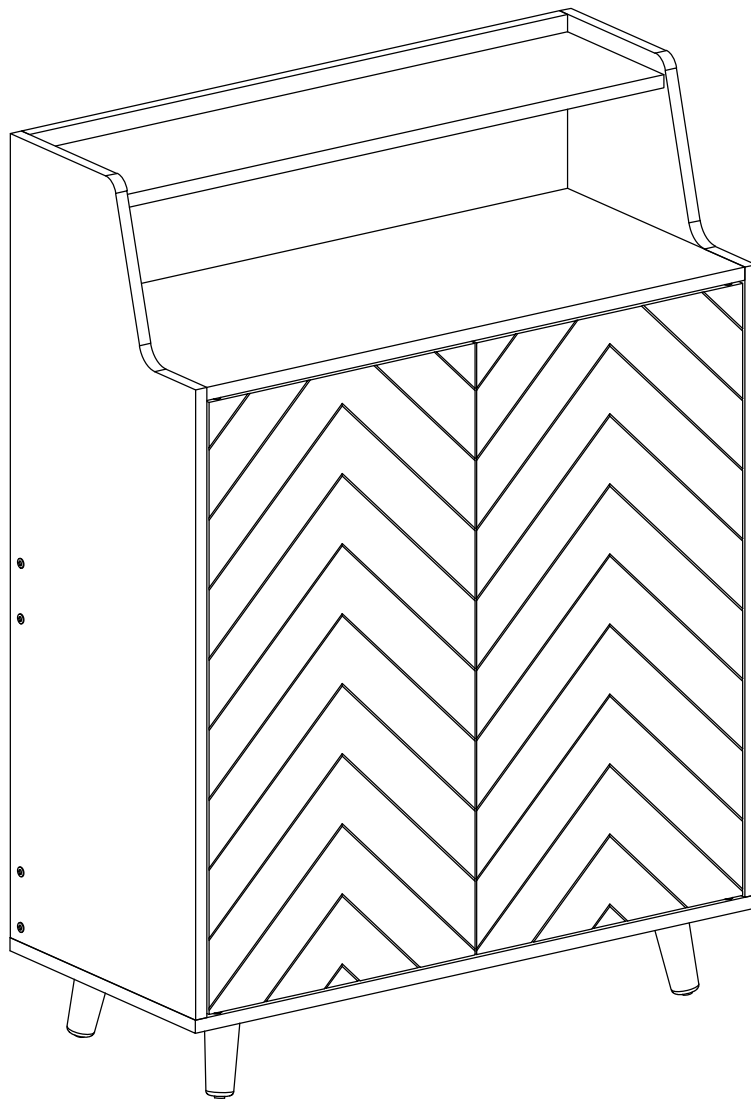

















Shoe cabinet

Notice:


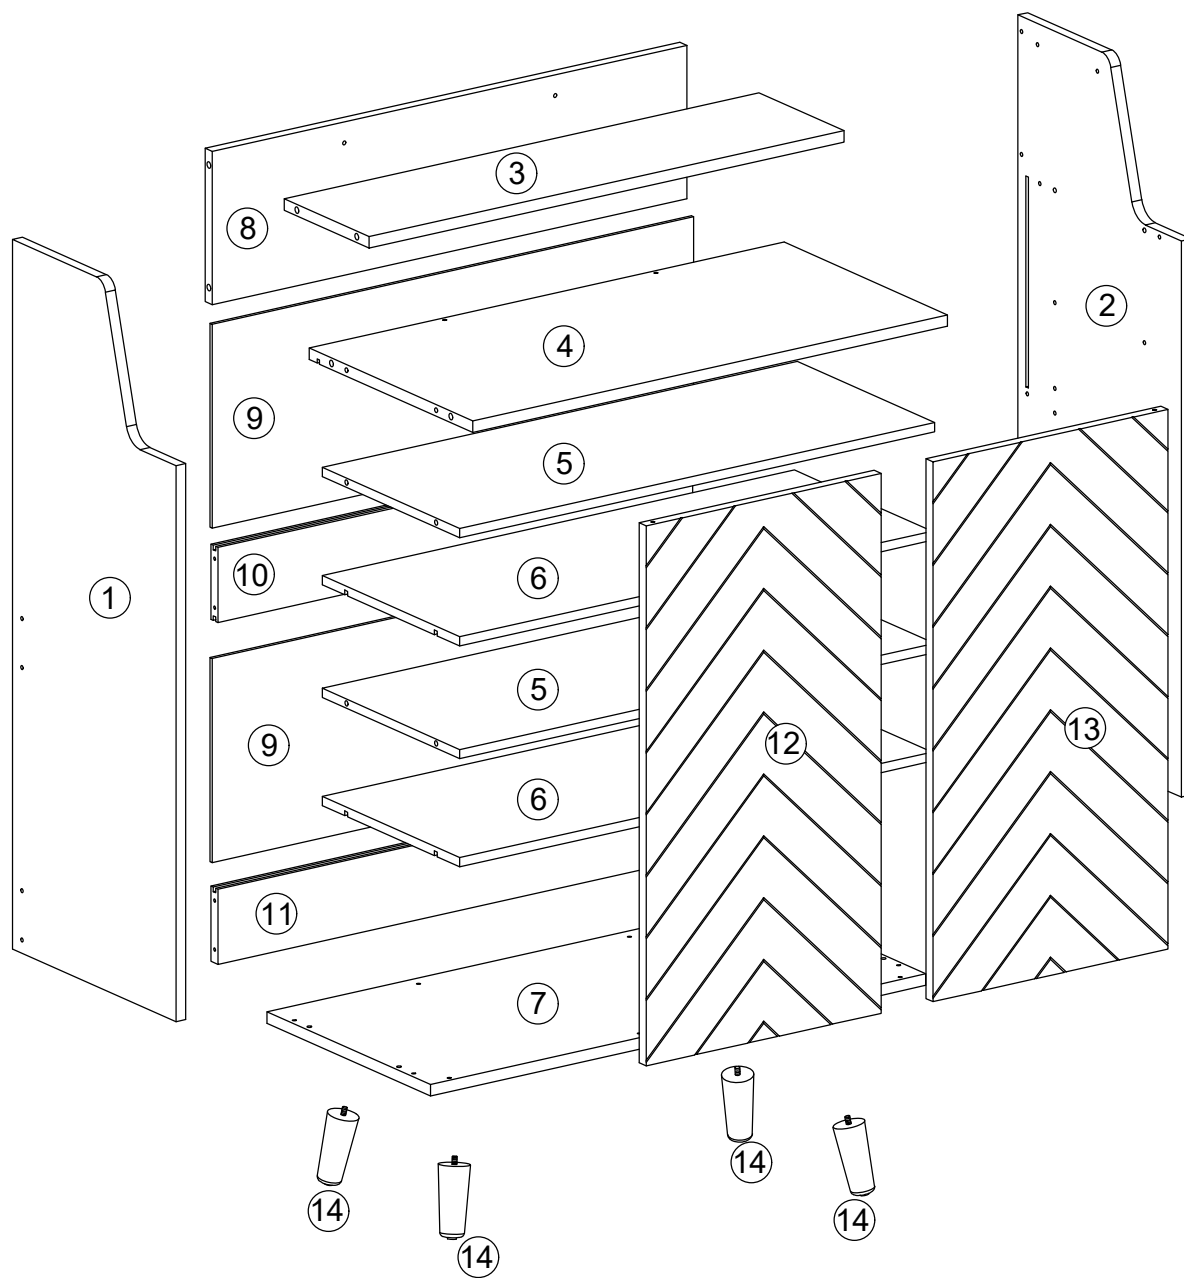
1. Follow the installation instructions. Please confirm all accessories are present before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only after all pieces are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.

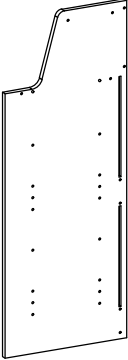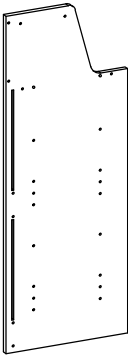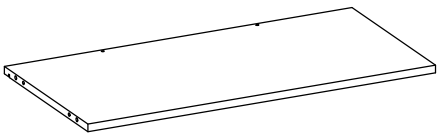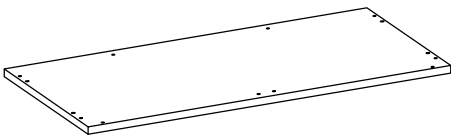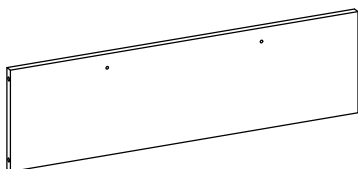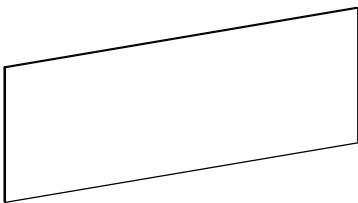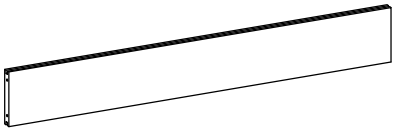



<p>① x1</p> 	<p>② x1</p> 	<p>③ x1</p> 
<p>④ x1</p> 	<p>⑤ x2</p> 	<p>⑥ x2</p> 
<p>⑦ x1</p> 	<p>⑧ x1</p> 	<p>⑨ x2</p> 
<p>⑩ x1</p> 	<p>⑪ x1</p> 	<p>⑫ x1</p> 
<p>⑬ x1</p> 	<p>⑭ x4</p> 	
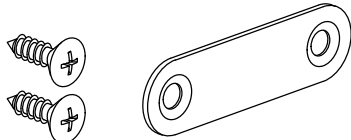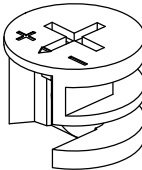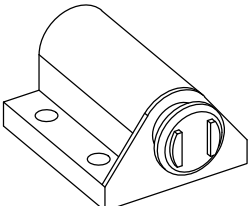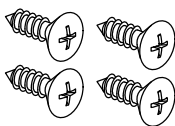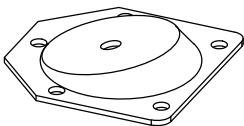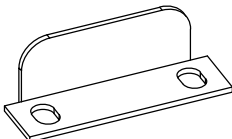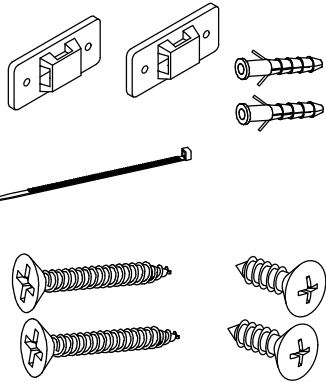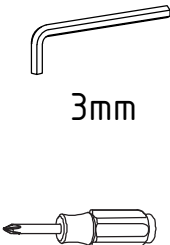
<div>A x18+1</div> <div></div> <div>$\phi 5 \times 40$</div>	<div>B x8+1</div> <div></div> <div>$\phi 6 \times 35$</div>	<div>C x2</div> <div></div> <div>3.5x12</div>	
<div>D x20+2</div> <div></div> <div>$\phi 6 \times 35$</div>	<div>E x12+1</div> <div></div> <div>$\phi 15$</div>	<div>F x8+1</div> <div></div> <div>$\phi 12$</div>	
<div>G x2</div> <div></div> <div></div> <div>3.0x16</div>	<div>H x2+1</div> <div></div>	<div>I x10+1</div> <div></div>	<div>J x4</div> <div></div> <div></div> <div>3.5x12</div>
<div>K x8+1</div> <div></div> <div>3.0x14</div>	<div>L x1</div> <div></div> <div></div> <div>3.5x12</div>	<div>M x1</div> <div></div> <div>3.5*35</div> <div>3.0*12</div>	<div>TOOL</div> <div></div> <div>3mm</div>


STEP 1

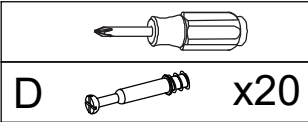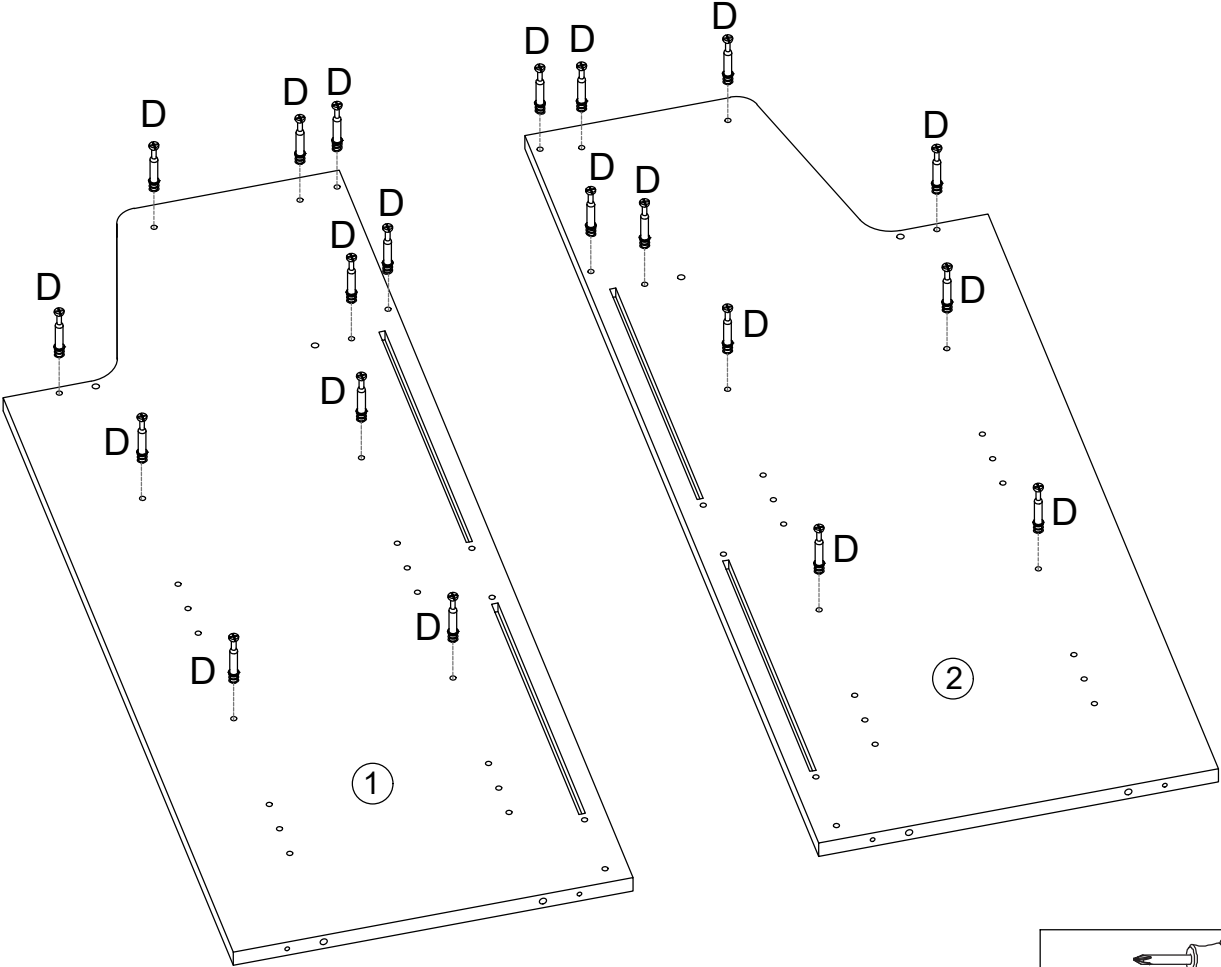


STEP 2

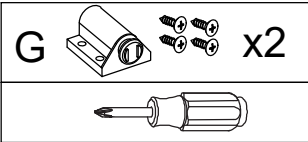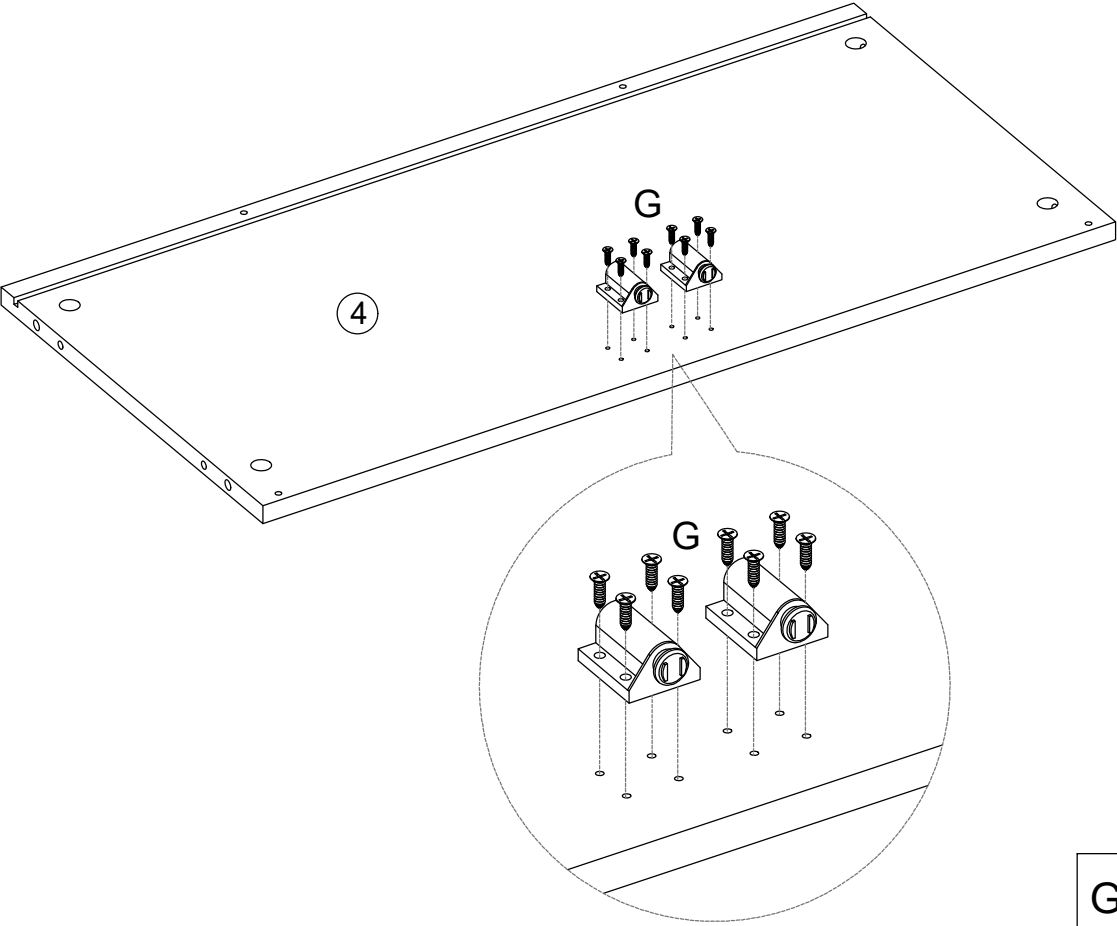


STEP 3

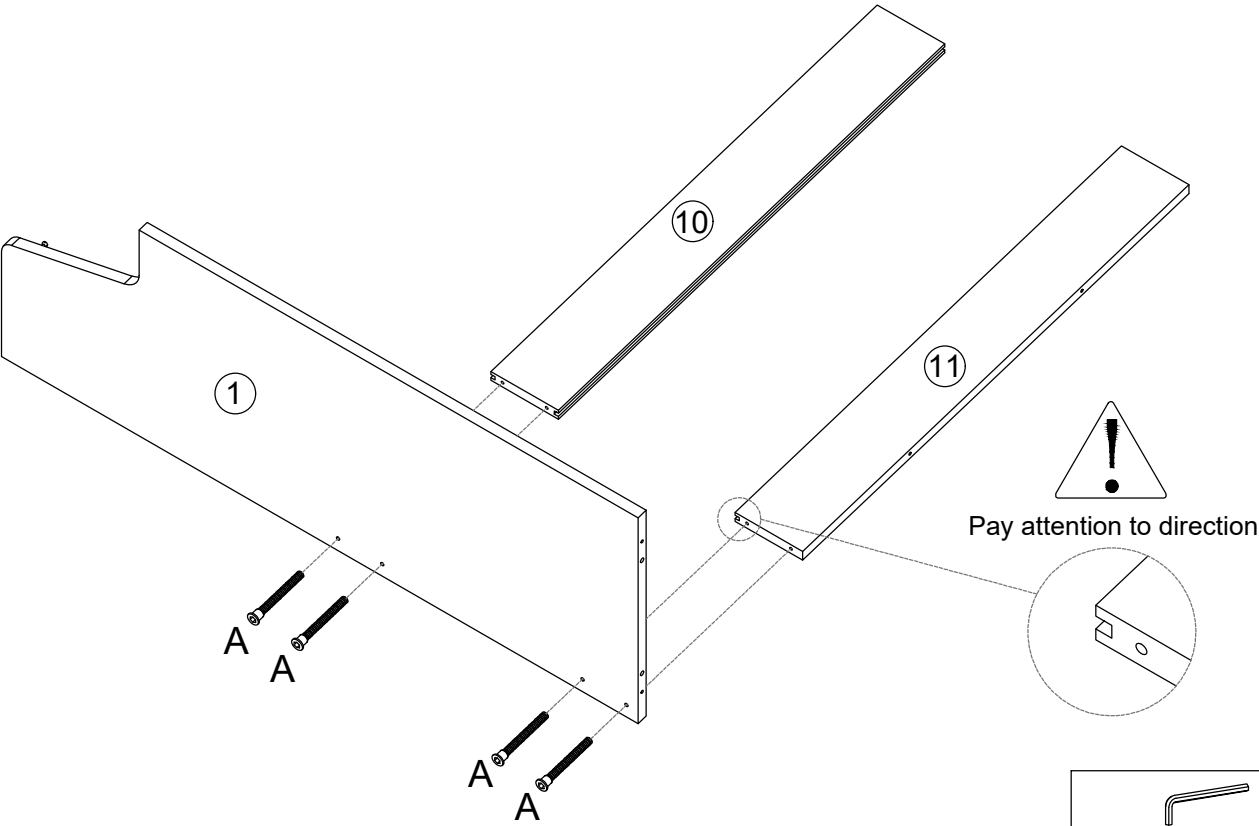

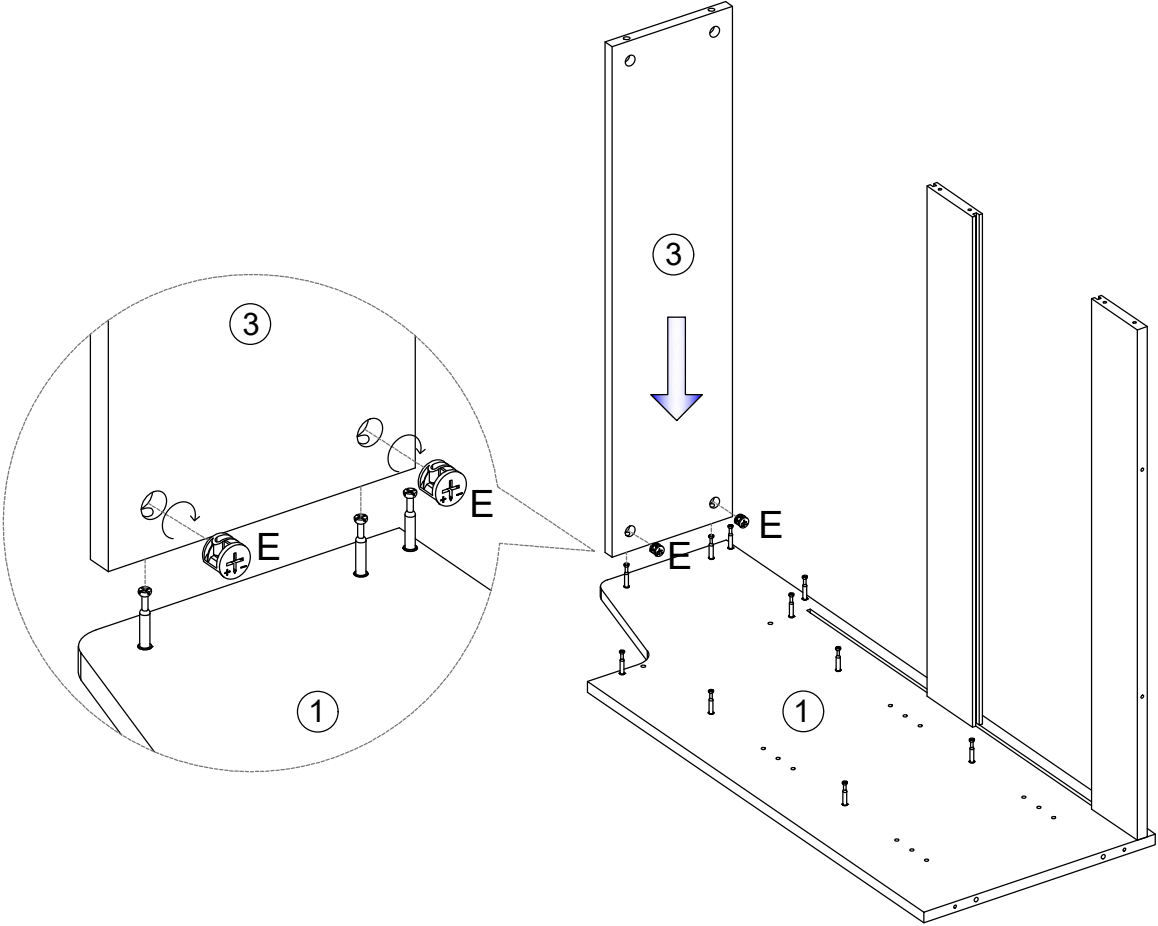


STEP 4




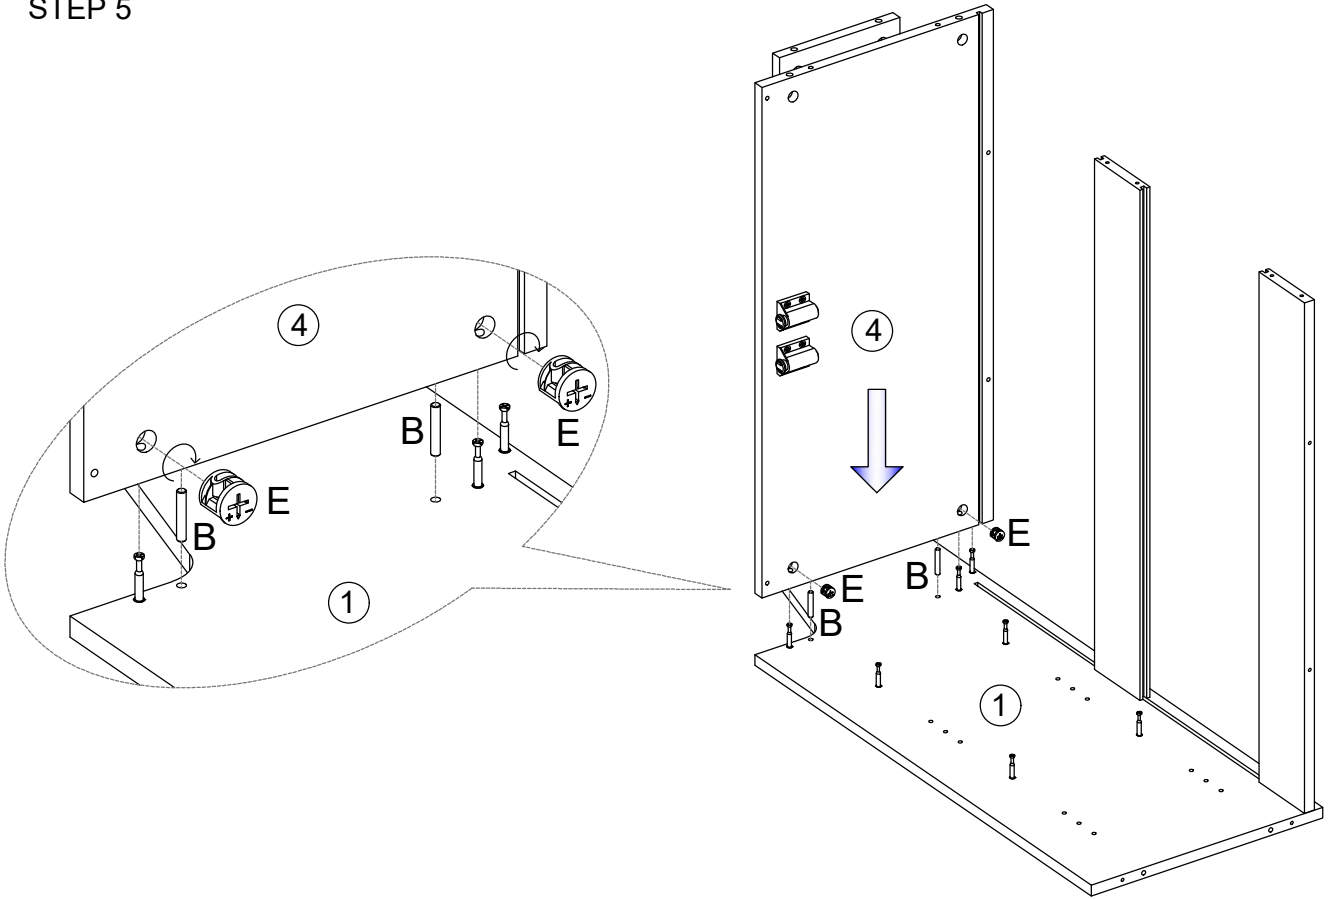

STEP 5




			
B		x2	E  x2

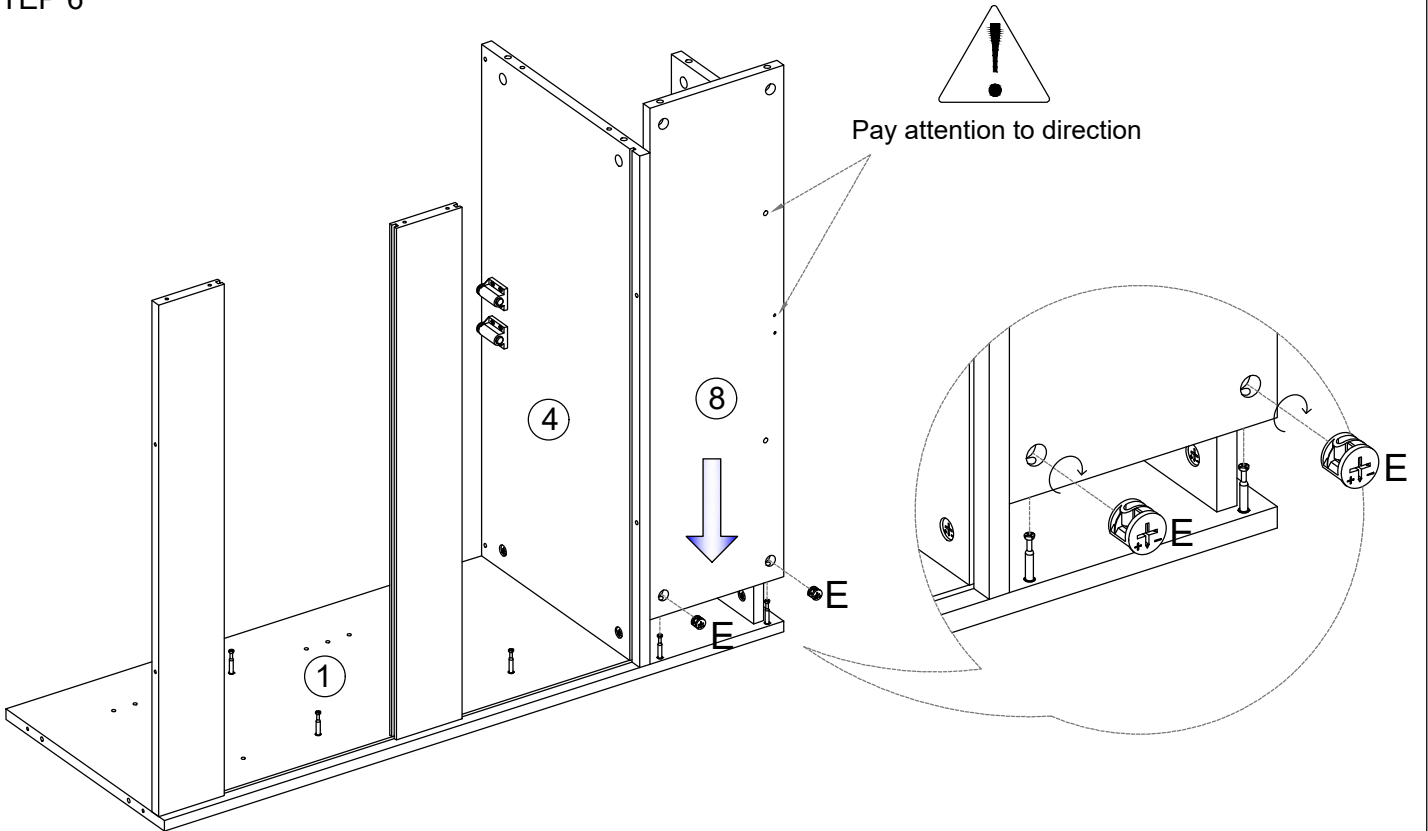

STEP 6




			
E		x2	

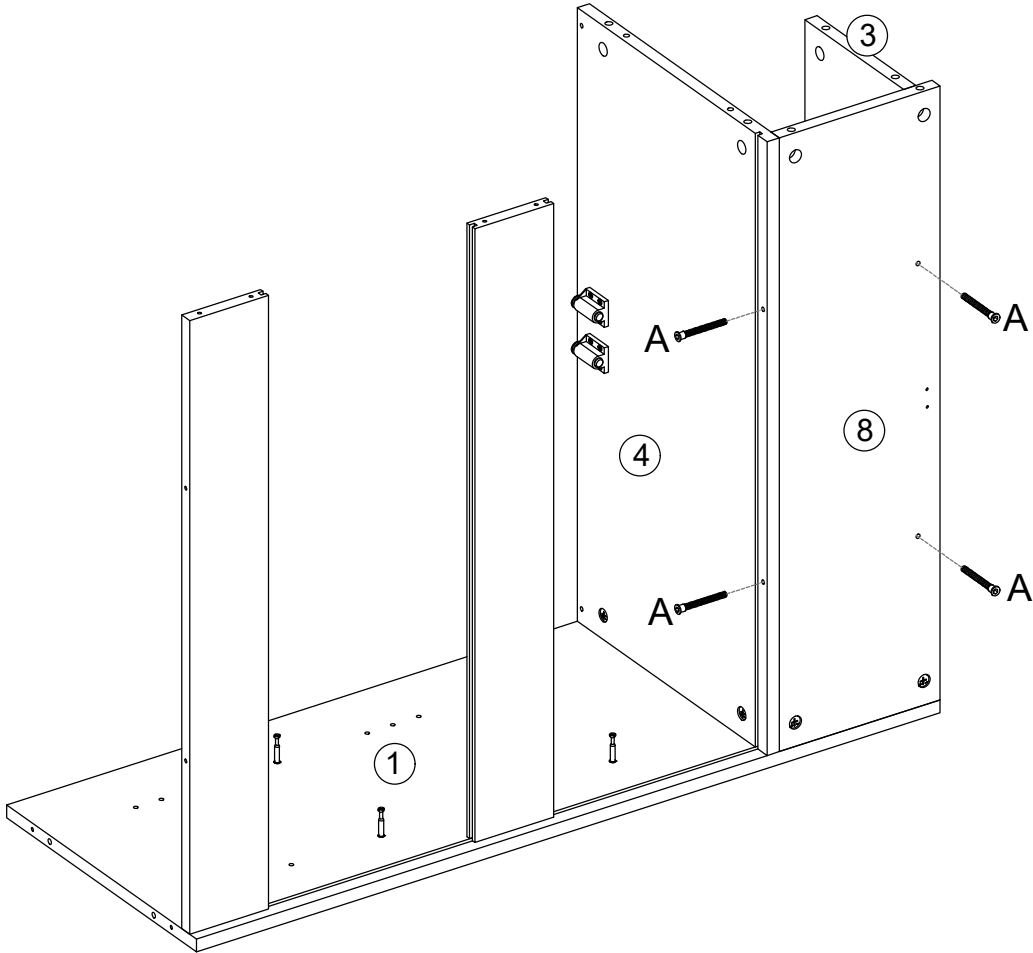

STEP 7




		3mm
A		x4

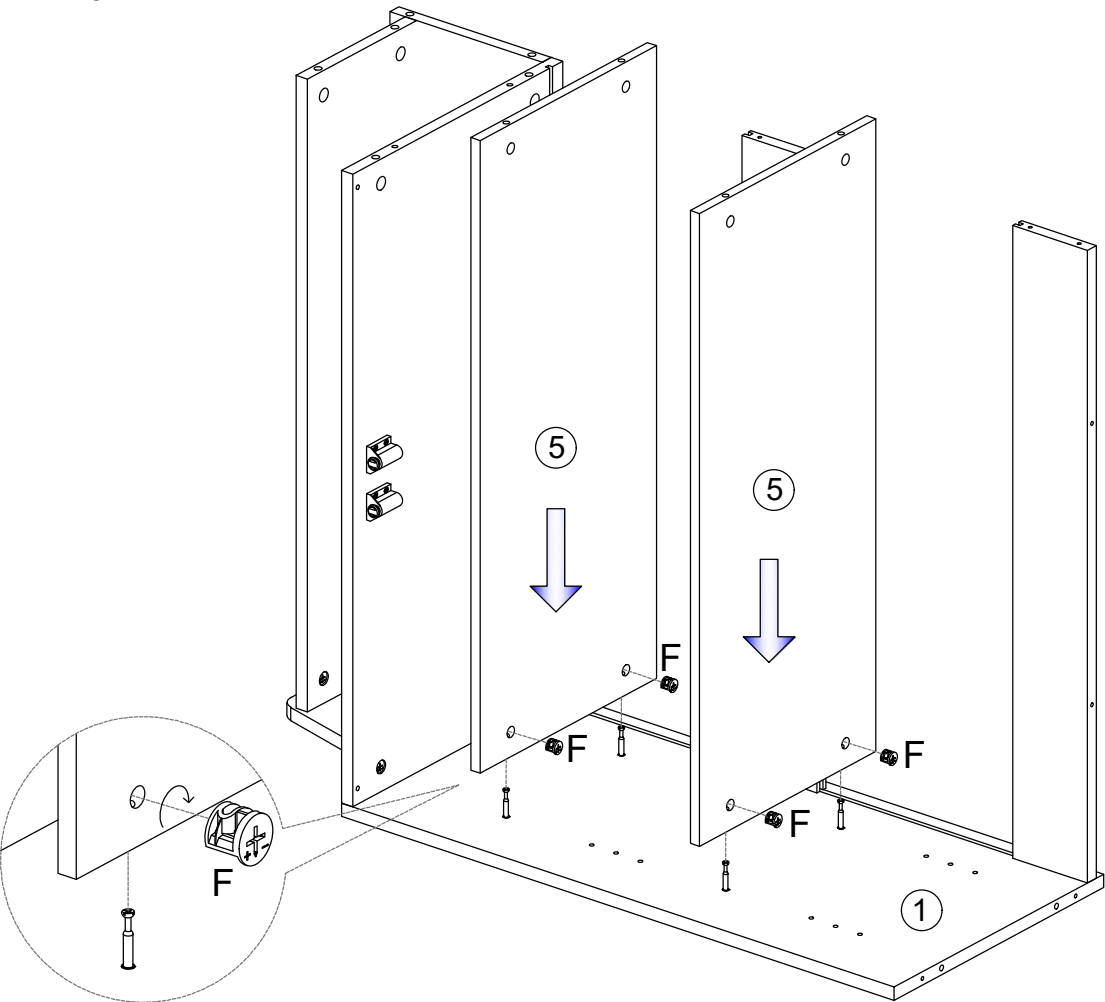STEP 8






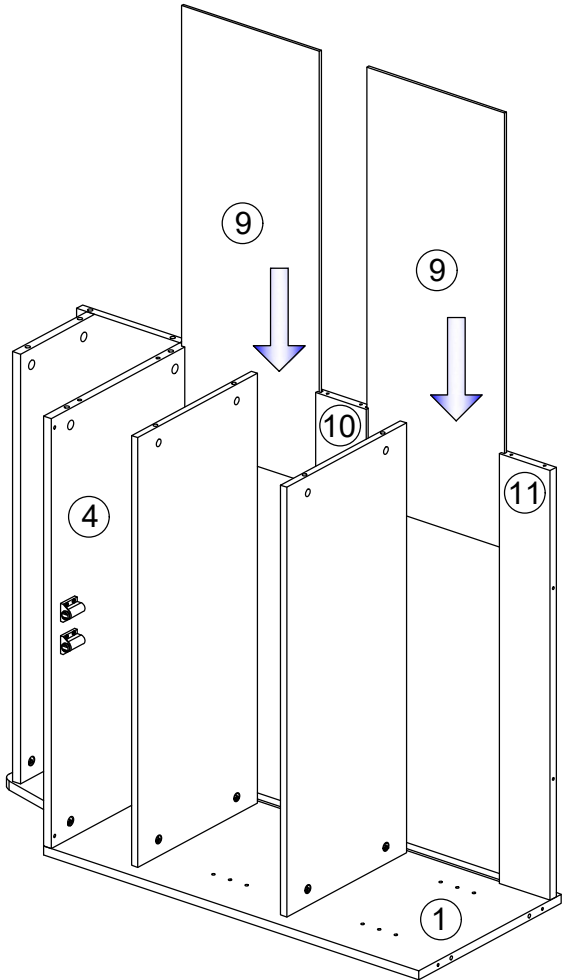

		
F		x4

STEP 9

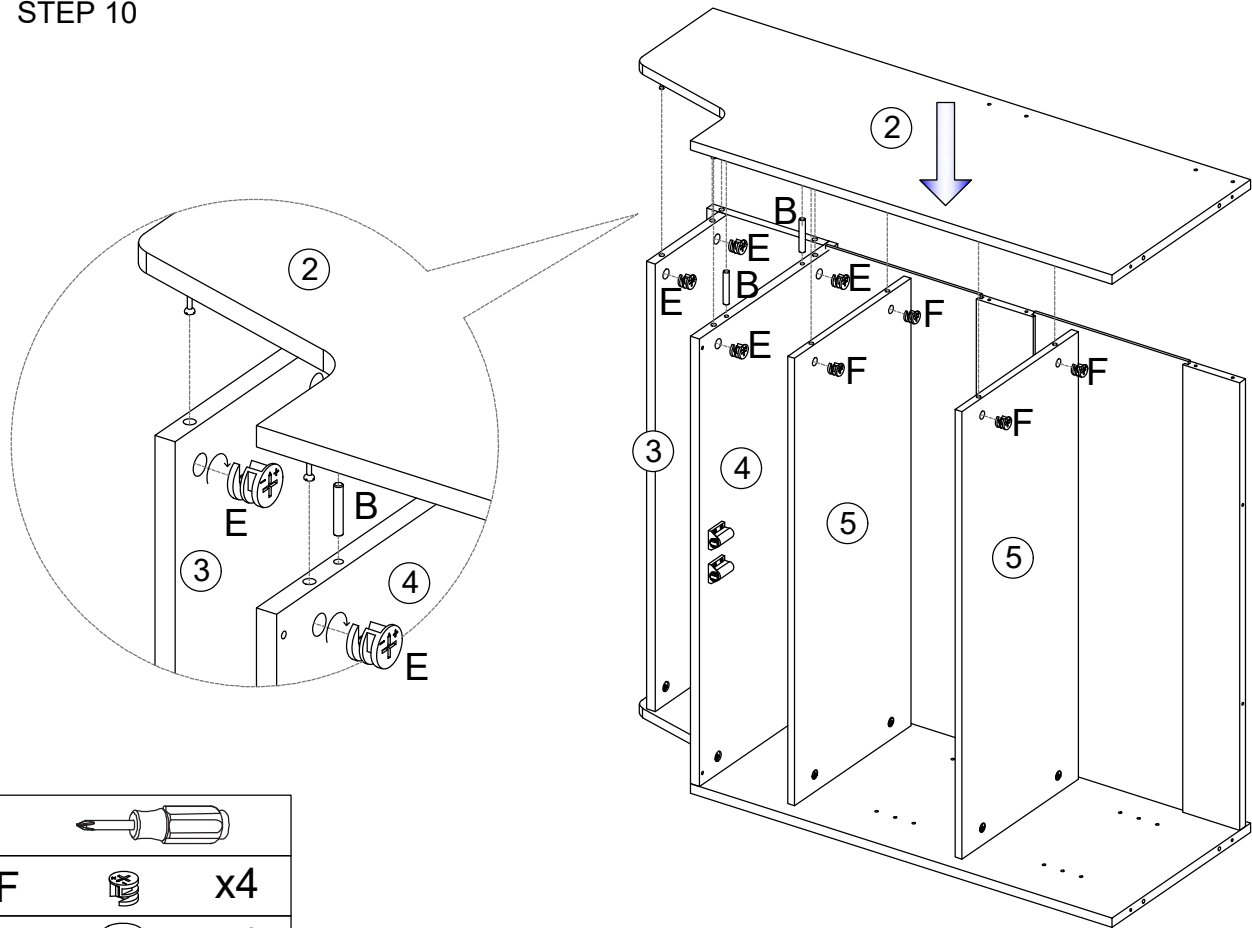






STEP 10

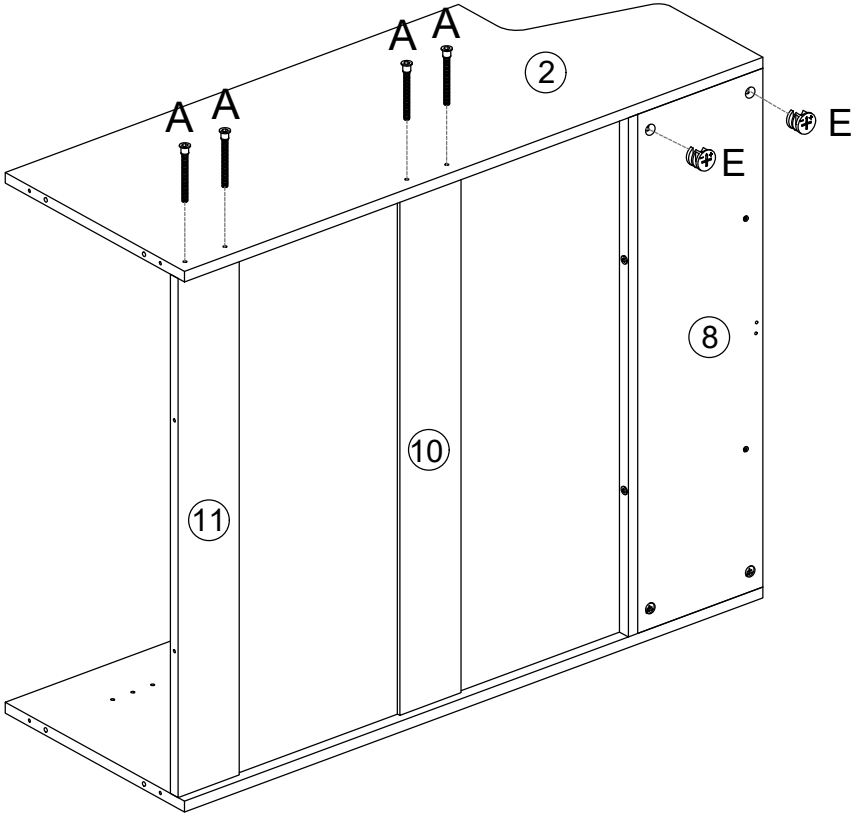


		
F		x4
E		x4
B		x2




STEP 11




		3mm
A		x4
		
E		x2

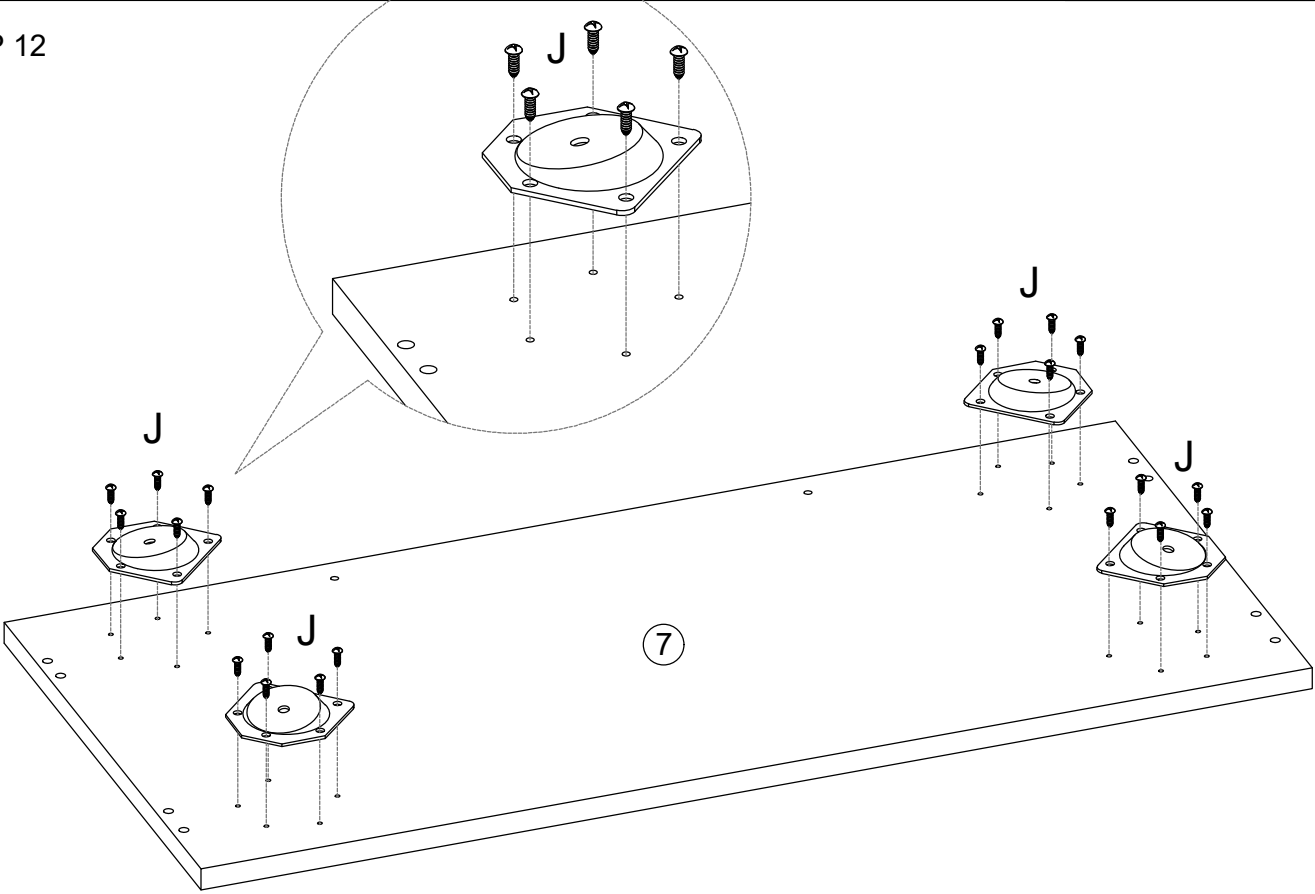STEP 12




J	 	x4
		



STEP 13

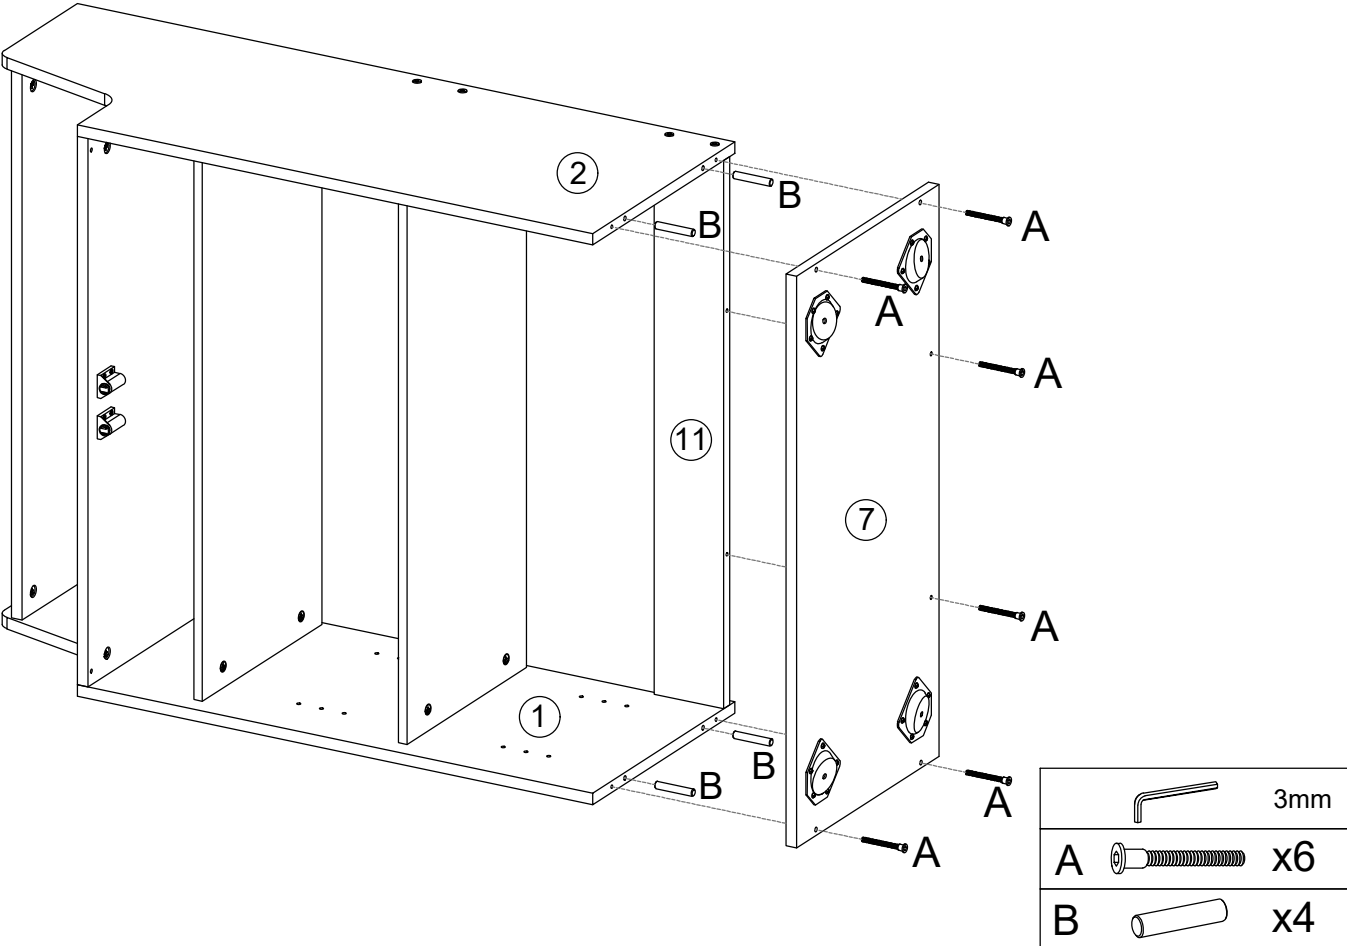


STEP 14


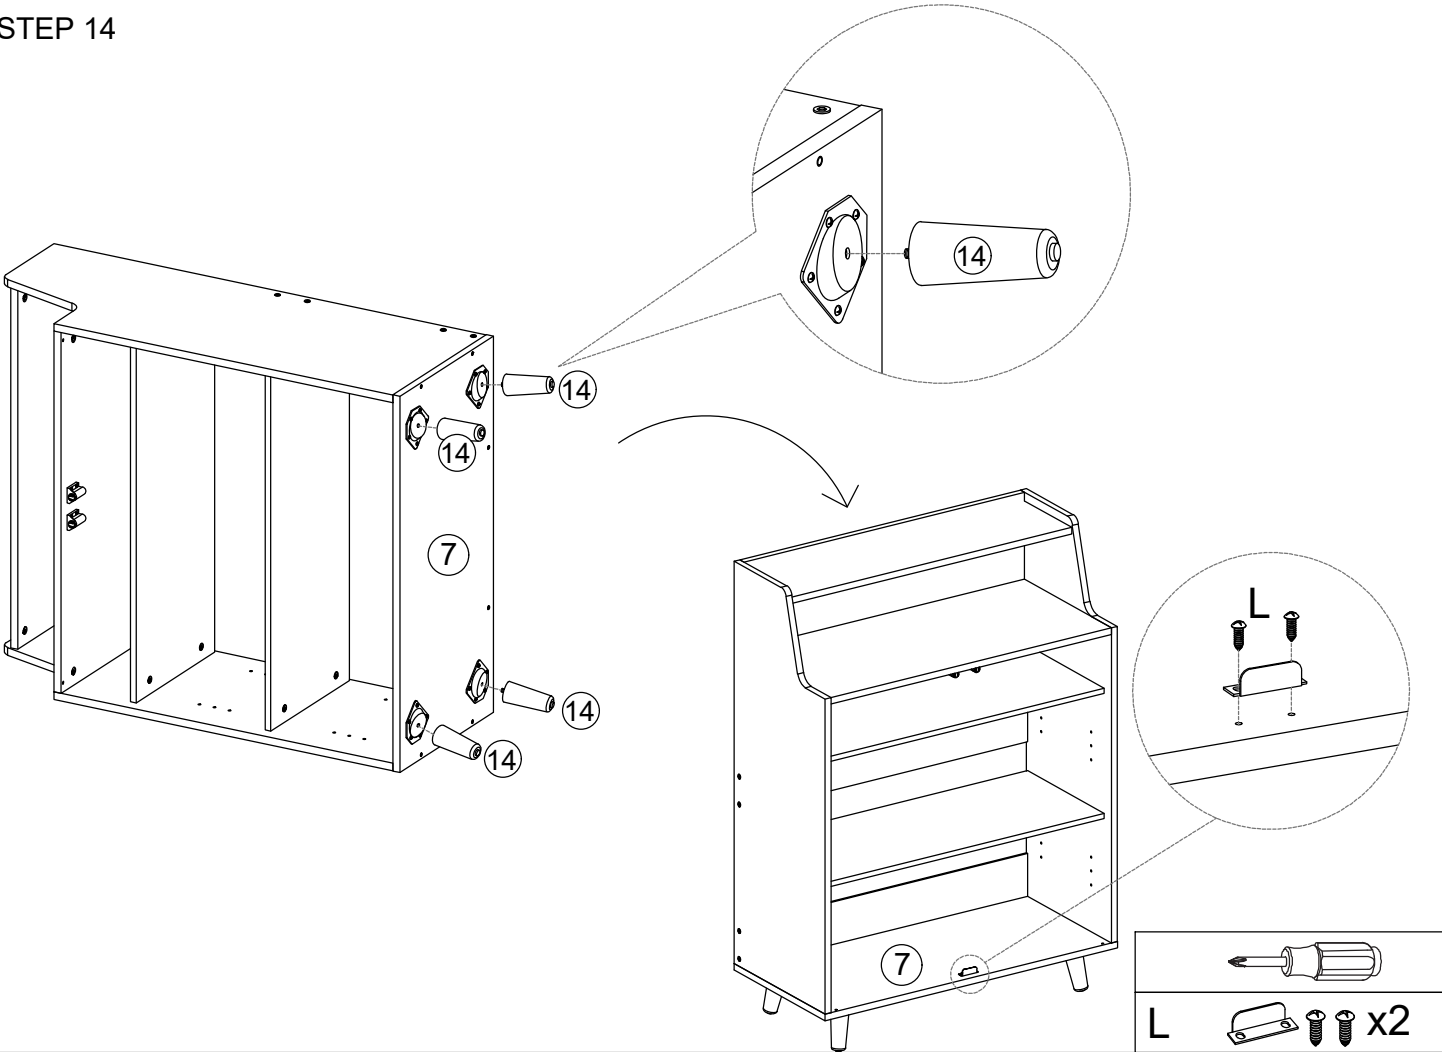


STEP 15

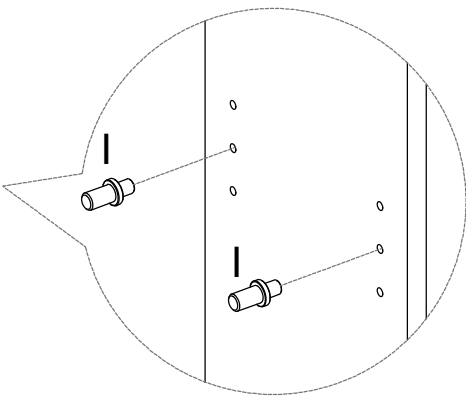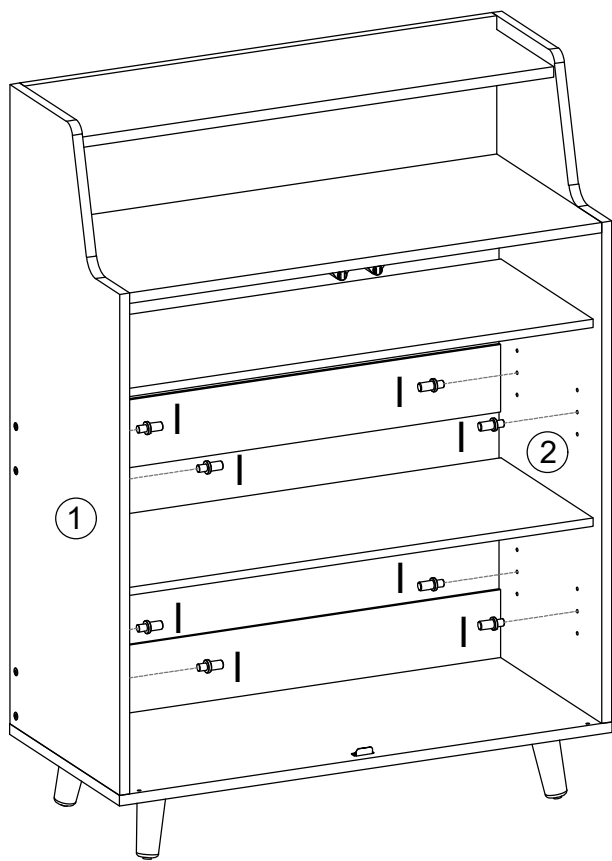


|  x8

STEP 16

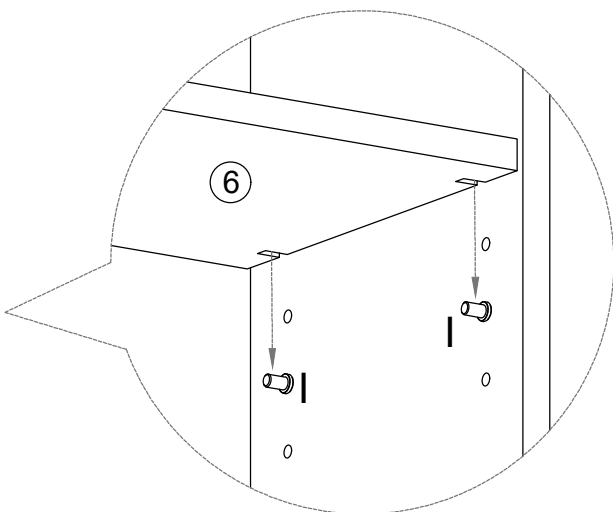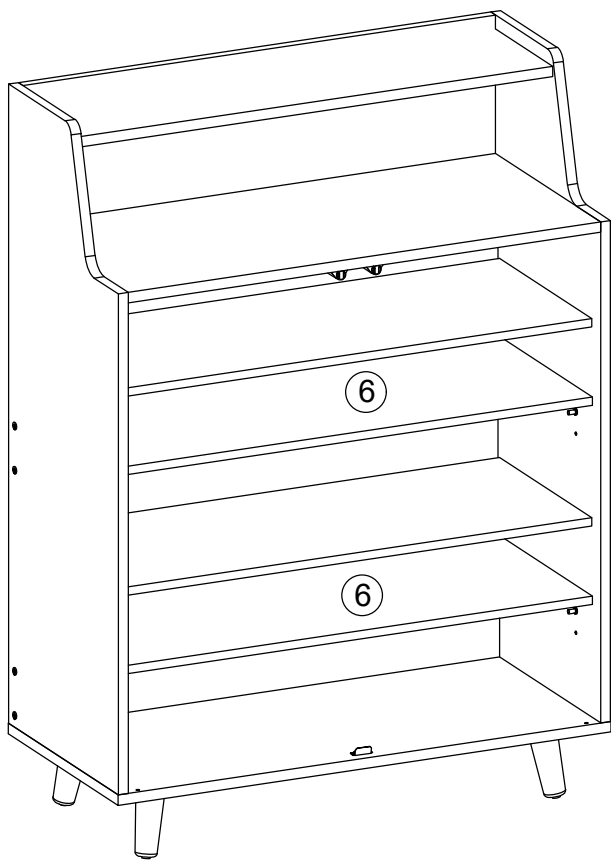


These boards can be adjusted up and down



STEP 17

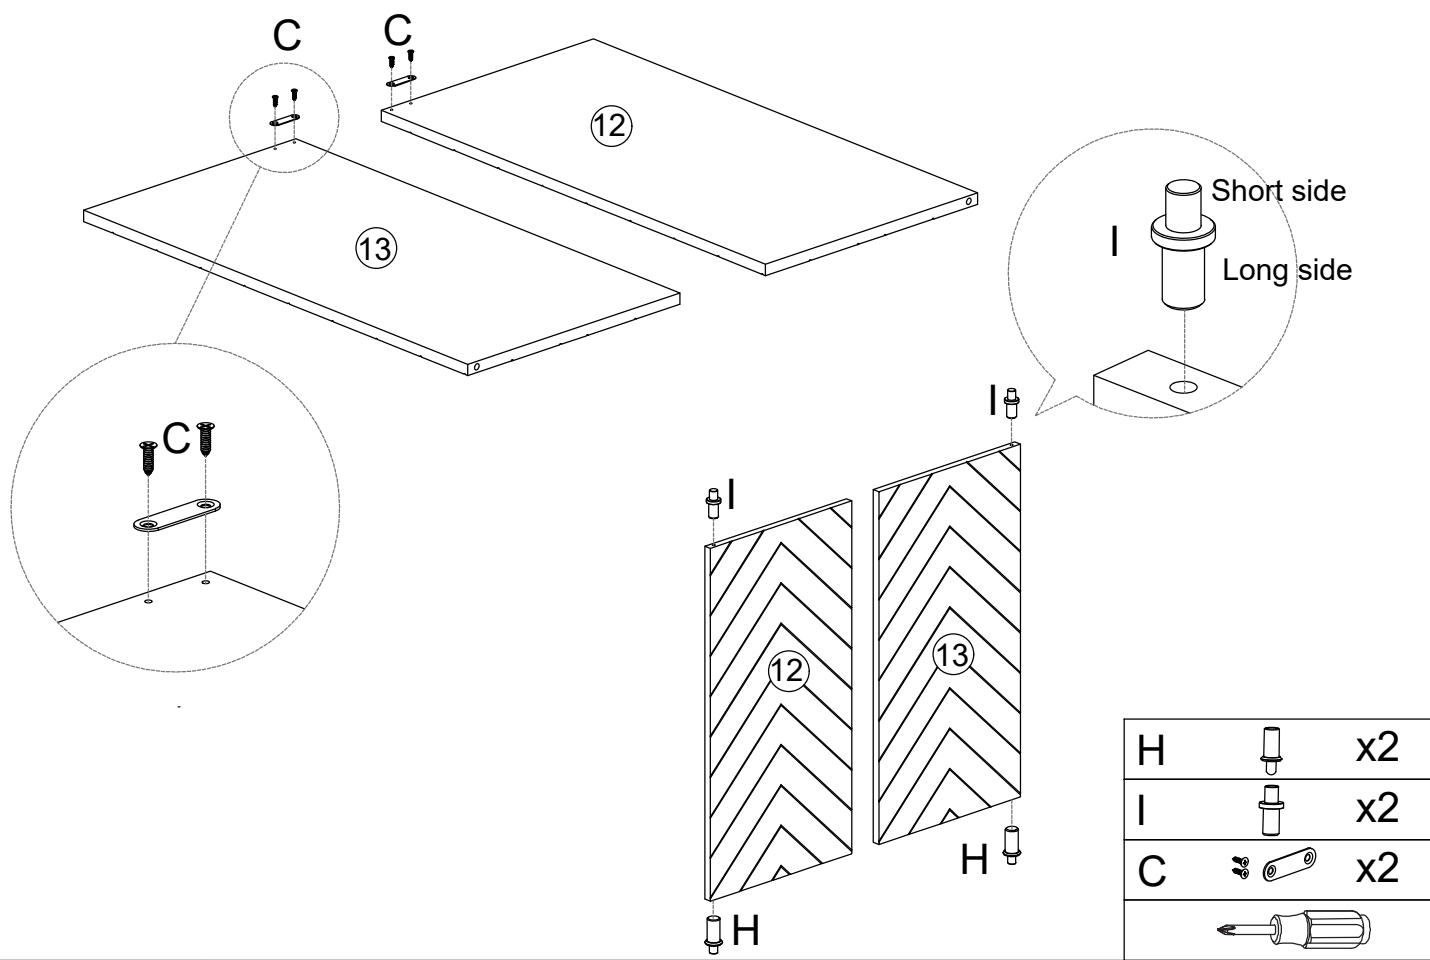



STEP 18

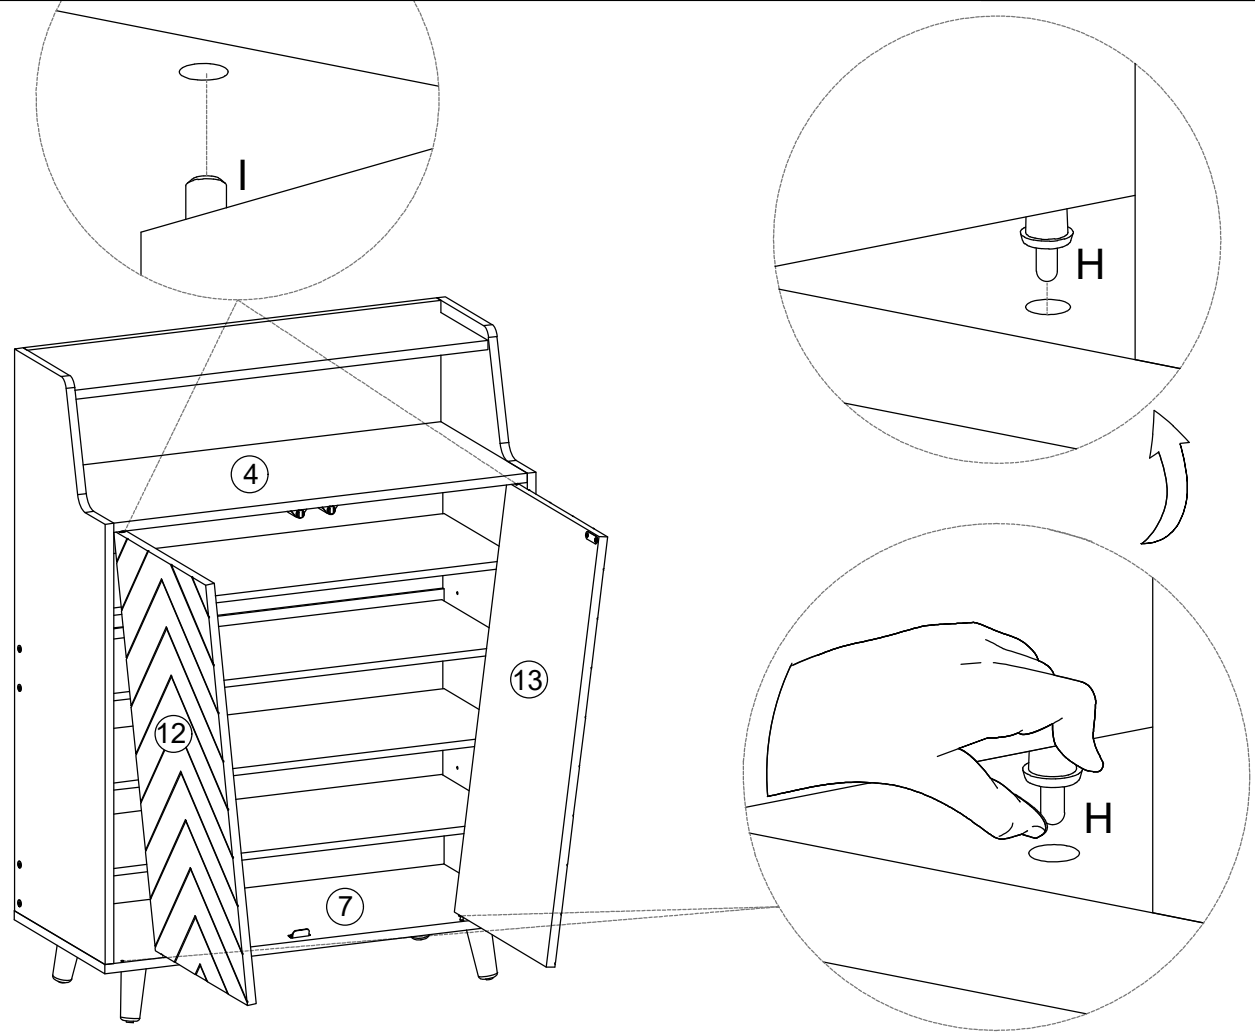





STEP 19

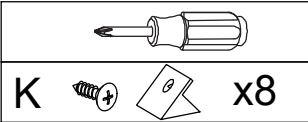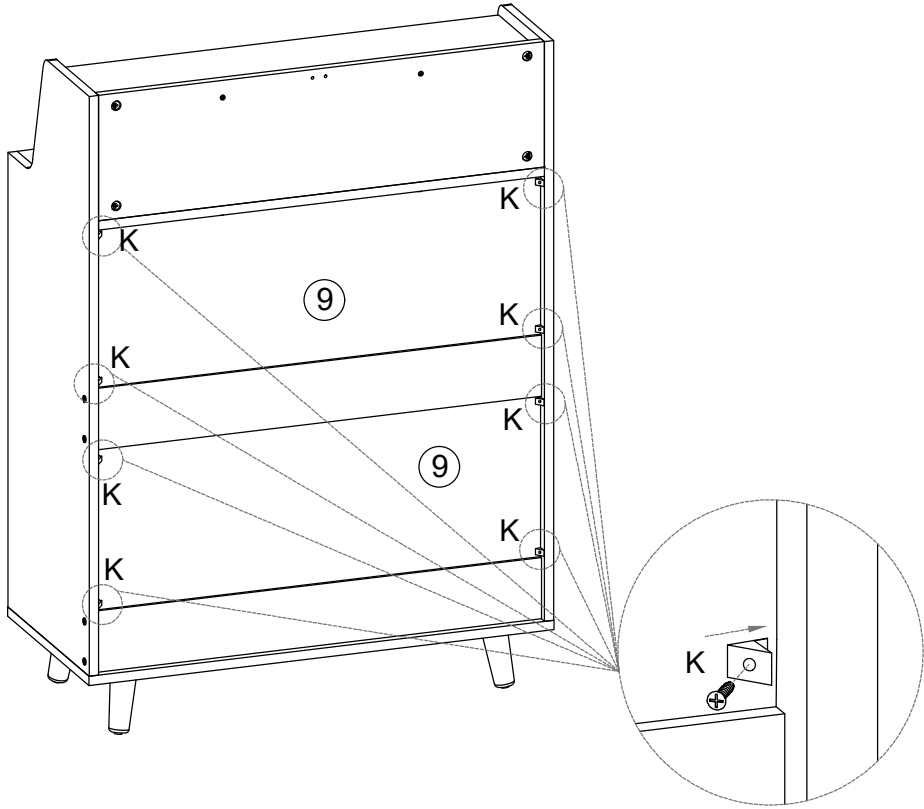

STEP 20

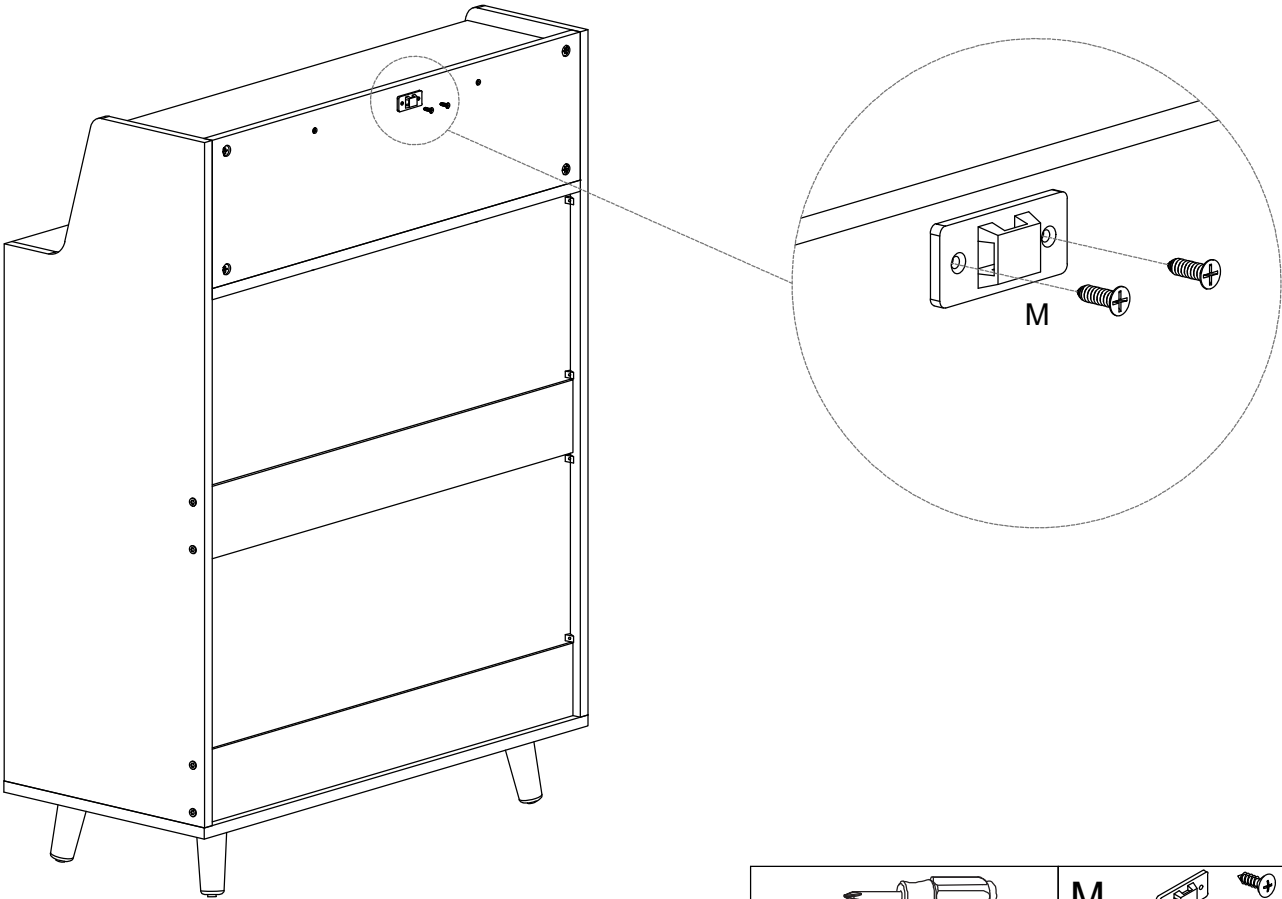

STEP 21

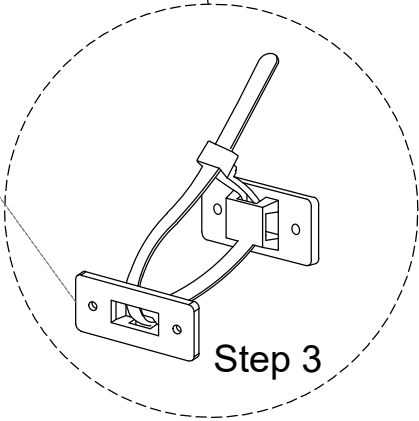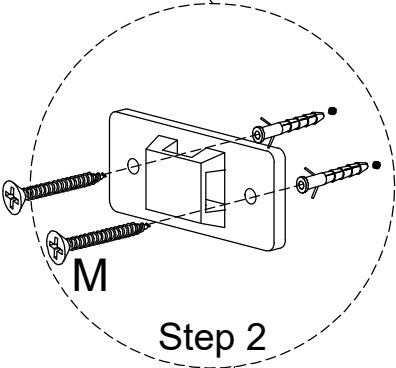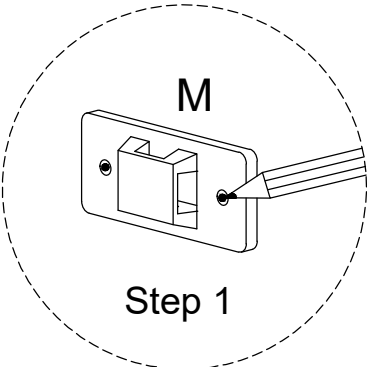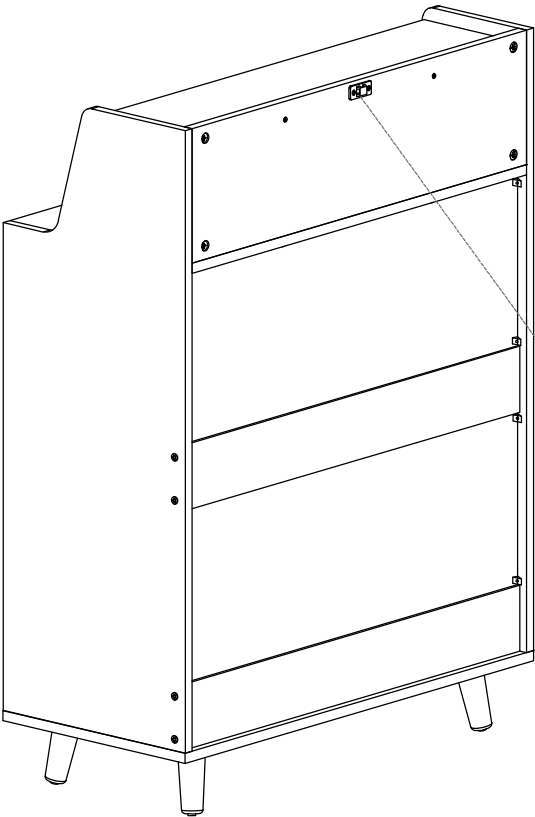

Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

Installation Completed

