


# Make Up Cart

## Assembly Instructions - N704P196658

Please keep for future reference

If you have any questions, please feel free to contact us.  
Email: [hdteam@aminalife.com](mailto:hdteam@aminalife.com)

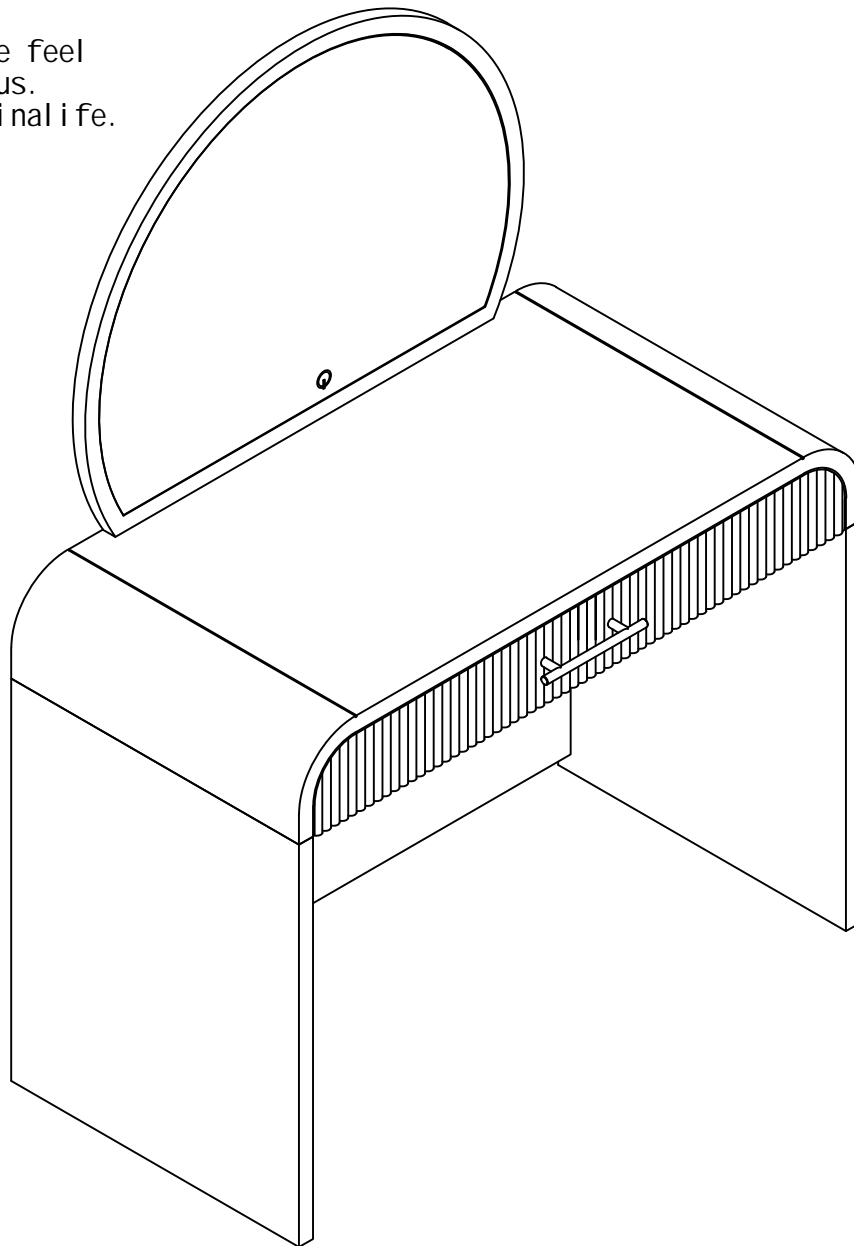


Important - Please read these instructions fully before starting assembly

# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

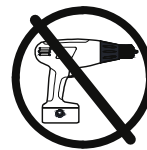

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

## **WARNING** **In order to help prevent overturning –** **please follow these instructions**

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

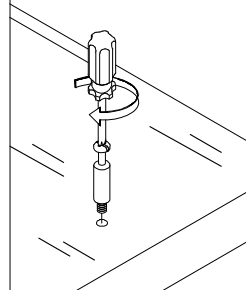

## Step 2

Push the male camlock into the entry hole.

2

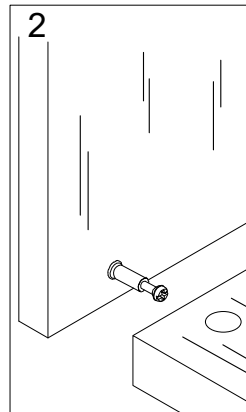


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

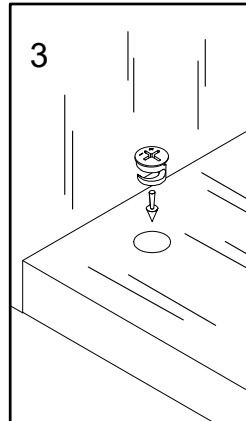


## Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

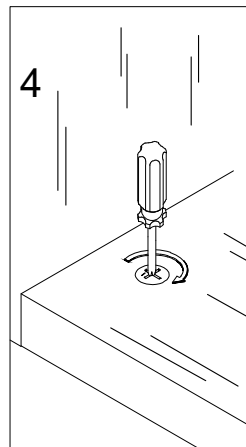


# COMPONENTS - KEY DIAGRAM

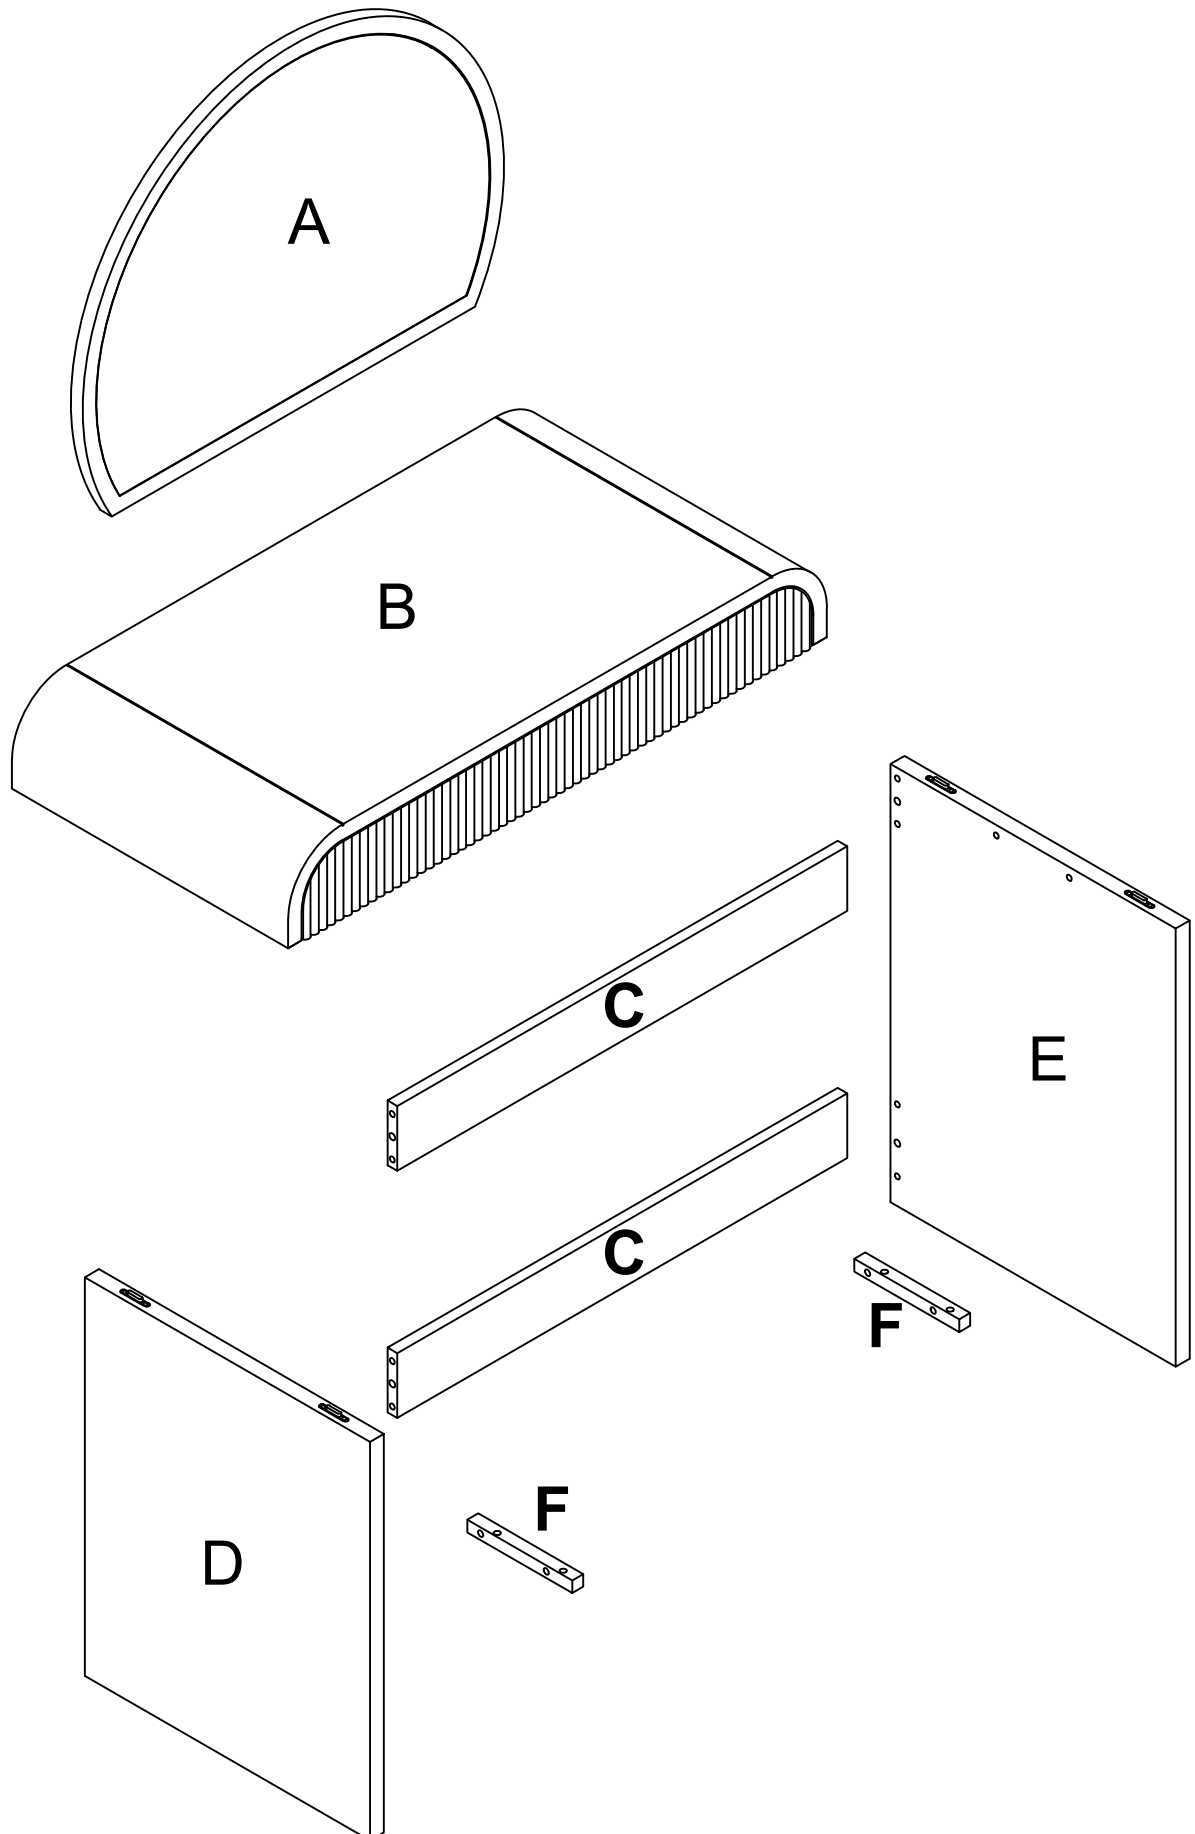

# PART LIST


A

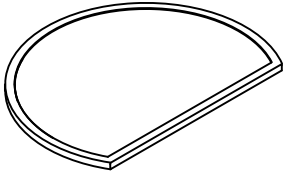

MIRROR FRAME

QTY:1


B

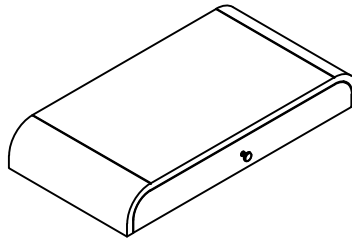

DESK TOP

QTY:1


C

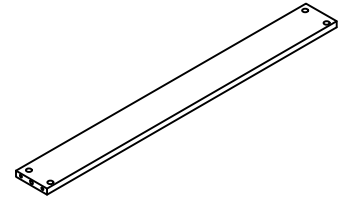

BACK PANEL

QTY:2


D

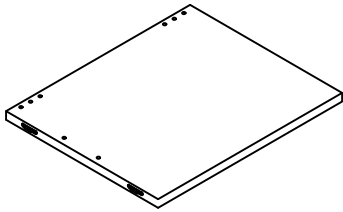

LEFT SIDE PANEL

QTY:1


E

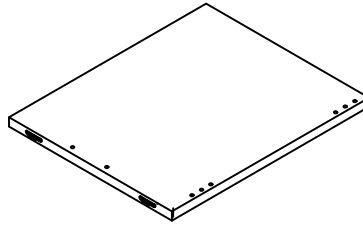

RIGHT SIDE PANEL

QTY:1
















F

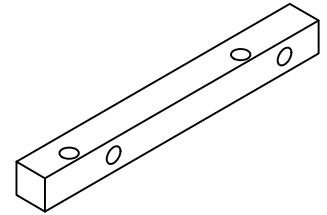

CONNECT WOOD


QTY:2

# HARDWARE LIST
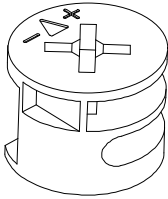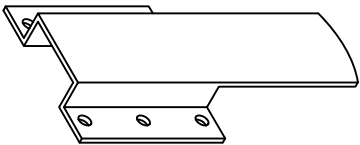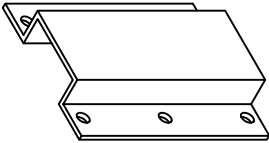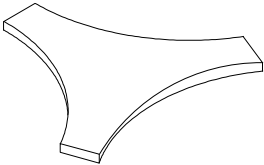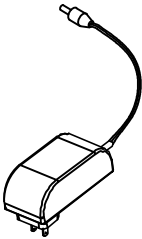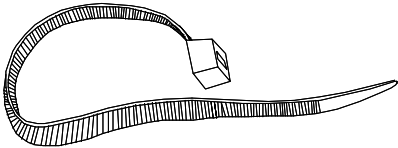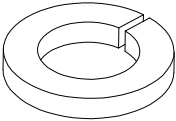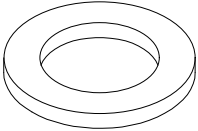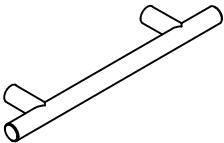
<p>①</p> 	<p>②</p> 	<p>③</p> 
<p>CAM BOLT                      QTY:8</p>	<p>CAM LOCK                      QTY:8</p>	<p>WOOD DOWEL                      QTY:4</p>
<p>④</p> 	<p>⑤</p> 	<p>⑥</p>  <p>Ø8*18mm</p>
<p>QTY:2</p>	<p>QTY:2</p>	<p>FLAT SCREW                      QTY:24</p>
<p>⑦</p> 	<p>⑧</p> 	<p>⑨</p> 
<p>CAM TOOL                      QTY:1</p>	<p>ADAPTOR                      QTY:1</p>	<p>PLASTIC TIE                      QTY:2</p>
<p>⑩</p>  <p>Ø1/4*38mm</p>	<p>⑪</p> 	<p>⑫</p> 
<p>BOLT                      QTY:8</p>	<p>SPRING WASHER                      QTY:8</p>	<p>FLAT WASHER                      QTY:8</p>
<p>⑬</p> 	<p>⑭</p>  <p>Ø8*25mm</p>	<p>⑮</p> 
<p>HANDLE                      QTY:1</p>	<p>BOLT                      QTY:2</p>	<p>ALLEN KEY                      QTY:1</p>


# HARDWARE LIST

16

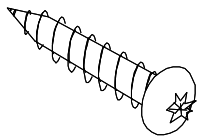


Ø7\*15mm

17

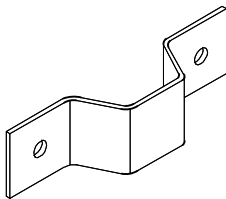

18

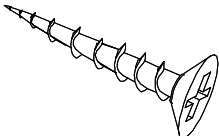

Ø8\*38mm


ROUND HEAD SCREW QTY:4

HOOK

QTY:4

FLAT HEAD SCREW QTY:4


19

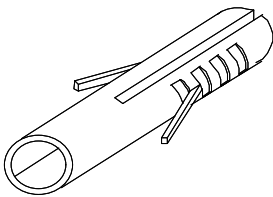


ANCHOR

QTY:4


Step 1

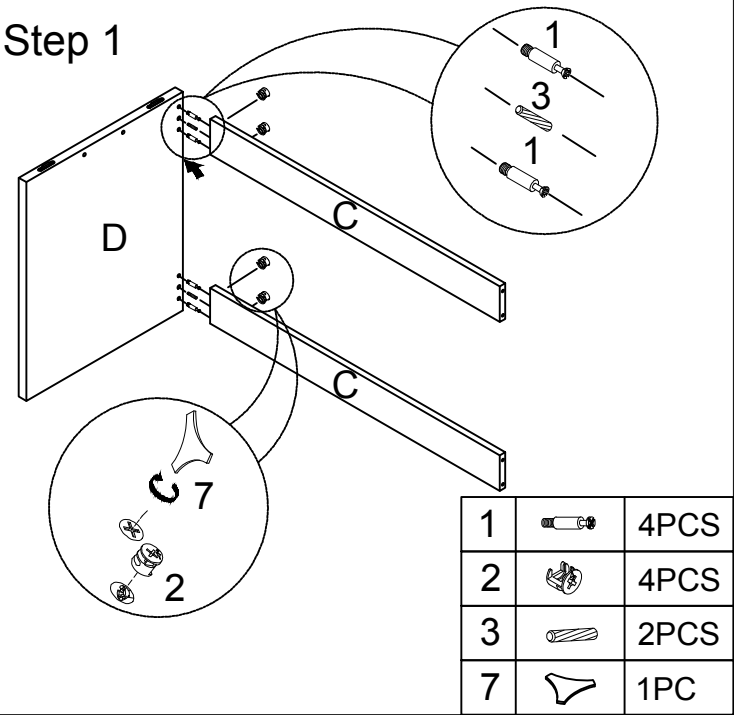

Step 2

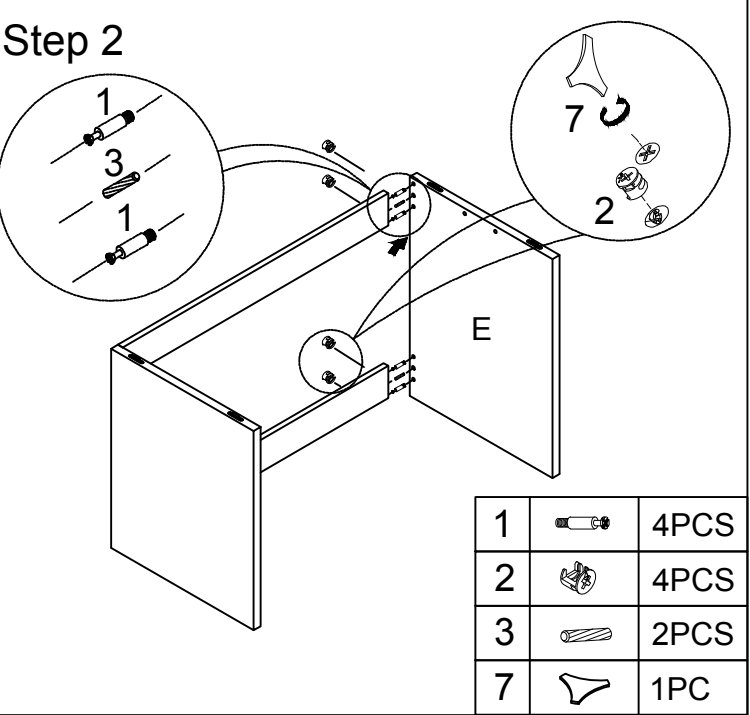


Step 3

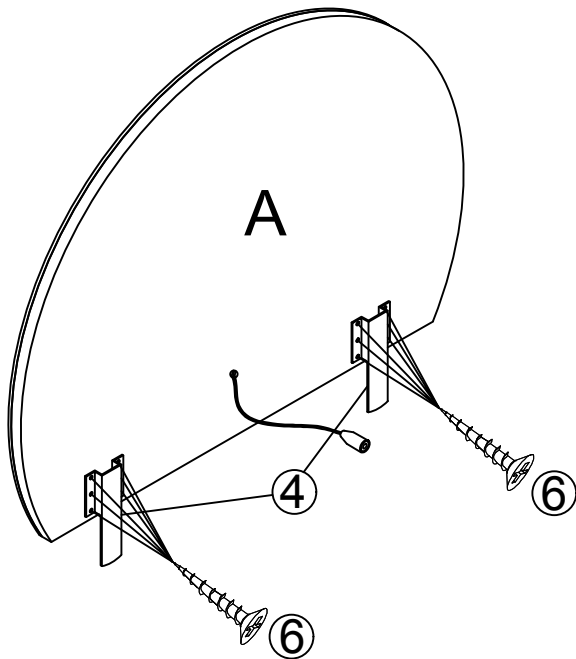


4		2PCS
6		12PCS

Step 4

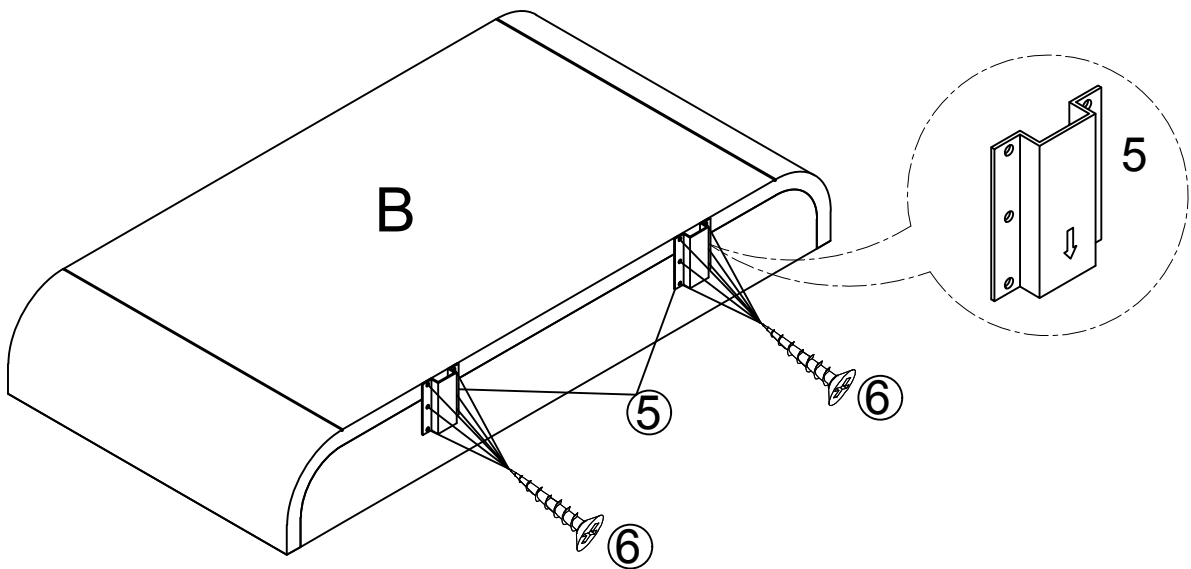


5		2PCS
6		12PCS


Step 5

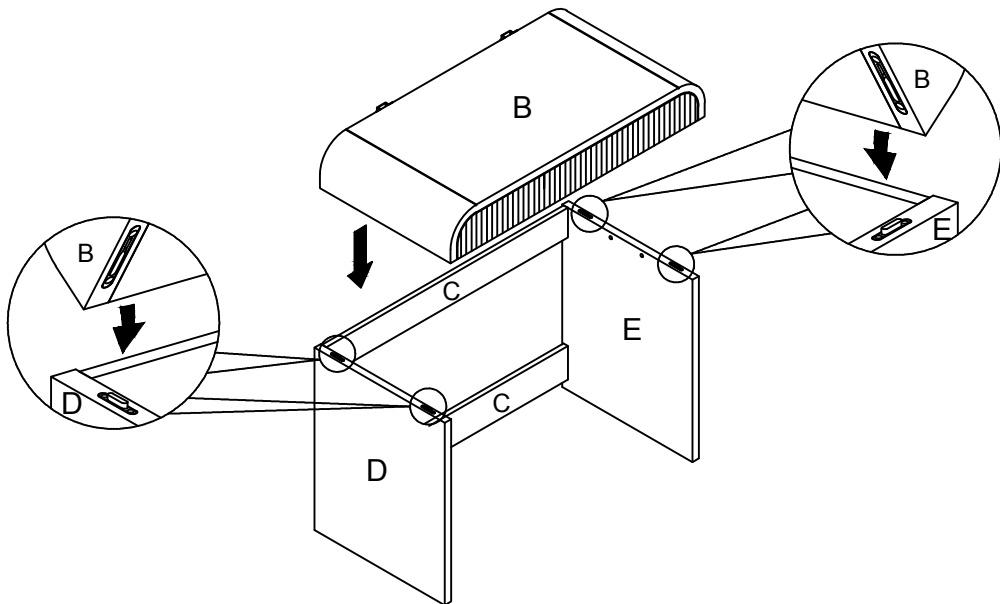


Step 6

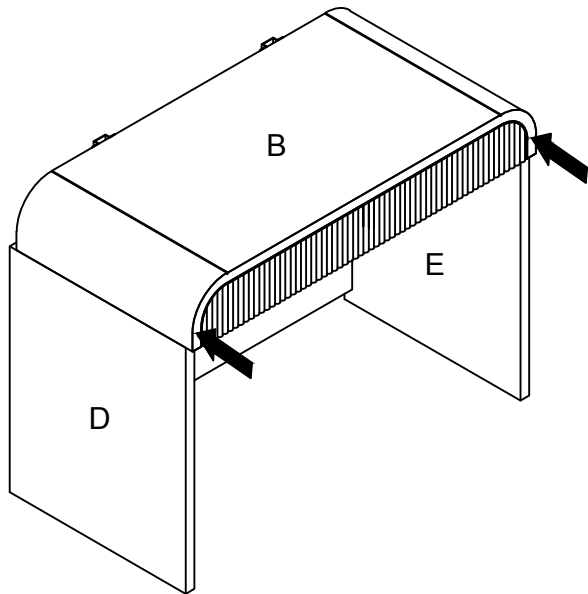

Step 7

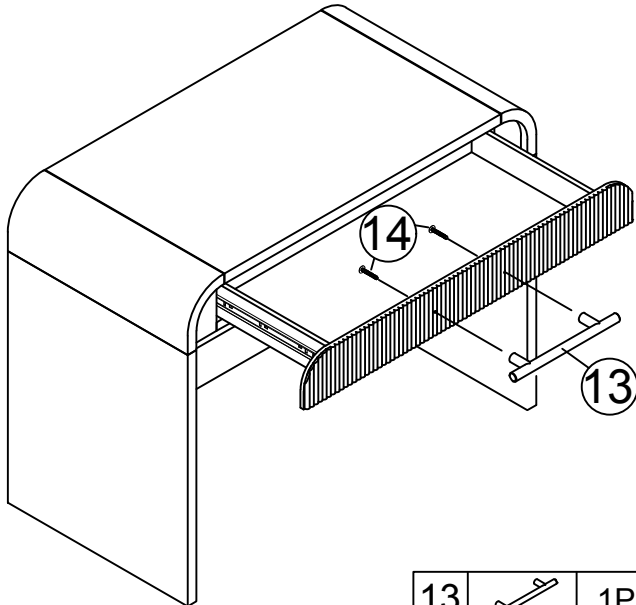


Step 8

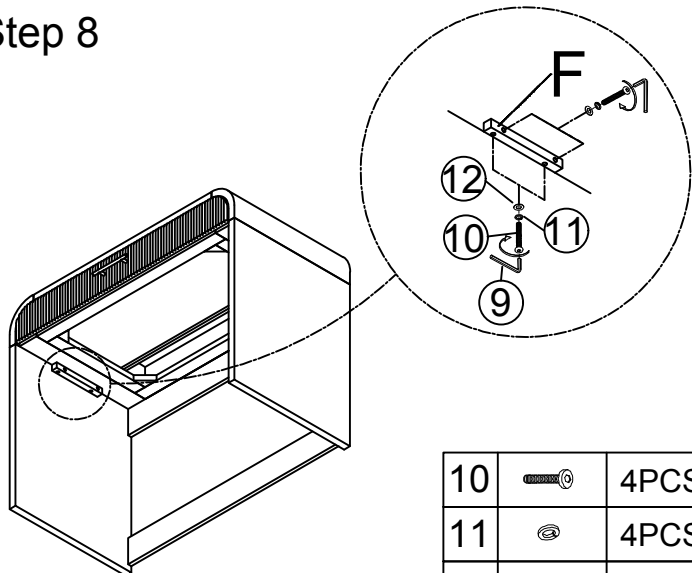


10		4PCS
11		4PCS
12		4PCS
9		1PC

Step 9

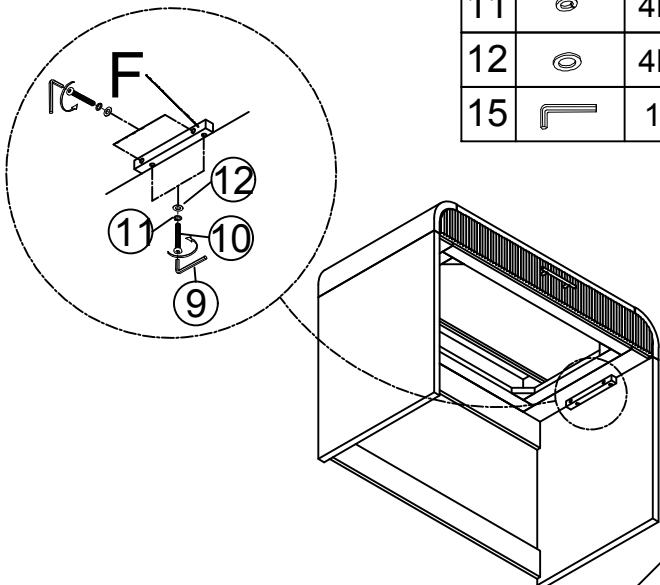


13		1PC
14		2PCS
10		4PCS
11		4PCS
12		4PCS
15		1PC

Step 10

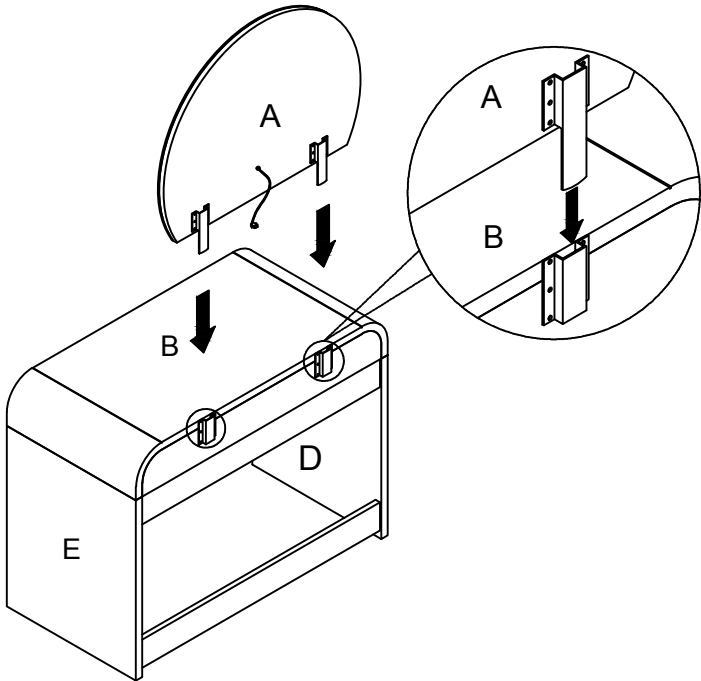


Step 11

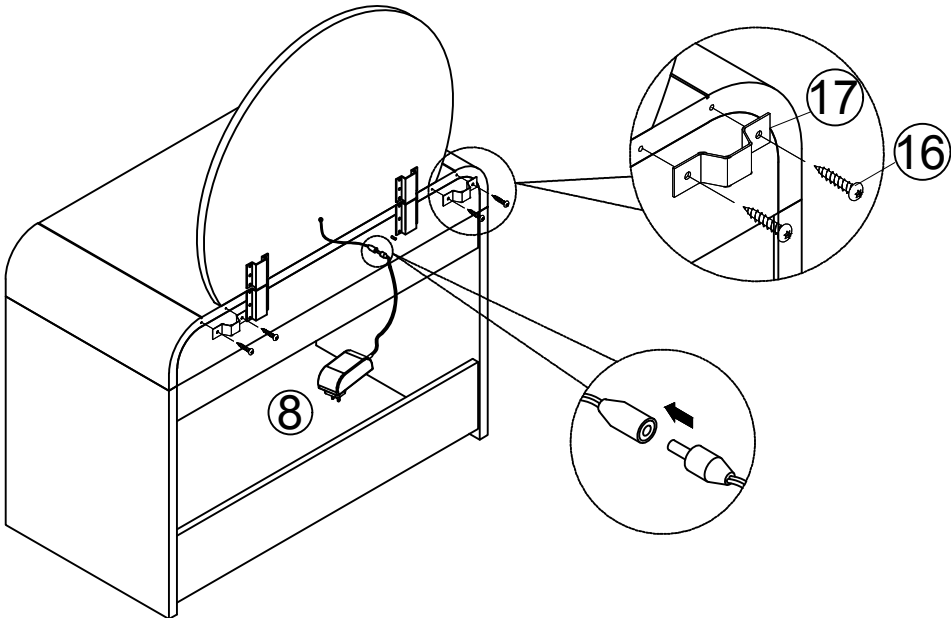

8		1PC
16		4PCS
17		2PCS

Step 11

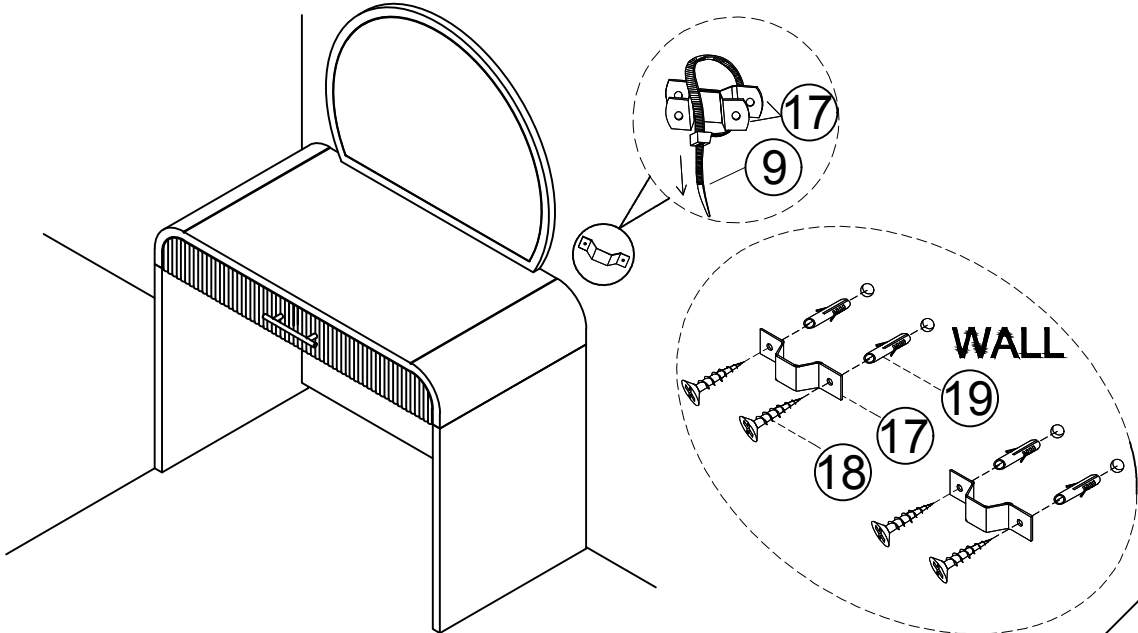

17		2PCS
18		4PCS
19		4PCS
9		2PCS