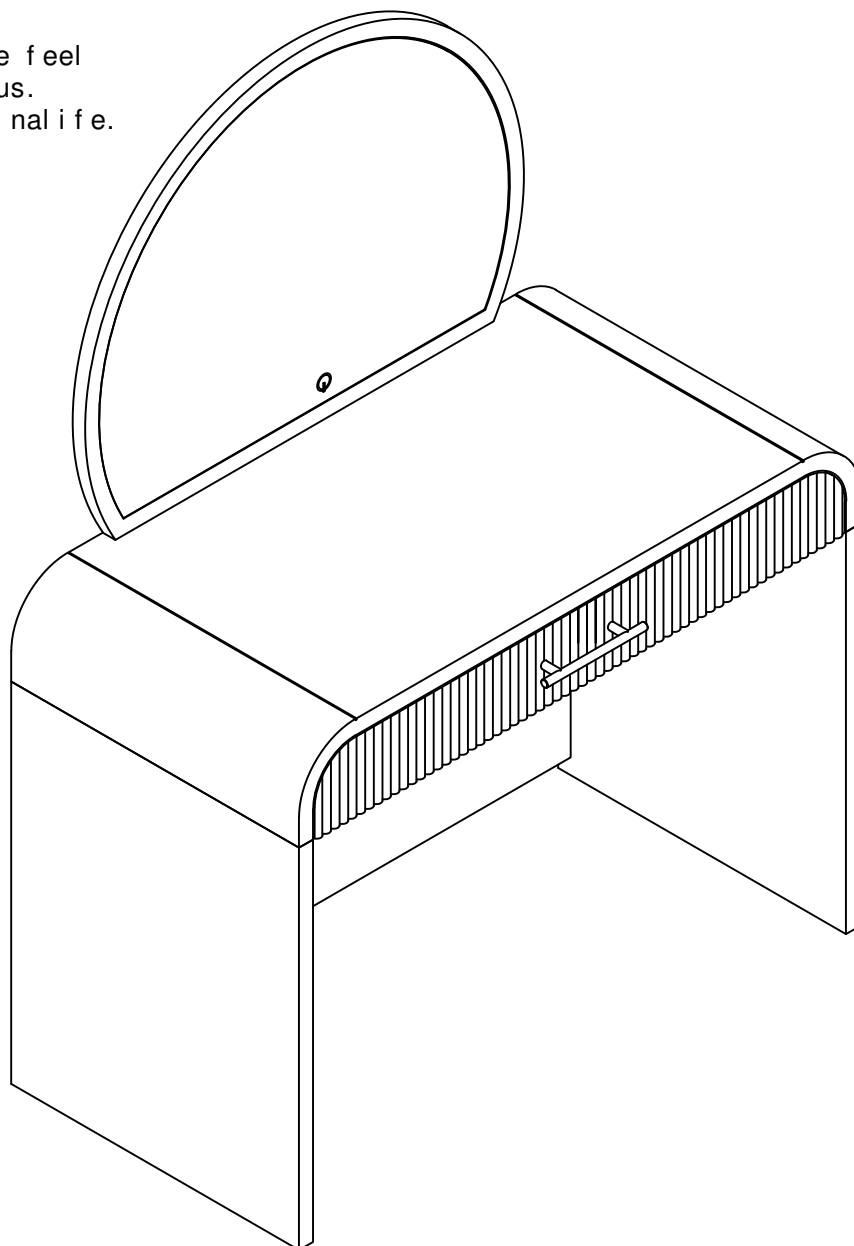


# Make Up Cart

## Assembly Instructions - N704P196658

Please keep for future reference

If you have any  
questions, please feel  
free to contact us.  
Email: [hdtteam@criminallife.com](mailto:hdtteam@criminallife.com)



Important - Please read these instructions fully before starting assembly

# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

## **WARNING** **In order to help prevent overturning –** **please follow these instructions**

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

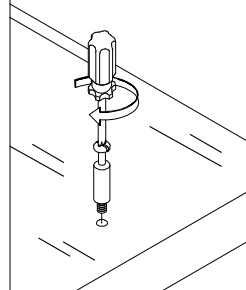
# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.



## Step 2

Push the male camlock into the entry hole.

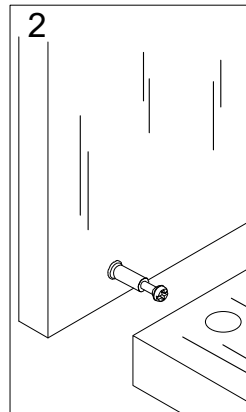2




## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

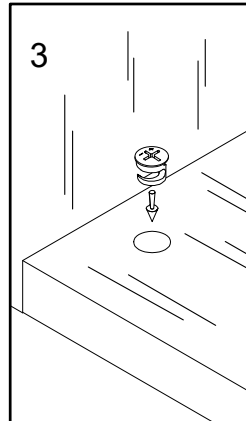3




## Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.






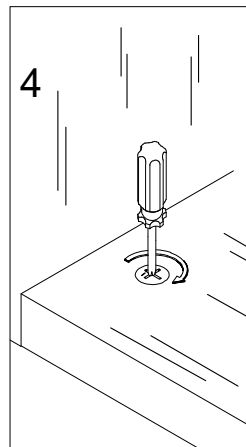
4


















# COMPONENTS - KEY DIAGRAM

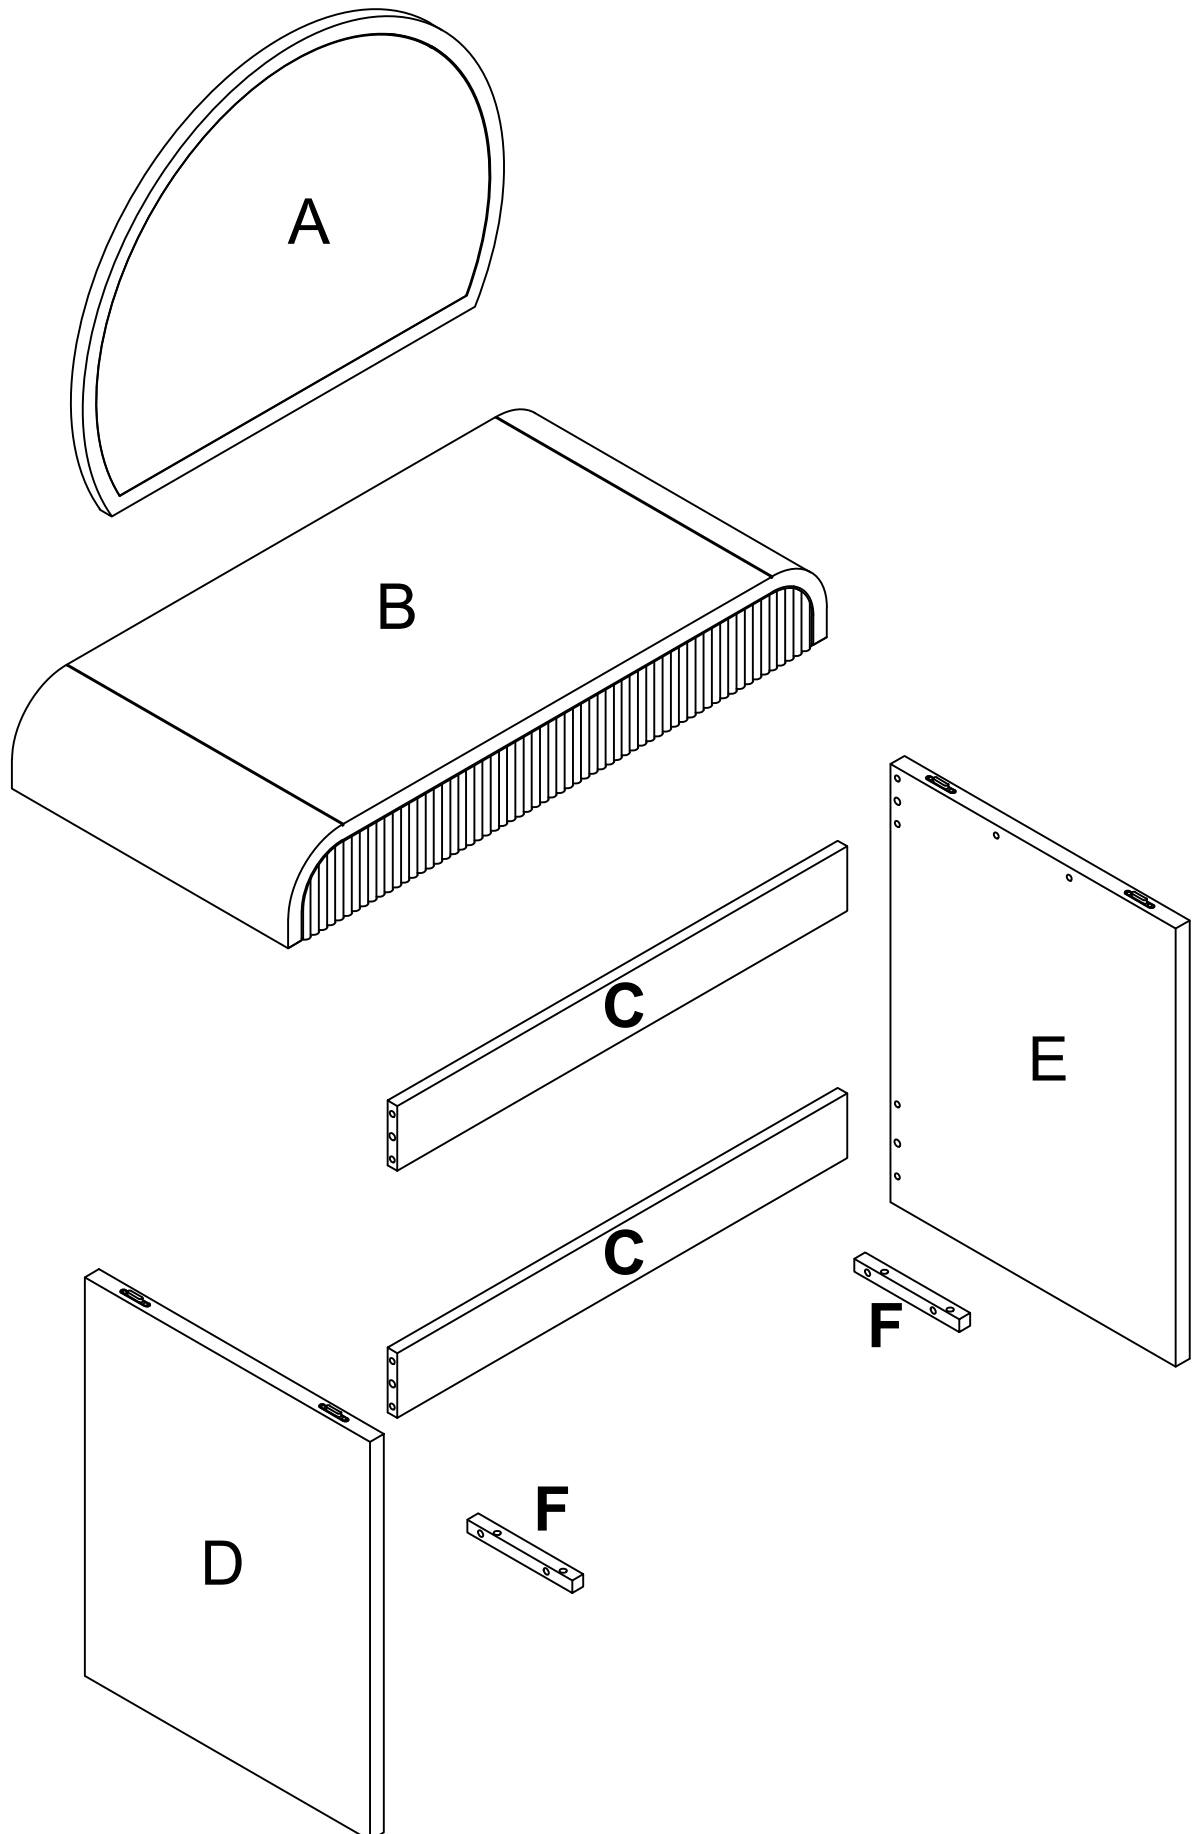





# PART LIST
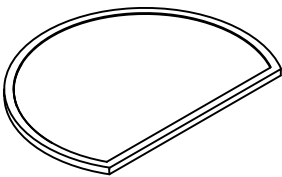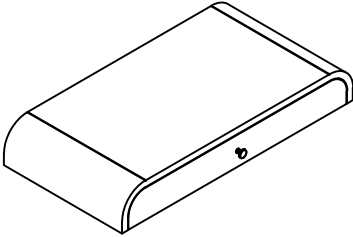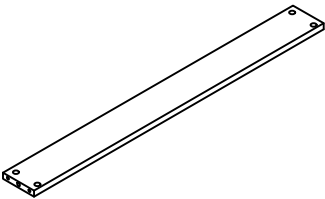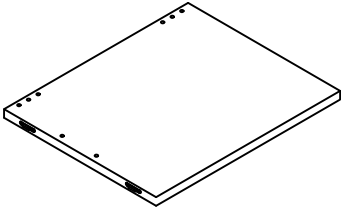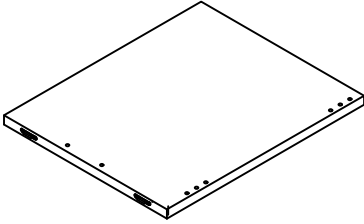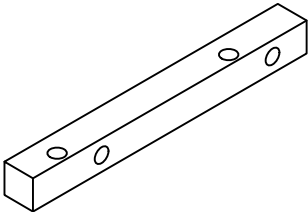
<div>A</div> <div></div>	<div>B</div> <div></div>	<div>C</div> <div></div>
<div>MIRROR FRAME</div> <div>QTY:1</div>	<div>DESK TOP</div> <div>QTY:1</div>	<div>BACK PANEL</div> <div>QTY:2</div>
<div>D</div> <div></div>	<div>E</div> <div></div>	<div>F</div> <div></div>
<div>LEFT SIDE PANEL</div> <div>QTY:1</div>	<div>RIGHT SIDE PANEL</div> <div>QTY:1</div>	<div>CONNECT WOOD</div> <div>QTY:2</div>


# HARDWARE LIST

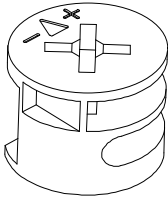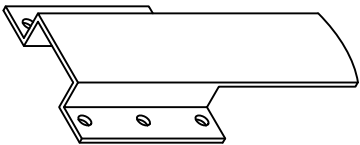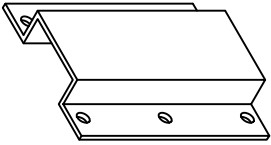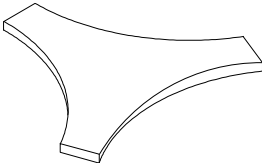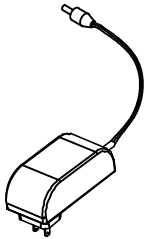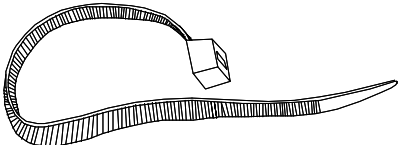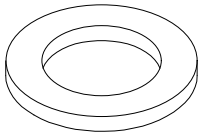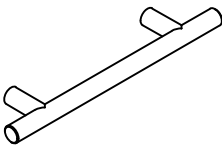①		②		③	
CAM BOLT	QTY:8	CAM LOCK	QTY:8	WOOD DOWEL	QTY:4
④		⑤		⑥	 Ø8*18mm
	QTY:2		QTY:2	FLAT SCREW	QTY:24
⑦		⑧		⑨	
CAM TOOL	QTY:1	ADAPTOR	QTY:1	PLASTIC TIE	QTY:2
⑩	 Ø1/4*38mm	⑪		⑫	
BOLT	QTY:8	SPRING WASHER	QTY:8	FLAT WASHER	QTY:8
⑬		⑭	 Ø8*25mm	⑮	
HANDLE	QTY:1	BOLT	QTY:2	ALLEN KEY	QTY:1


# HARDWARE LIST
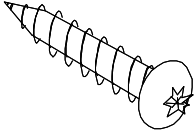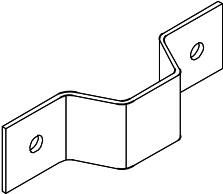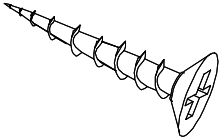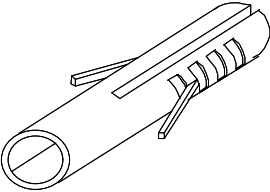
<div>16</div> <div></div> <div>Ø7*15mm</div>	<div>17</div> <div></div>	<div>18</div> <div></div> <div>Ø8*38mm</div>
ROUND HEAD SCREW    QTY:4	HOOK    QTY:4	FLAT HEAD SCREW    QTY:4
<div>19</div> <div></div>		
ANCHOR    QTY:4		

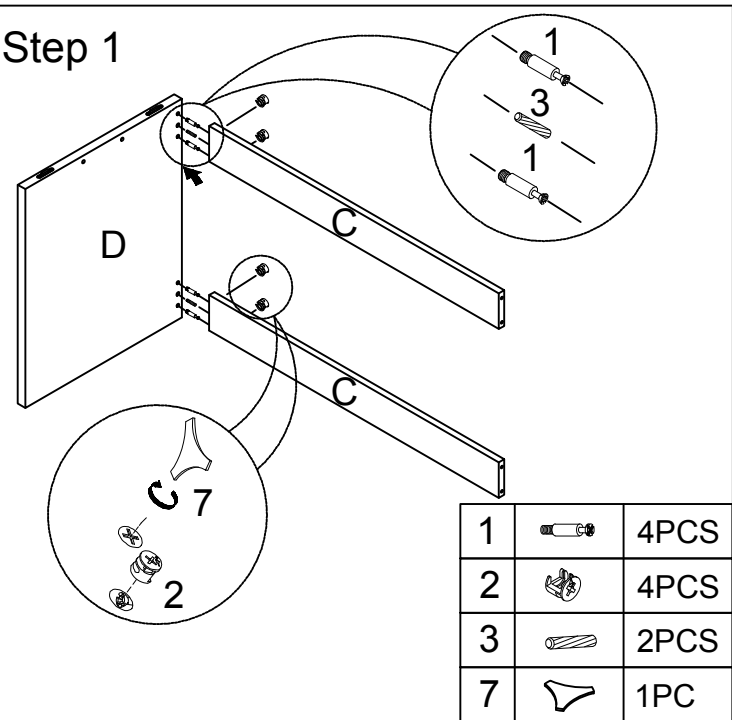
Step 1



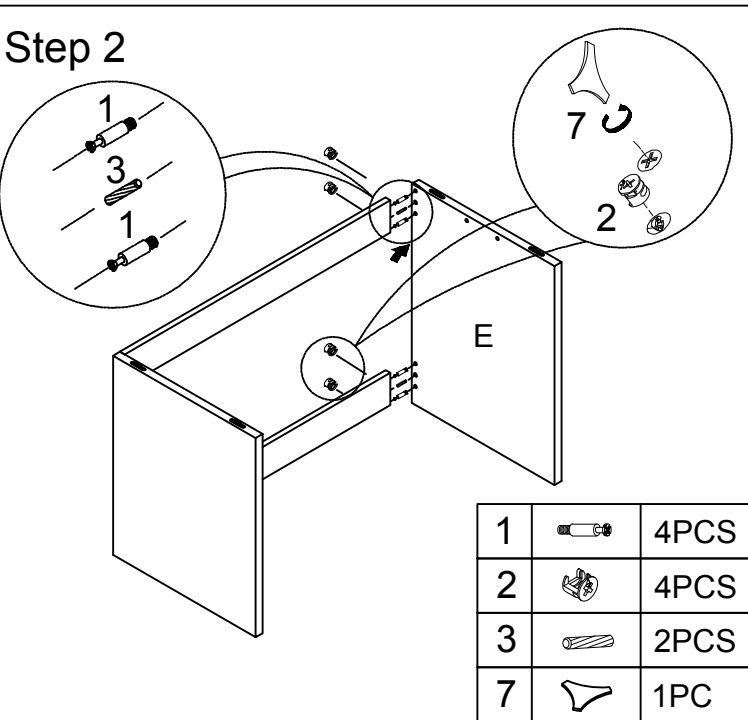
Step 2



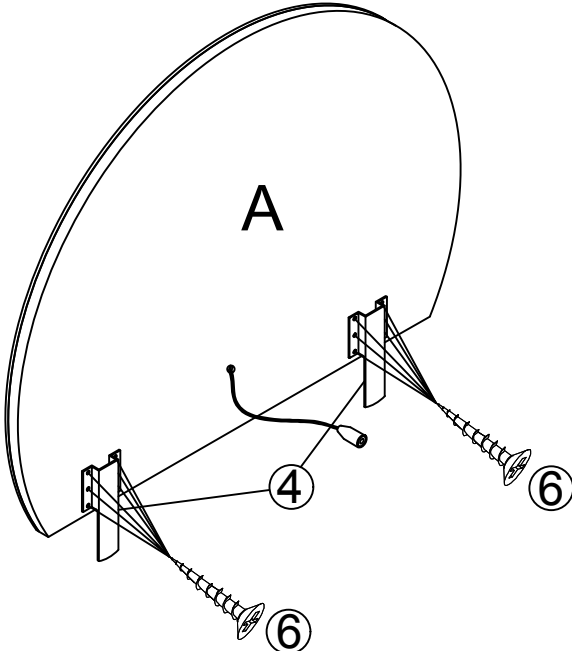Step 3




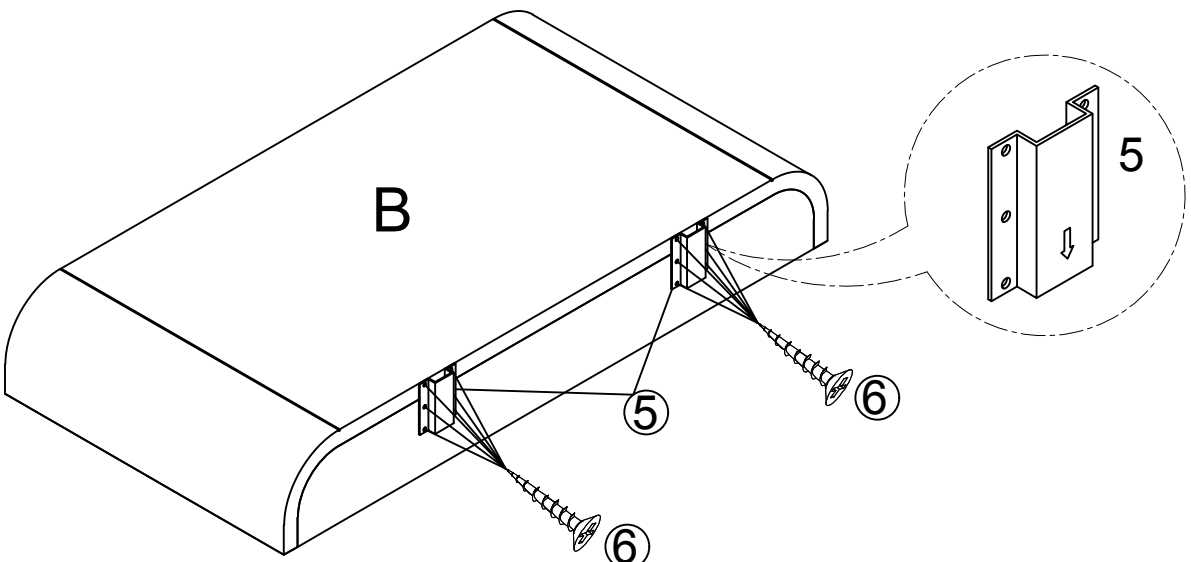Step 4






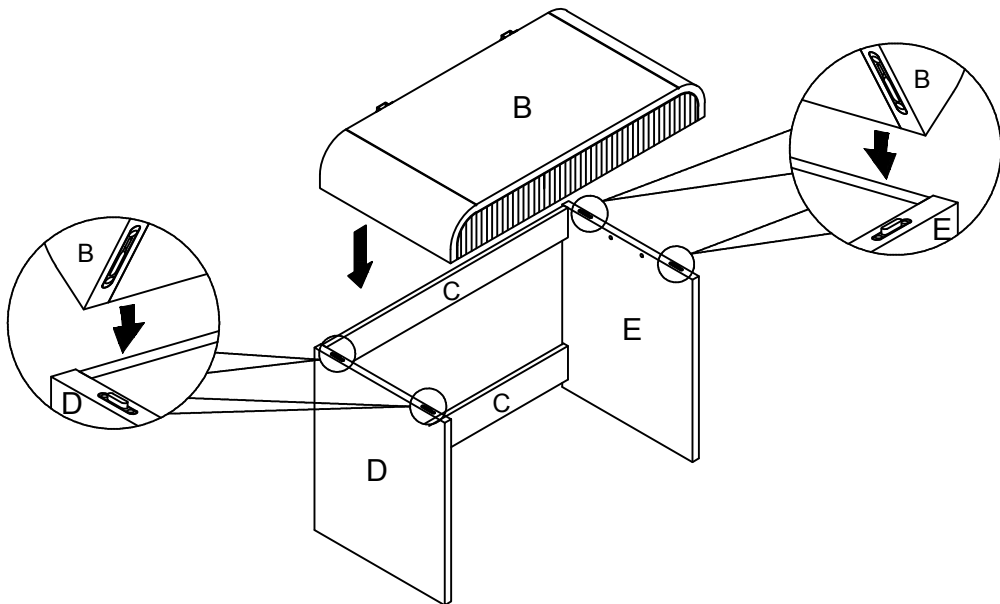
Step 5



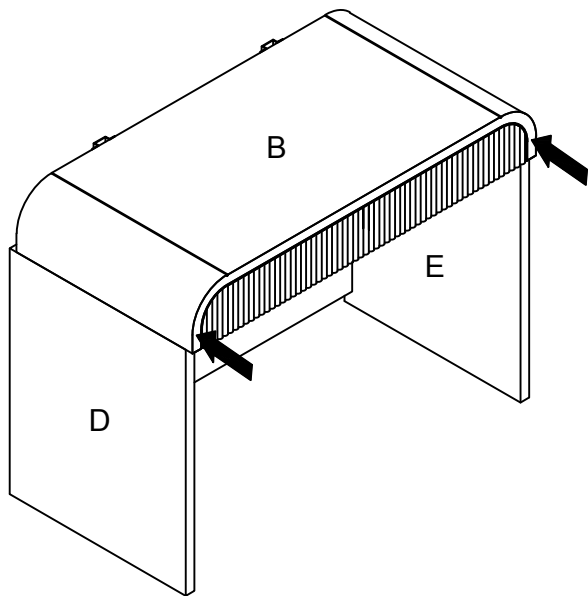Step 6




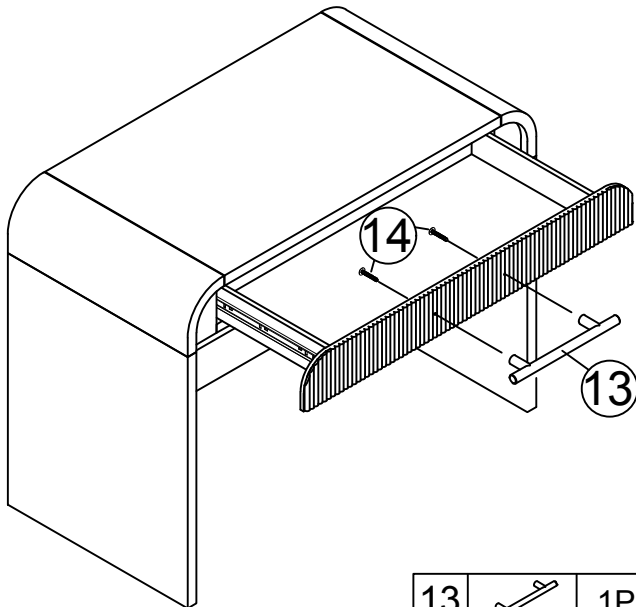Step 7




13		1PC
14		2PCS
10		4PCS
11		4PCS
12		4PCS
15		1PC

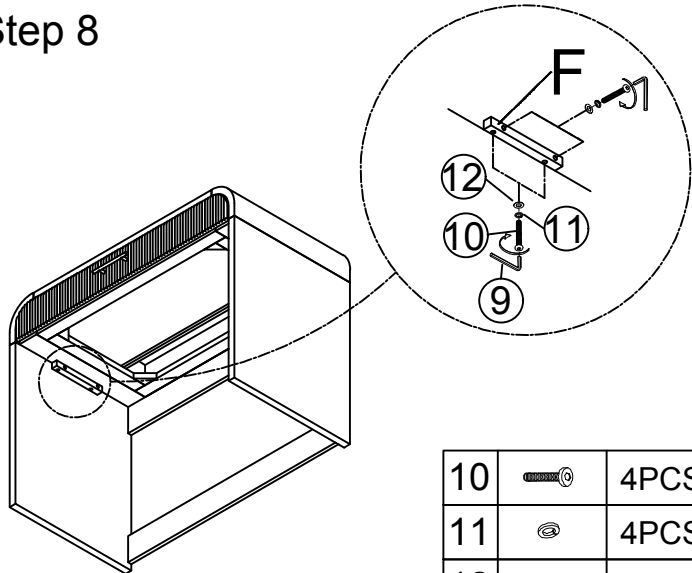Step 8




10		4PCS
11		4PCS
12		4PCS
9		1PC

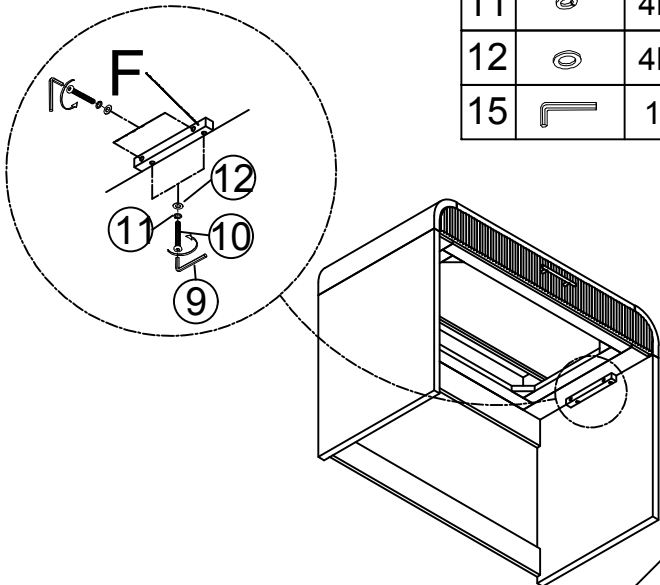
Step 9



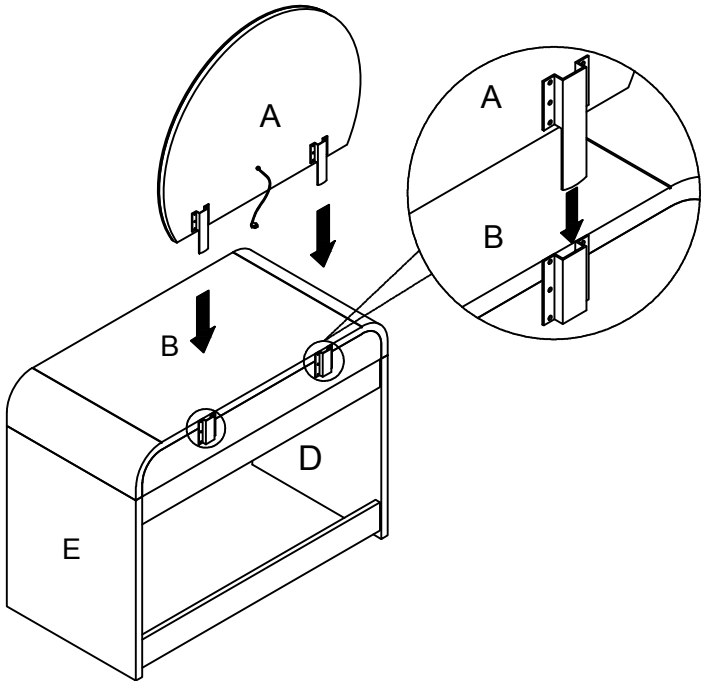Step 10




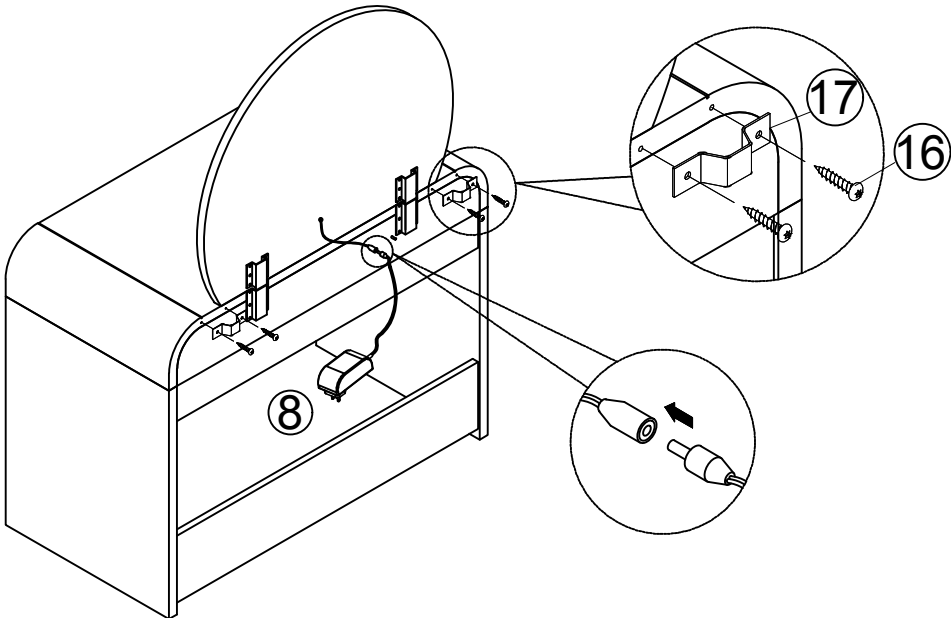Step 11



8		1PC
16		4PCS
17		2PCS

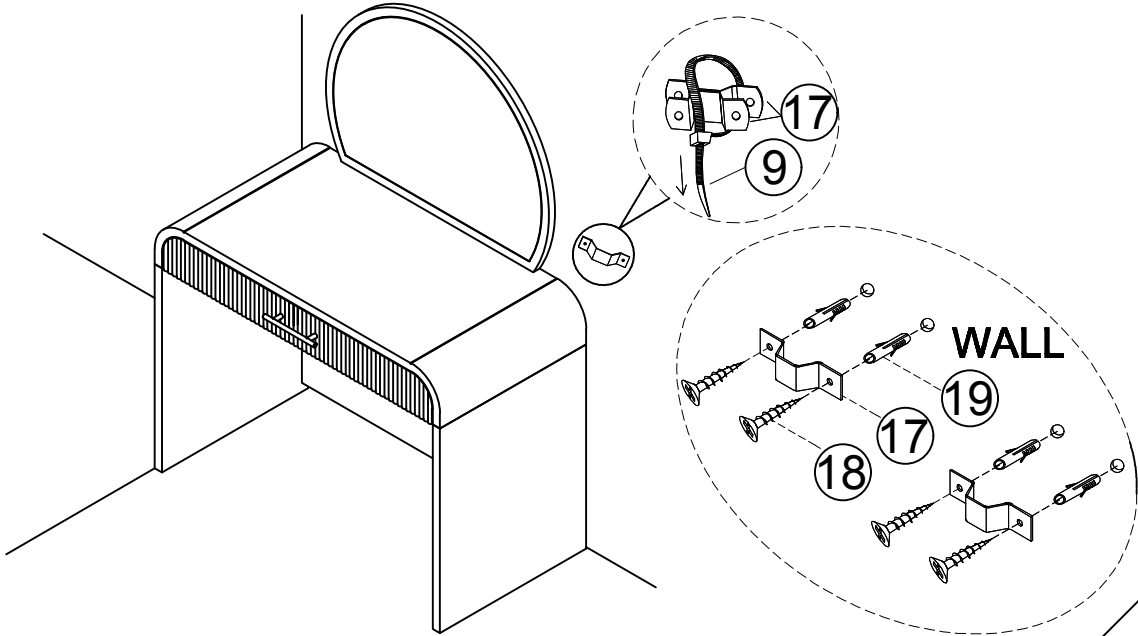Step 11



17		2PCS
18		4PCS
19		4PCS
9		2PCS