



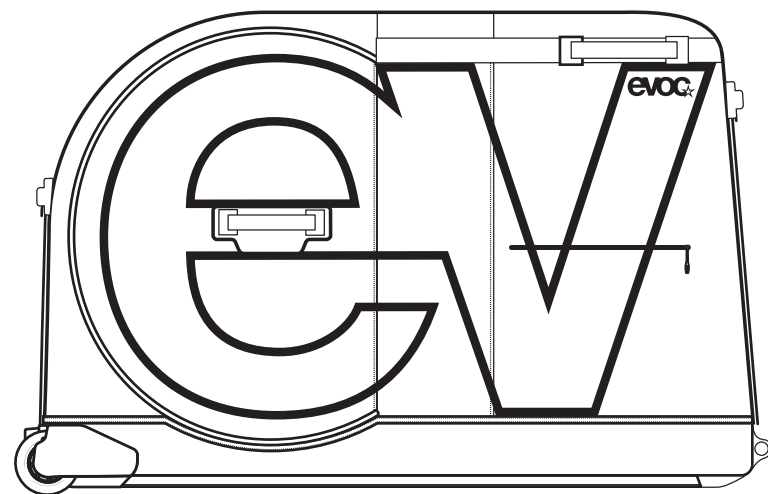

INSTRUCTION MANUAL
FOR PACKING
A MOUNTAINBIKE OR ROADBIKE IN YOUR
BIKE BAG PRO


ENCLOSED PARTS BIKE BAG PRO

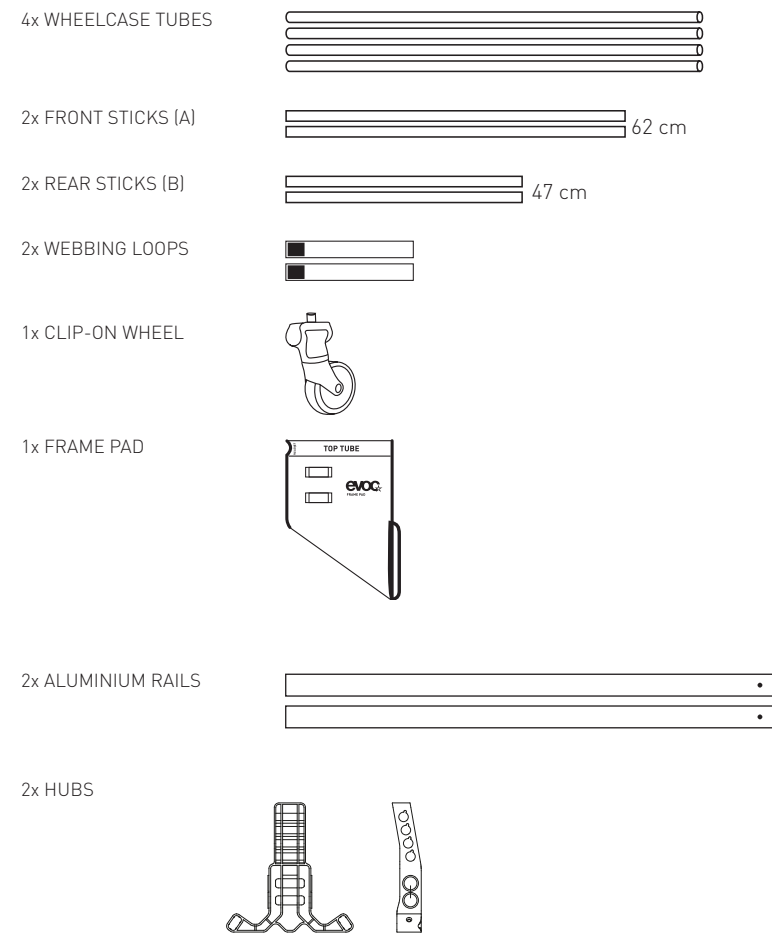


TOOLS NEEDED



ENCLOSED PARTS BIKE STAND

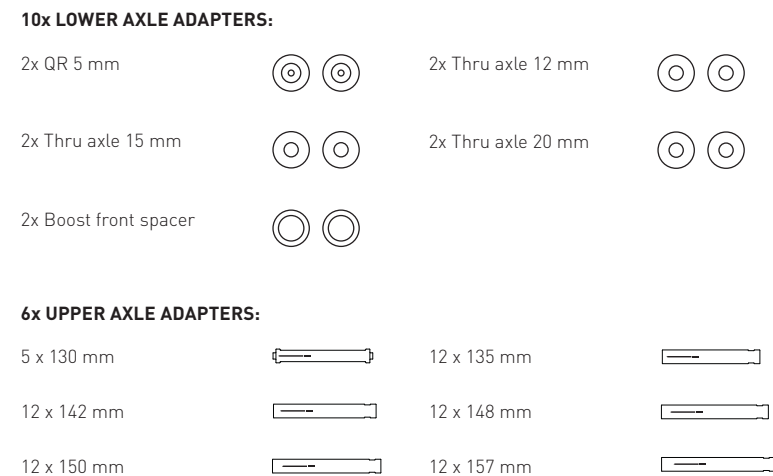


BIKE BAG PRO AND BIKE STAND PRO

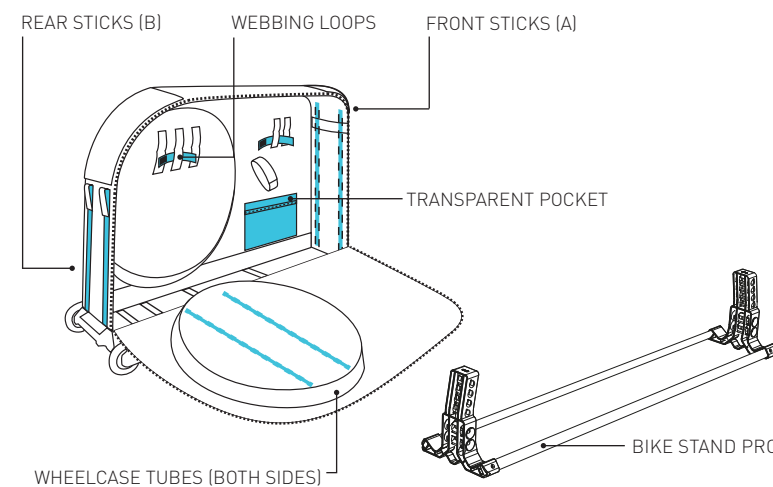


HOW TO ASSEMBLE YOUR BIKE TRAVEL BAG PRO


// 01

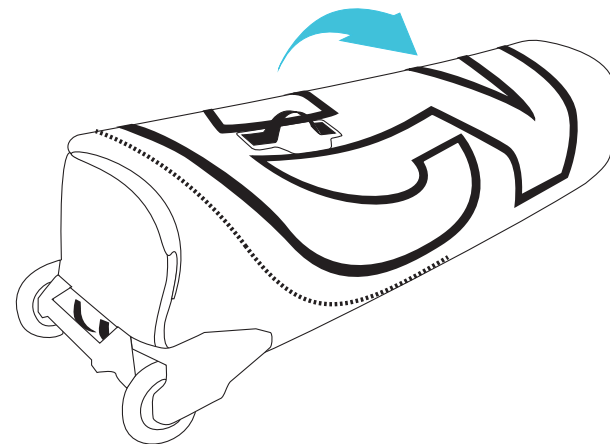


// 02

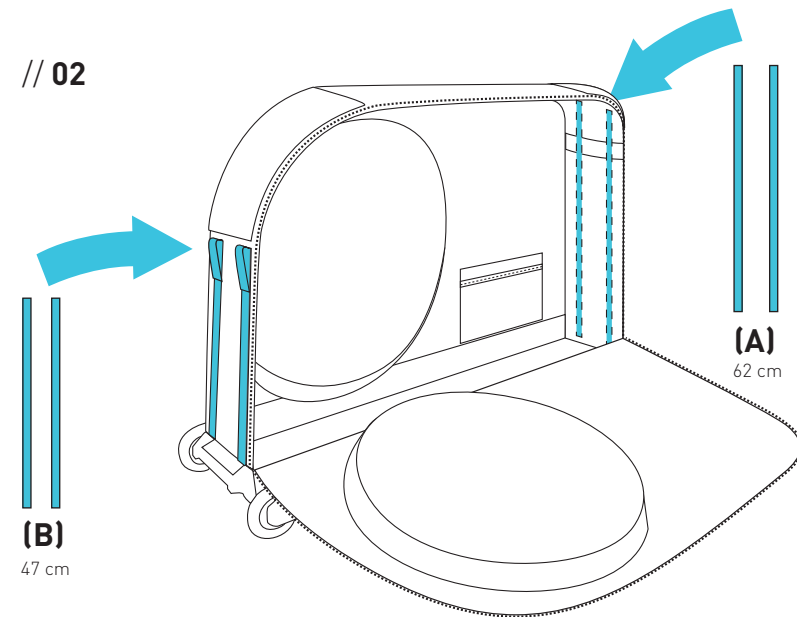

// 03

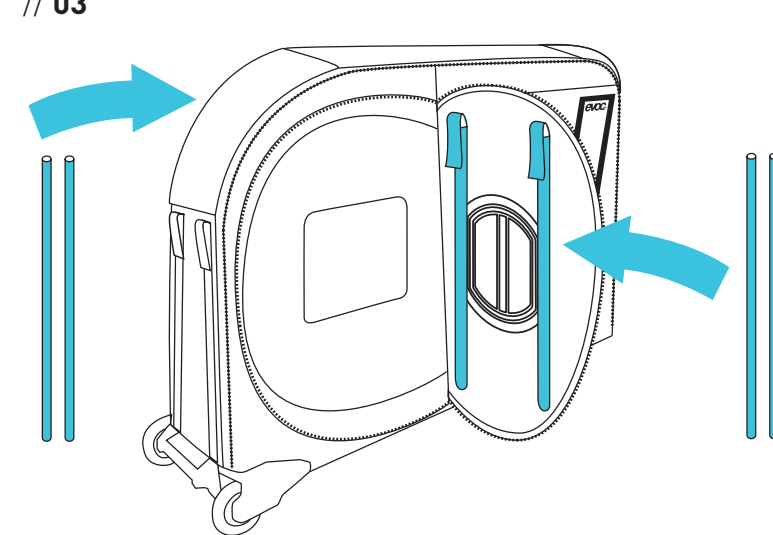


// 04

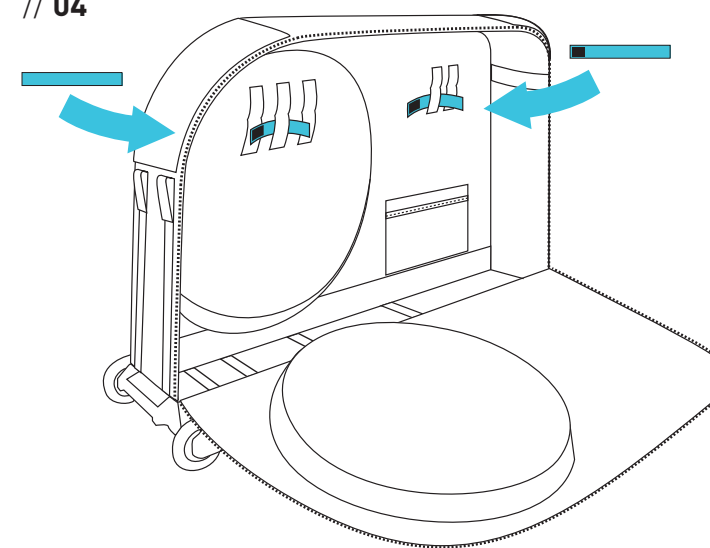


BIKE PREPARATION

// 05

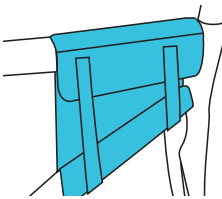


Add FRAME PAD

// 06

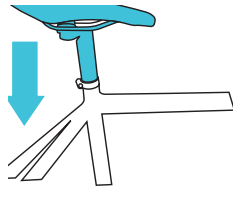


Lower in your bicycle saddle

// 07

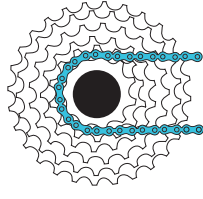


Chain on smallest sprocket

// 08

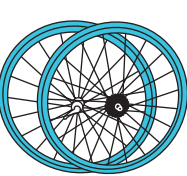


Remove both wheels

// 09

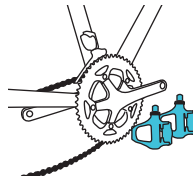

Remove both pedals


// 10

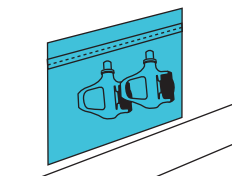

Put pedals in transparent pocket


HOW TO ASSEMBLE YOUR BIKE STAND PRO

// 11

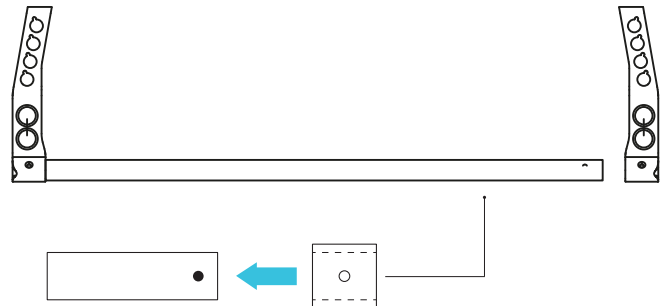


MOUNTING YOUR BIKE ON BIKE STAND PRO (AS SEEN ON ROAD BIKE)

// 12

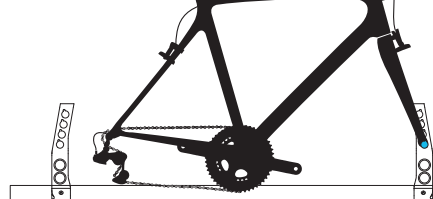

Place fork on front hub with correct lower axle adapters. Tighten your front axle.


// 13

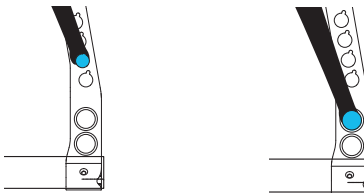

a) Top level


b) Low level

// 14

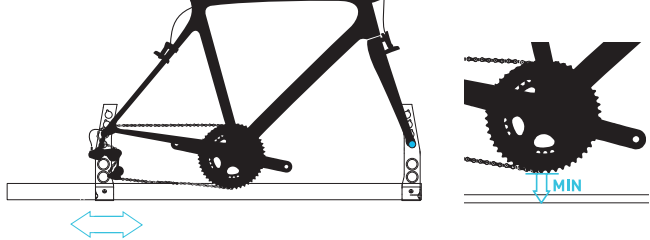


Adjust position of rear hub according to your wheel base.
Place rear drop-outs on rear hub with correct upper axle adapter. Tighten your rear axel.
Always choose lowest possible level at rear hub according to chain wheel size.

// 15

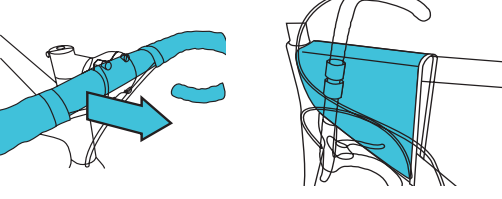


Remove handle bar and fix it on FRAME PAD

// 16

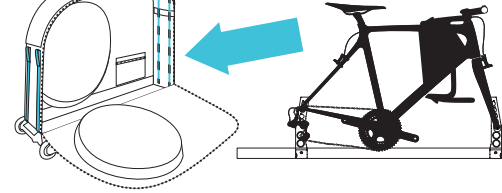

Place your bike in the BIKE BAG PRO


// 17

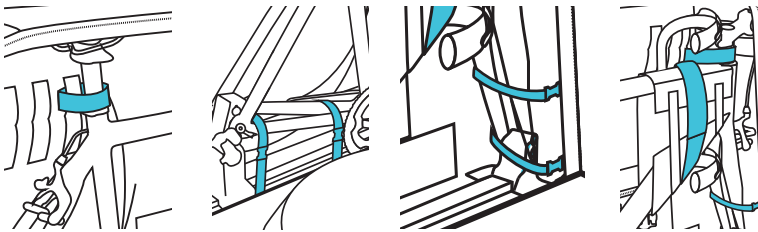

Fix your bike with red straps

BIKE BAG PRO


// 18

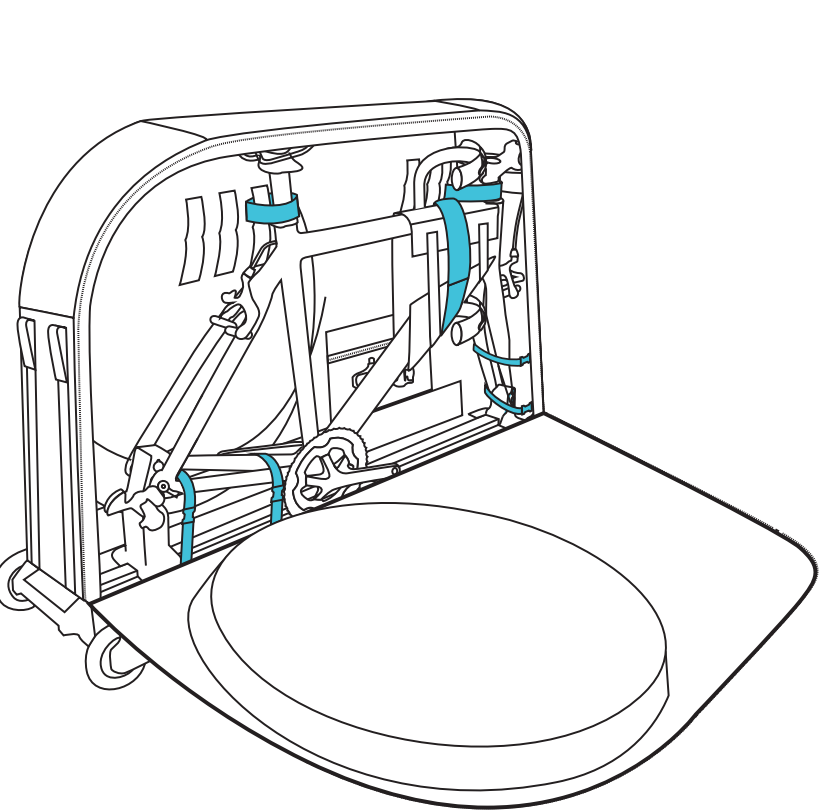

Looks like this?
Almost done!

BIKE BAG PRO

// 19

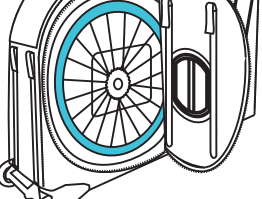

Don't forget to put wheels
in wheel compartment

HOW TO USE THE CLIP-ON WHEEL

// 20



Click CLIP-ON WHEEL to ALUMINIUM FRONT HANDLE SYSTEM. Pin has to go into feed holes!

Remove CLIP-ON WHEEL before luggage drop and put back into BIKE TRAVEL BAG PRO

WARRANTY AND AFTER SALES SERVICE



WARRANTY
www.evocsports.com/service/warranty