


# ASSEMBLY GUIDE

## PONY WALL/PARTITION ROOM DIVIDER

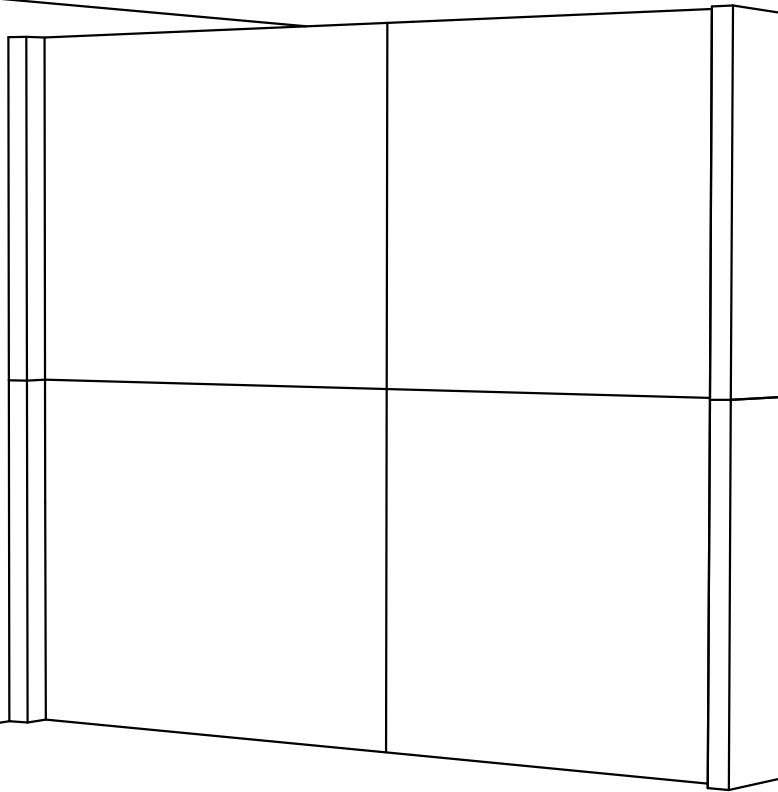


diyversify

[www.diyversify.com](http://www.diyversify.com)


+1 855-348-4330




# WHATS INCLUDED

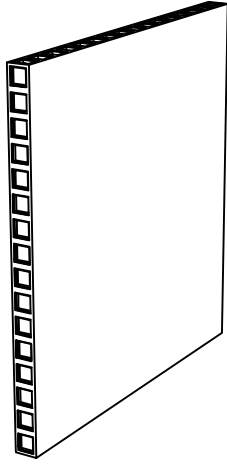


Wall Panels

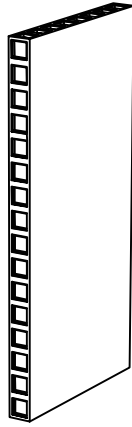


Mounting Brackets

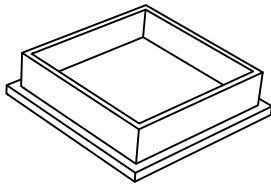

Finishing Caps

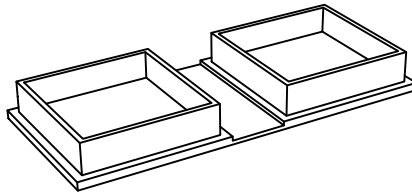


Two-Way connectors

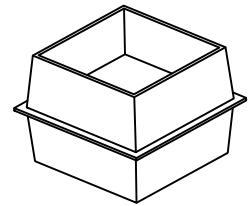

Lug Connectors

## TOOLS NEEDED

Not Included

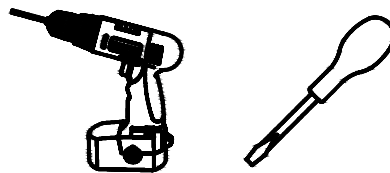


### 1. Inspect your order thoroughly prior to installation (contact us with any issues)

- Make sure that shipment have not damaged any of the panels.
- Make sure you have all the items listed out in your "item list" (sent by email).

### 2. Grab a friend (optional)

We always recommend having another person there to help you with kits higher than 4'f to help hold panels in place and avoid any pinch points.

# BEFORE GETTING STARTED

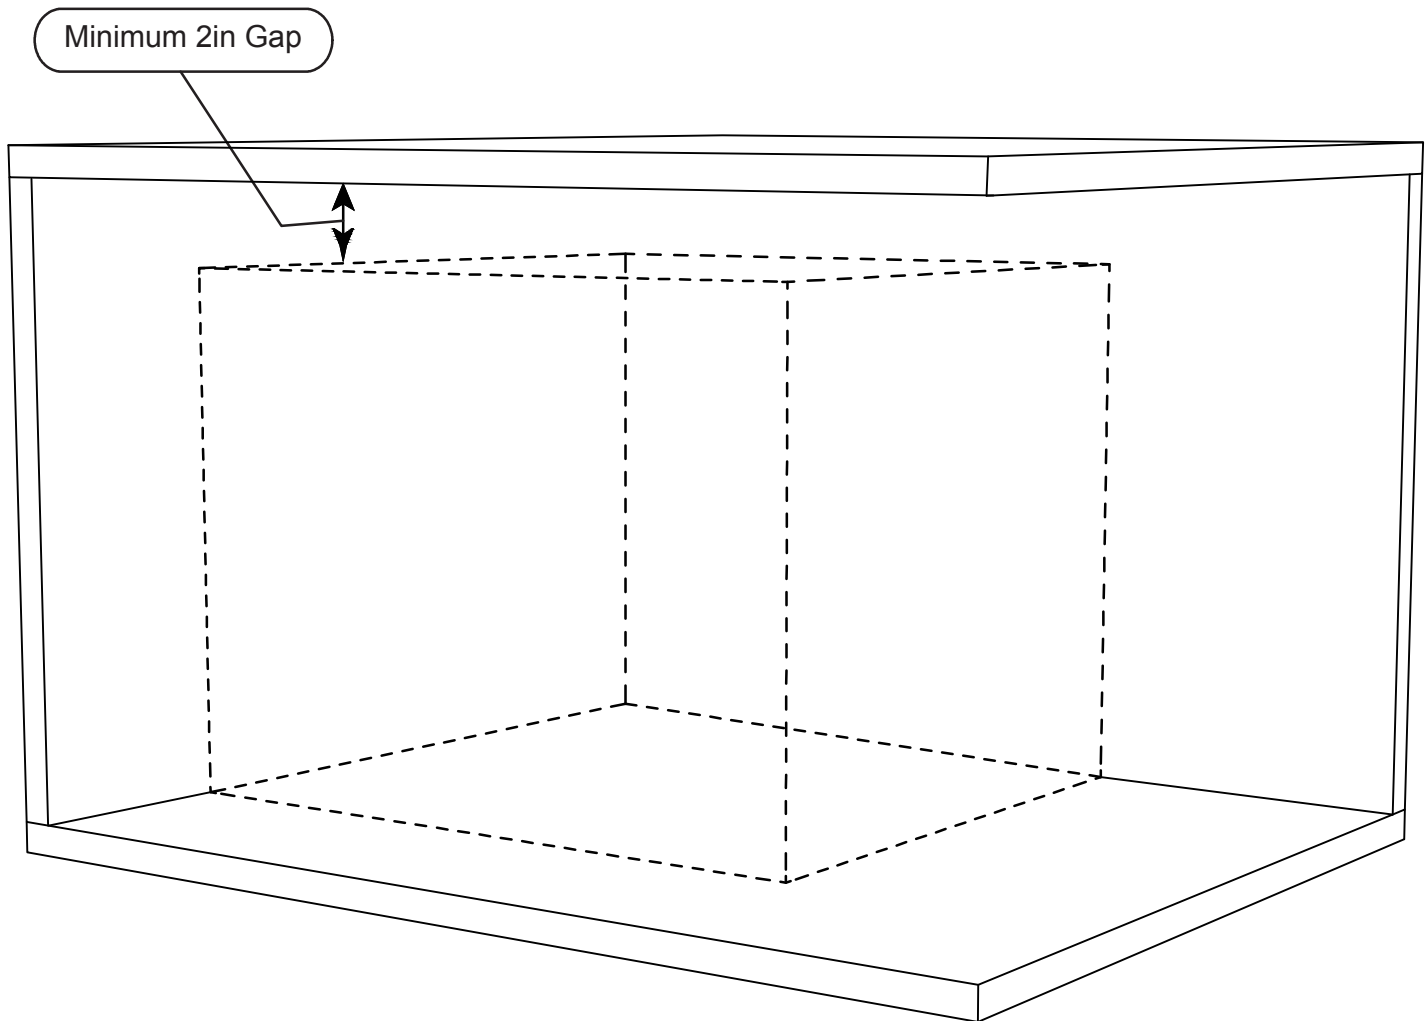

## 1. Positioning Panels in Their Approximate Location

Roughly lay out flat against the floor a single layer of wall panels outlining the configuration of your wall. This will give you a good overview of how everything fits together.

## 2. Make sure the surface area you are building in is level

This is important, as bottom panels will not be able to connect with each other if the floor is too uneven.



For any issues or questions regarding assembly our team is here to help you Monday-Friday 9AM-5PM (EST)

diyversify

[www.diyversify.com](http://www.diyversify.com)


+1 855-348-4330

1

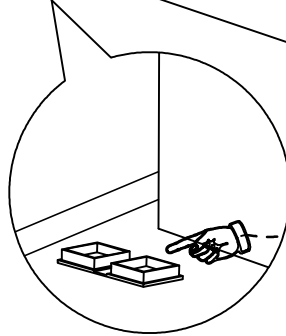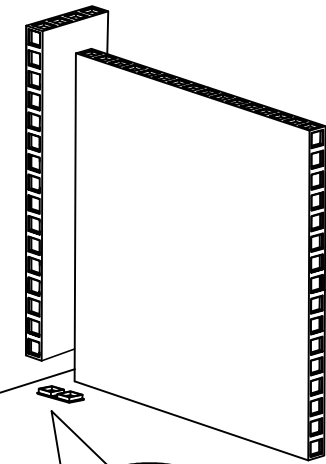


Two-Way Connectors



2

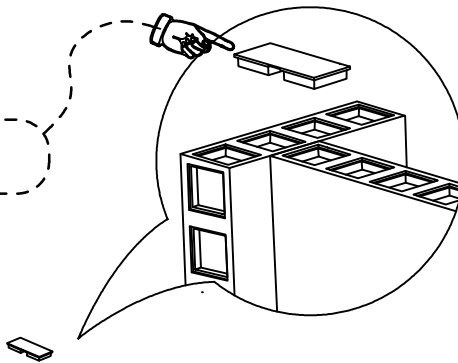

Two-Way Connectors


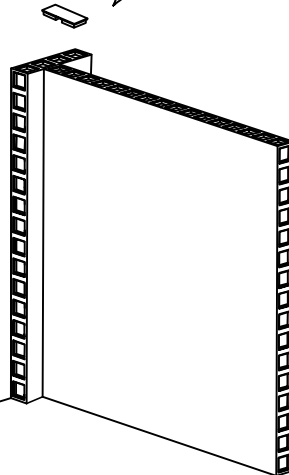


3

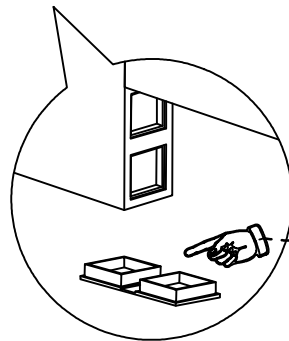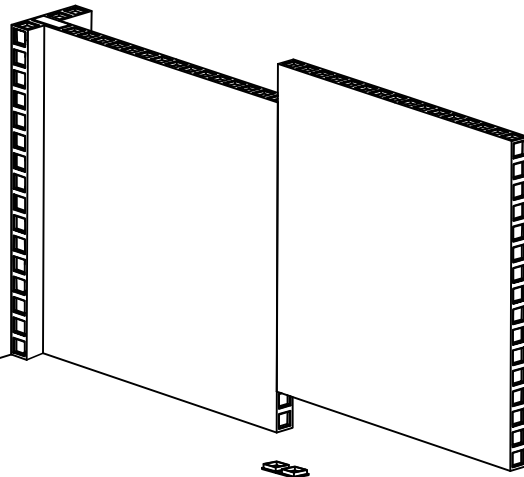



Two-Way Connectors

4

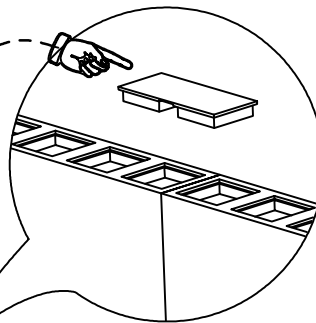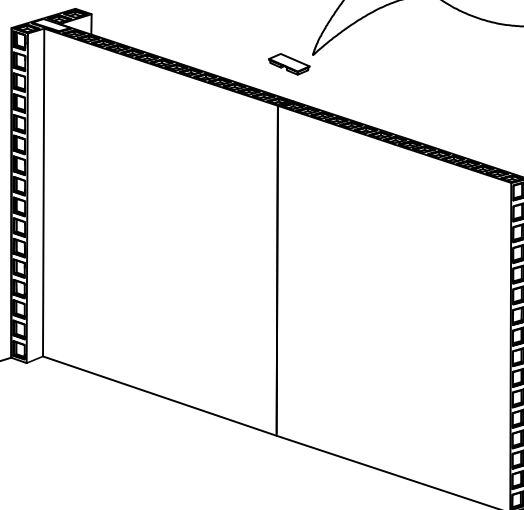


Two-Way Connectors

5

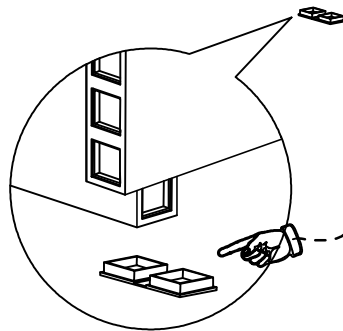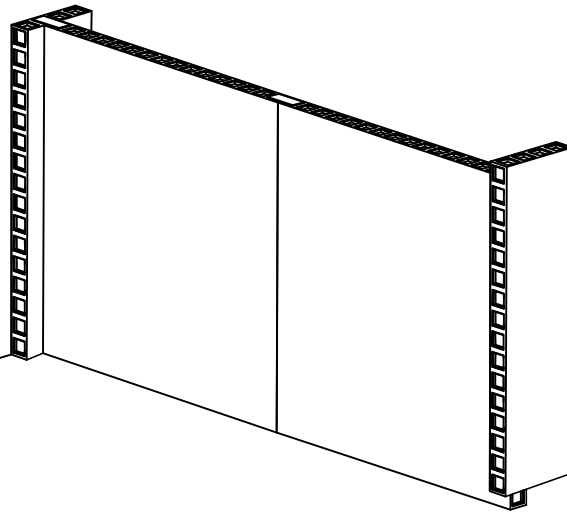


Two-Way Connectors

6

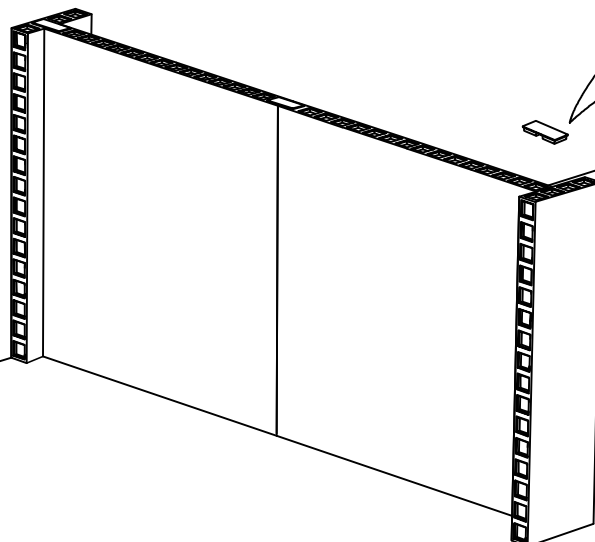


Two-Way Connectors

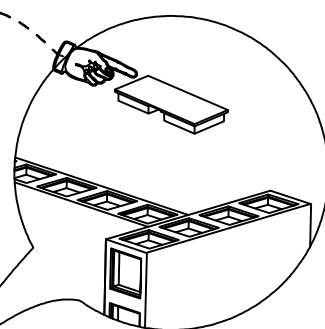

7

For wall kits above 4ft, skip this step and proceed to step 8.

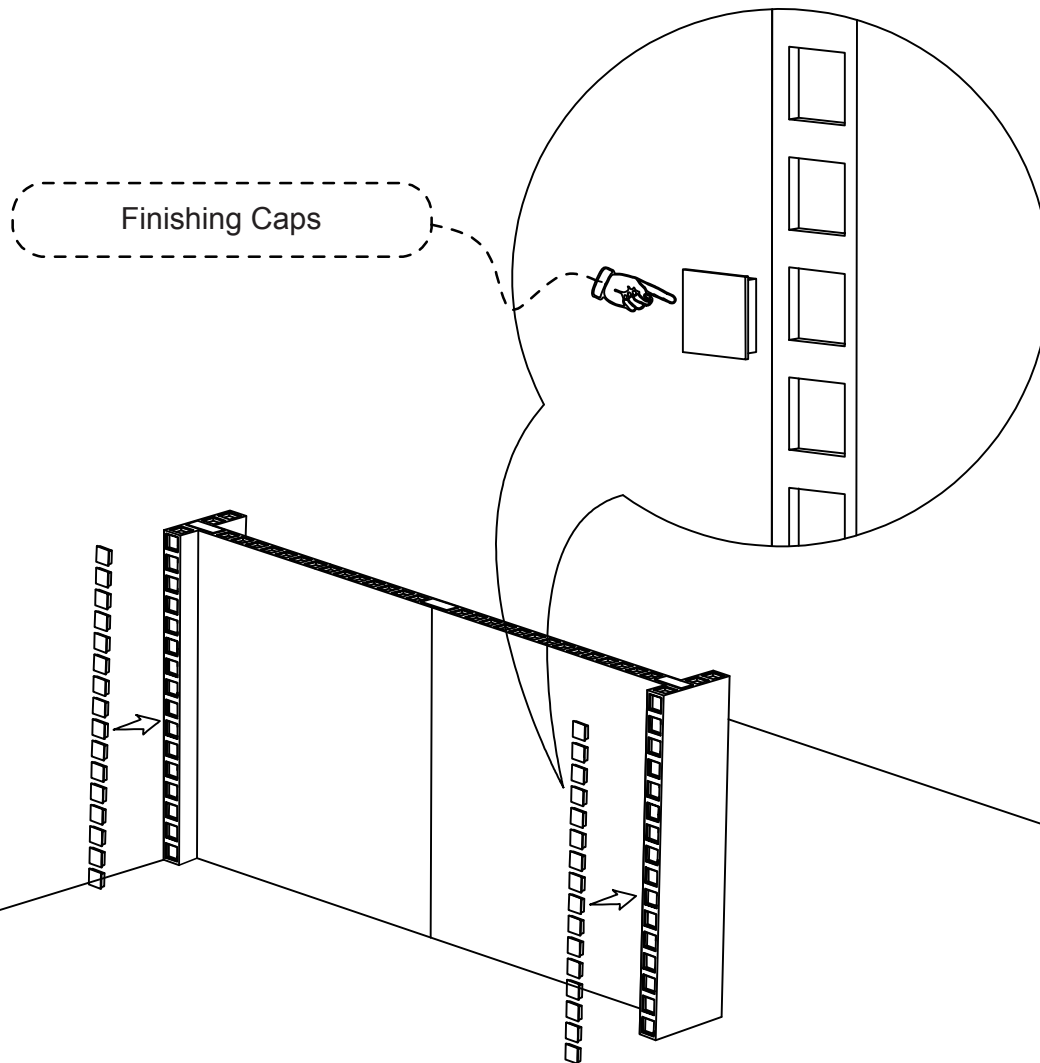


( Close off exposed connector holes )

**Use the included finishing caps to close of the exposed connectors holes**  
Simply insert the finishing caps into the open connectors until you hear a click


**Note**

The finishing caps can be challenging to get out once installed, so make sure to save this step for last when you have confirmed everything looks good.

8




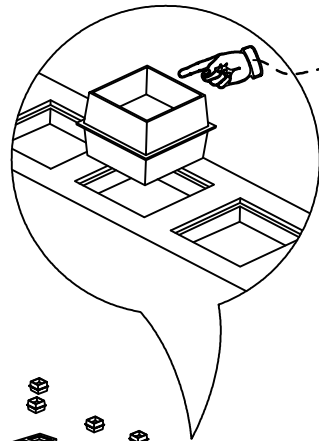
**Lug Connectors**

Insert a lug connector in every 2-3 hole. DO NOT insert lugs in every connector hole. Doing so will create a gap between panels.

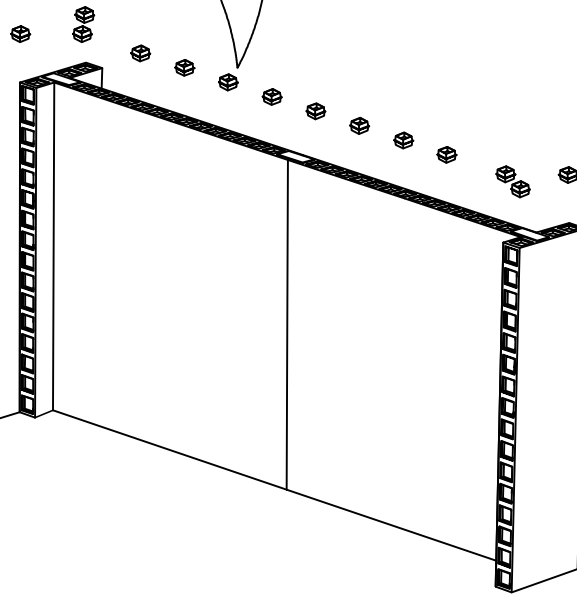




9

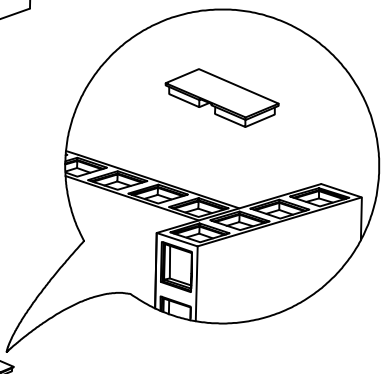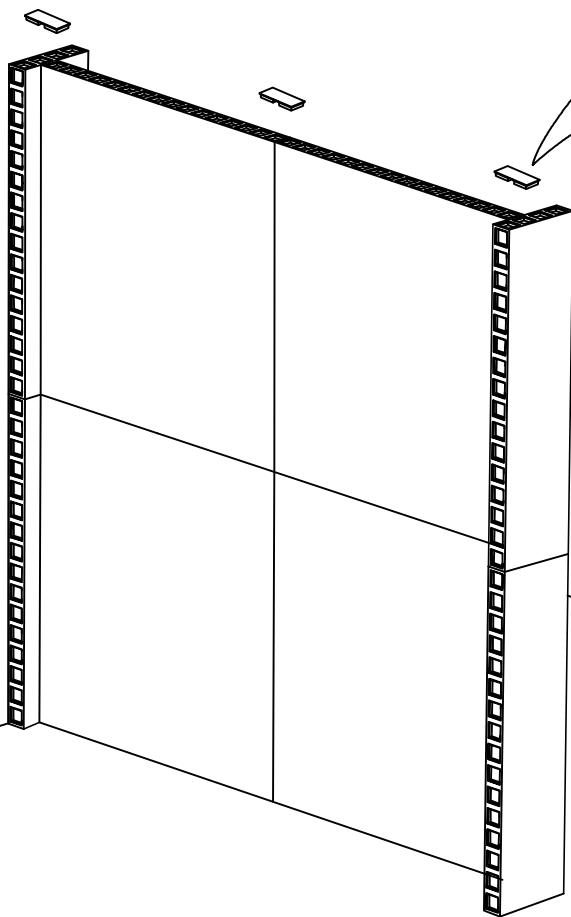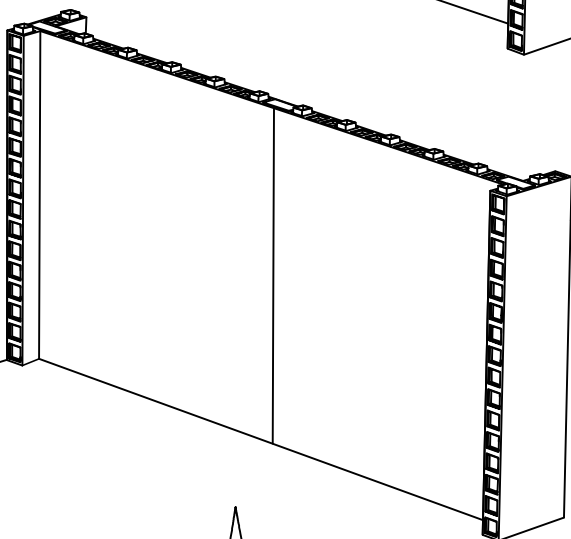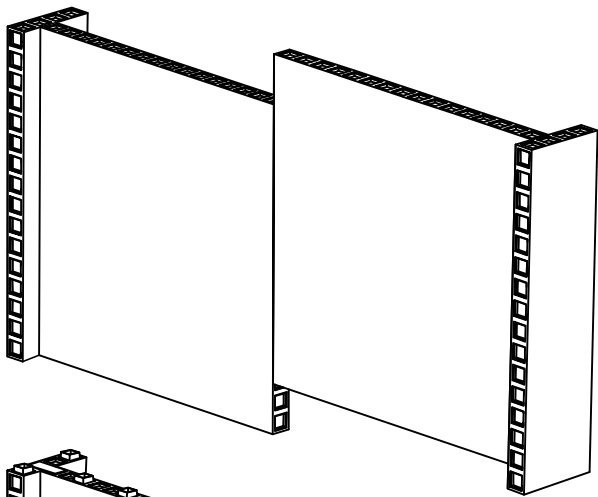

## 10

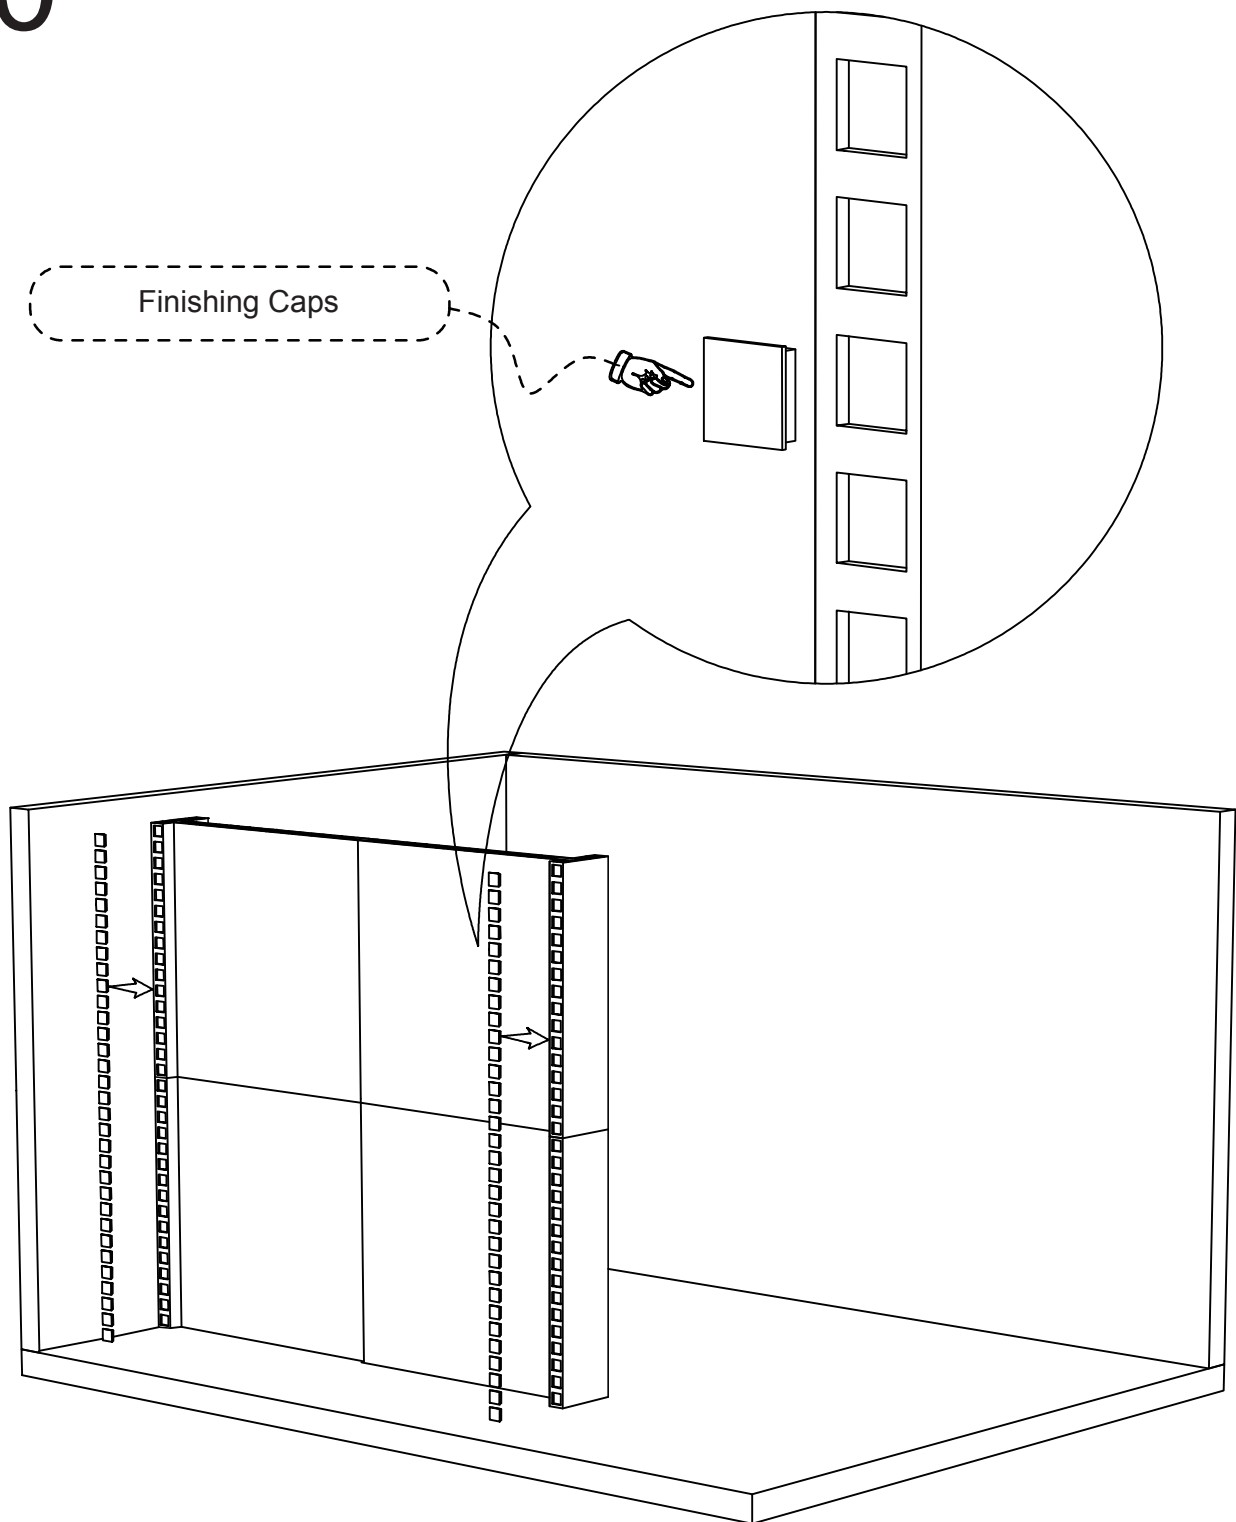


Close off exposed connector holes

**Use the included finishing caps to close off the exposed connector holes**  
Simply insert the finishing caps into the open connectors until you hear a click


**Note**

The finishing caps can be challenging to get out once installed, so make sure to save this step for last when you have confirmed everything looks good.

# 11 WALL MOUNTING

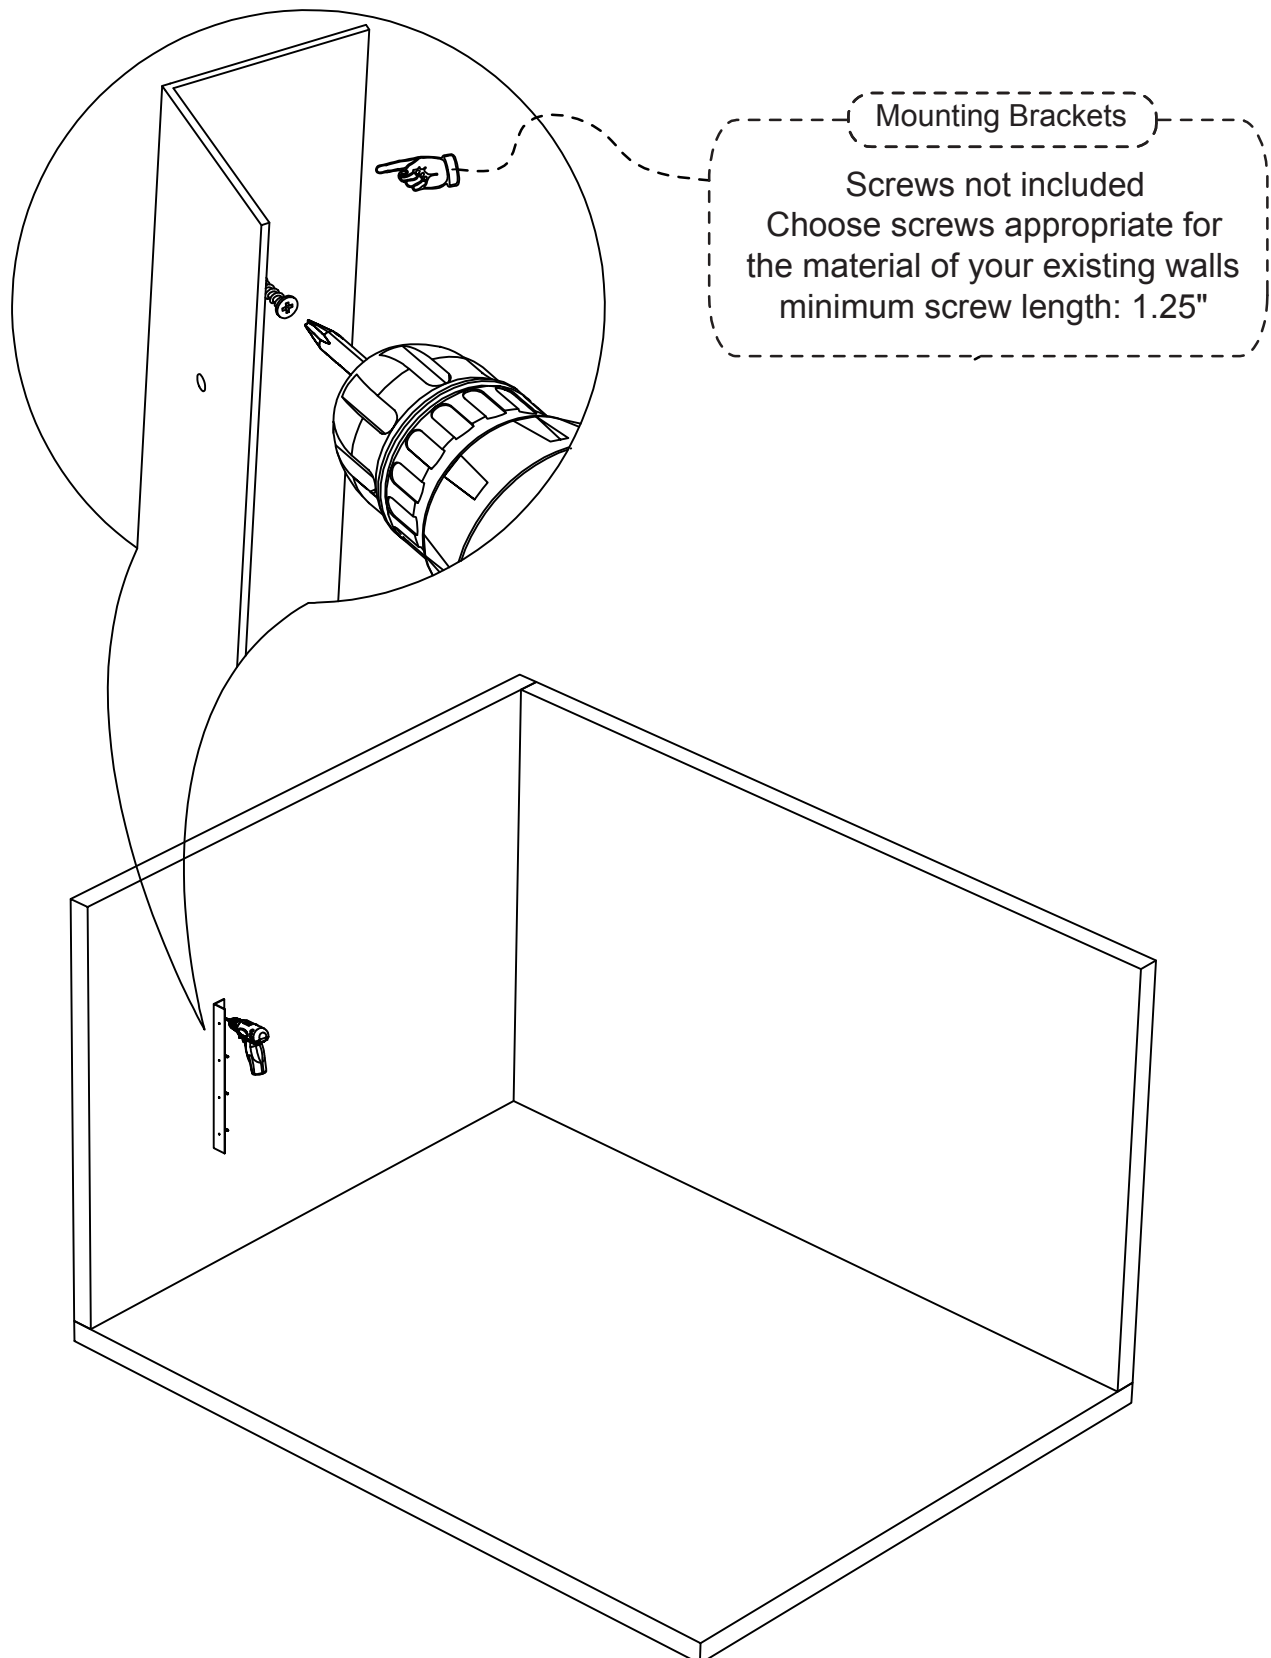

12

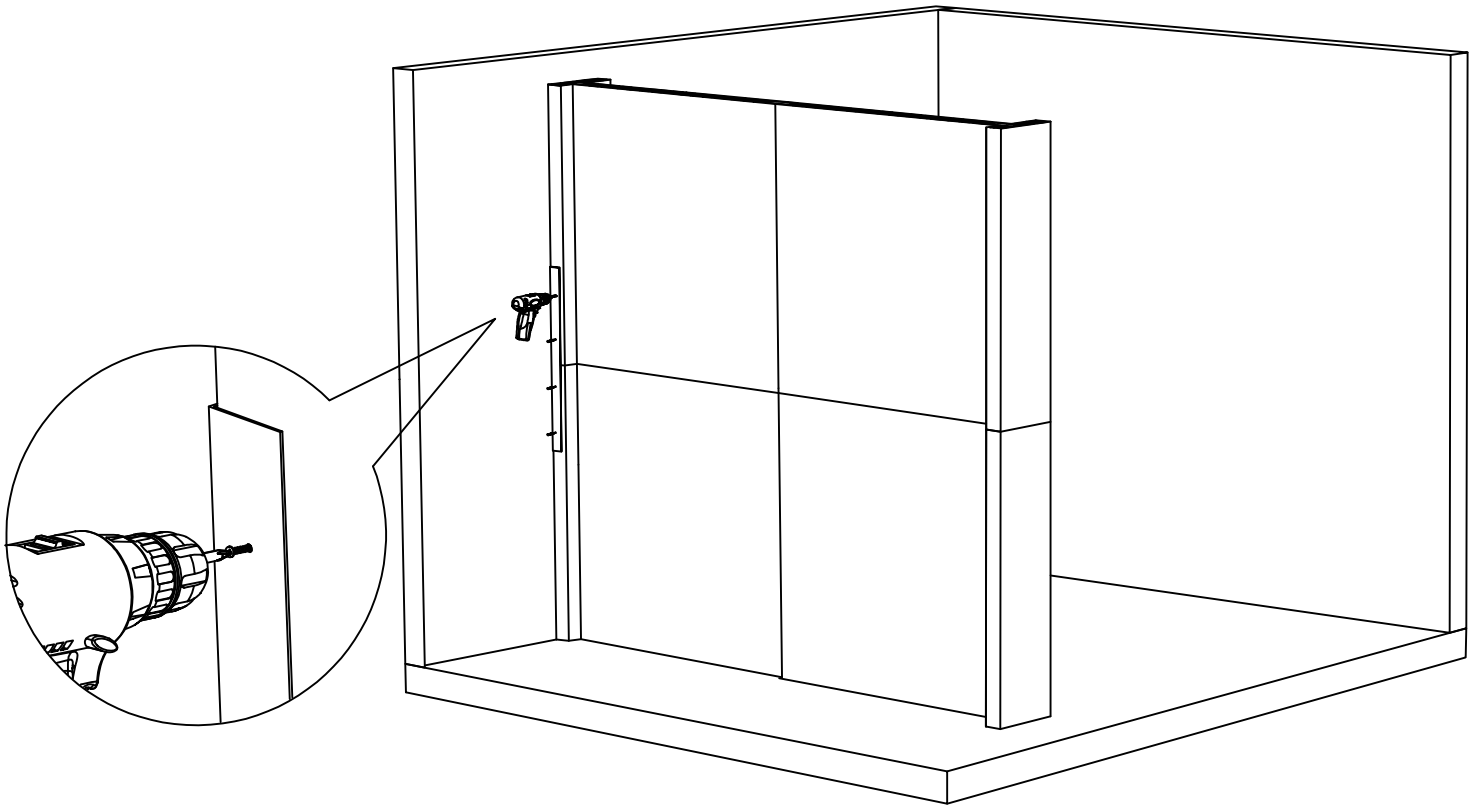**diyversify**

We are available for assembly support via  
chat, phone or email Monday-Friday 9AM-5PM (EST)

hello@diyversify.com  
+1 855-348-4330