


NBKTHS-V3

"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"
German: WICHTIG, FÜR SPÄTERE NACHSCHLAGE AUFBEWAHREN: SORGFÄLTIG LESEN
Spanish: IMPORTANTE, GUARDAR PARA REFERENCIA FUTURA: LEER ATENTAMENTE
Italian: IMPORTANTE, CONSERVARE PER RIFERIMENTI FUTURI: LEGGERE ATTENTAMENTE
French: IMPORTANT, À CONSERVER POUR RÉFÉRENCE FUTURE : LIRE ATTENTIVEMENT

- 
1. Gather and organize all required parts prior to assembly.

2. Assemble on a flat, clean and soft surface.



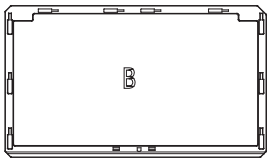




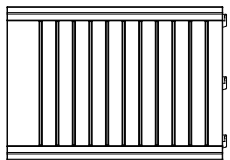
3. Two or more people are needed for the assembly.







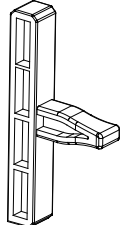

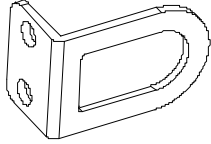

4. Align the holes before assembly and snap into place with a slight tap.

5. Please prepare rubber mallet in advance for convenient installation.




6. The product's structure prevents it from being conveniently assembled in low temperatures, so do not intentionally install at low temperatures.

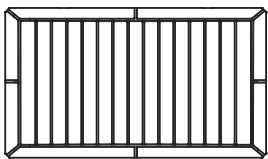7. During installation, please refer to the accessories guides to ensure that they are installed in the correct directions.

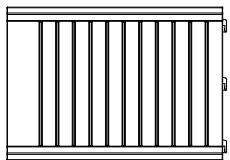Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A		X1	E		X1
B		X1	F		X1
C		X1	G		X1
D		X1	H		X1

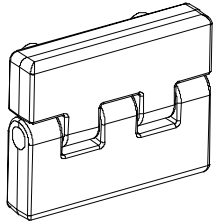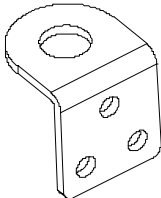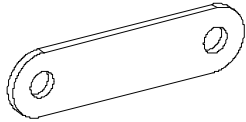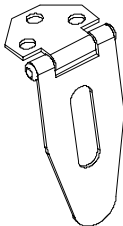
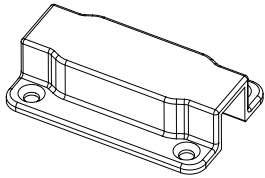
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
①		X6	⑧		X1
②		X12	⑨		X1
④		X1	⑩	 M8X20mm	X18+ 1extra
⑤		X1	⑪	 M5X16mm	X24+ 4extra
⑦		X1	⑫	 M4X12mm	X12+ 2extra

Exploded View

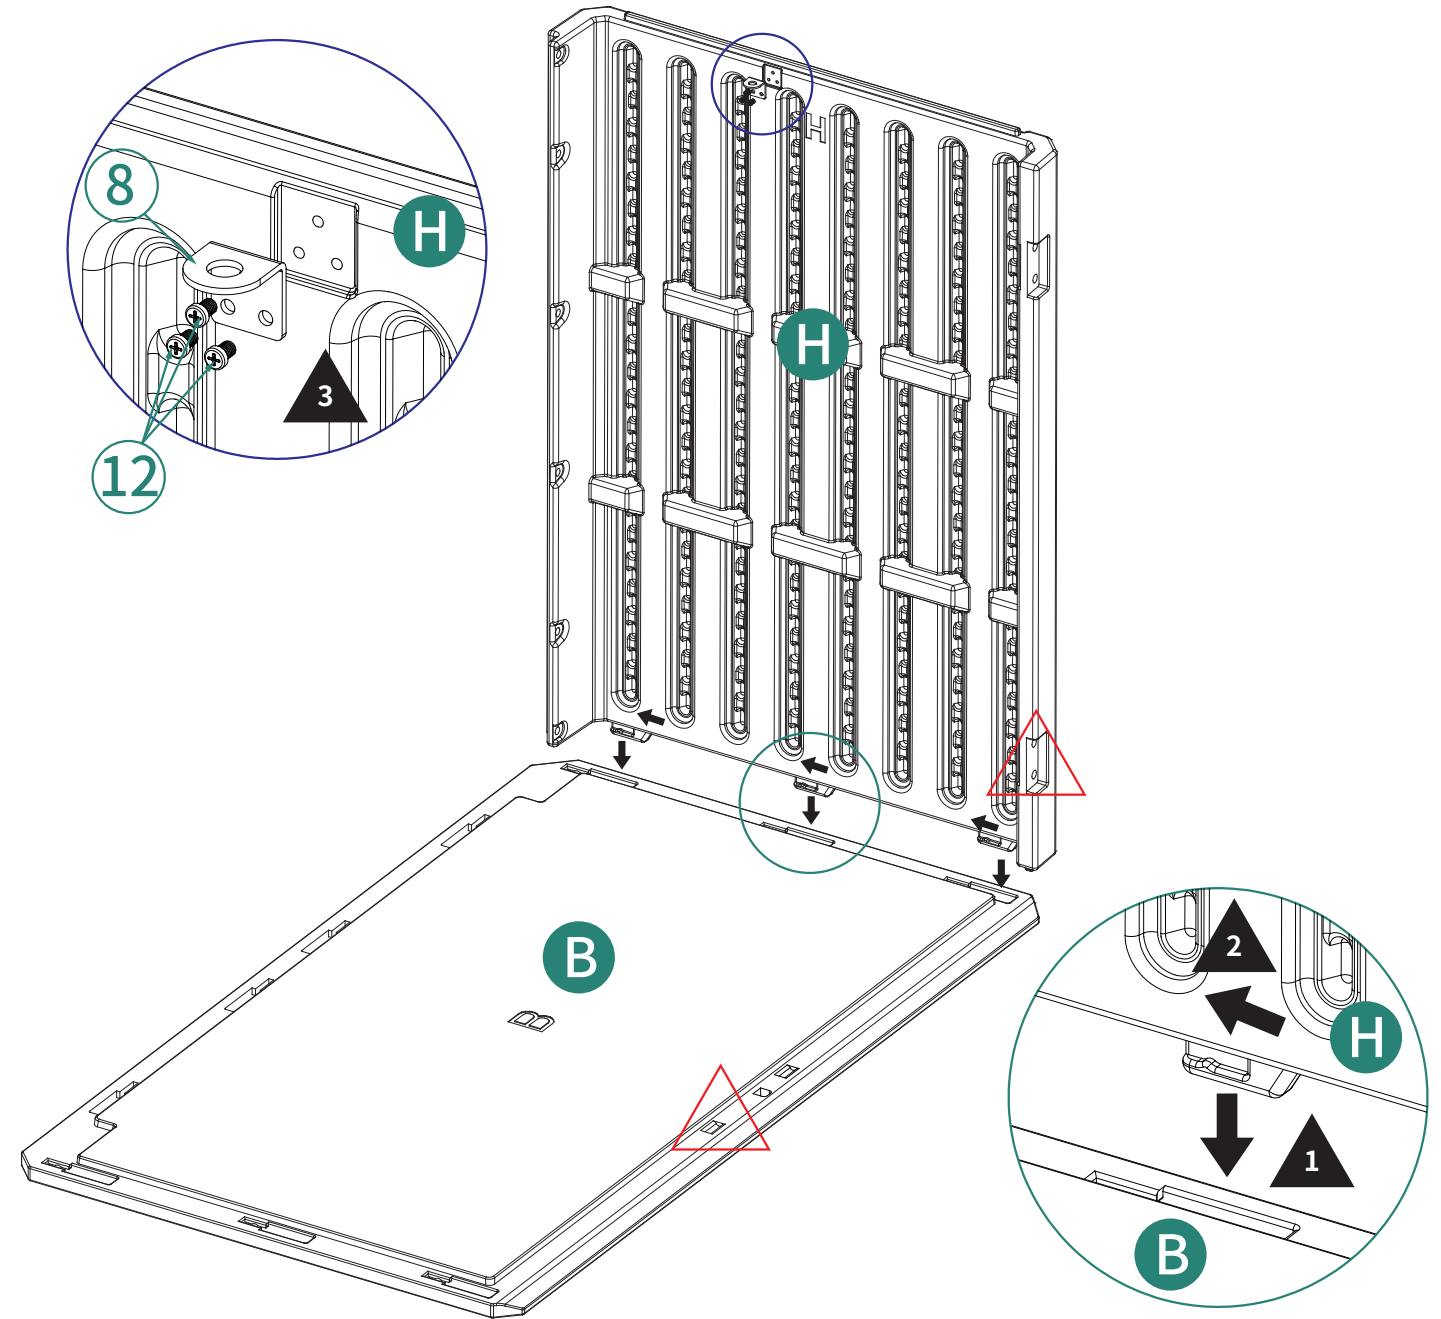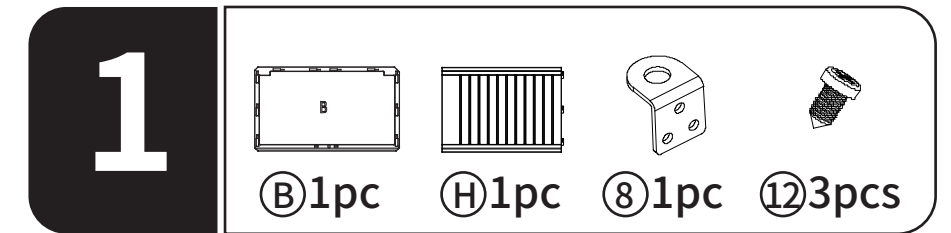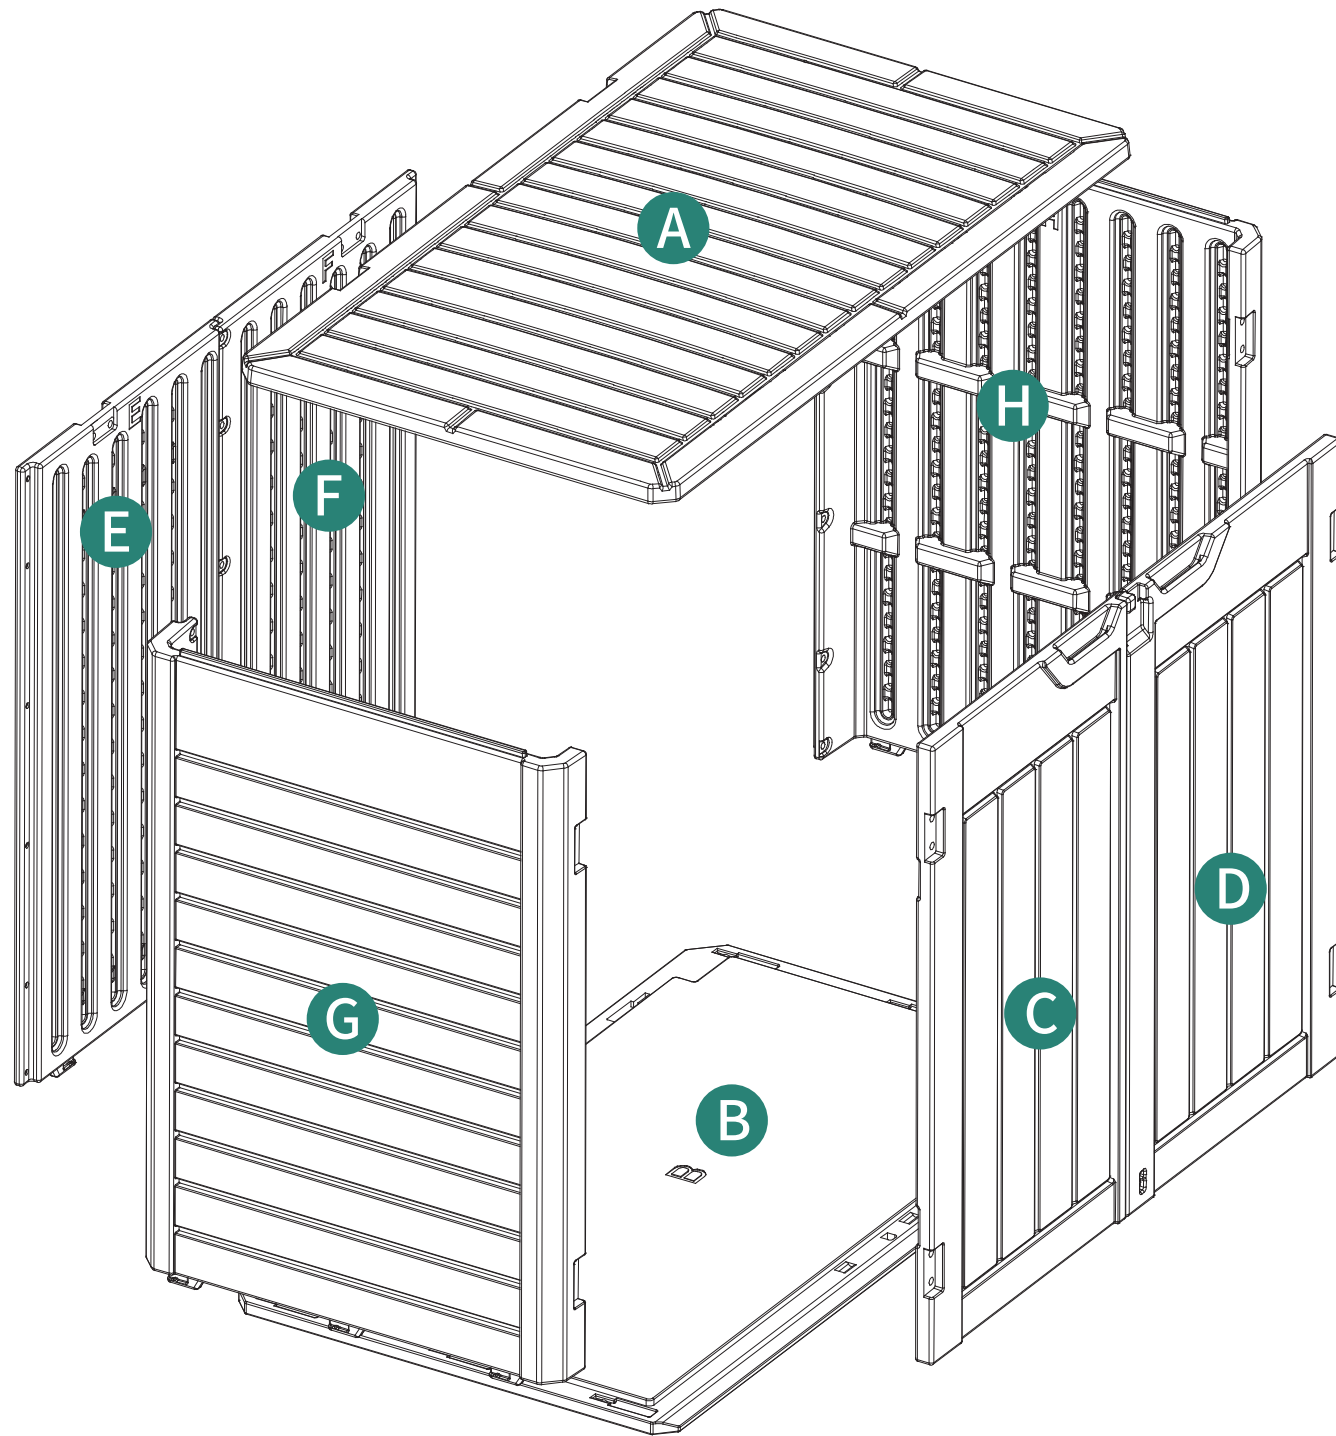


Note: The triangularly marked spots on parts B and H should be on the same side.


Insert part H into part B's slot first, then make sure it can slide backward to the full extent.

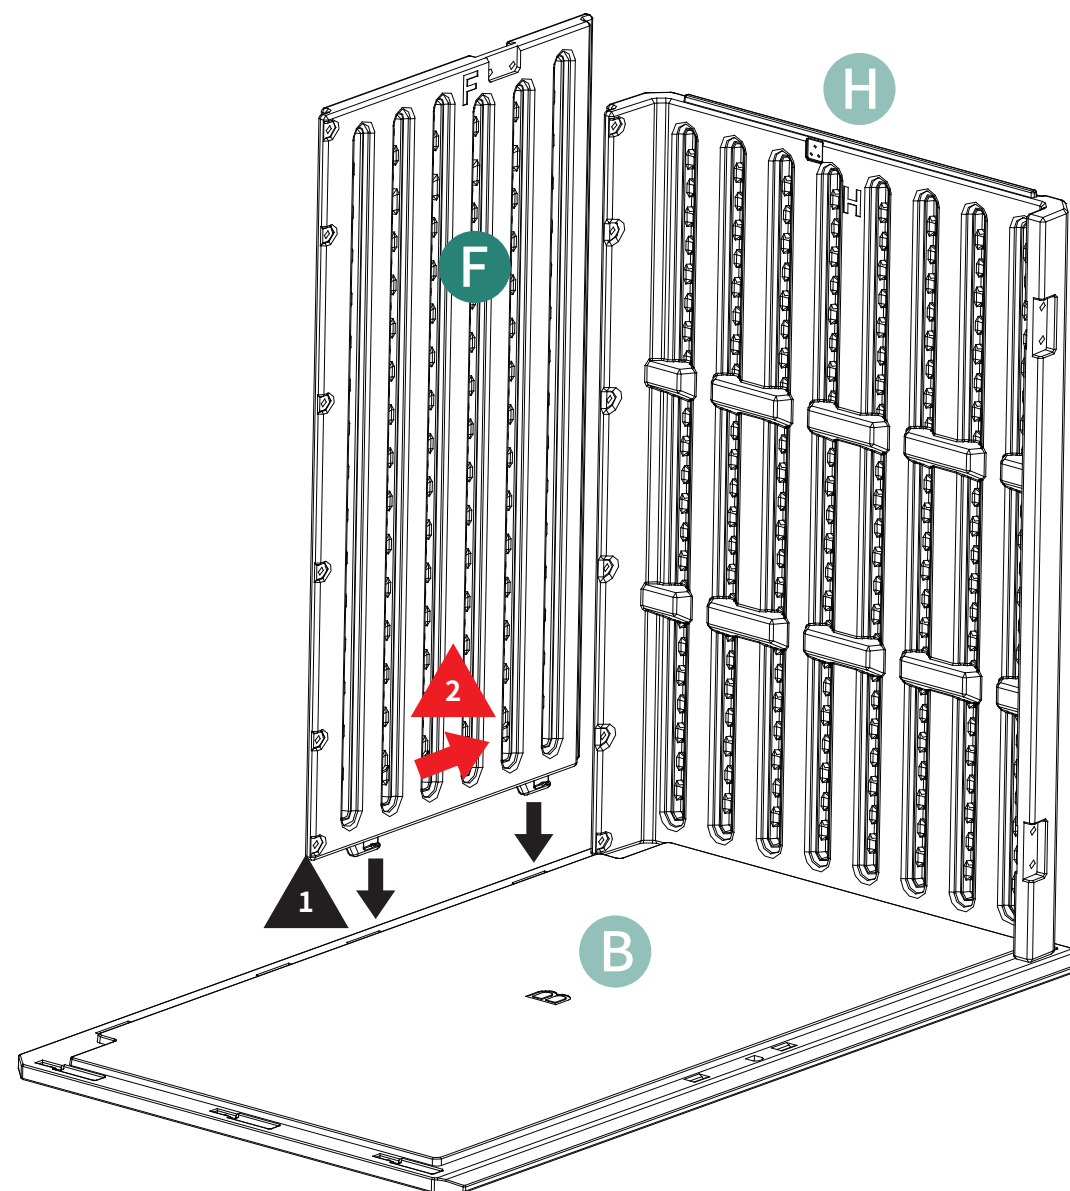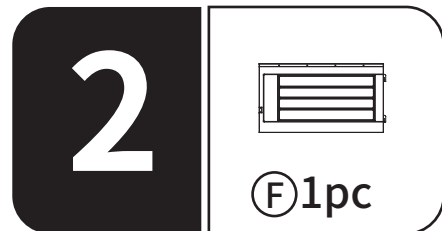



Insert parts F into part B's slots first,
then make sure it can slide right to the full extent.



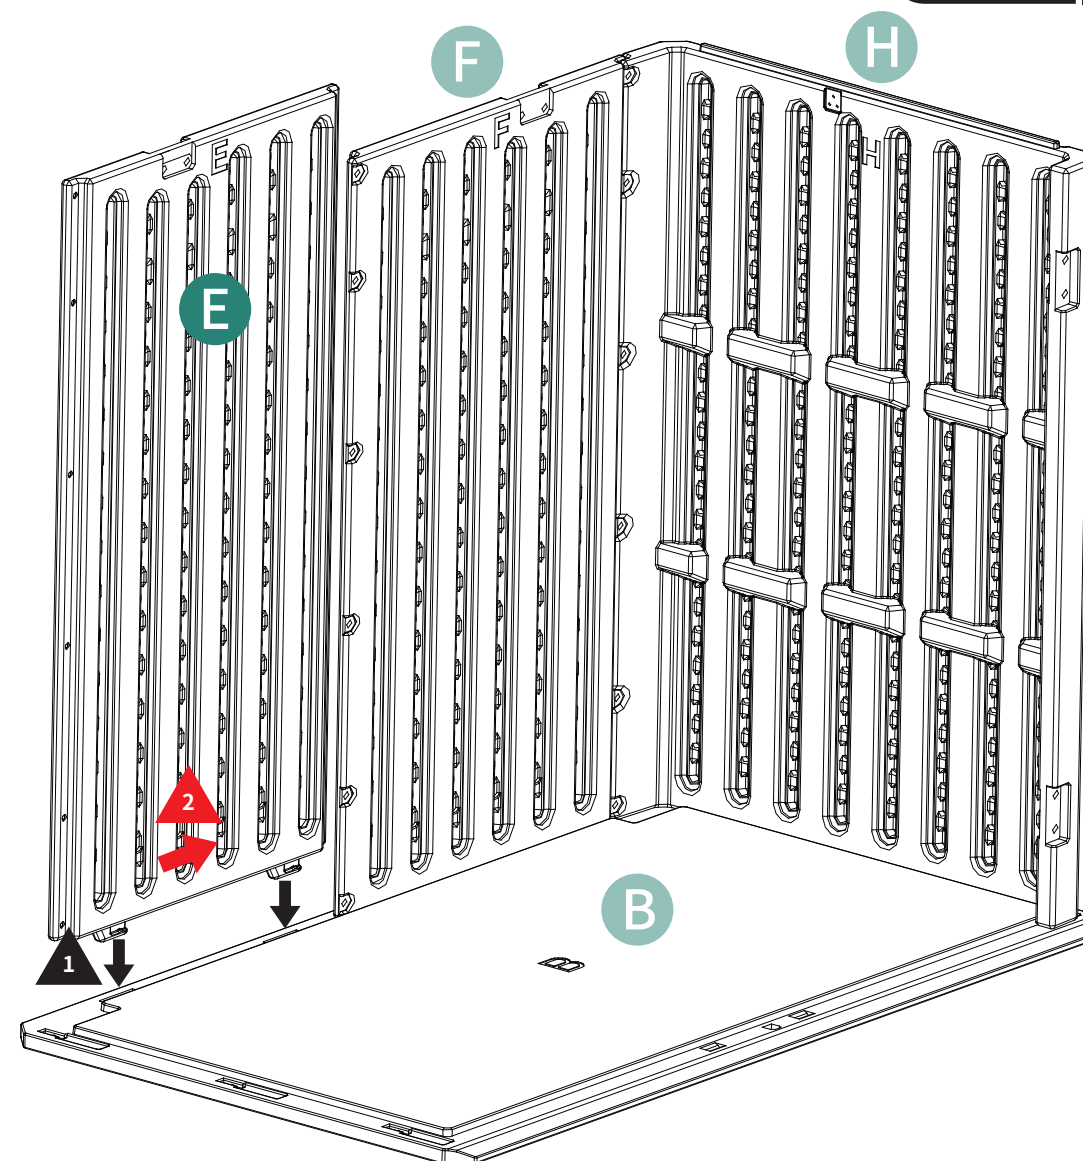


Insert parts E into part B's slots first,
then make sure it can slide right to the full extent.



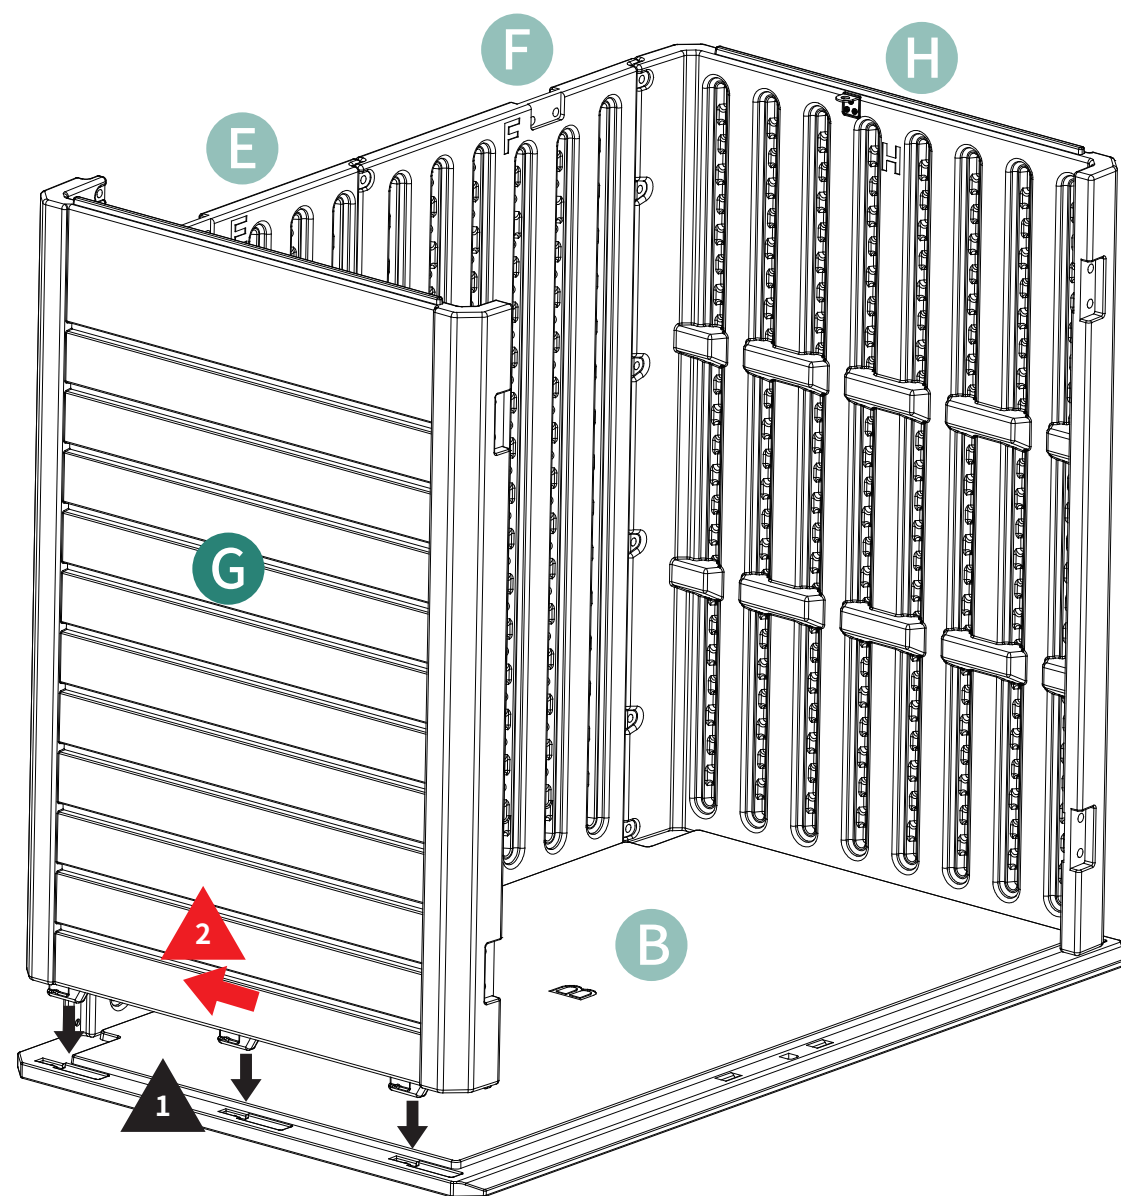


Follow the above step for parts G and B.

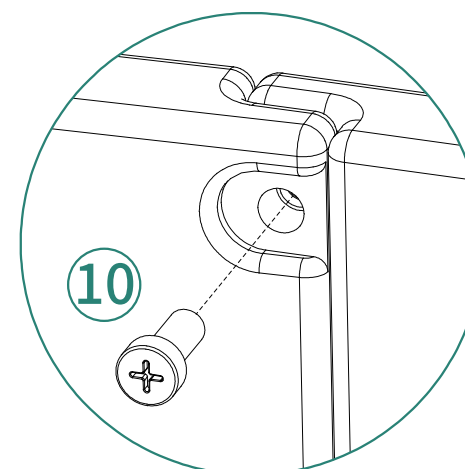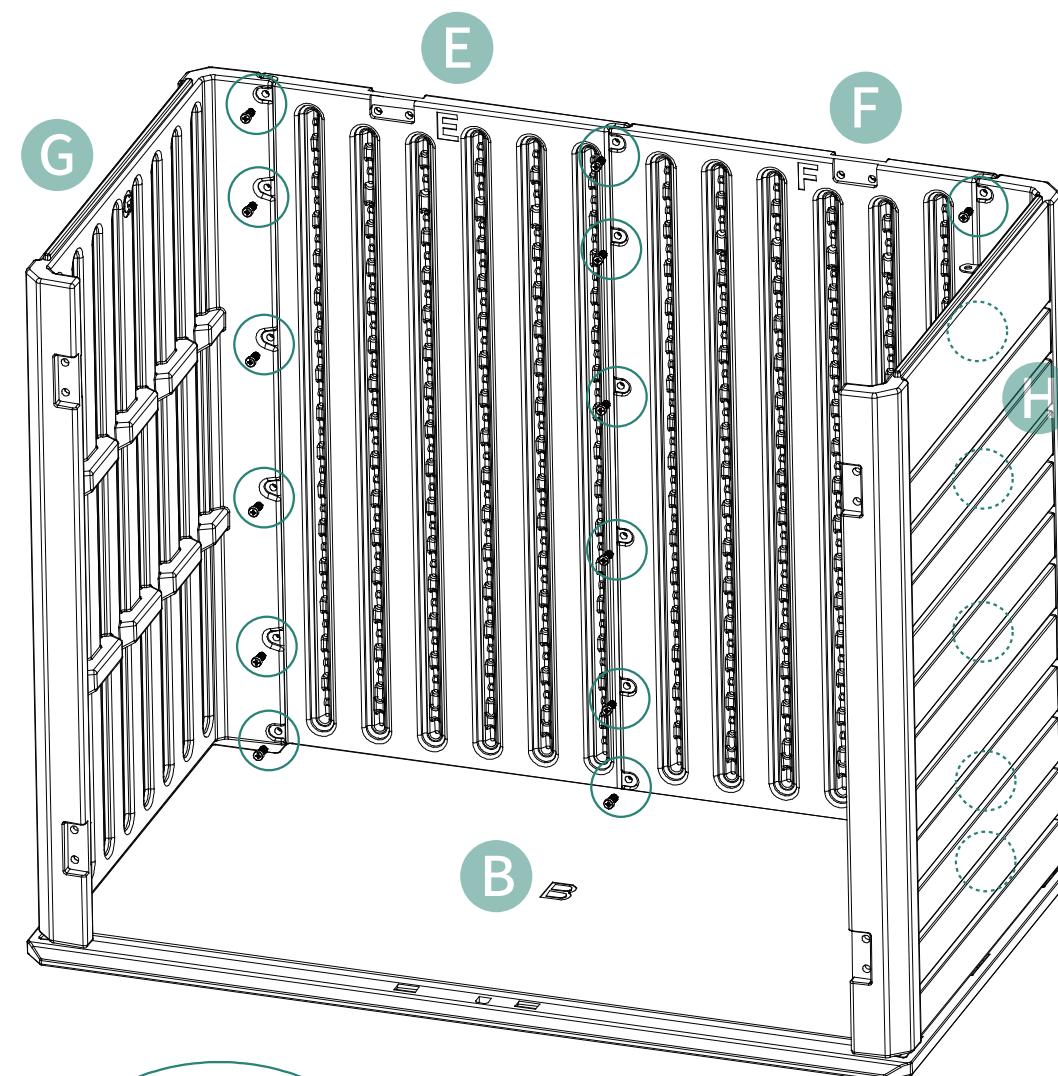

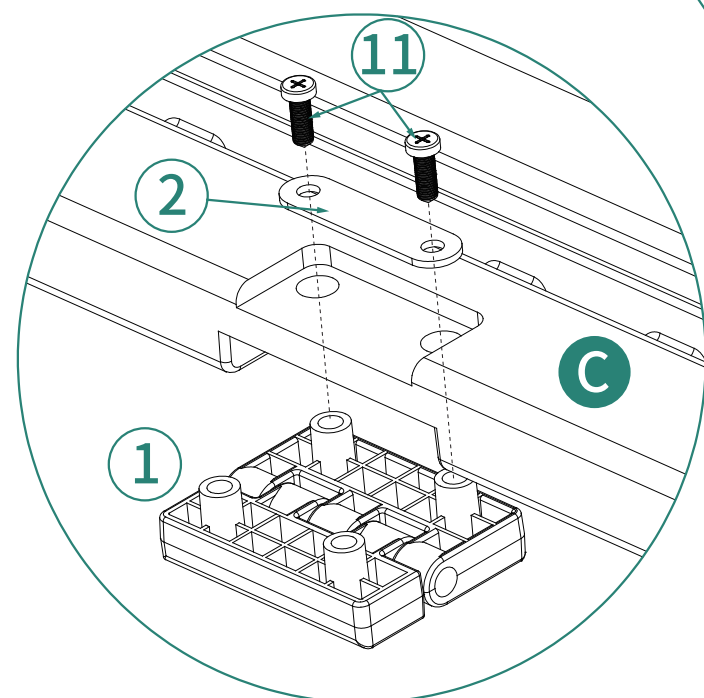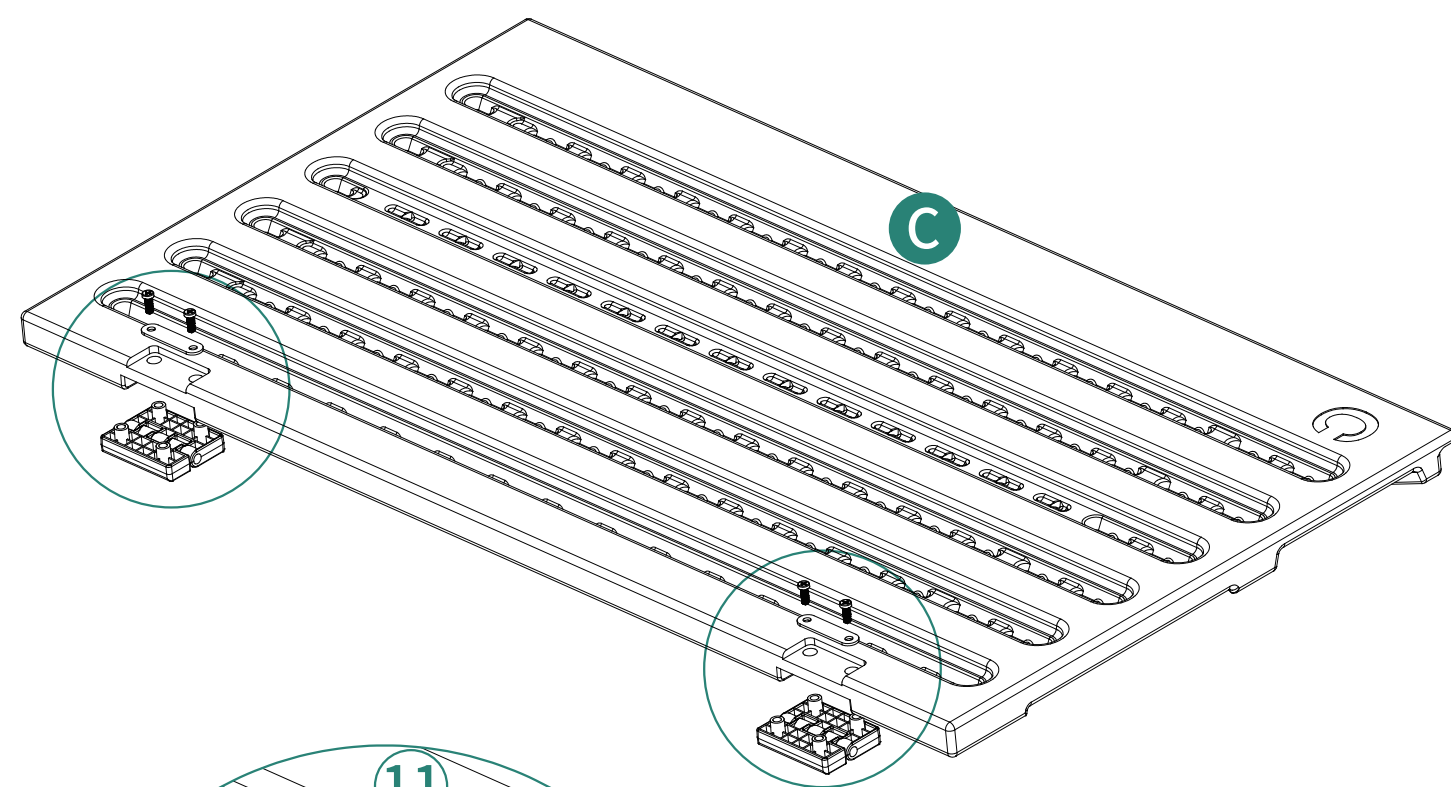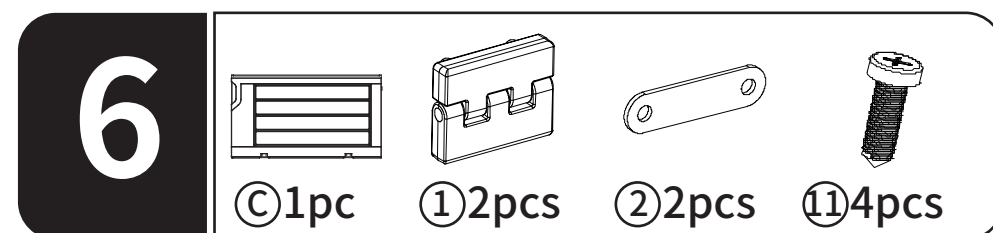


Note that part ① (hinge) has two sides that differ in width.
Before fixing the installation position, either side can be selected to ensure that all hinges installed use the same side width.

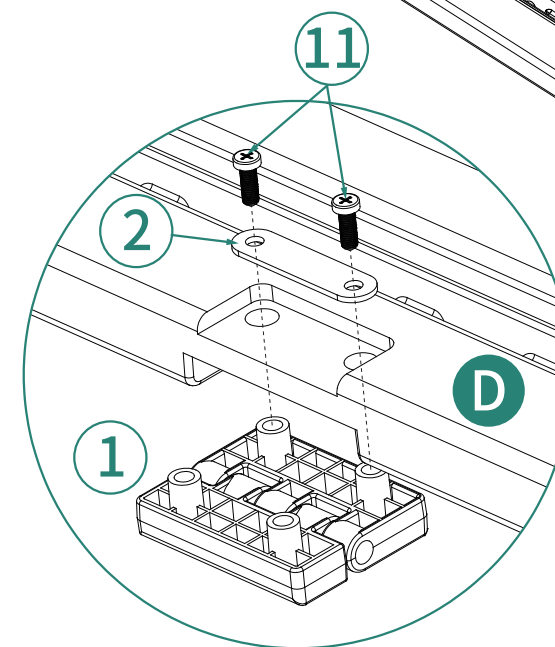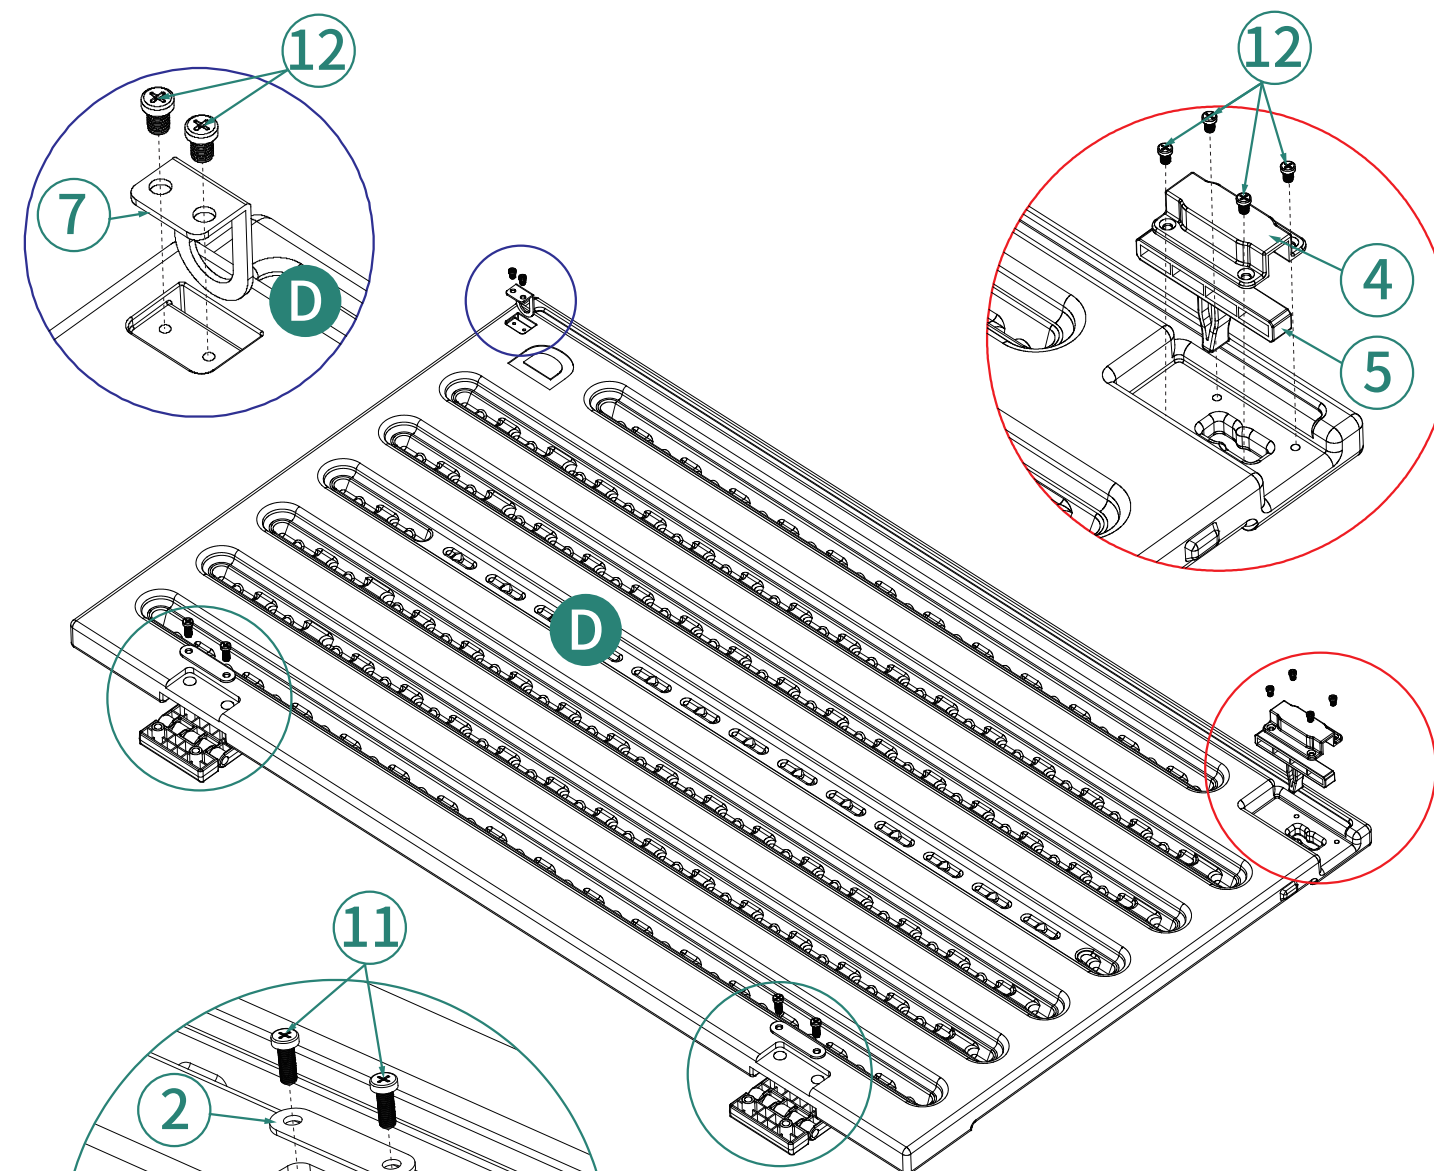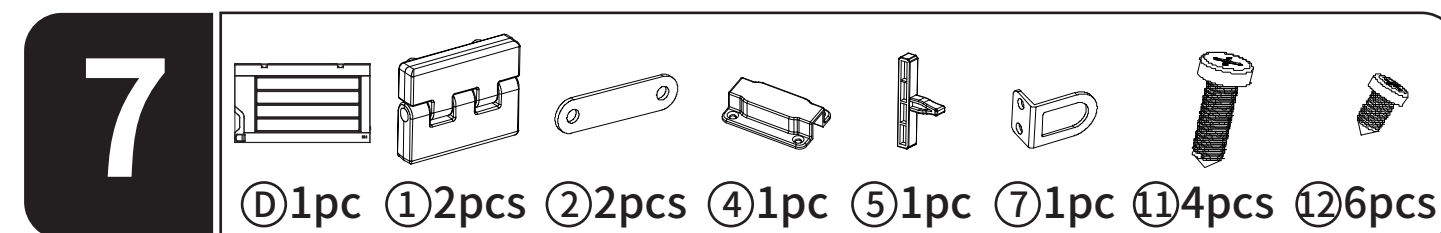

Note that part ① (hinge) has two sides that differ in width.
Before fixing the installation position, either side can be selected to ensure that all hinges installed use the same side width.


8

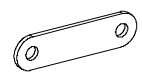

②4pcs




⑪8pcs

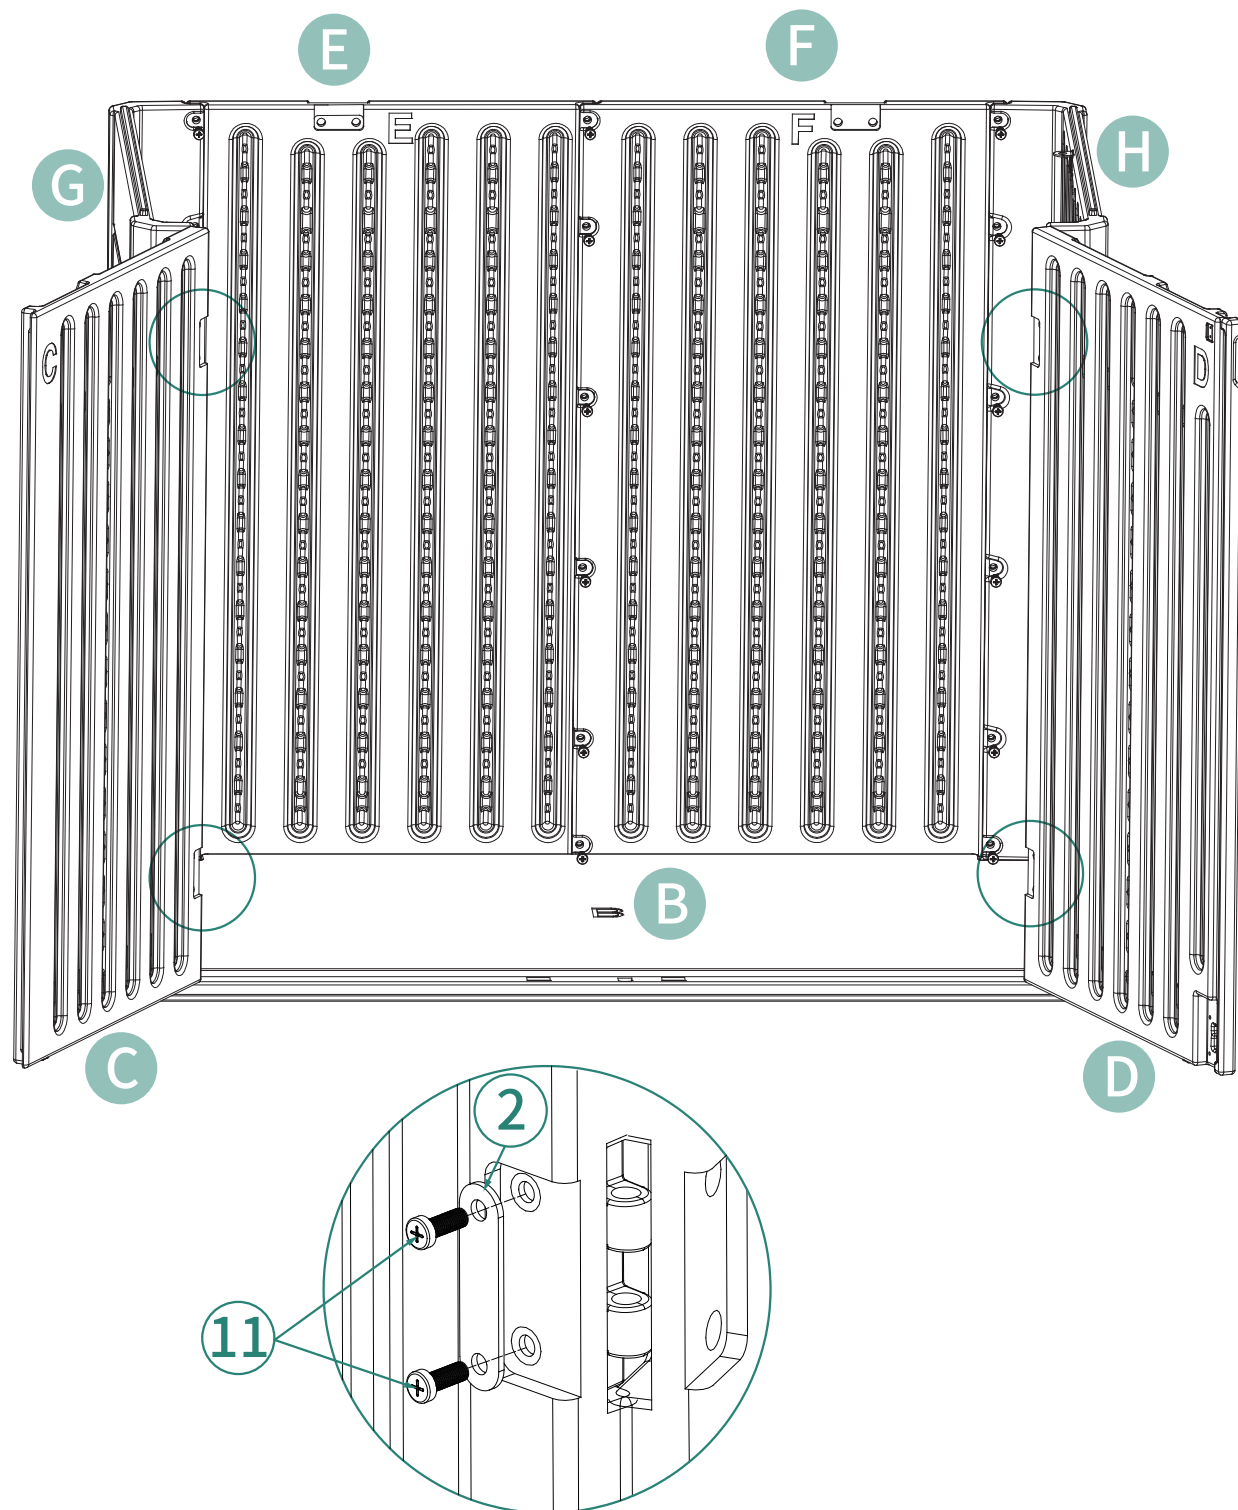


11


9

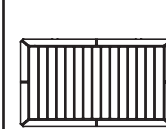

①1pc

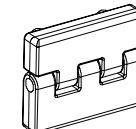

①2pcs



②2pcs




⑨1pc





⑪4pcs



⑫3pcs

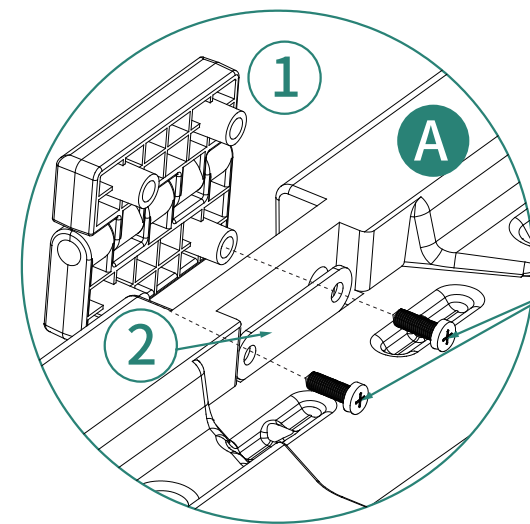

Note that part ① (hinge) has two sides that differ in width. Before fixing the installation position, either side can be selected to ensure that all hinges installed use the same side width.

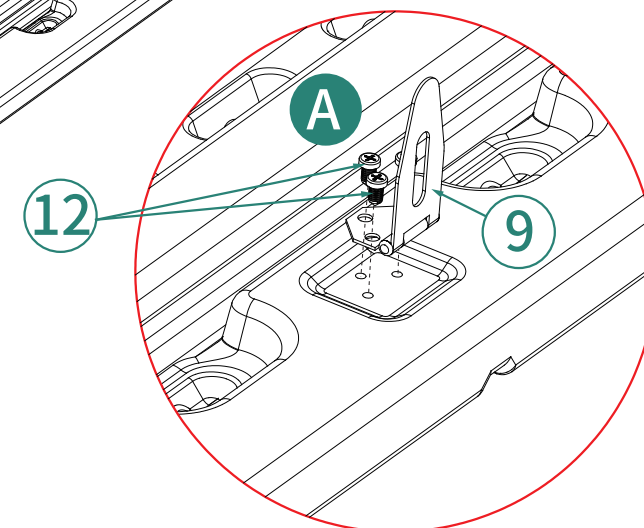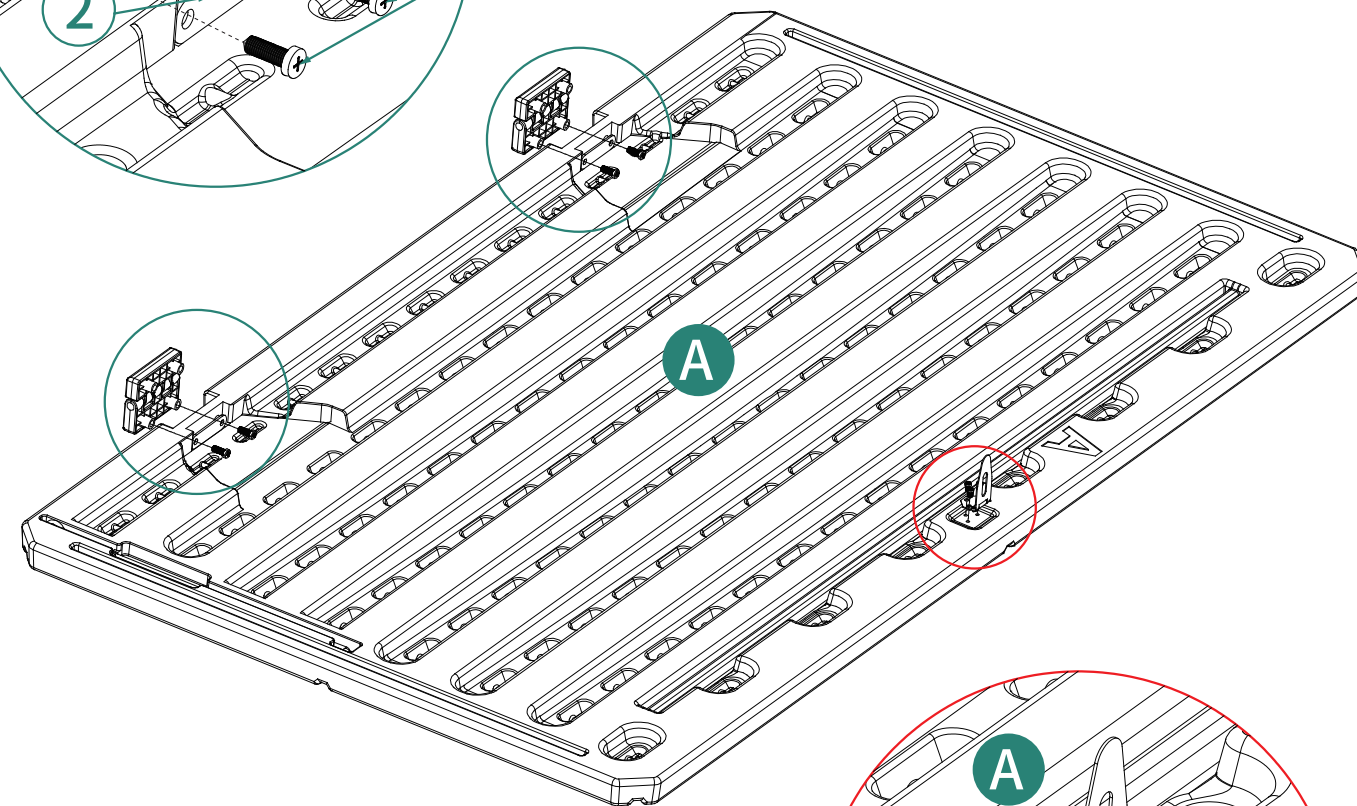


12

10

②2pcs

⑪4pcs

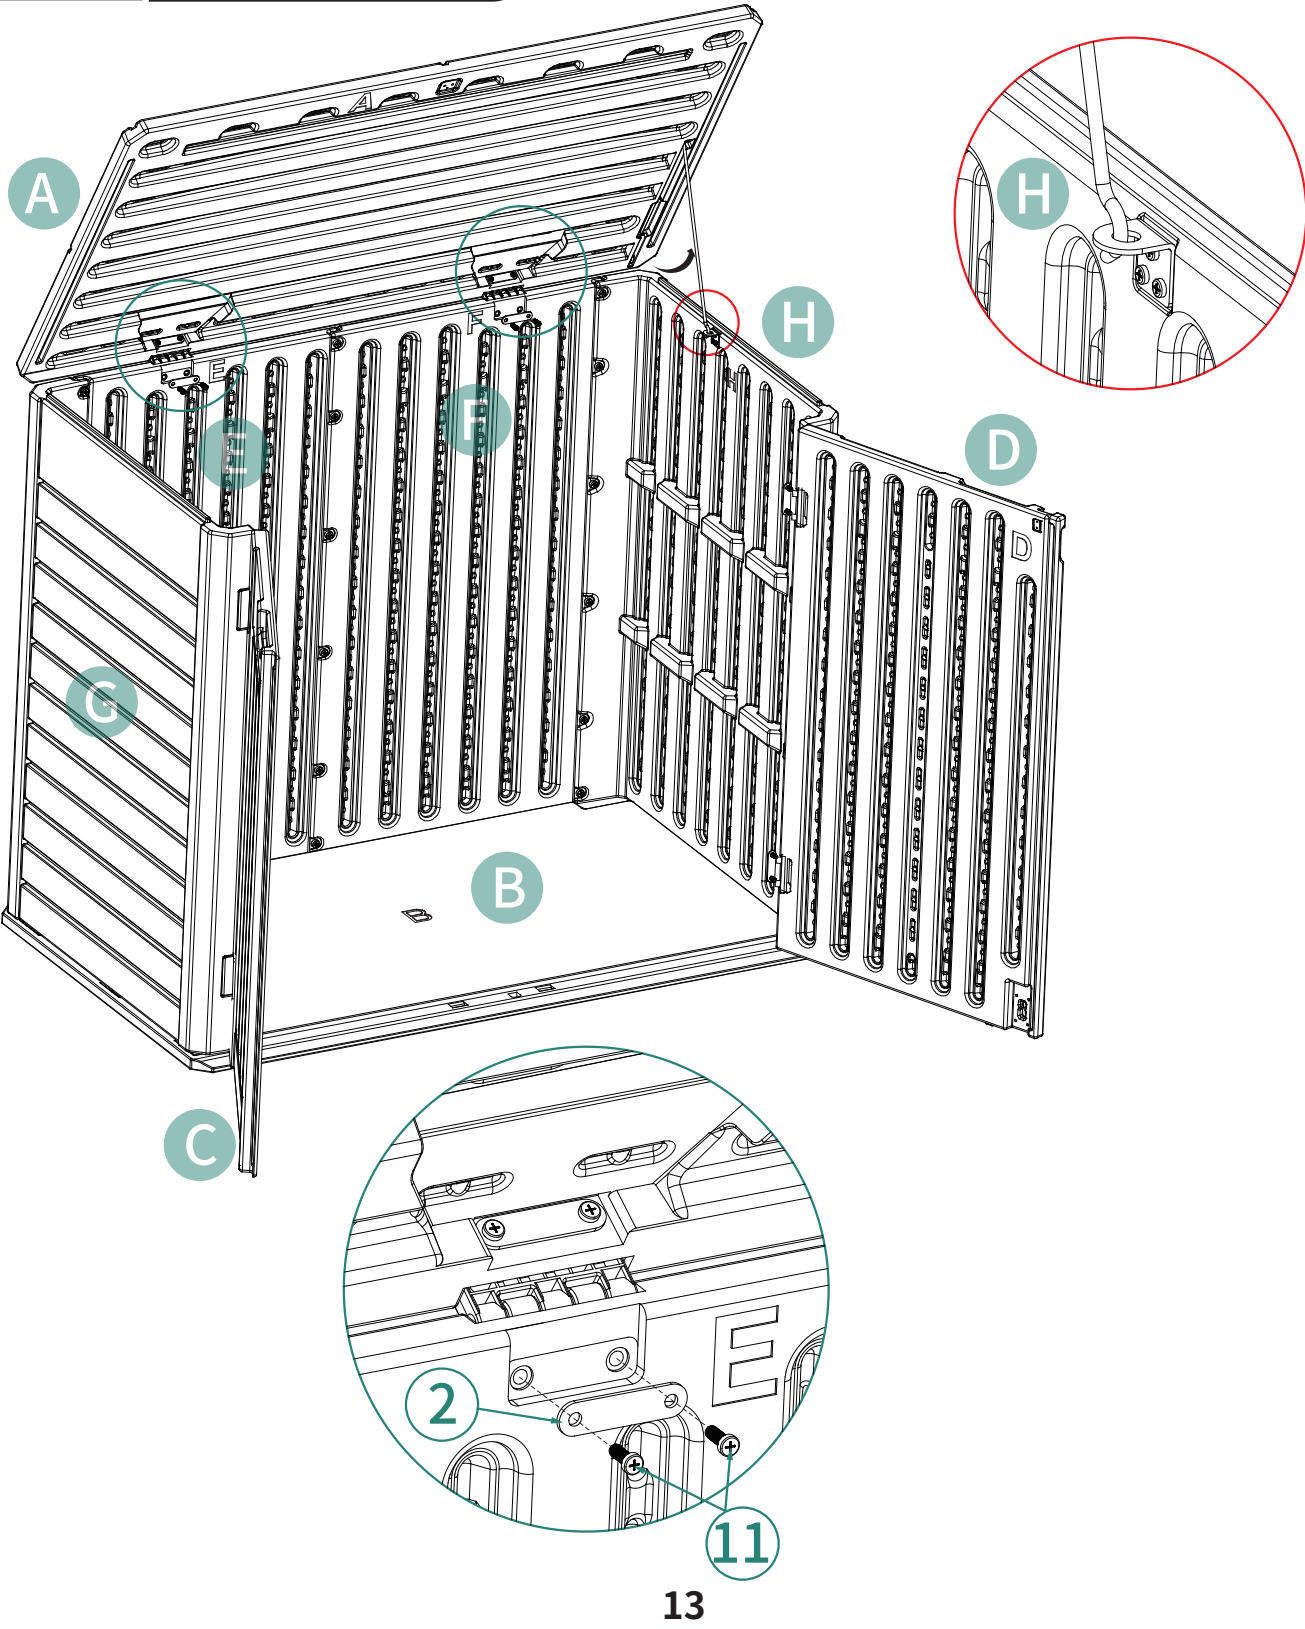

11

