

Closet System

ASSEMBLY INSTRUCTION

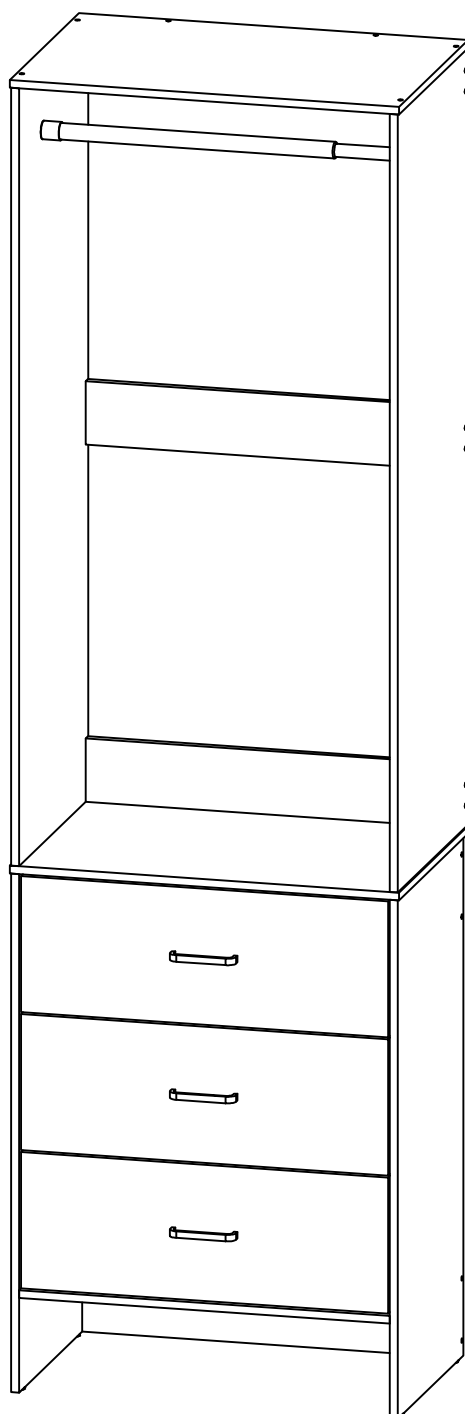

(Note:Two people are recommended to install, which will greatly improve your installation efficiency.)


Thank you for purchasing our products.

As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please feel free to contact us the first time,We will provide you with a 100% satisfactory solution.


TIPS:

1. Please read this instruction manual carefully, follow it step by step and pay attention to the notes, you will assemble it quickly, safely and correctly.
2. Two people are recommended to install,which will greatly improve your installation efficiency.
3. Put the screws in loosely until all pieces are together and then tighten them all. It will save your time if you make a mistake while installing

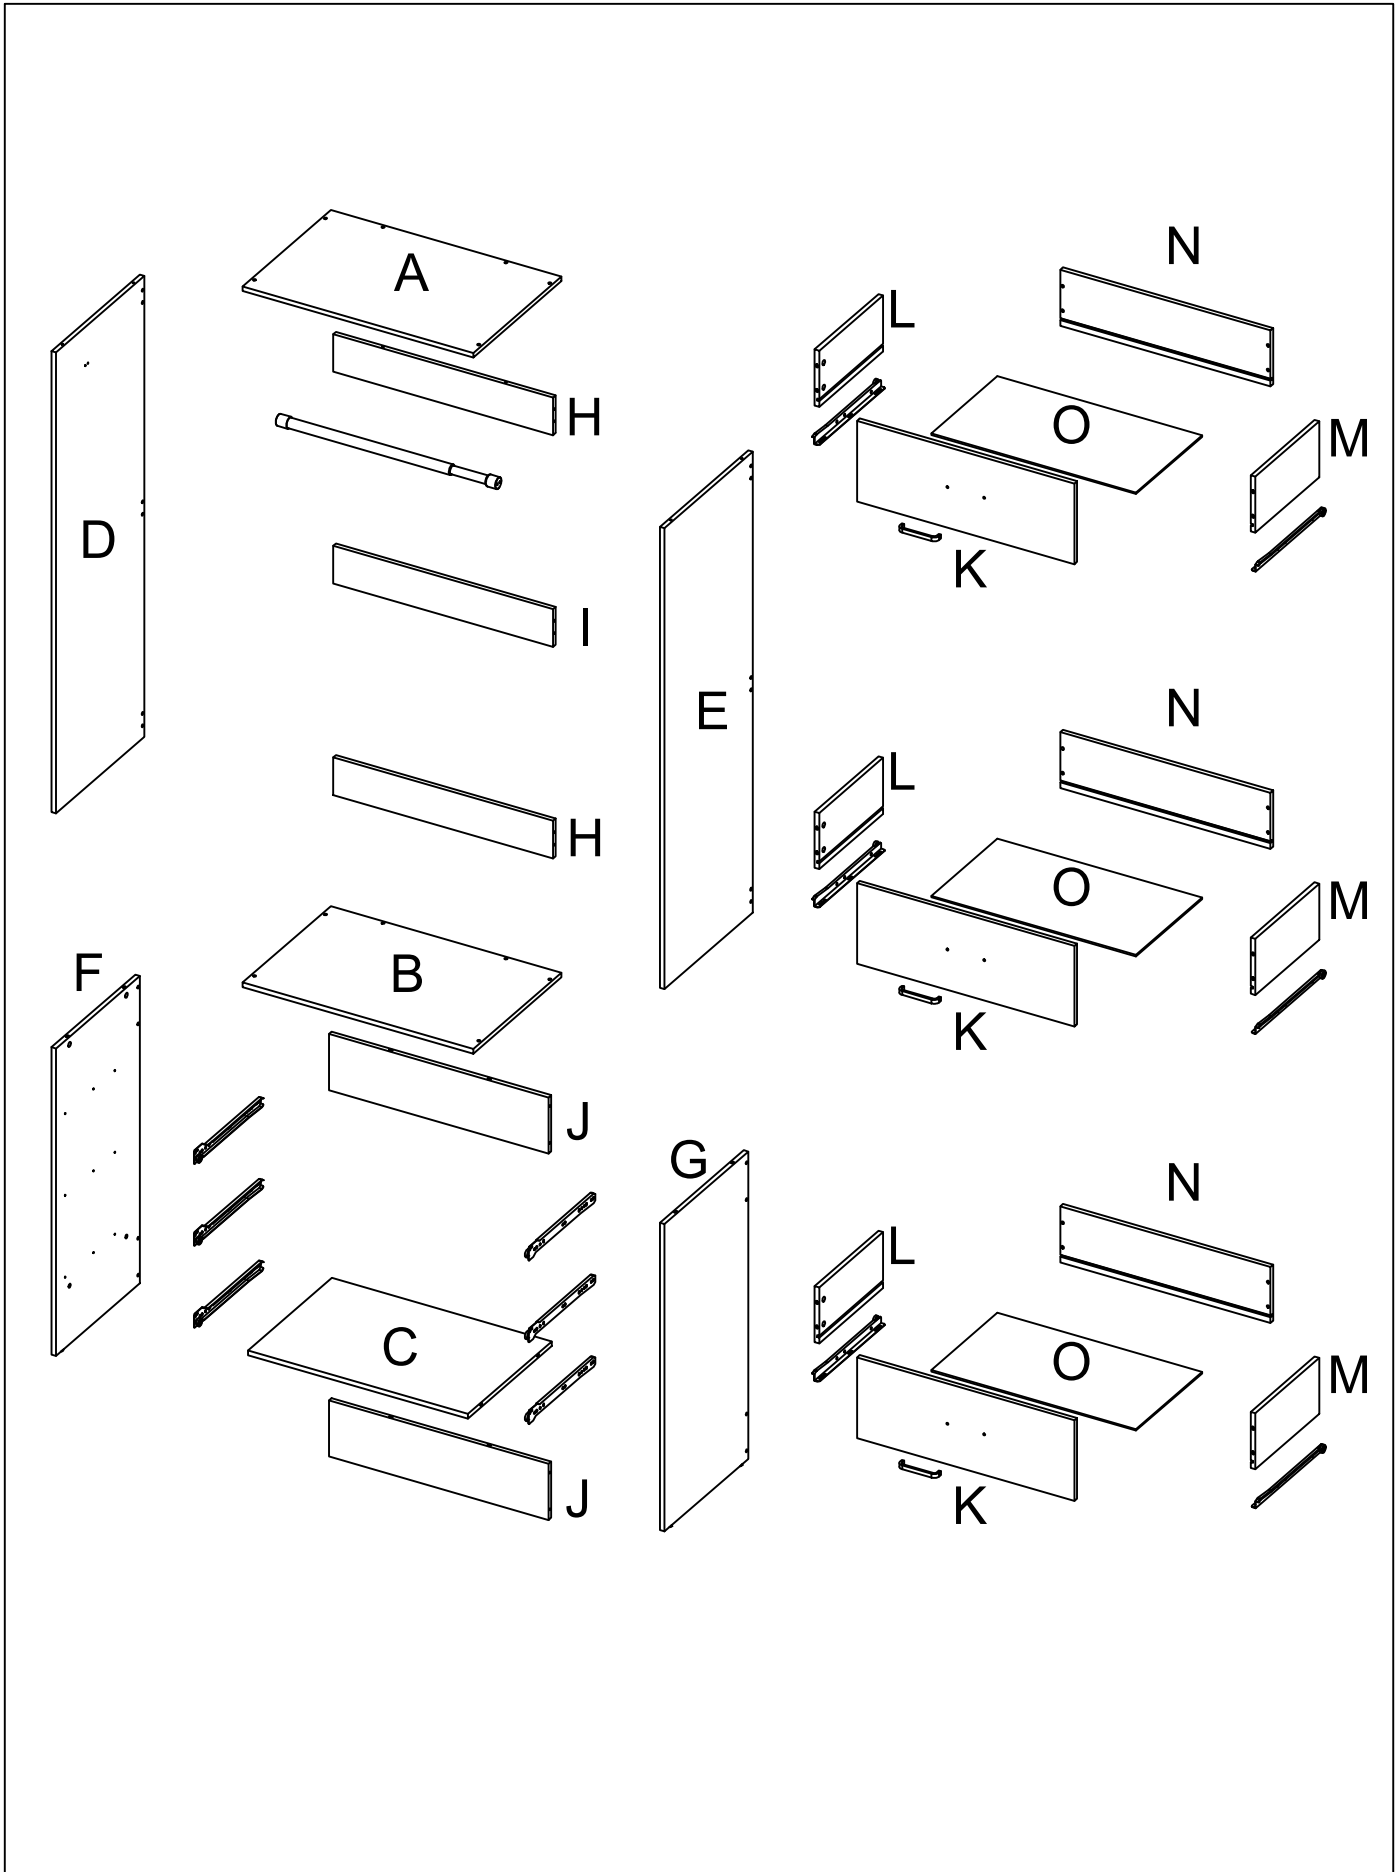


PART LIST


A x 1pc

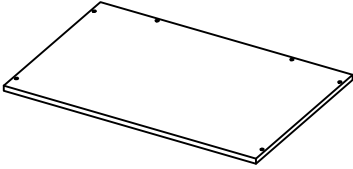


B x 1pc

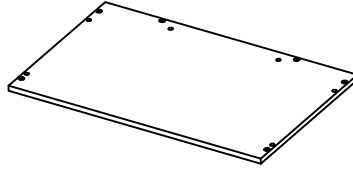


C x 1pc

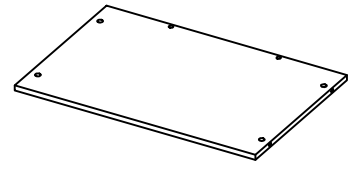


D x 1pc

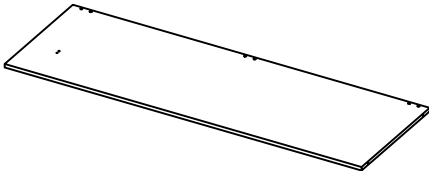


E x 1pc

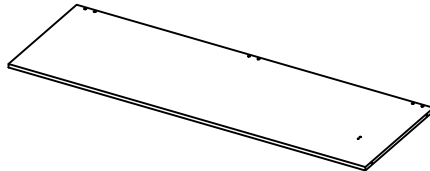


F x 1pc

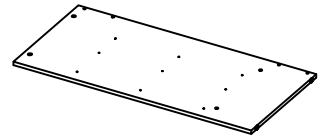


G x 1pc

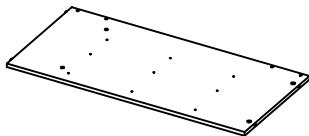


H x 2pcs

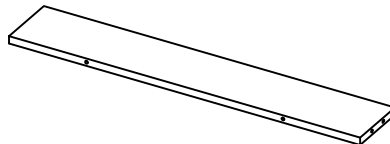


I x 1pc

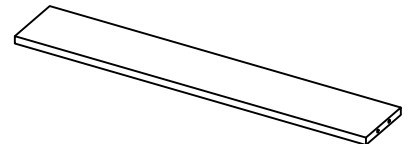


J x 2pcs

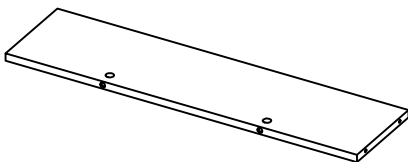


K x 3pcs

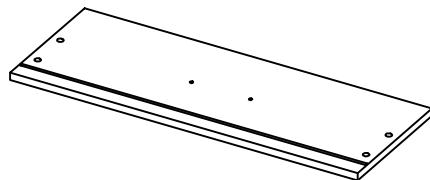


L x 3pcs

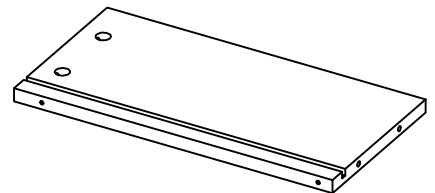


M x 3pcs

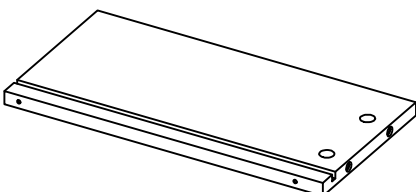




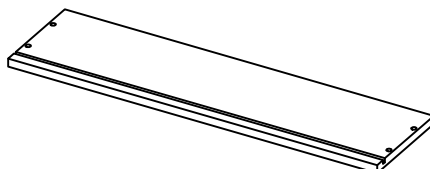










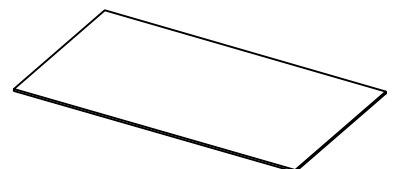


N x 3pcs



O x 3pcs



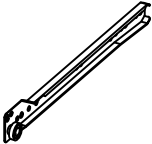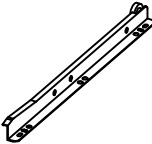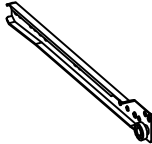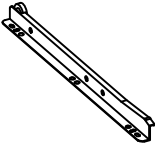HARDWARE LIST


<p>①</p>  <p>M6x28 24 pcs</p>	<p>②</p>  <p>Ø12 24 pcs</p>	<p>③</p>  <p>M3x12 36 pcs</p>
<p>④</p>  <p>M4x12 4 pcs</p>	<p>⑤</p>  <p>M4x15 6 pcs</p>	<p>⑥</p>  <p>M6x40 44 pcs</p>
<p>⑦</p>  <p>L300 3 pcs</p>	<p>⑧</p>  <p>L300 3 pcs</p>	<p>⑨</p>  <p>L300 3 pcs</p>
<p>⑩</p>  <p>L300 3 pcs</p>	<p>⑪</p>  <p>47-80cm 1 pc</p>	<p>⑫</p>  <p>1 pc</p>
<p>⑬</p>  <p>1 pc</p>	<p>⑭</p>  <p>M4x40 2 pcs</p>	<p>⑮</p>  <p>M4 1 pc</p>
<p>⑯</p>  <p>1 pc</p>	<p>⑰</p>  <p>3 pcs</p>	

Using Camlocks

Connect the male camlock as directed in the assembly instructions using a screwdriver.


1

DO NOT OVER TIGHTEN

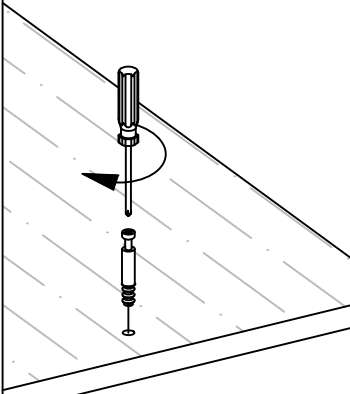

Push the male camlock into the entry hole.


2

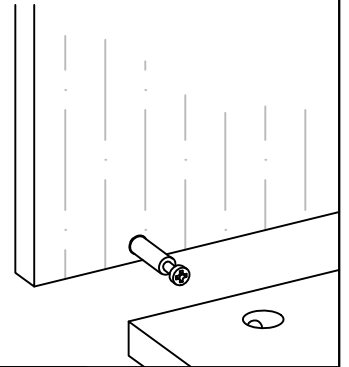

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

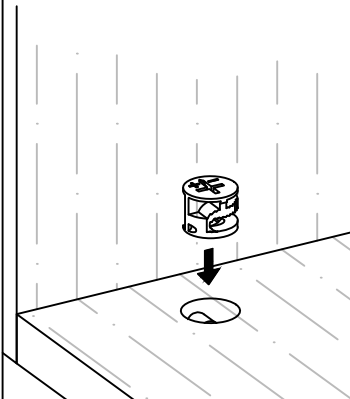


Turn the female camlock clockwise with a screwdriver.



You should feel a click when the camlock is locked in place.

The joint is now secure.


4

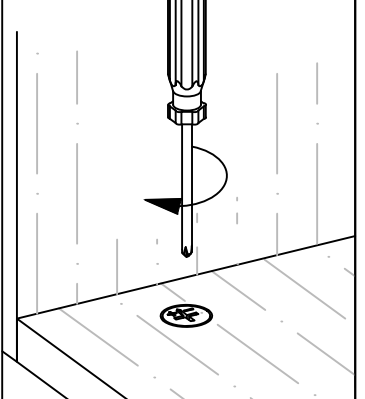



STEP 1

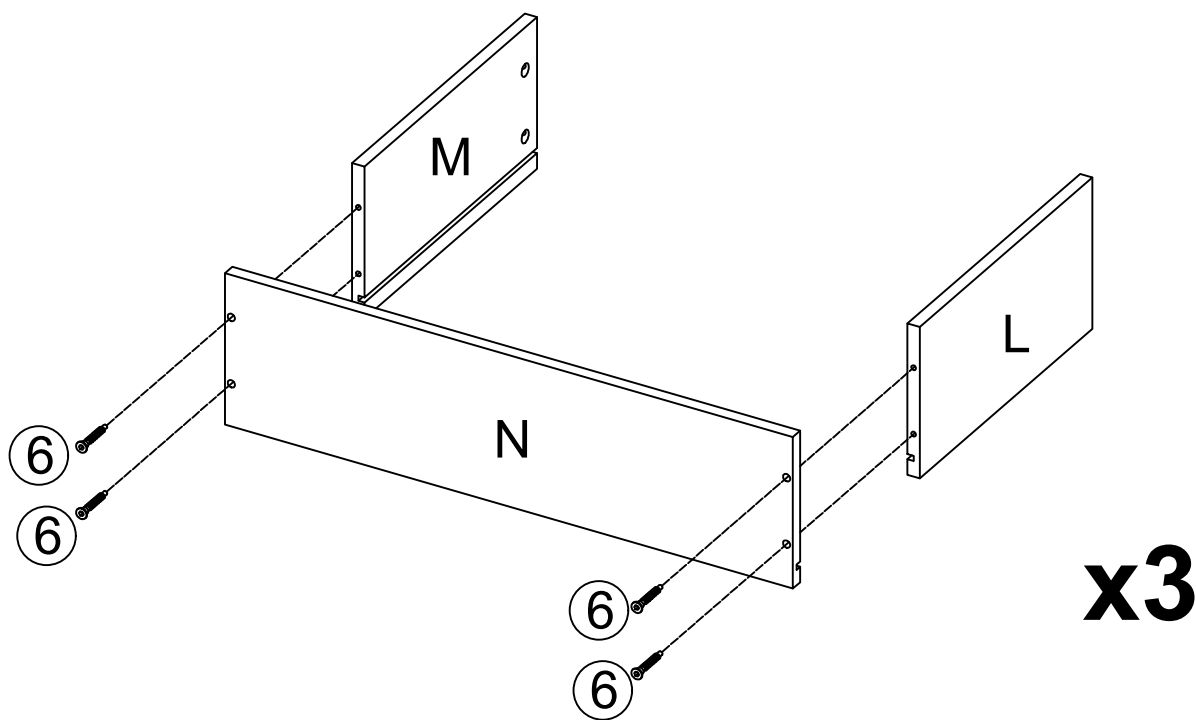



STEP 2

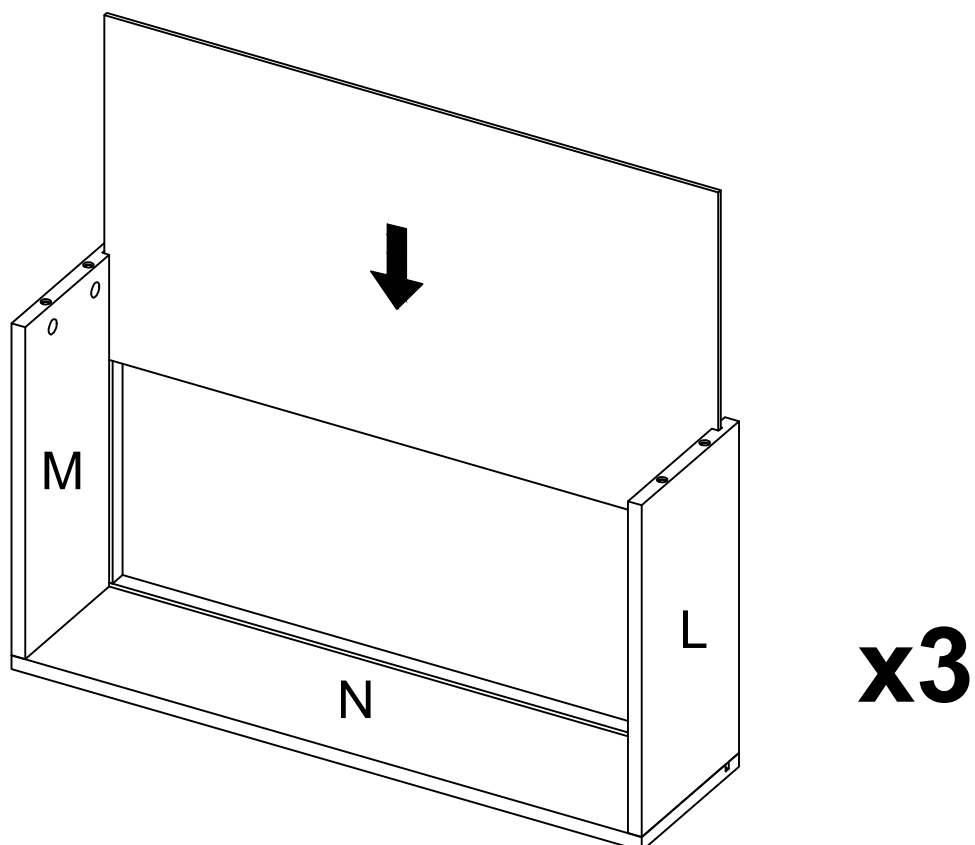


STEP 3

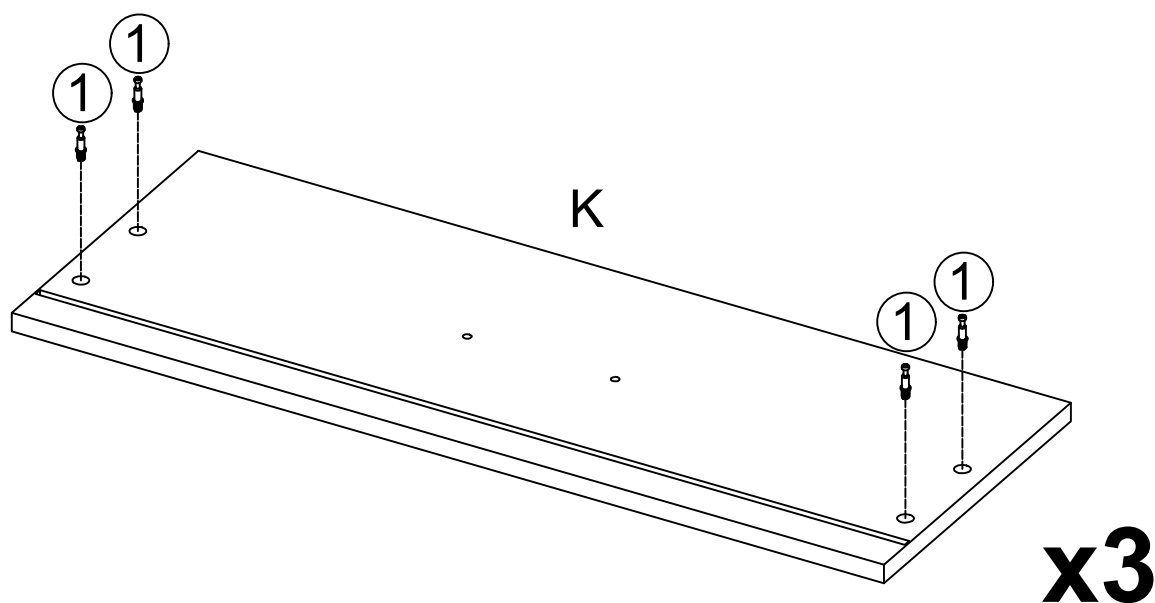



STEP 4

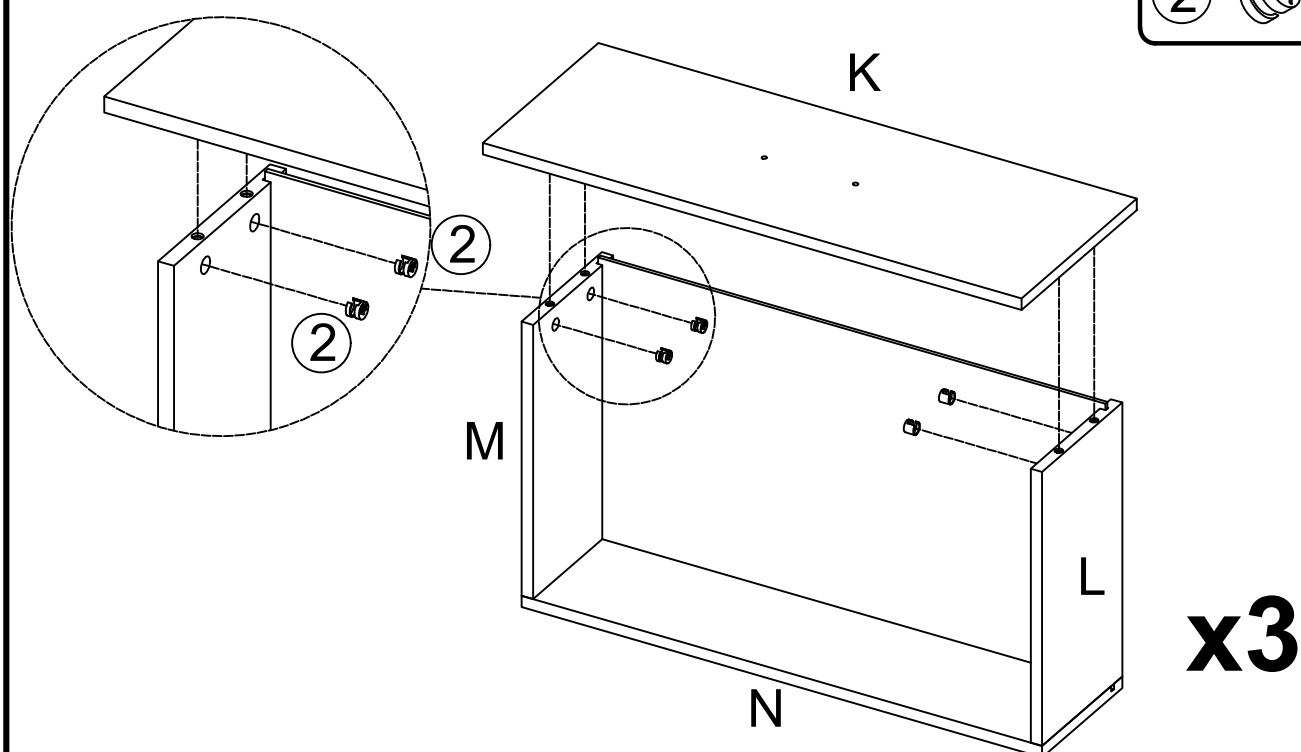

STEP 5

⑤  x6

⑪⑦  x3

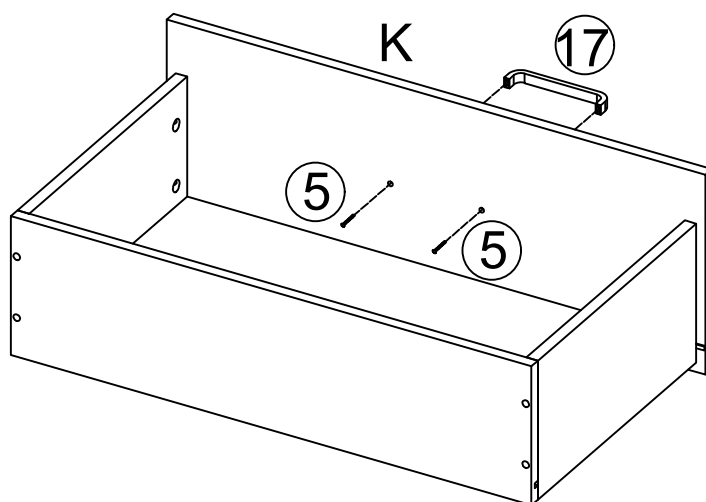



x3


STEP 6


NOTICE:

The installation for all the two drawers is based on the six steps above.

③  x18

⑧  x3


⑩  x3

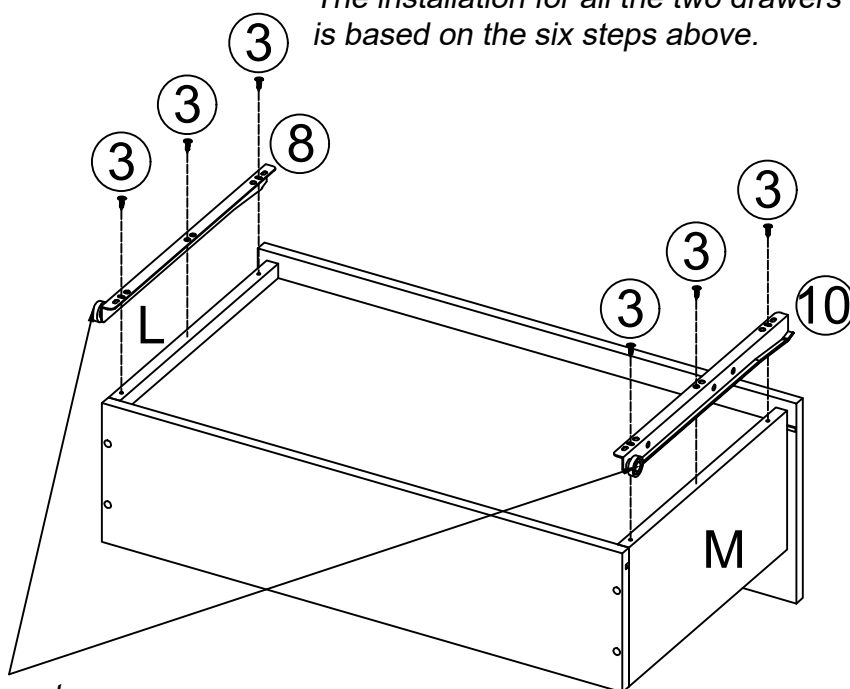


Roller at the end.

Note the direction of the rollers on the slide rail.

x3


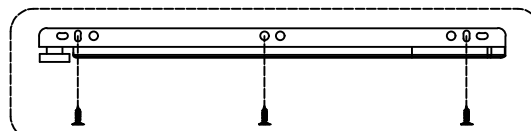


STEP 7


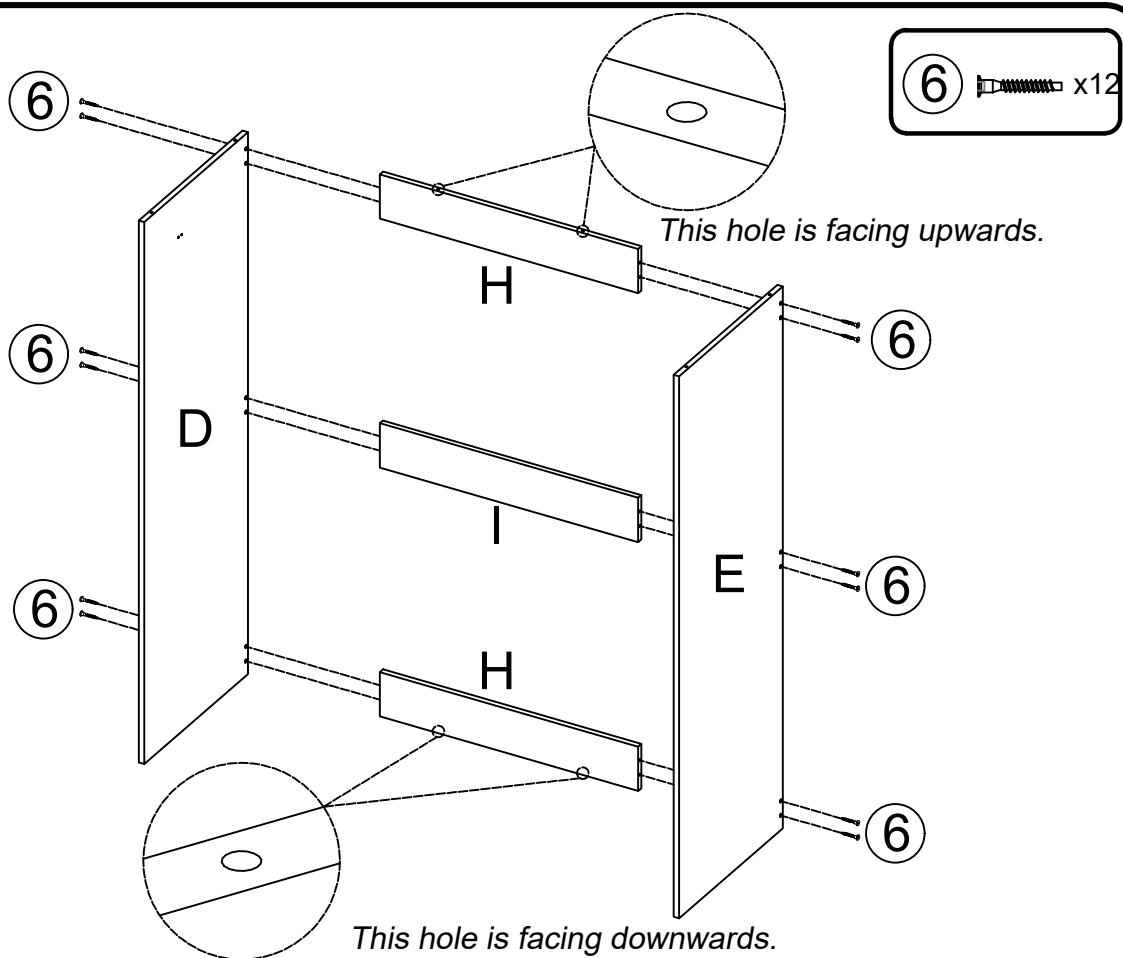


STEP 8





keep the holes of the Part D and Part E as shown.

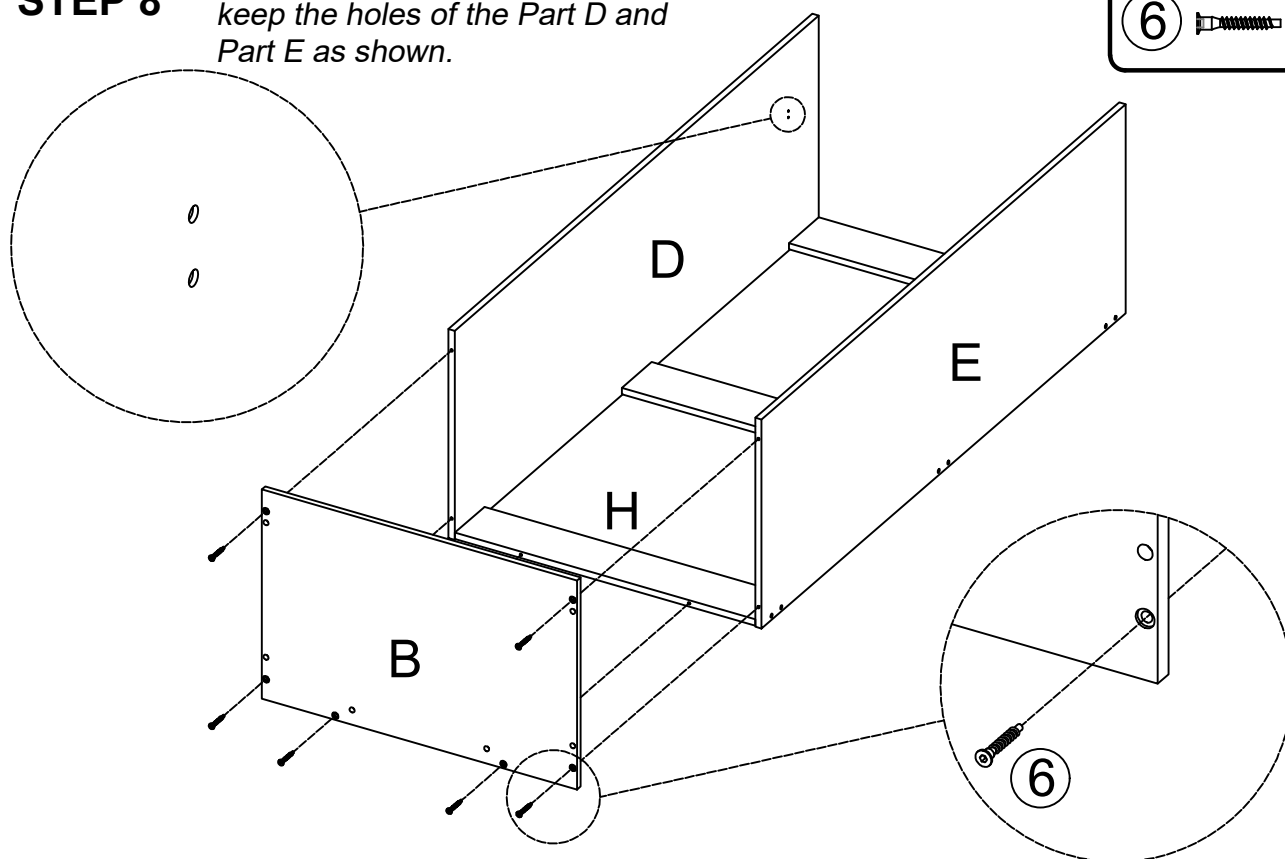

STEP 9


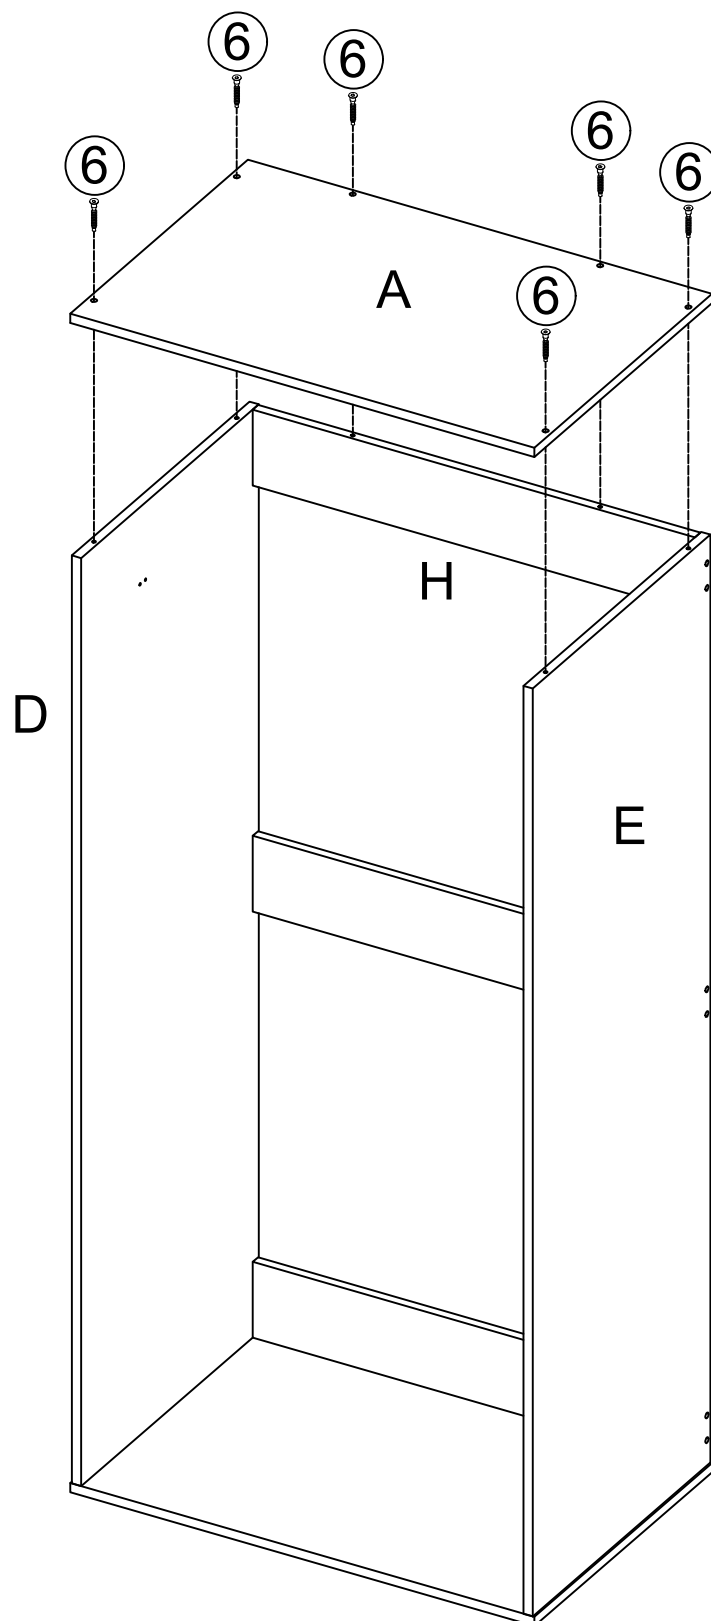



STEP 11

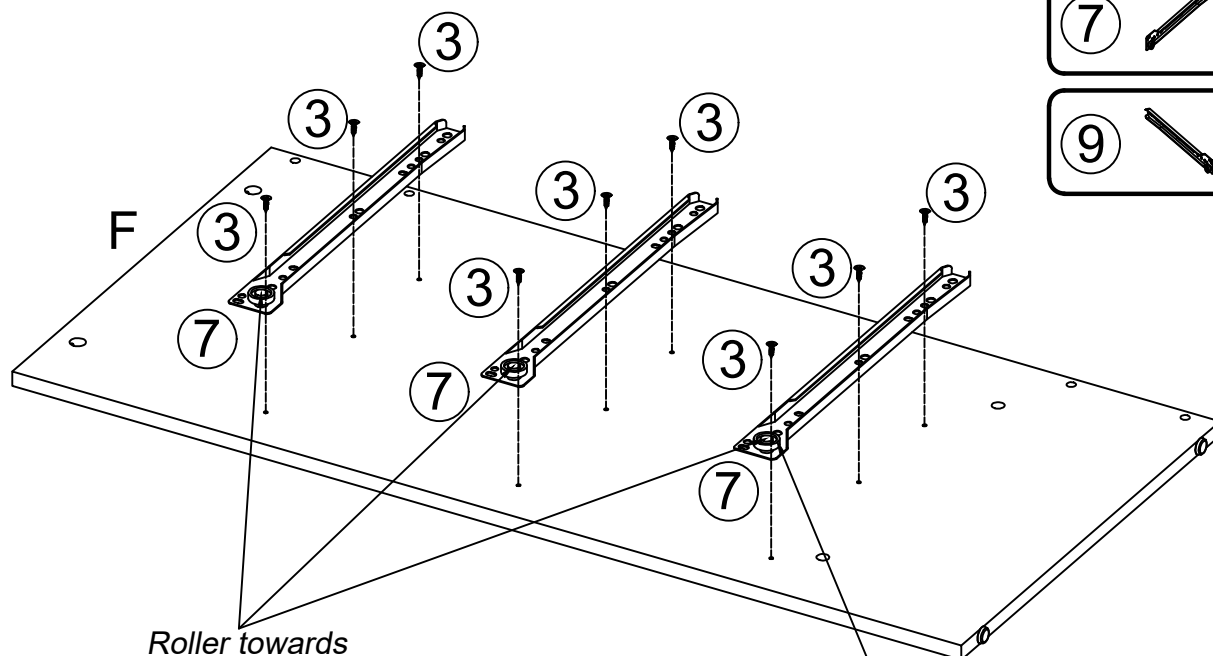



Roller towards bottom.



Note the direction of the rollers on the slide rail.

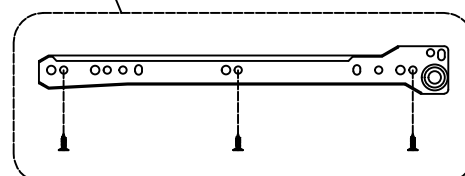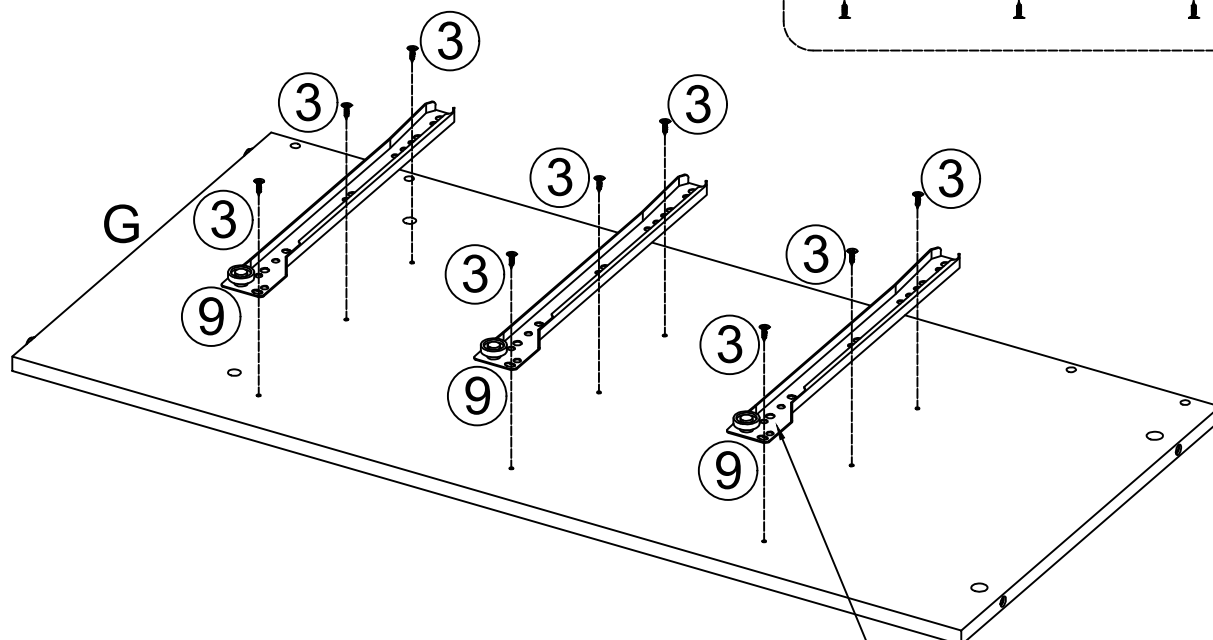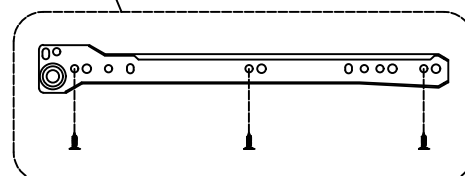



STEP 13

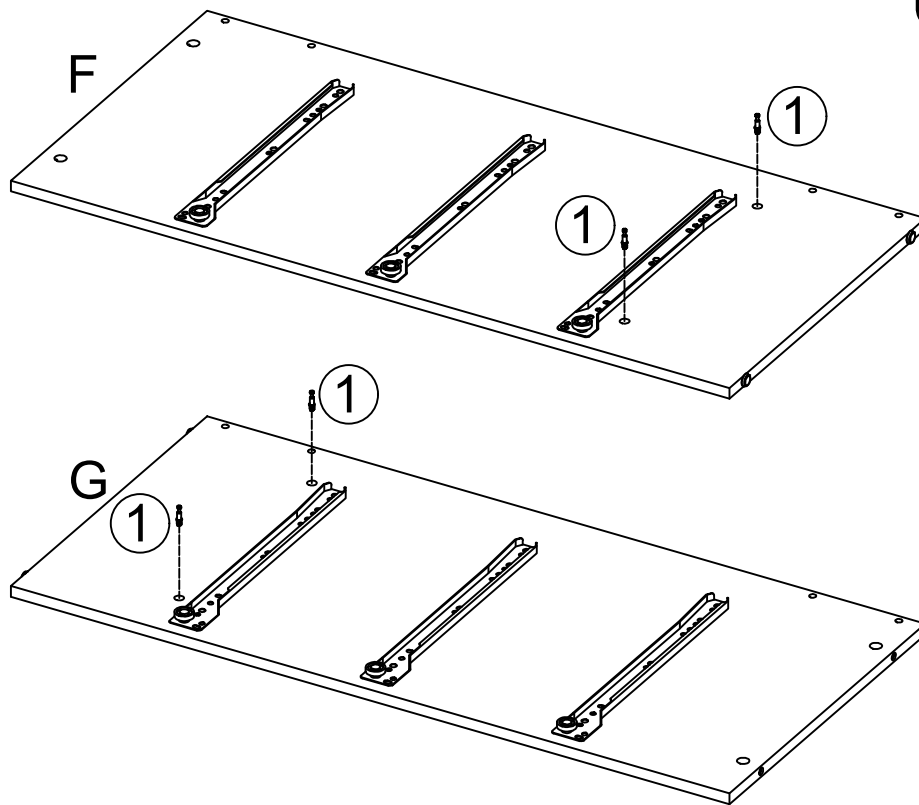

STEP 14


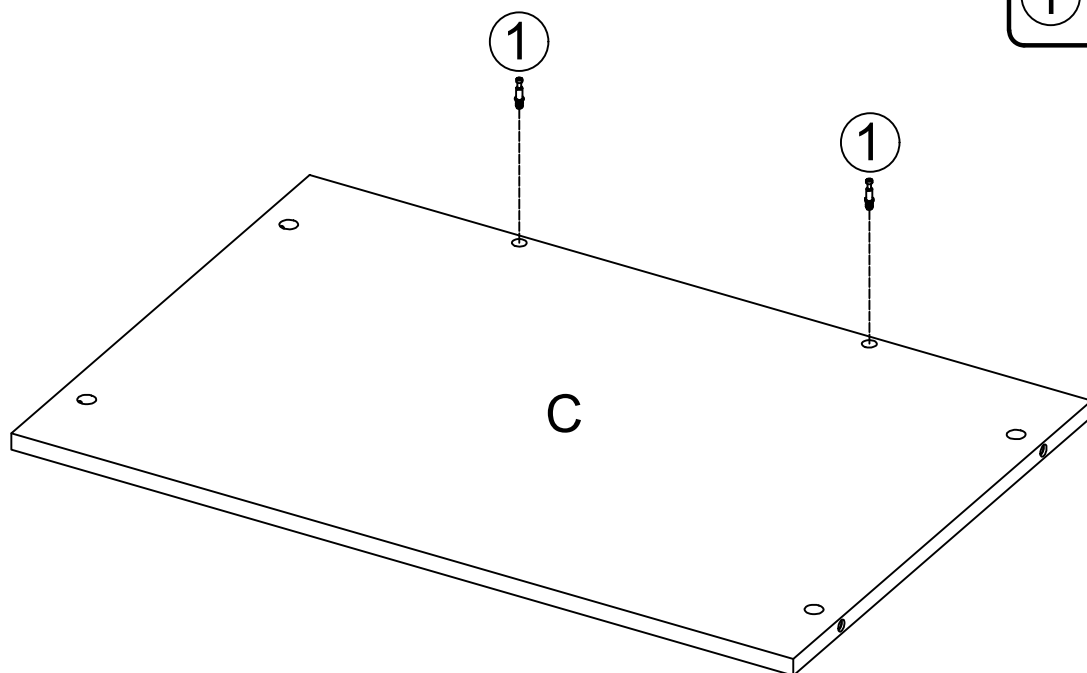



STEP 15

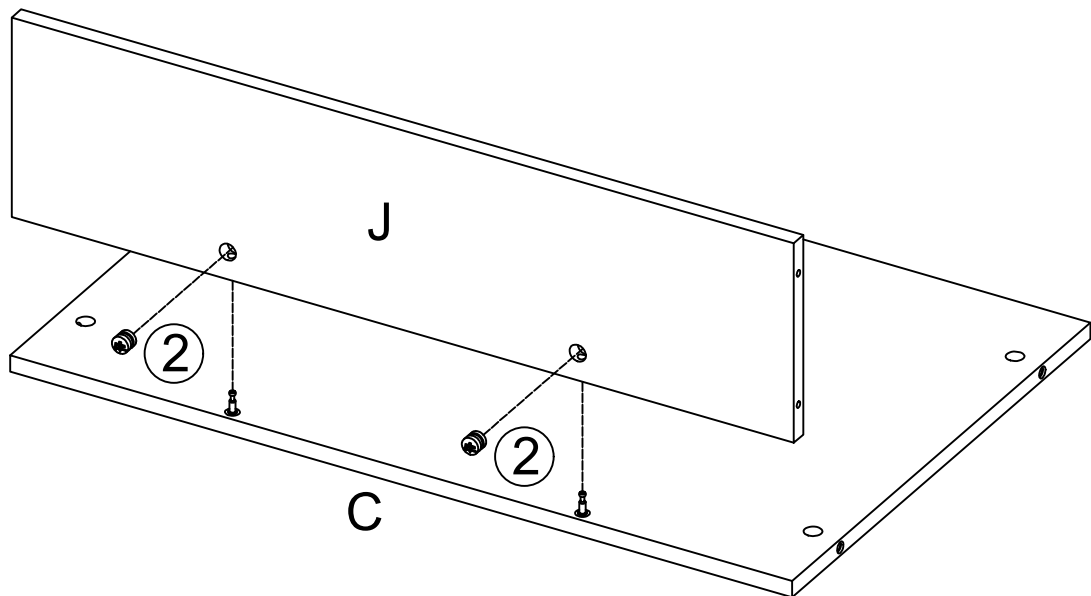



STEP 16



This hole is facing upwards.

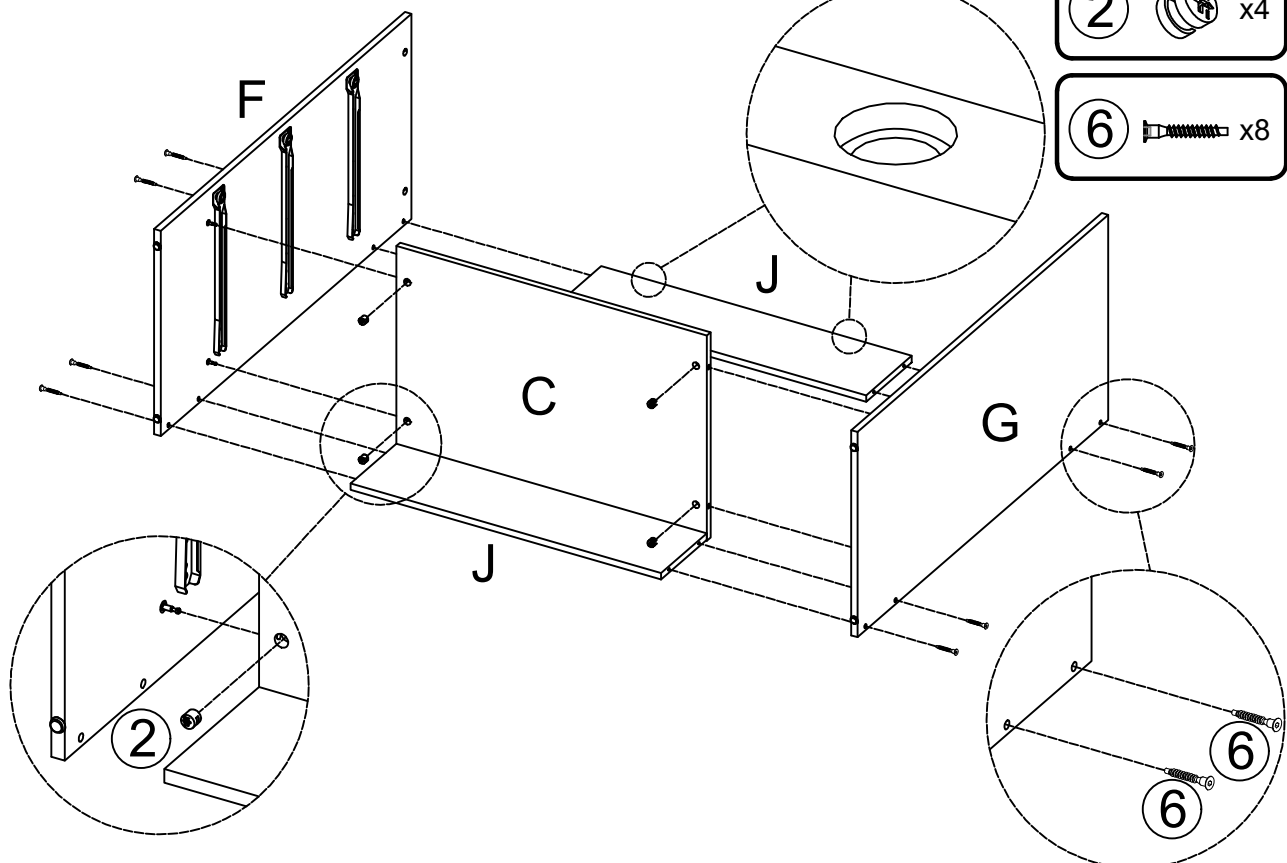



STEP 17

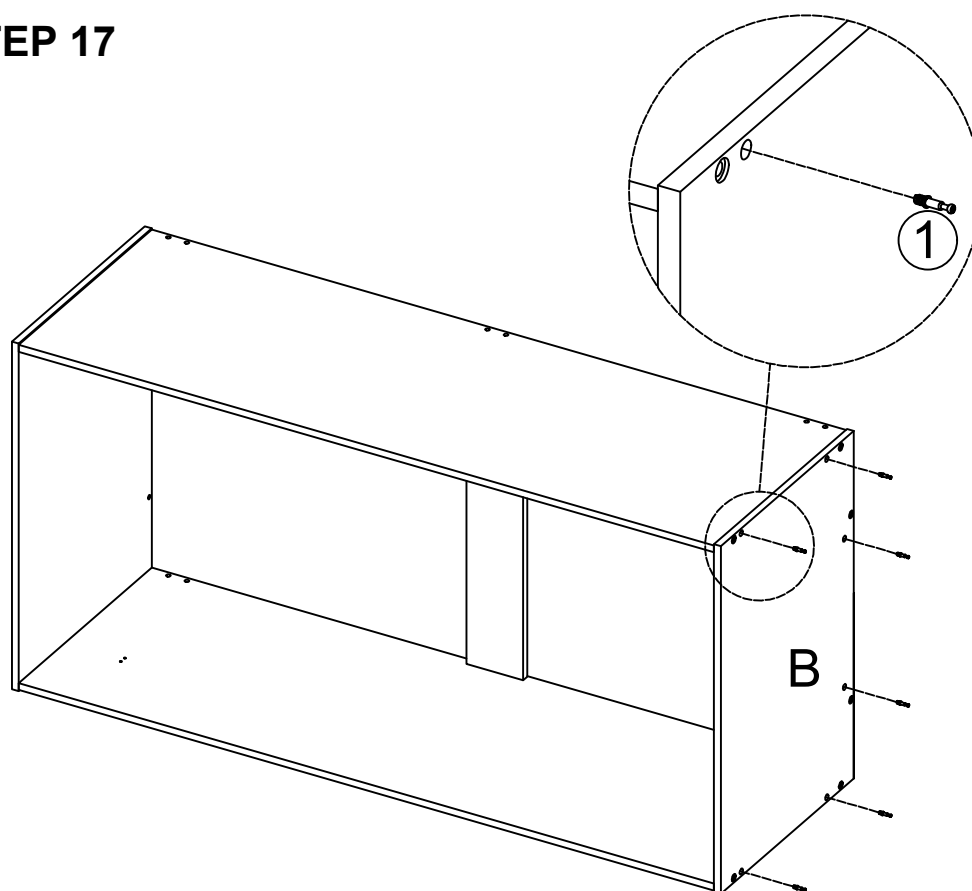



STEP 18

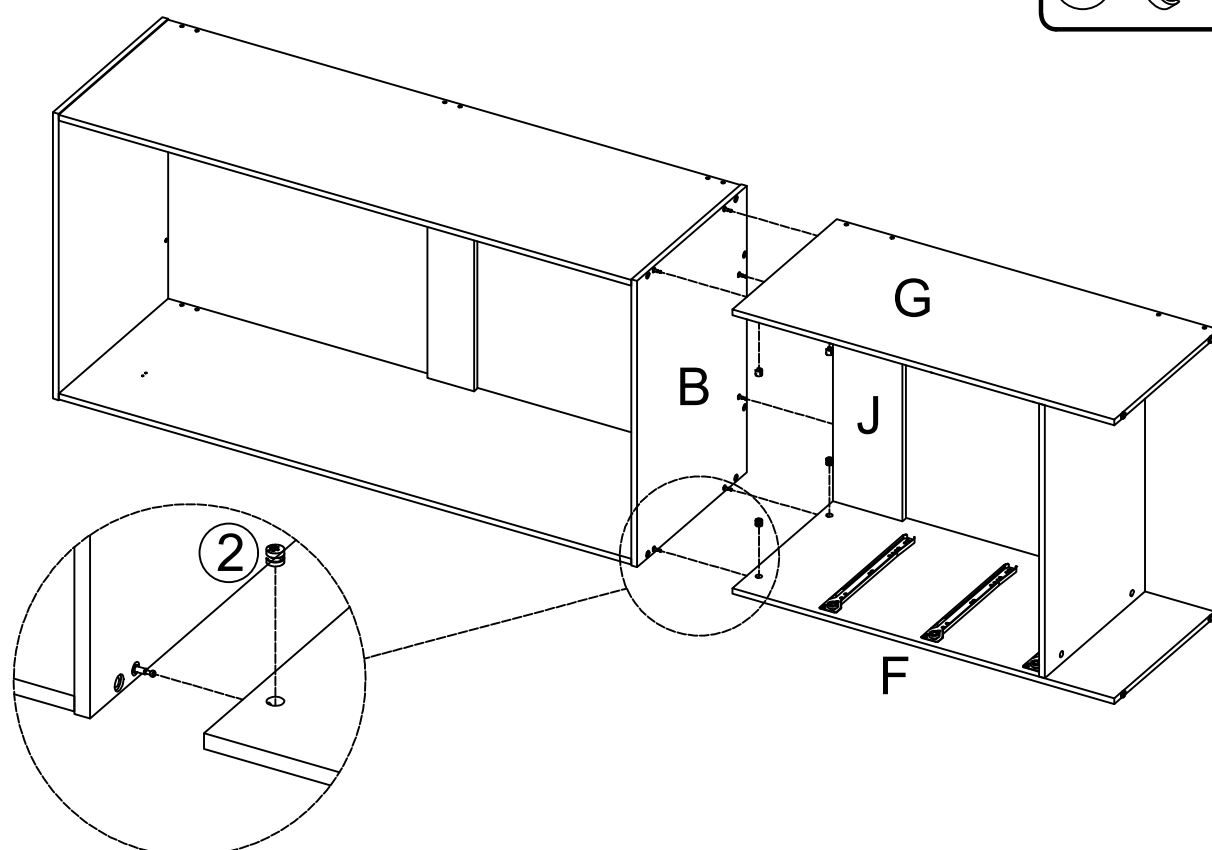

STEP 19

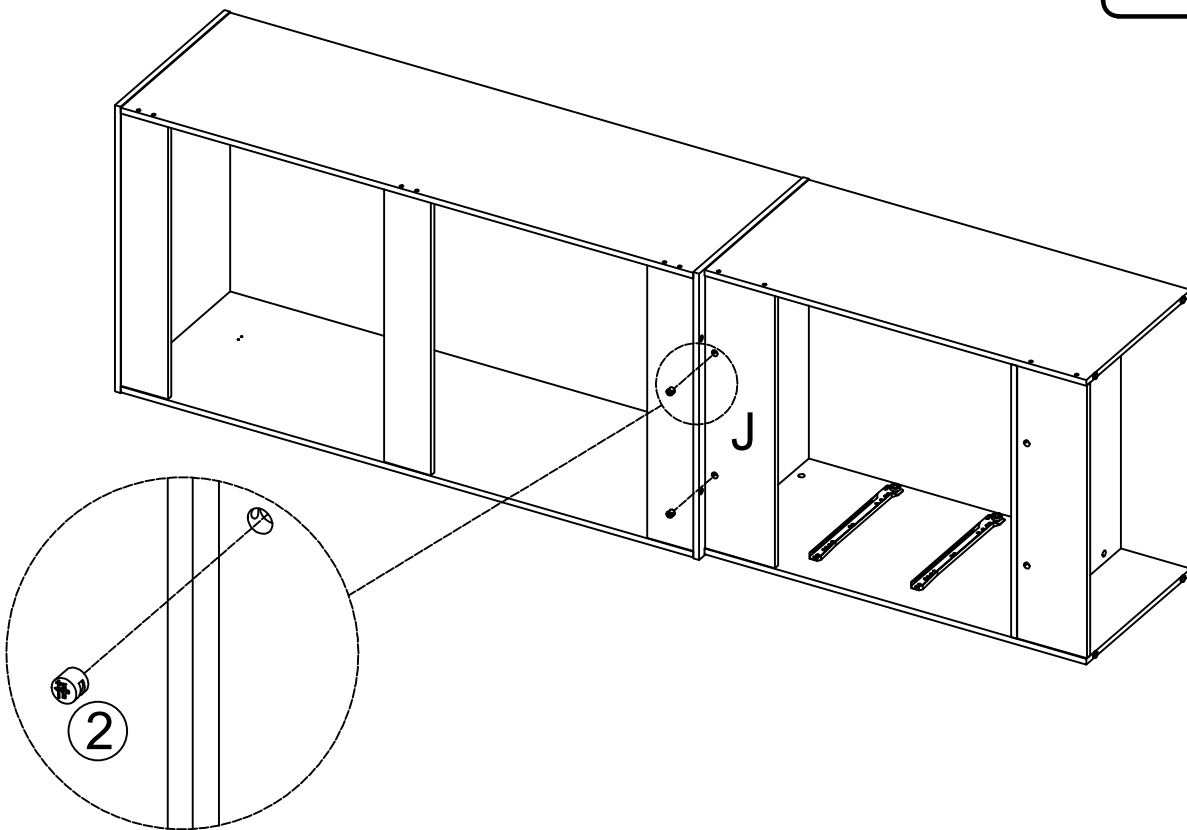


STEP 20

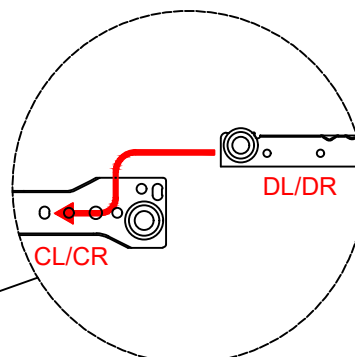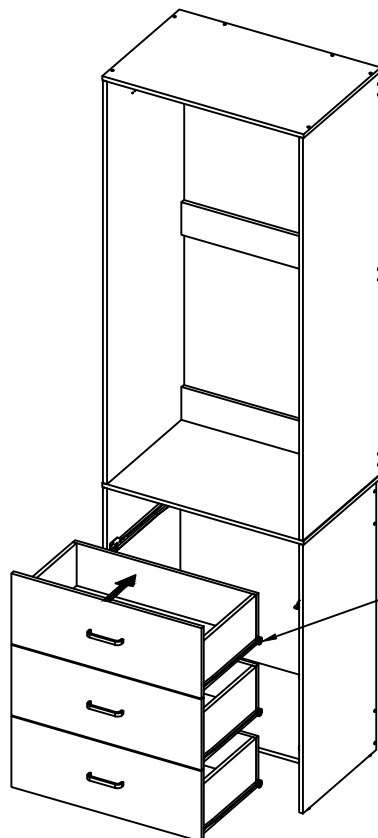


Please put the wheels align with the slots as the instruction shows, then slide into them.


STEP 21

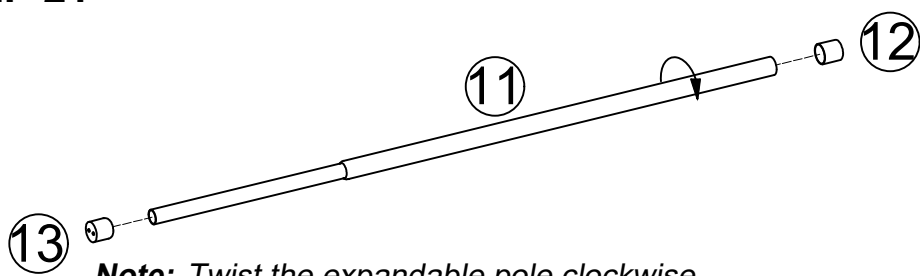


Note: Twist the expandable pole clockwise to tighten. anticlockwise to loosen.

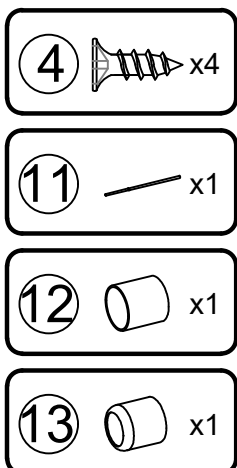

CABINET

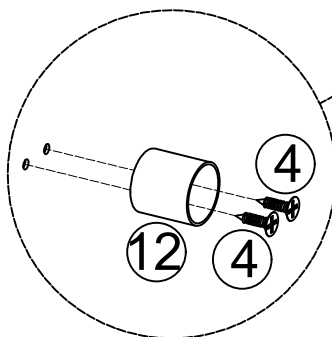


D

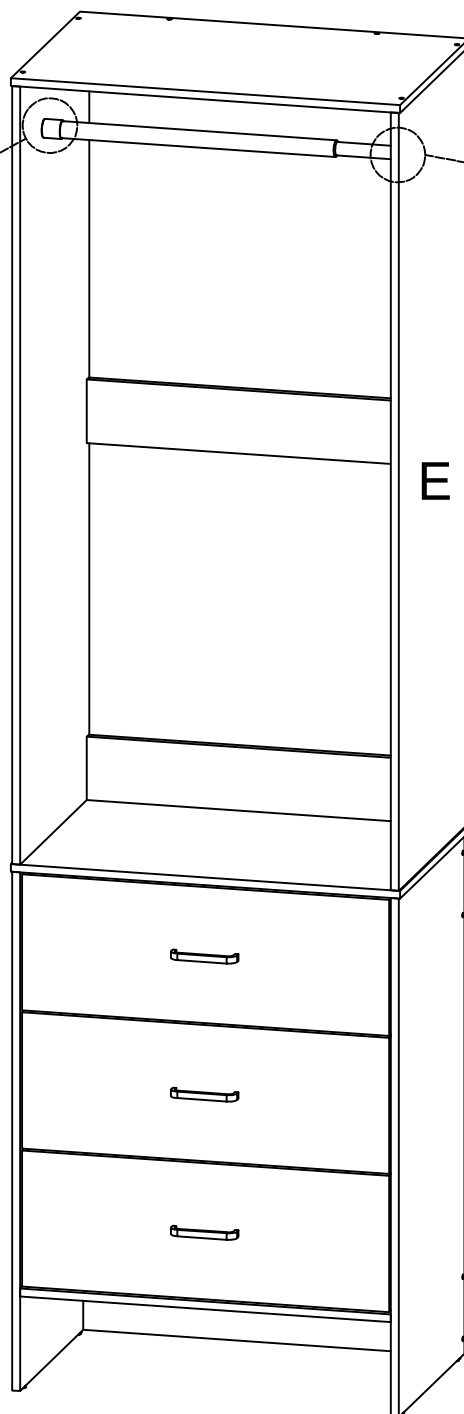


E

CABINET

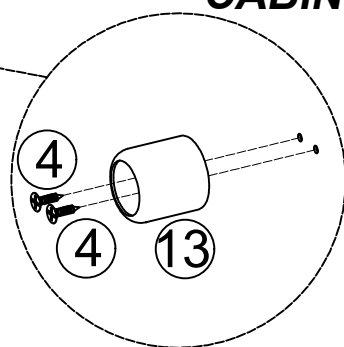

TIPPING RESTRAINT HARDWARE



Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

Please unscrew the Part ⑥ screw first, then install Part ⑭.

