

INSTALLING A POPUP DRAIN

Note:

These instructions are for installing the drain with a sink with no overflow.

Use either Plumber's Putty or a Foam Washer.
DO NOT USE BOTH

ATTENTION INSTALLER

- Read all instructions carefully before installation. Inspect the item and make sure you have all the parts shown in the parts list.
- If any part is missing or damaged, please contact Ruvati Support at 1-855-478-8284 or www.ruvati.com.
- Consult with a professional plumber if you encounter difficulties or are unsure about any step in the process.

Register your product at: www.ruvati.com/register-product

RUVATI®

Address: 2705 Meister Pl, Round Rock, TX 78664

USA Phone: 1.855.478.8284

Email: support@ruvati.com

RUVATI®


INSTALLATION GUIDE

BATHROOM SINK POPUP DRAIN

RVA5103



INCLUDED IN BOX

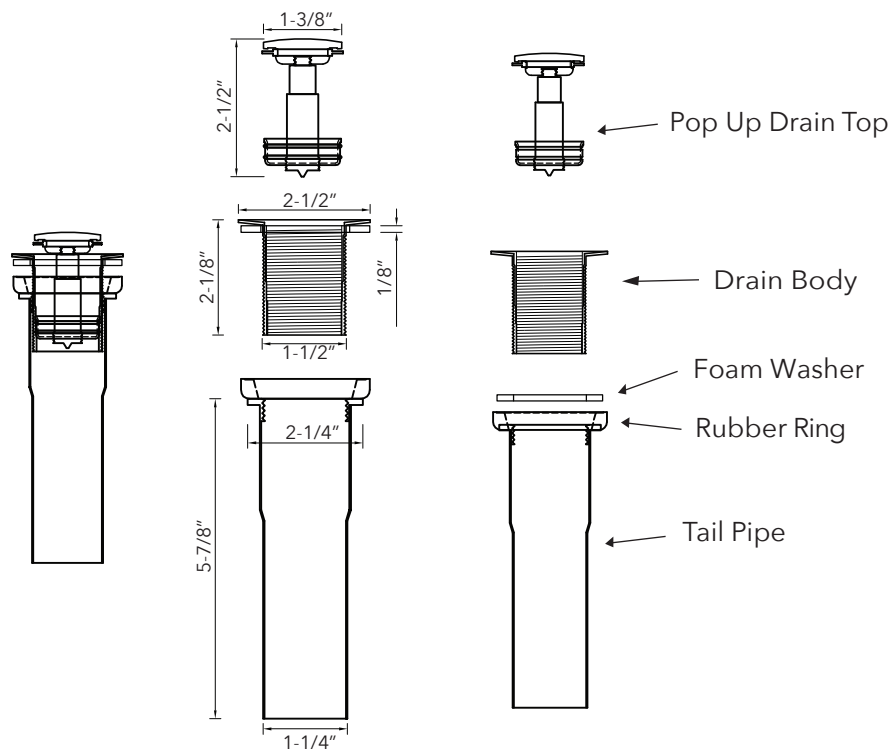

INSTALLATION GUIDE

For Vessel Sinks:

1. Determine the position of the sink on your countertop, then drill a hole that is appropriately sized for your specific sink type.
2. Apply a bead of silicone adhesive around the bottom edge of the sink (or mounting surface), then place the sink on the countertop and align it with the drain hole.

For All Sink Types:

3. Insert the **Drain Body** and **Foam Washer**, or apply a thin bead of **Plumber's Putty** around the drain opening from the top of the sink.
4. From under the countertop, place the **Rubber Ring** on the base of the drain. Then push it all the way up until it is flush with the counter.
5. Now, screw the **Tail Pipe** all the way up until it meets the **Rubber Ring** and is tight. Be sure not to overtighten it.

