

	VI-BYOD-01 Installation	
Release Date: 08.05.2020	Models Affected: VI-BYOD-01	Service Document SD- 86
Prepared by: Oliver Duke		

<input checked="" type="checkbox"/> Assembly instructions	<input type="checkbox"/> Installer Alert	<input type="checkbox"/> Parts Manual
<input type="checkbox"/> Service Bulletin	<input type="checkbox"/> Service Manual	<input type="checkbox"/> Software
<input type="checkbox"/> Product information	<input type="checkbox"/> Trouble Shooting	


Part number	Description
VI-BYOD-01	Universal tablet tray and handlebar bracket for IC567

Required tools: 2.5mm & 3mm Allen key

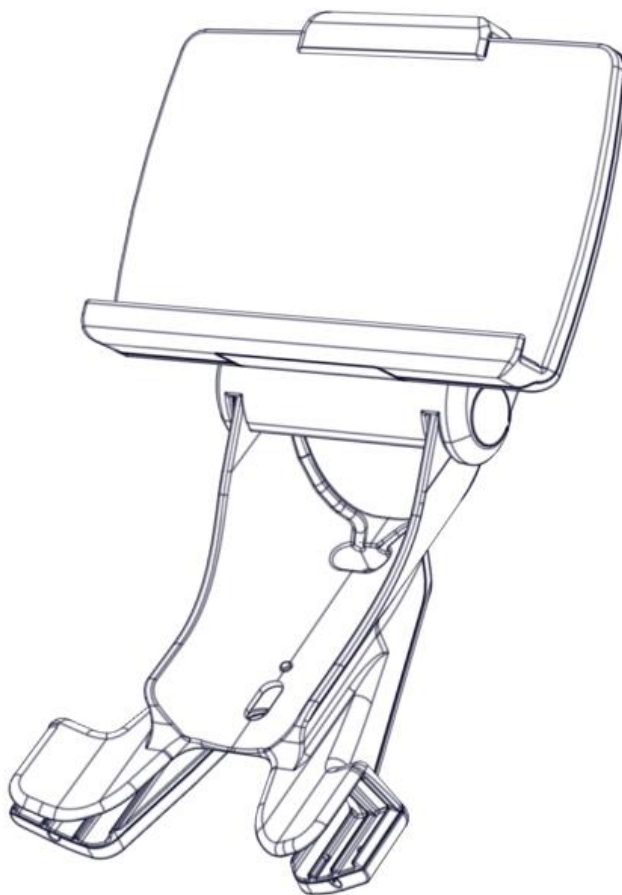


	VI-BYOD-01 Installation	
Release Date: 08.05.2020 Prepared by: Oliver Duke	Models Affected: VI-BYOD-01	Service Document SD- 86


1. Remove the bolt and both spacers between the handlebar and console with a 3 mm Allen key.

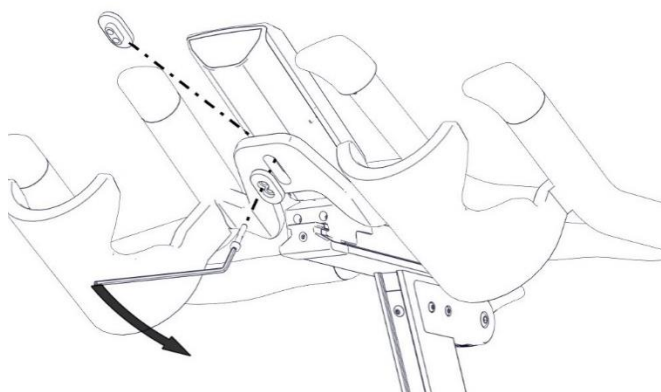


2. Remove the bolt from the BYOD bracket with a 2.5mm Allen key. The bolt will be used to fix the bracket to the handlebar at a later point.

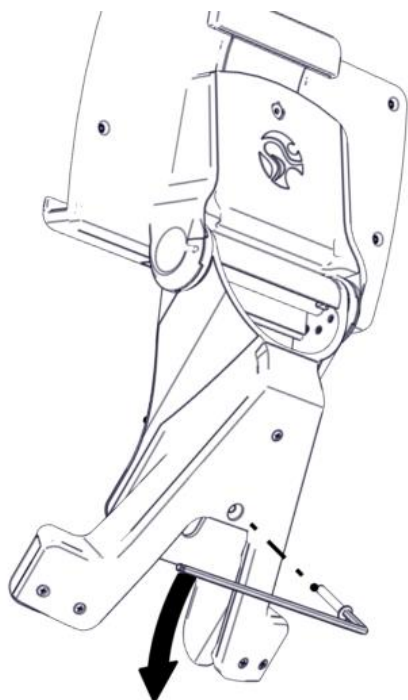


3. Carefully slide the bracket on the handlebar.

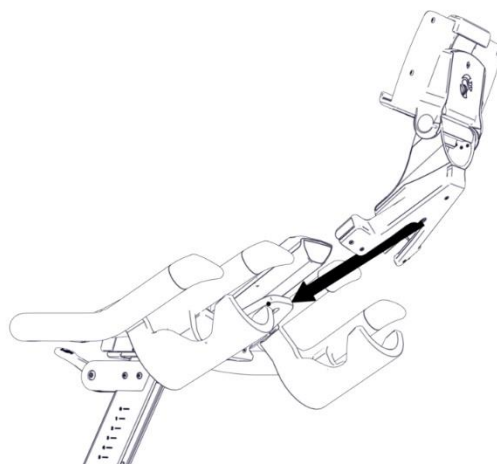


4. The BYOD bracket will fit snugly on the handle bar and over the console as depicted below.

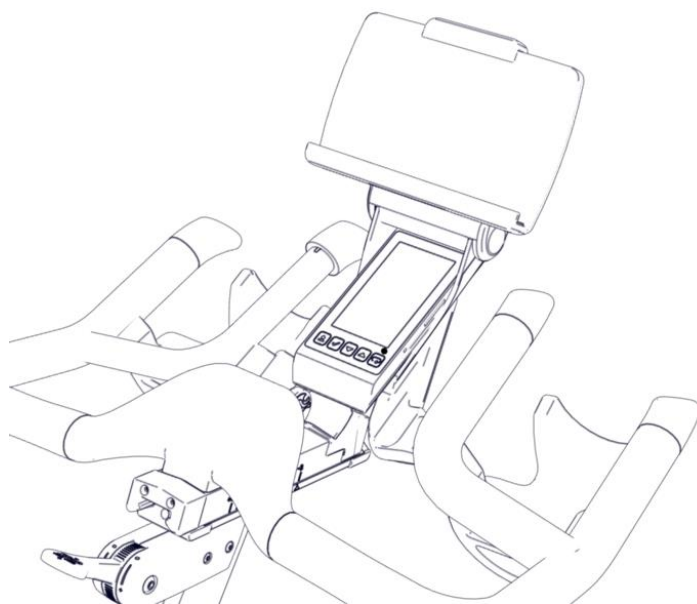

	VI-BYOD-01 Installation	
Release Date: 08.05.2020	Models Affected: VI-BYOD-01	Service Document SD- 86
Prepared by: Oliver Duke		

5. Hand tighten the bracket using the removed bolt from step 2 with a 2.5mm Allen key.

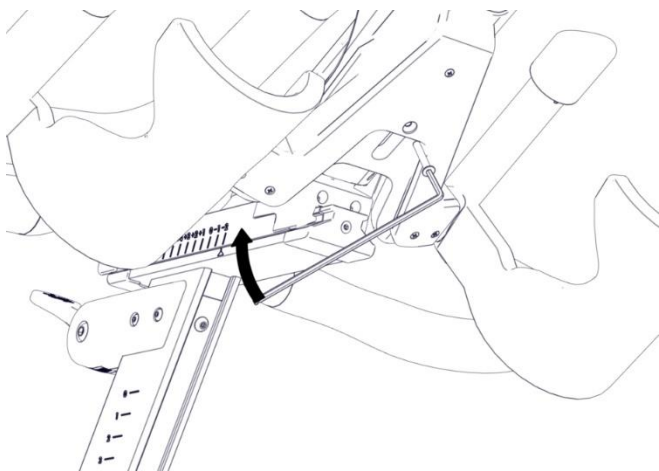

Assembly completed.