


NuWave[™] Base DIY Quick Guide

Simple steps and recommendations for the installation of Thermotec NuWave[™] Base acoustic barrier.

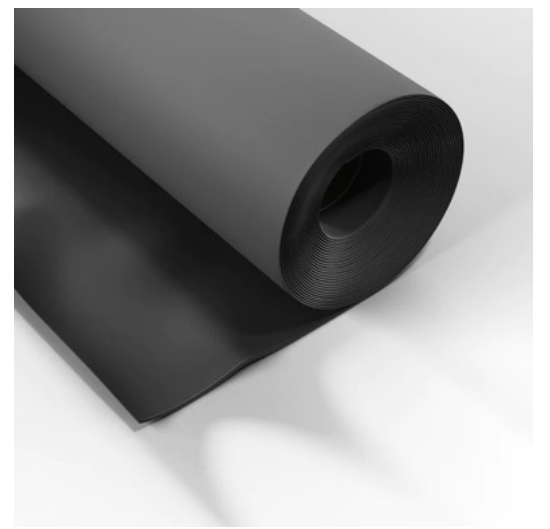

For your health and safety please ensure that you are wearing the appropriate safety equipment including protective goggles and gloves when installing.

STEP 1

Measure distance from the floor to ceiling

STEP 2

Cut NuWave[™] Base to size using a straight blade cutting tool with a t-square to ensure it is straight.

STEP 3

Place the first length of NuWave[™] Base butted up against the ceiling and allow to drape evenly to the floor. Screw, nail or staple into place.

STEP 4

Use your cutting tool to carefully cut around outlet boxes as they become covered. Make these as close and as tight as possible to maintain a good seal.

STEP 5

Install your plasterboard over the NuWave[™] Base and caulk the seams with an acoustic sealant to achieve the best results before finishing and painting your walls.