

INSTALLING A POPUP DRAIN

Note:

These instructions are for installing the drain with a vessel sink with no overflow.

ATTENTION INSTALLER

- Read all instructions carefully before installation. Inspect the item and make sure you have all the parts shown in the parts list.
- If any part is missing or damaged, please contact Ruvati Support at 1-855-478-8284 or www.ruvati.com.
- Consult with a professional plumber if you encounter difficulties or are unsure about any step in the process.

Register your product at: www.ruvati.com/register-product

RUVATI®

Address: 2705 Meister Pl, Round Rock, TX 78664

USA Phone: 1.855.478.8284

Email: support@ruvati.com

RUVATI®


INSTALLATION GUIDE

BATHROOM SINK POPUP DRAIN

RVA5102



INCLUDED IN BOX

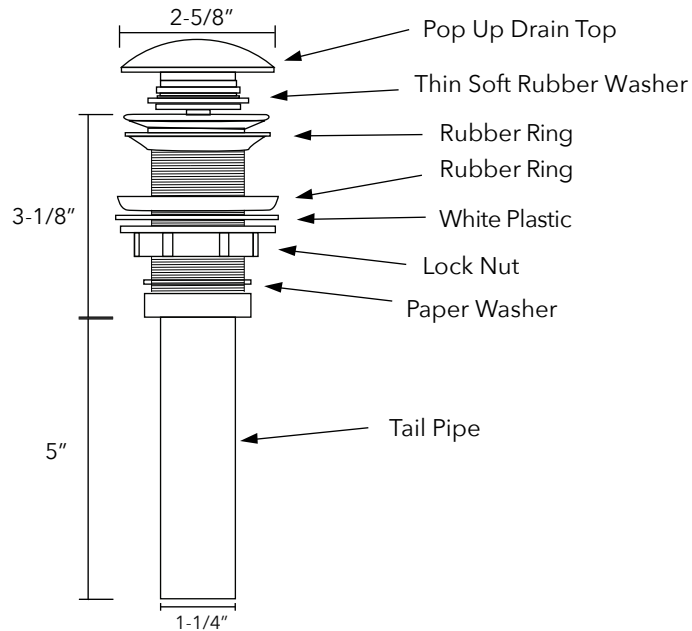

INSTALLATION GUIDE

1. Determine the position of the sink on your countertop and make a 1-3/4" hole in your countertop aligned with the sink hole.
2. Apply silicone adhesive around the bottom of the sink and place the sink on the countertop and align it with the countertop hole.
3. Insert the **Drain Body** and **Rubber Ring** through the top of the sink's drain opening.
4. From under the countertop, place the **Rubber Ring** on the base of the drain. Then push it all the way up until it is flush with the counter.

5. Place the **White Plastic** on the base of the **Drain Body** and push it up until it is flush with the **Rubber Ring**.
6. Now, screw the **Lock Nut** all the way up until it meets the **White Plastic**.
7. Finally, place the **Paper Washer** onto the tailpipe, then screw the **Tail Pipe** into the **Drain Body** by hand. Tighten securely, but do not overtighten.

