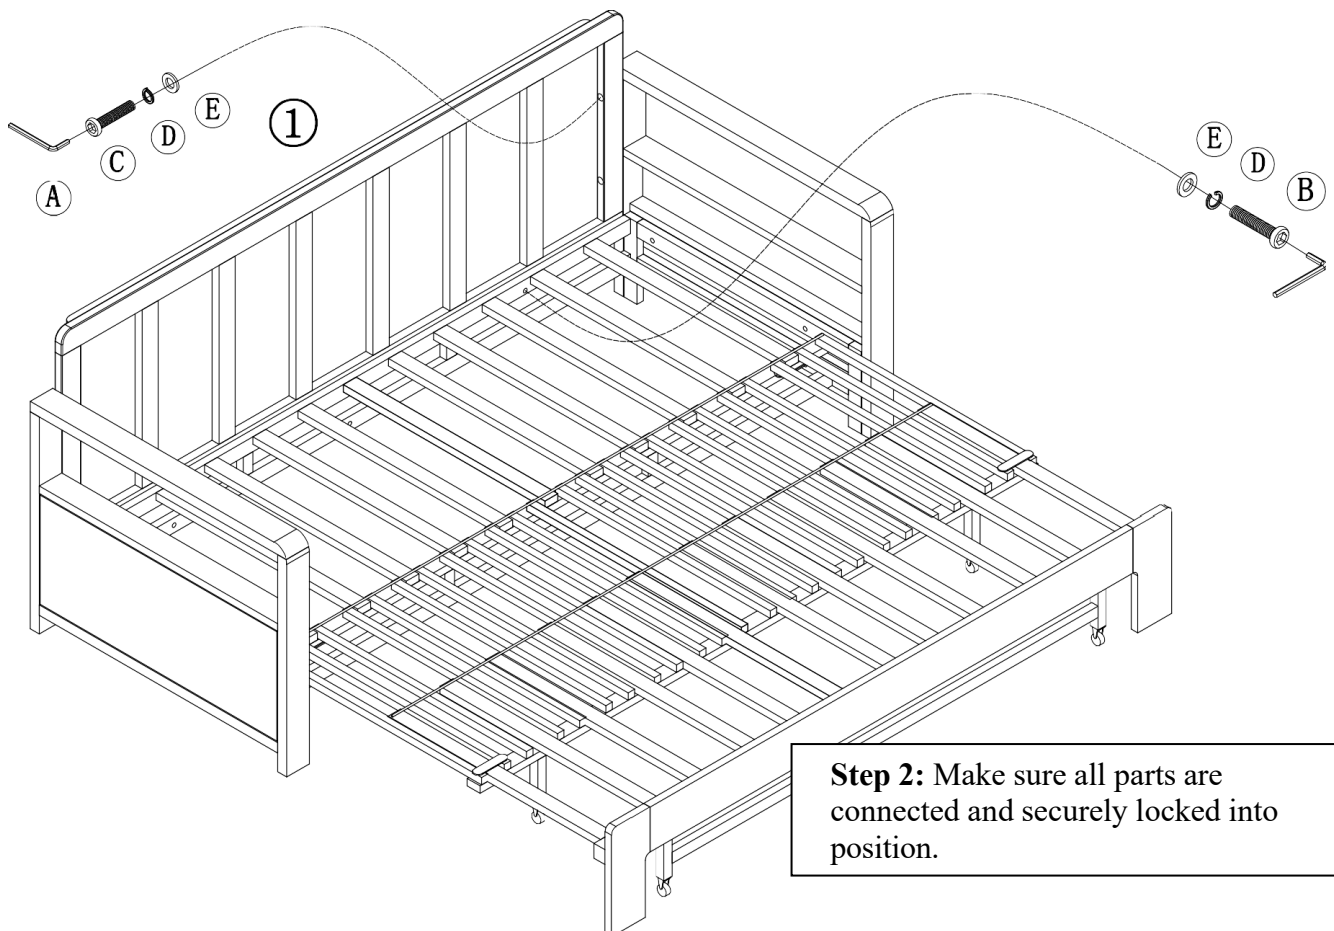
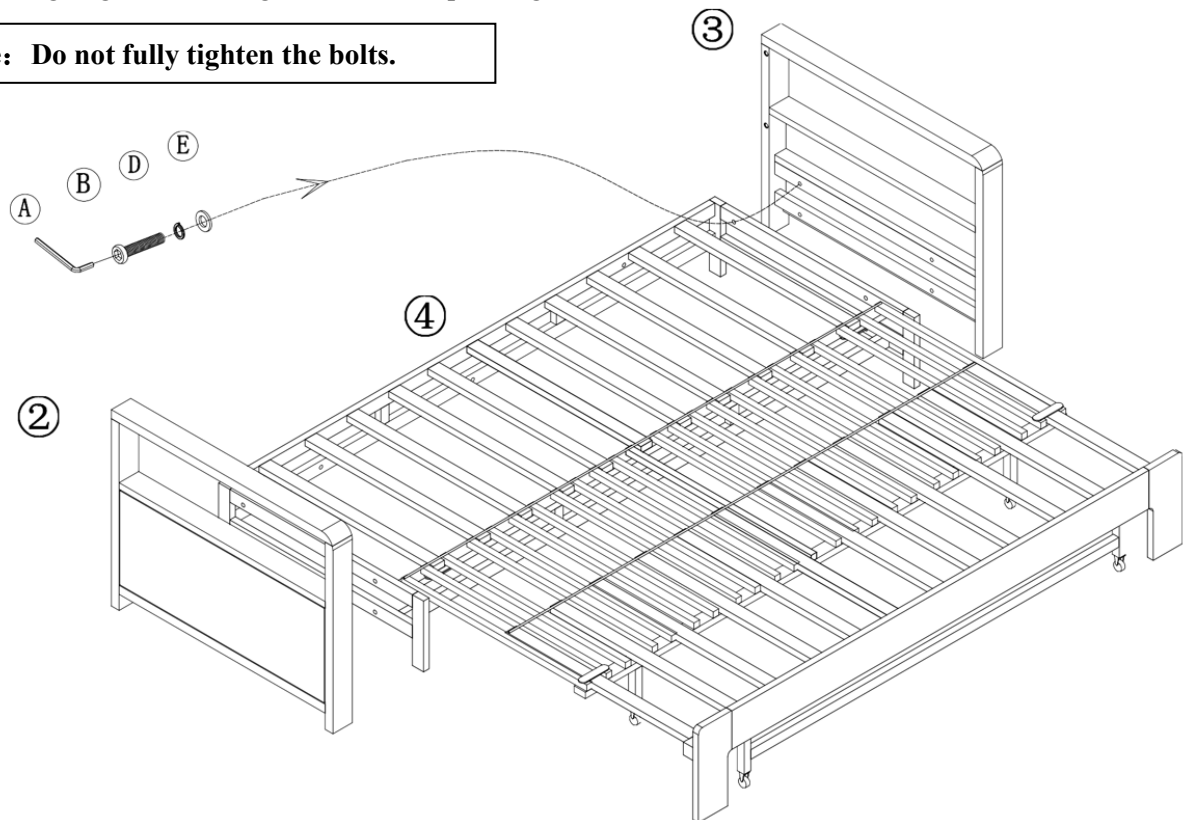

A. Allen Key 5# =1	B. M8*40=11	C. M8*60=4	D. Ø8=18	E. Ø8=15

Step 1: Connect the Armrests (② ③) to the Deck

(④) by aligning and inserting into the corresponding

Note: Do not fully tighten the bolts.



Step 2: Make sure all parts are connected and securely locked into position.