


ASSEMBLY INSTRUCTIONS

30 IN. SIDEMERE WALL HUNG

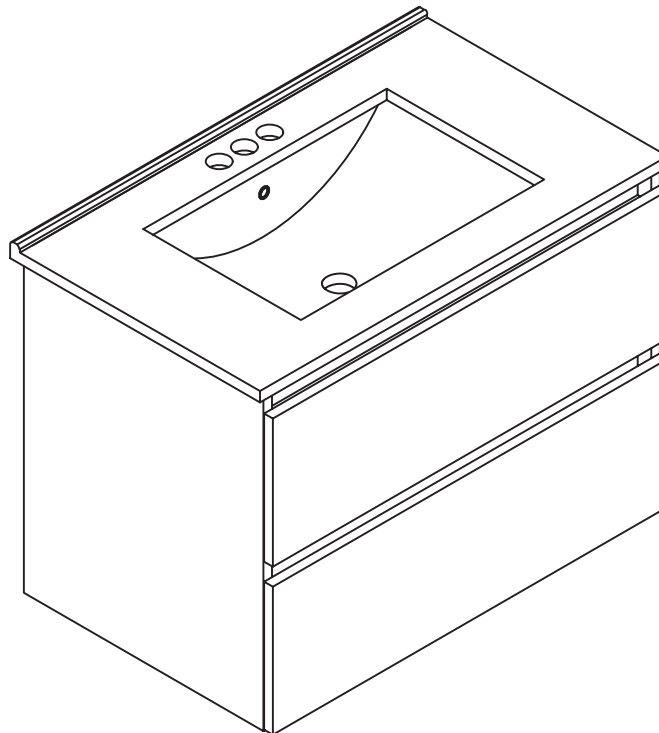

Questions, problems, missing parts?
Before returning to the store, call Glacier Bay Customer Service.
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1- 855- HD GLACIER (1-855-434-5224)

HOMEDEPOT.COM/GLACIERBAY

THANK YOU

*We appreciate the trust and confidence you have placed in Glacier Bay through the purchase of this vanity. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.
Thank you for choosing Glacier Bay!*

Table of Contents

Table of Contents	2	Planning Assembly	3
Safety Information	2	Tools Required	3
Warranty	2	Hardware Required	3
LIMITED LIFETIME WARRANTY	2	Points to Installer	4
What is Covered	2	Pre-assembly (continued)	5
What is Not Covered	2	Package Contents	5
California and Minnesota Residents	3	Installation	6
California residents	3	Drawer adjustment	11
Minnesota residents	3	Maintenance	11
Pre-assembly	3	Care and Cleaning	11
		Troubleshooting	12

Safety Information



WARNING

- ❑ Two people are required for safe installation. Take extra precautionary measures to ensure a secure grip on the vanity base and vanity top when lifting.
- ❑ Read these instructions carefully and keep in a safe place.
- ❑ Do not over tighten connectors (screws, bolts, etc.) Overtightening can lead to product damage.
- ❑ Assembly needs to be carried out by a qualified person. Wrong assembly can lead to the furniture / object topples or falls resulting in personal injury or damage.
- ❑ Screws or fittings are not included. Choose screws and fittings that suits your wall and have sufficient holding power. If you are uncertain, contact your local specialized retailer.



CAUTION

- ❑ The bathroom wall must be finished prior to installation of the vanity base and top.
- ❑ Do not use water that exceeds temperatures of 140°F/46°C.
- ❑ Do not place any sharp or abrasive objects on the bare surface of the vanity top.
- ❑ Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.

Warranty

LIMITED LIFETIME WARRANTY

WHAT IS COVERED

Glacier Bay products are manufactured with superior quality standards and workmanship and are backed by our limited lifetime warranty. Glacier Bay products are warranted to the original consumer purchaser to be free of defects in materials or workmanship. We will replace FREE OF CHARGE any product or parts that proves defective. Simply, return the product / part to any of The Home Depot retail locations or call 1-855-HD Glacier (1-855-434-5224) to receive the replacement item. Proof of purchase (original sales receipt) from the original consumer purchaser must be made available for all Glacier Bay warranty claims.

WHAT IS NOT COVERED

This warranty excludes incidental/inconsequential damages and failures due to misuse, abuse or normal wear and tear. This warranty excludes all industrial, commercial & business usage, whose purchasers are hereby, extended a limited lifetime warranty from the date of purchase, with all other terms of this warranty applying except the duration of warranty. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state and province to province. Please see a store or contact 1-855-HDGlacier for more details.

California and Minnesota Residents

CALIFORNIA RESIDENTS



WARNING THIS PRODUCT CAN EXPOSE YOU TO STYRENE / WOOD DUST WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER. GO TO WWW.P65WARNINGS.CA.GOV/PRODUCTS

MINNESOTA RESIDENTS

“IMPORTANT HEALTH NOTICE.

SOME OF THE BUILDING MATERIALS USED IN THIS HOME (OR THESE BUILDING MATERIALS) EMIT FORMALDEHYDE. EYE, NOSE, AND THROAT IRRITATION, HEADACHE, NAUSEA AND A VARIETY OF ASTHMA-LIKE SYMPTOMS, INCLUDING SHORTNESS OF BREATH, HAVE BEEN REPORTED AS A RESULT OF FORMALDEHYDE EXPOSURE. ELDERLY PERSONS AND YOUNG CHILDREN, AS WELL AS ANYONE WITH A HISTORY OF ASTHMA, ALLERGIES, OR LUNG PROBLEMS, MAY BE AT GREATER RISK. RESEARCH IS CONTINUING ON THE POSSIBLE LONG-TERM EFFECTS OF EXPOSURE TO FORMALDEHYDE.

REDUCED VENTILATION MAY ALLOW FORMALDEHYDE AND OTHER CONTAMINANTS TO ACCUMULATE IN THE INDOOR AIR. HIGH INDOOR TEMPERATURES AND HUMIDITY RAISE FORMALDEHYDE LEVELS. WHEN A HOME IS TO BE LOCATED IN AREAS SUBJECT TO EXTREME SUMMER TEMPERATURES, AN AIR-CONDITIONING SYSTEM CAN BE USED TO CONTROL INDOOR TEMPERATURE LEVELS. OTHER MEANS OF CONTROLLED MECHANICAL VENTILATION CAN BE USED TO REDUCE LEVELS OF FORMALDEHYDE AND OTHER INDOOR AIR CONTAMINANTS. IF YOU HAVE ANY QUESTIONS REGARDING THE HEALTH EFFECTS OF FORMALDEHYDE, CONSULT YOUR DOCTOR OR LOCAL HEALTH DEPARTMENT.”

Pre-assembly


PLANNING ASSEMBLY

To ensure your installation goes smoothly, please read these instructions carefully and review the recommended tools and hardware before you begin.

To remove the old vanity (if applicable): 1) Turn off the water supply and drain out. 2) Disconnect the supply lines from the faucet. 3) Remove the old vanity top and vanity. If the new vanity is not installed immediately, temporarily stuff a rag into the drain pipes.

Using a level, locate any uneven wall areas where your vanity will be installed. Unevenness can cause your vanity to become misaligned resulting in twisting of the cabinet. Repair any uneven areas.

TOOLS REQUIRED

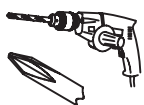

Electric drill
with #2 drill bit




Safety
goggles



Phillips
screwdriver



Level

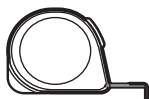

Measuring
tape




Silicone
(optional)

HARDWARE REQUIRED




Wall anchors - if the
vanity will not be screwed
to wall studs

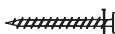

For wood wall



For brick wall

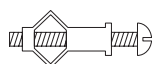

For dry wall

Points to Installer

INSTALLATION TO BE PERFORMED BY QUALIFIED PROFESSIONAL ONLY.


Wall hung vanity cabinets require important wall preparation and installation. Please thoroughly read this notice and all other installation instructions that might be included with the cabinetry.

Keep in mind

- Cabinets must be securely fastened with sufficient type, quantity and size of screws to wall studs and internal structural wall blocking.
- See below for examples and instructions for internal structural wall blocking necessary for proper installation

Internal wall blocking installation

- A horizontal row of wood 2 X 7 structural wall blocks are required and must be installed between wall studs at a height to match where the top of the wall hung vanity cabinets will be installed. Carefully remove drywall in required locations to gain access to wall studs. Use caution to not disturb any electrical or plumbing utilities found within the wall.
- Install a second row of 2 X 7 structural wall blocks to match the height of the cabinets to allow fastening near the bottom.
- The 2 X 7 structural wall blocks should be positioned between each wall stud where the cabinets will be located.
- Use wood screws installed at an angle to securely fasten the structural wall blocks to the wall studs.

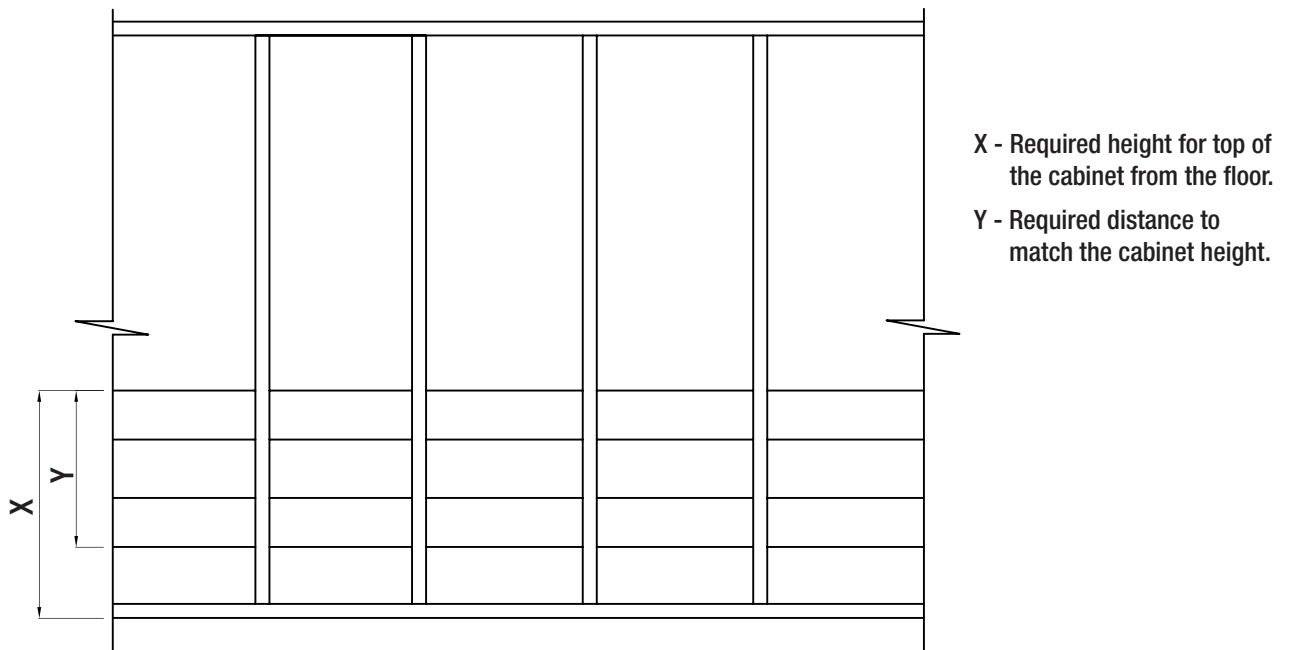

WARNING


Serious or fatal injuries can occur should unit fail.

To prevent failure:

- Do not sit, stand, lean or climb on unit.
- Do not lay or sit beneath unit.
- Do not set heavy objects on the top of the unit, overload unit or overload drawers.
- Do not open more than one drawer at a time.

Pre-assembly (continued)

PACKAGE CONTENTS

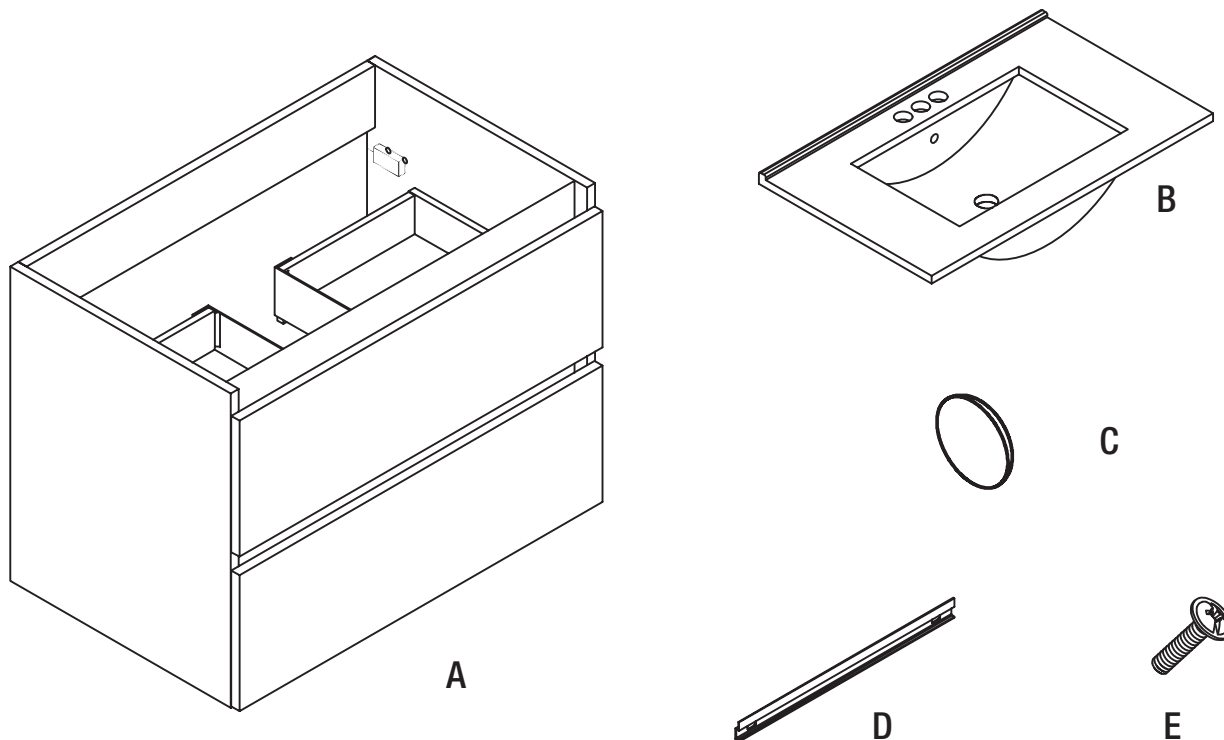

Part	Description	Quantity
A	Vanity base	1
B	Vanity top	1
C	Bumper	4
D	Suspension rail 694mm (27-3/8in)	1
E	Leg screw (required for leg option only)	16


Installation

1 Preparing the wall

- Determine the desired wall location for the cabinet.
- Determine desired height for top of cabinet and mark a horizontal line on the wall using a pencil.
- Use a level to ensure the suspension rail markings will be level before installing to the wall.







CAUTION: Consult an expert for the proper screws / Bolts to use when attaching the various constructions, 2" screws (not included) mentioned here do not match to all wall type. Anchors are not required if brackets are installed in stud.

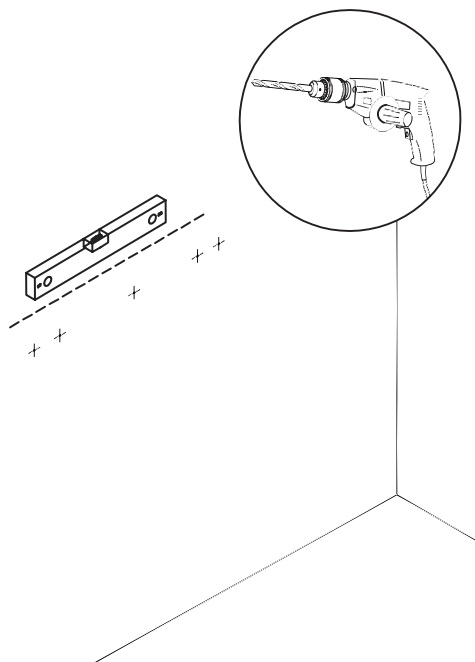

2 Marking the locations

- Remove the drawers from the vanity by pushing the bracket lever underneath the drawer box (refer to below image) and disconnect the drawer box from the slide.
- Measure the desired location of the vanity by placing into the wall and mark mounting hole guidelines on wall. Check alignment of mounting hole guidelines against vanity base to ensure product is level.

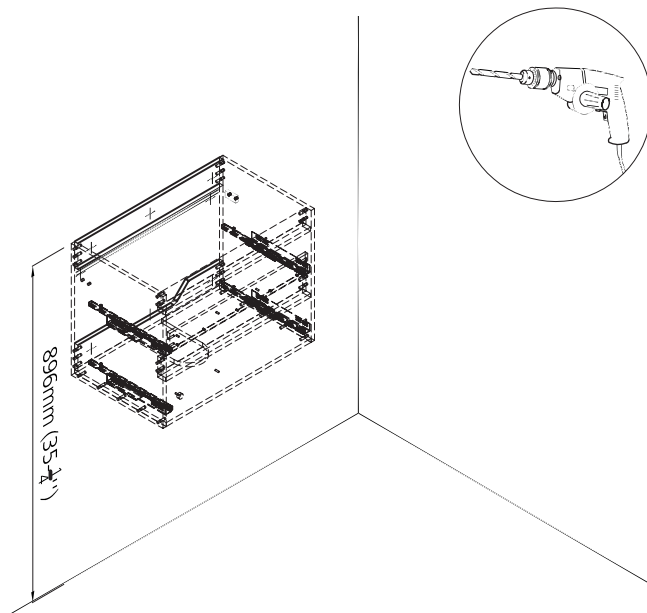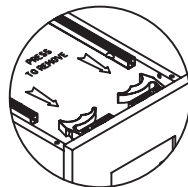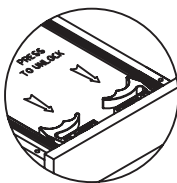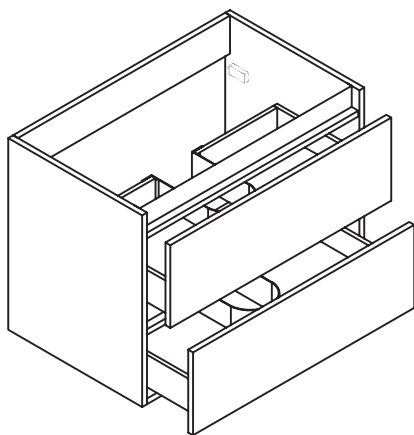


Installation (continued)

3 Installing the suspension rail

- Place the suspension rail (D) against the wall and determine the desired location.
- Insert the #8 x 2 in. screws (not included) through the suspension rail (D) holes and screw them into the wall.




CAUTION: Different wall materials require different types of fixing hardware (not included). Use suitable fixing hardware for the walls in your home. For advice on suitable fixing systems, consult a local specialized retailer.

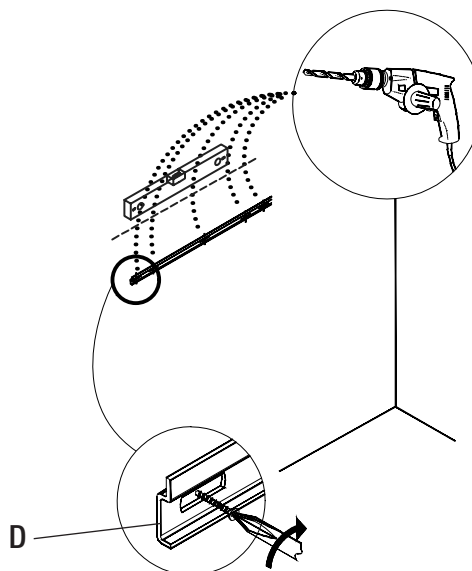

CAUTION: For wall stud installation, insert the screws with washers into the stud locations (not included).


For drywall installation, drill holes at the appropriate locations and insert toggle bolts with washers (not included).

For concrete wall installation, drill 1/4 in. holes at the appropriate locations and insert wall anchors, followed by the screws (not included).

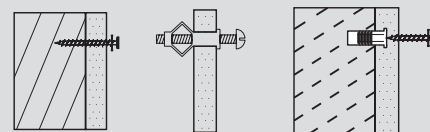

4 Hanging the vanity base


- Lift the vanity (A) above the suspension rail (D) and place it against the wall.
- Slide the vanity (A) to the left or right to the desired location.
- Hung the vanity (A) to the suspension rail (D) properly by using wall suspension bracket.
- See diagram to the right for measurements and hanging details.

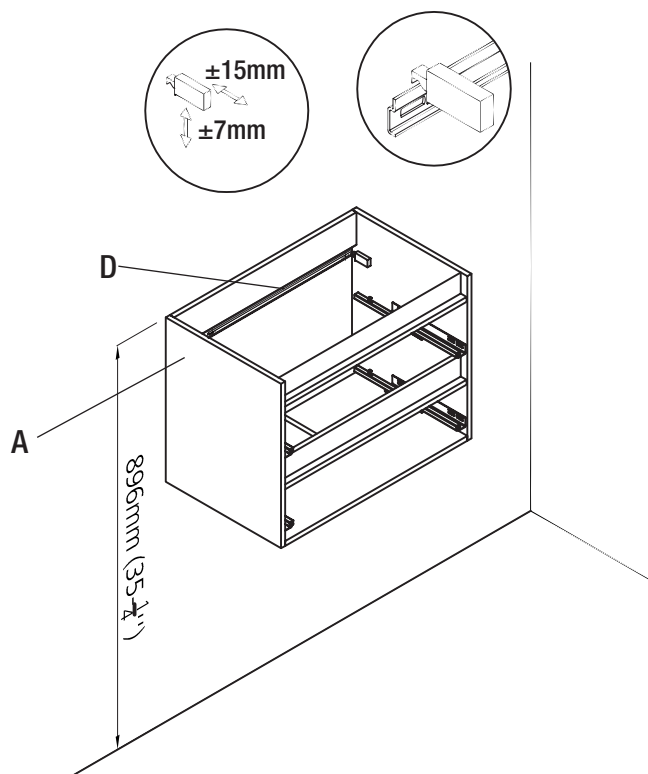

Installation (continued)


5 Securing the vanity to the wall

- Place the vanity (A) in the desired position taking into account the location of your plumbing. Ensure the vanity (A) is level front to back and at both sides.
- Secure the vanity (A) to the wall by inserting #8 x 2 in. screws (not included) through the back rail of the vanity.
- To install the drawers, open each drawer slide and place the drawer box on the slide and push forward to lock with the slide.

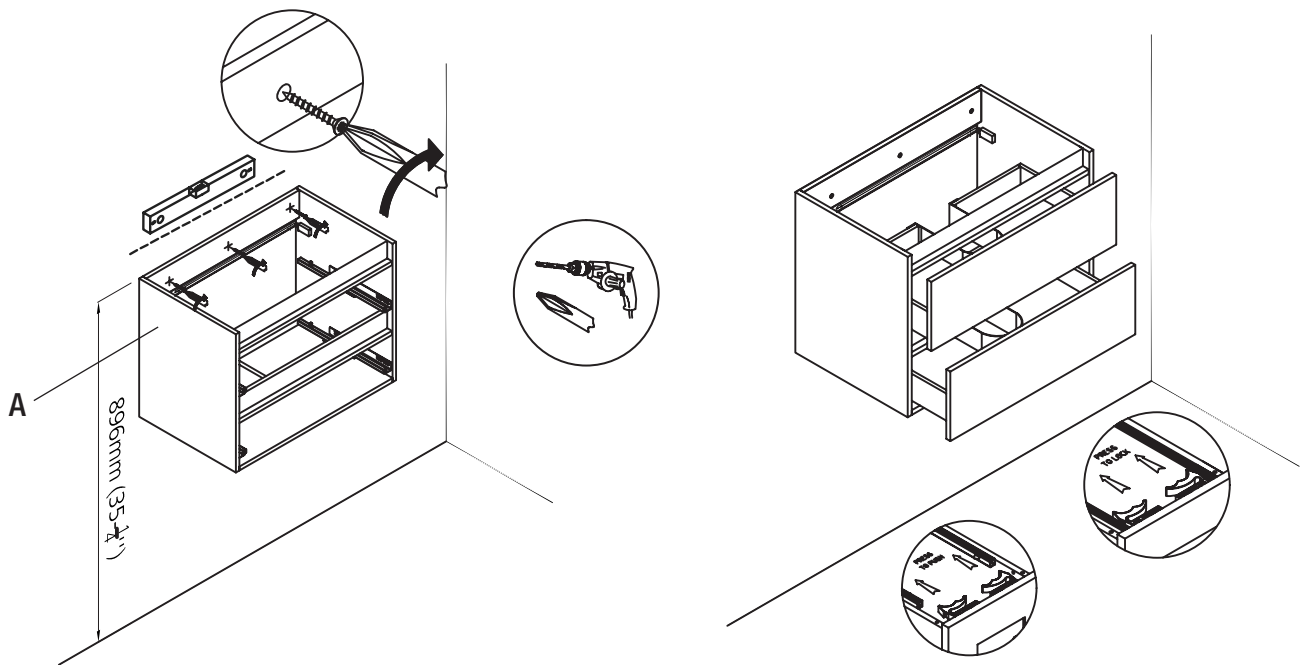

6 Attaching the vanity top

- Place the porcelain top (B) centered on the vanity base (A). For additional stability, clear silicone may be used to secure the porcelain top onto the vanity base.
- Connect the faucet and drain (not included) as per the instruction sheets provided with those items and ensure that there is no leakage.
- Please wipe clean excess silicone squeeze out after the usage.
- After installing the vanity top please adjust the drawer slides if required.

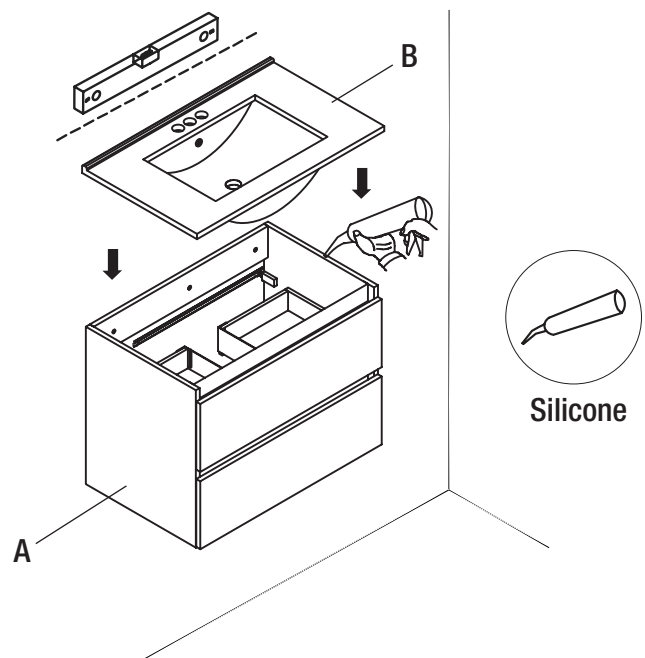

NOTE: For instructions on how to use the provided bumpers (C), see the Troubleshooting section of this document.



Installation – [Floor-standing unit]

1 Attaching the hairpin legs

- Install each hairpin leg matching each corner of the leg into each corner of the vanity. Provide sufficient protection on the floor to protect the vanity from damage.
- Tilt the vanity backwards and position the hairpin legs, aligned over the pre-drilled holes (refer the image). Attach hairpin legs to the vanity using the provided leg screws (E). Evenly position the screws with vanity base pre-drilled holes.
- Ensure all the screws are tightened properly. With assistance, turn the vanity upright to rest on its legs.






NOTE: Crawley hairpin legs not included with this pack. Buy separately.

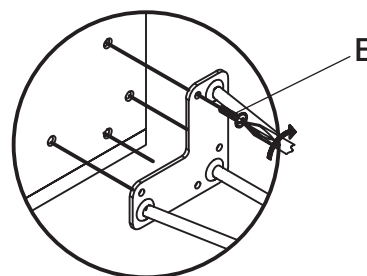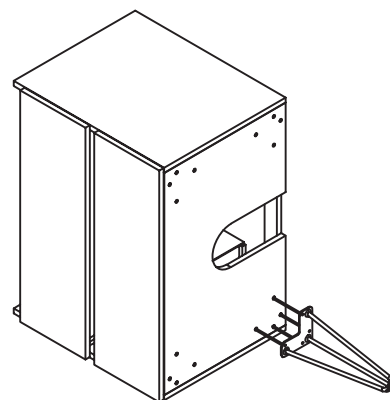

2 Attaching the felt pad

- Place the vanity base on the desired location and mark the felt pad location on the floor. Remove the vanity and stick the hairpin leg felt pad to the floor. Place the vanity on the felt pad.

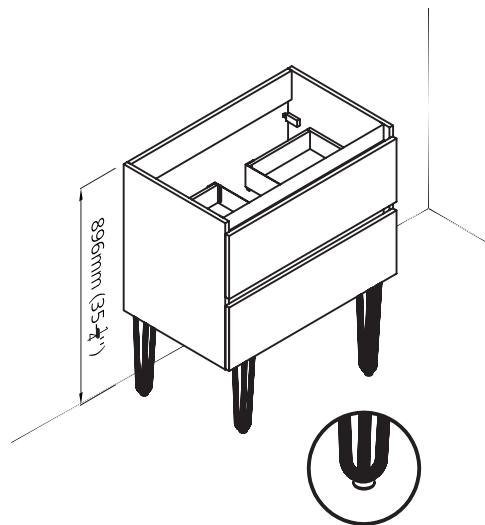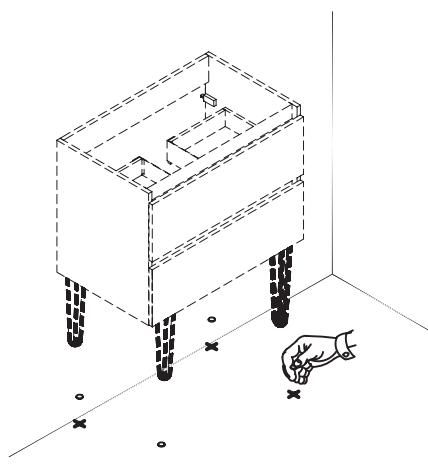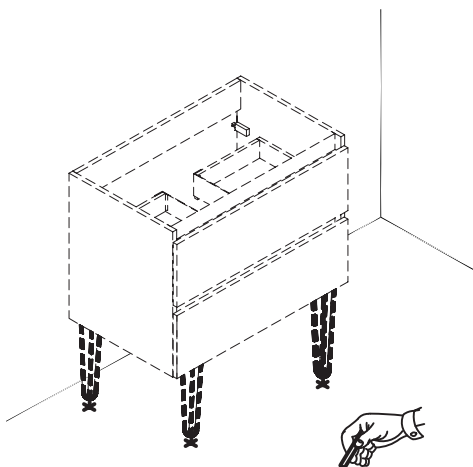

Installation (continued)

3 Securing the vanity to the wall





- Place the vanity (A) in the desired position taking into account the location of your plumbing.
- Ensure the vanity (A) is level front to back and at both sides.
- Secure the vanity (A) to the wall by inserting two #8 x 2 in. screws (not included) through the back rail of the vanity.



CAUTION: For wall stud installation, insert the screws with washers into the stud locations (not included).

For drywall installation, drill holes at the appropriate locations and insert toggle bolts with washers (not included).

For concrete wall installation, drill 1/4 in. holes at the appropriate locations and insert wall anchors, followed by the screws (not included).

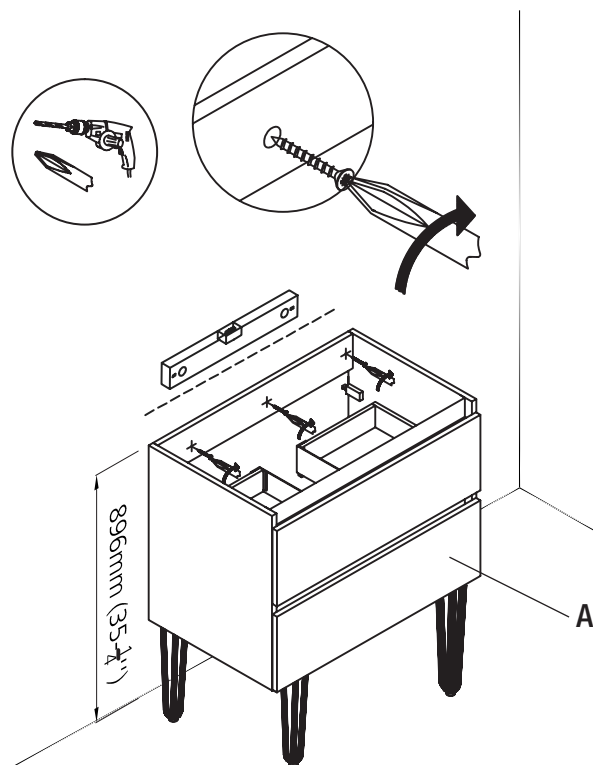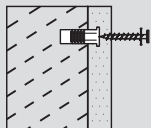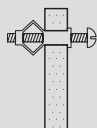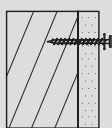


4 Attaching the vanity top


- Place the porcelain top (B) centered on the vanity base (A). For additional stability, clear silicone may be used to secure the porcelain top onto the vanity base.
- Connect the faucet and drain (not included) as per the instruction sheets provided with those items and ensure that there is no leakage.
- Please wipe clean excess silicone squeeze out after the usage.
- After installing the vanity top please adjust the drawer slides if required.



NOTE: For instructions on how to use the provided bumpers (C), see the Troubleshooting section of this document.

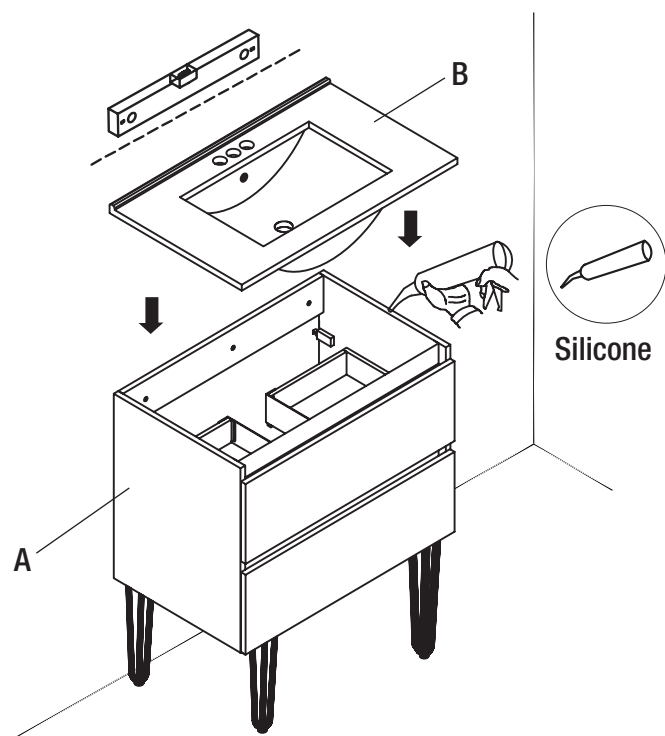


Drawer Adjustment

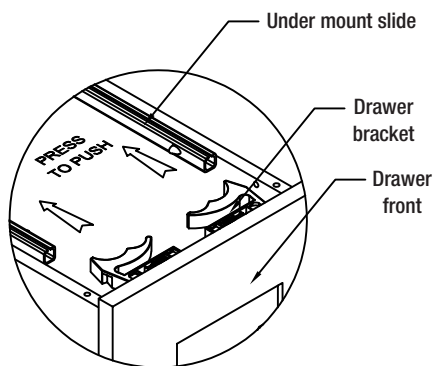


Removing the drawer:

Open the drawer as far as possible. Push the bracket lever underneath the drawer box and disconnect the drawer box from the slide.

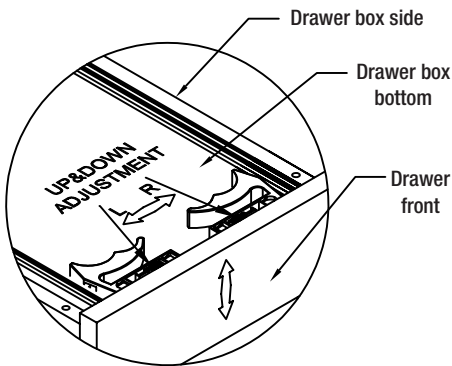

Drawer adjustment:

For drawer alignment move the drawer up and down adjustable to the desired position while moving left and right.

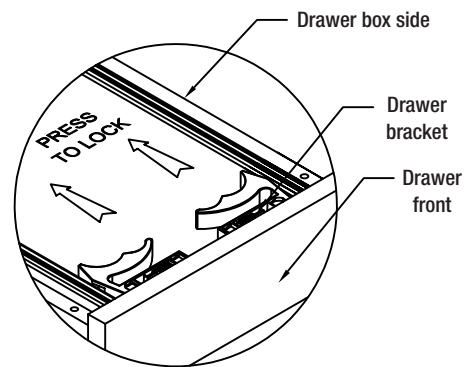

Re-installing the drawer:

To install the drawer, open each drawer slide and place the drawer box on the slide and push forward to lock with the slide.


Maintenance

- To maintain the beauty of the furniture finish, avoid placing the vanity in direct sunlight.
- Avoid exposing the vanity to extreme temperatures by installing away from heat and air vents.

Care and Cleaning

- Dust frequently with a clean, soft and dry cloth.
- Wipe away any water or liquid spills on the vanity base immediately with a clean, soft and dry cloth.
- Clean the vanity top only with non-abrasive cleaners or mild detergents – do not use powder cleansers. For extremely stubborn stains, use a small amount of acetone on a cloth and gently rub out the stain.

Troubleshooting

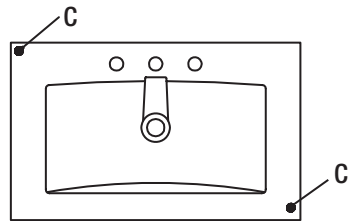Problem	Possible Cause	Corrective Action
Vanity drawers rub against another surface.	Wall is not level.	<input type="checkbox"/> Adjust the drawer slides.
There is an uneven gap between the drawers and cabinet.	Wall is not level.	<input type="checkbox"/> Adjust the drawer slides.
Vanity top wobbles when placed on the vanity base.	<input type="checkbox"/> The vanity base is not installed level and plumb. <input type="checkbox"/> The underside of the vanity top is uneven. This can be a common occurrence in porcelain tops due to the manufacturing process.	<p>1) Ensure the vanity base is level and plumb. It may be necessary to use shims if the base sits uneven (see Planning Assembly section).</p> <p>2a) Identify which corners have the wobble.</p> <p>2b) Carefully remove the vanity top and turn it over.</p> <p>2c) Apply the bumpers (C) adhesive side down on the corners of the vanity top that you identified in Step 2a.</p> <p>2d) Carefully place the top back onto the vanity base and make any necessary adjustments to the bumper placement(s) until the vanity top does not wobble.</p> 



Questions, problems, missing parts?
Before returning to the store, call Glacier Bay Customer Service.
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1- 855- HD GLACIER (1-855-434-5224)

[HOMEDEPOT.COM/GLACIERBAY](https://www.homedepot.com/glacierbay)

Retain this manual for future use.