



# MAKE A DIFFERENCE


## Rear Fender Flares


**BXG.7020**

(INSTALLATION INSTRUCTION)

**ATTENTION** • Please verify all parts are present and read instructions carefully before starting installation.  
• Please feel free to contact your distributor if you have any kind of question about your purchase.

### 1 CONTENTS

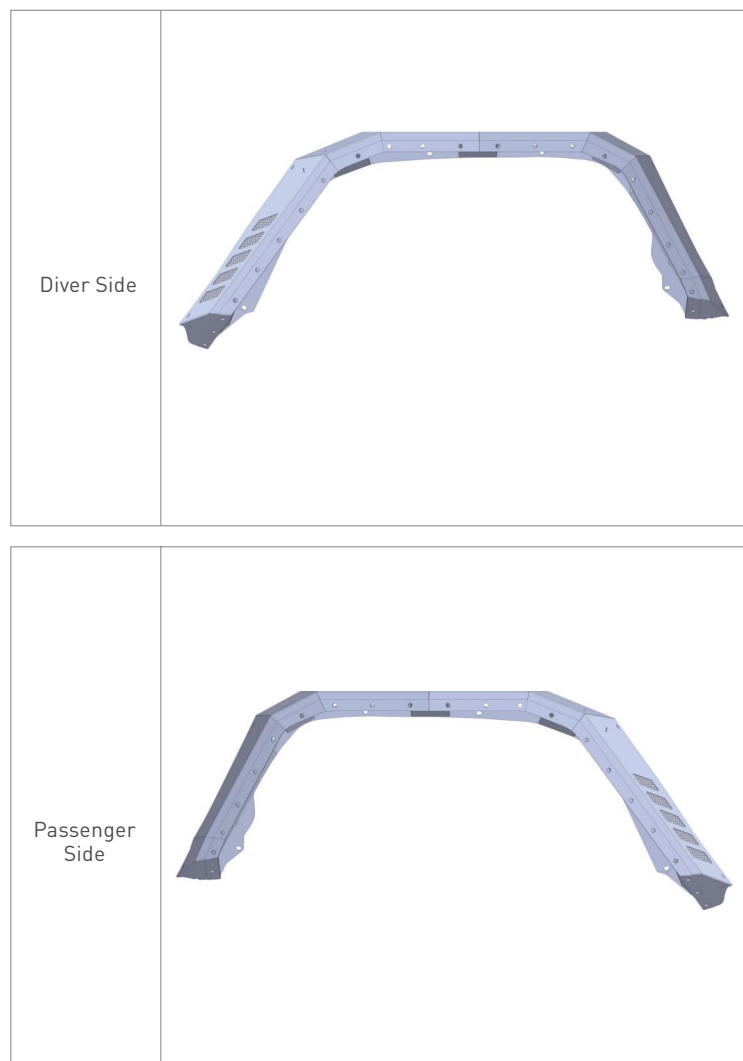

Qty	Part Name	Size(mm)	Picture
10	Hex Bolts	M8*25	
10	Split Lock Washer	D8	
10	Flat Washer	M8*16*1	
10	Flange Hex Lock Nuts	M8	
2	Rubber Strip	2200	

### 2 TOOLS REQUIRED

◆ Drive Ratchet Handle

◆ 13mm Wrench

◆ 13mm Shallow Socket

To view online instruction, please scan the QR code.



## 3 INSTALLATION INSTRUCTION

### Rear Factory Flare Removal

#### Step 1

Remove the bolts located along the interior of the inner fender and the clips located in each corner of the fender.



Remove factory fender flare.

#### Step 2



Remove the clips along the edge of the fender that remained in the vehicle.


#### Step 3



### Driver Side Installation

#### Step 4

Identify the fender flares.

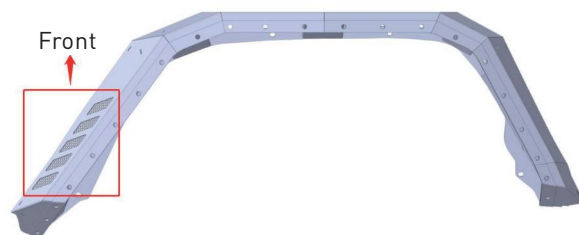

#### Step 5

The Five Installation Holes Identify



#### Step 6

Attach the rubber strip to the fender flare. Align it with the factory installation holes of the vehicle.






**Step 7****Fender Flare Installation**


Middle three holes first. **Do not fully tighten hardware to allow adjustability.**

- (3) M8x25 Hex Bolts
- (3) M8×16×1 Flat Washer
- (3) D8 Split Lock Washer
- (3) M8 Flange Hex Lock Nuts

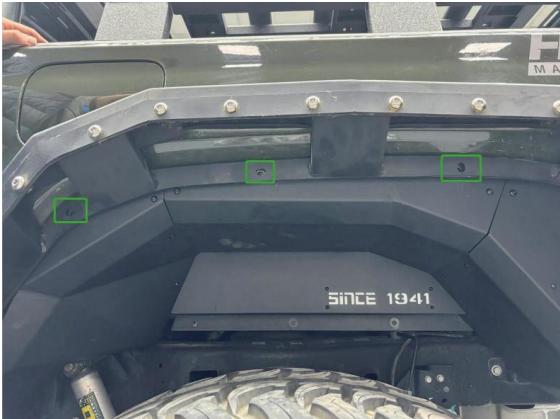**Step 8****Fender Flare Installation**

Then the both side holes. Tighten all hardware.

- (2) M8x25 Hex Bolts
- (2) M8×16×1 Flat Washer
- (2) D8 Split Lock Washer
- (2) M8 Flange Hex Lock Nuts

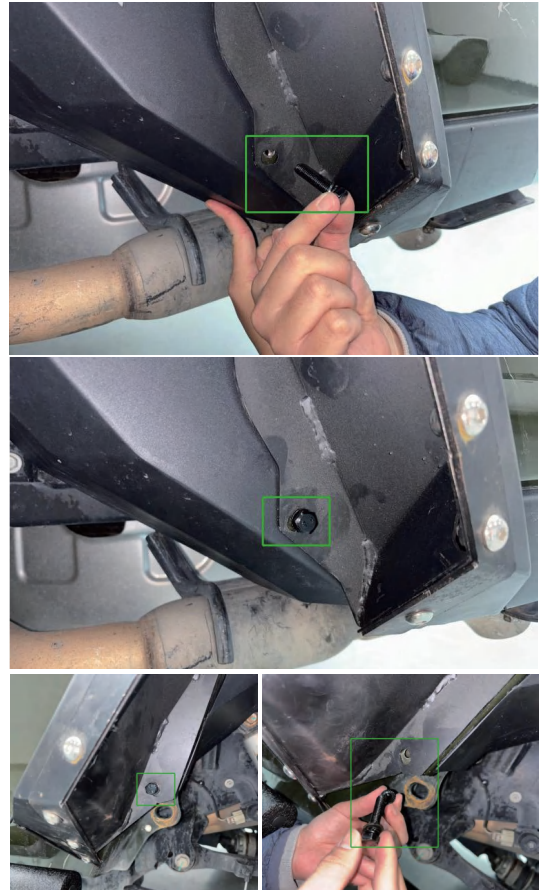**Step 8****Step 9**

Repeat the same installation steps in the passenger side.

**Step 10**

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

