


Eureka!

FOR LIFE OUTDOORS.


Timberline SQ Vestibule Accessory

1. Begin with your tent already set up and staked.

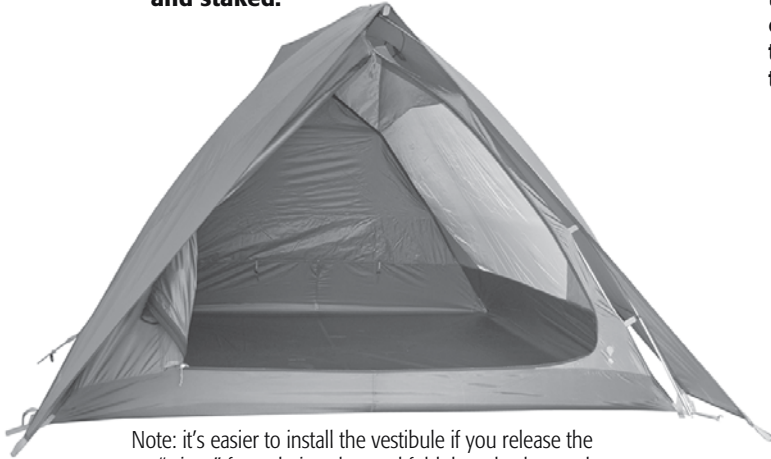

Note: it's easier to install the vestibule if you release the "wings" from their stakes and fold them back over the poles.

2. Push the top web through the center of the shock cord. Wrap it up and over the black hub. Secure with the toggle.

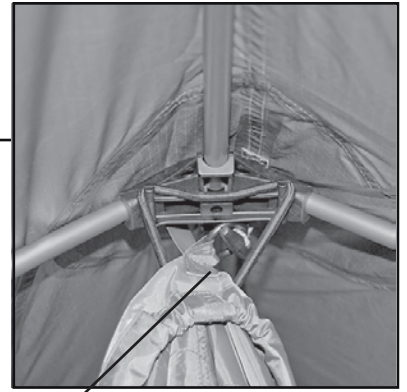


3. Hang the J-Hook onto the web loop near the end of the ridge pole extension.



4. There are a pair of Velcro® tabs on each side of the vestibule. Wrap them around the tent pole.

5. The vestibule and tent webs share the same pole. Lift the pole and fit the vestibule grommet underneath the tent grommet.

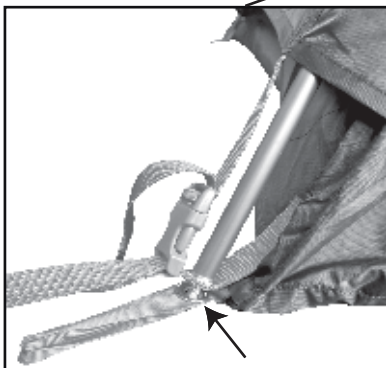

6. Pull out and stake down the two front web loops. Restake the "Wings" and Your Vestibule is Ready!

