




MAKE A DIFFERENCE






Side Guards

BXG.7203-S
(INSTALLATION INSTRUCTION)

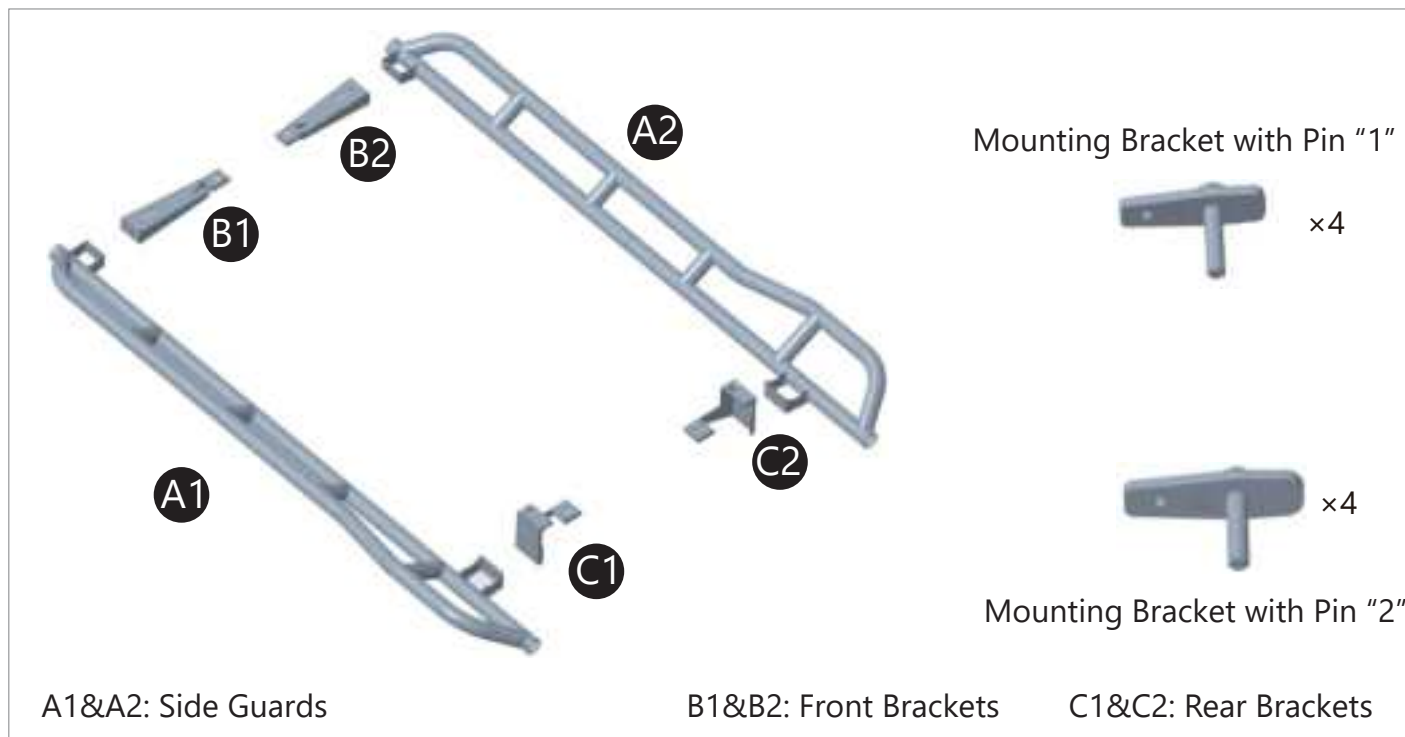ATTENTION • Please verify all parts are present and read instructions carefully before starting installation.
Please feel free to contact your distributor if you have any kind of question about your purchase.

1 CONTENTS



Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
8	Hex Bolt	M8×25		4	Flat Washer	M8×50×2	
16	Split Lock Washer	D8		8	Flange Lock Nut	M8	
16	Flat Washer	M8×20×2					

2 TOOLS REQUIRED

◆ Drive Socket Ratchet Wrench

◆ 13mm Deep Socket

◆ 13mm Wrench

To view online instruction, please scan the QR code.







INSTALLATION INSTRUCTION

Driver Side Installation

Step 1

Remove the factory guards. Find the factory installation holes.

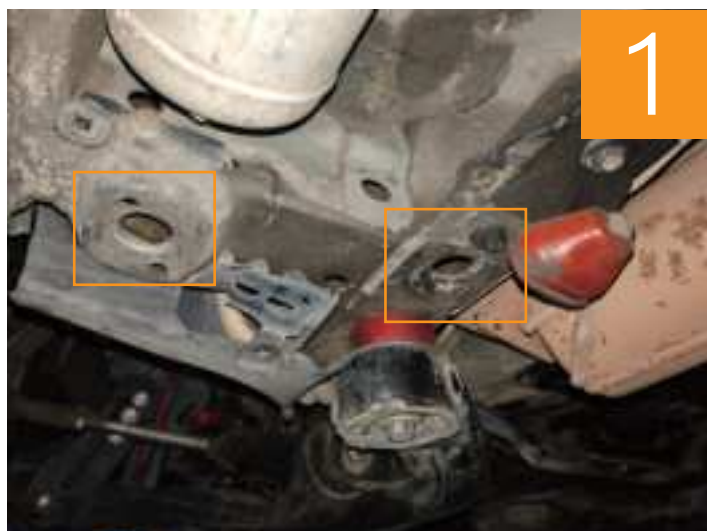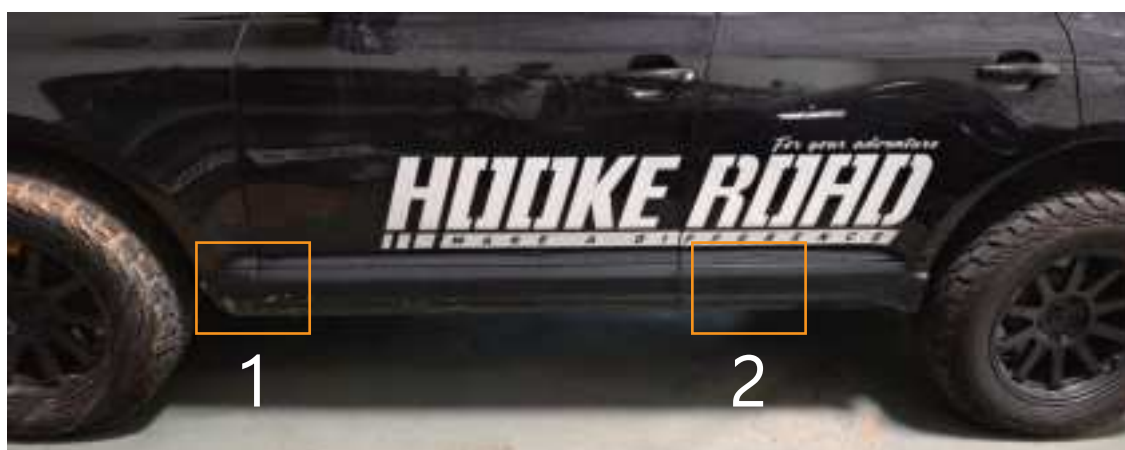


Step 2

Secure the front mounting brackets to the side guard. **Do not fully tighten to allow adjustability.**

•(2) M8×25 Hex Bolts

•(2) D8 Split Lock Washers

•(2) M8×20×2 Flat Washers

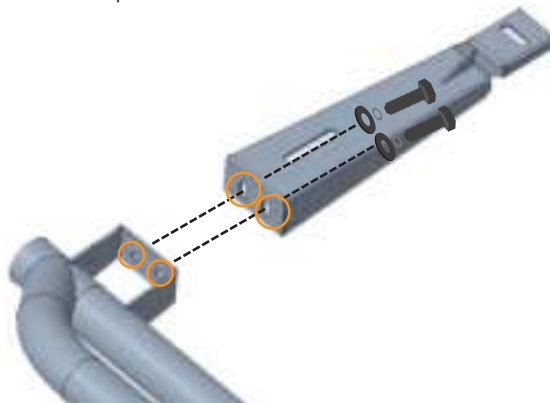


Step 3

Secure the front mounting brackets to the side guard. **Do not fully tighten to allow adjustability.**

•(2) M8×25 Hex Bolts

•(2) D8 Split Lock Washers

•(2) M8×20×2 Flat Washers


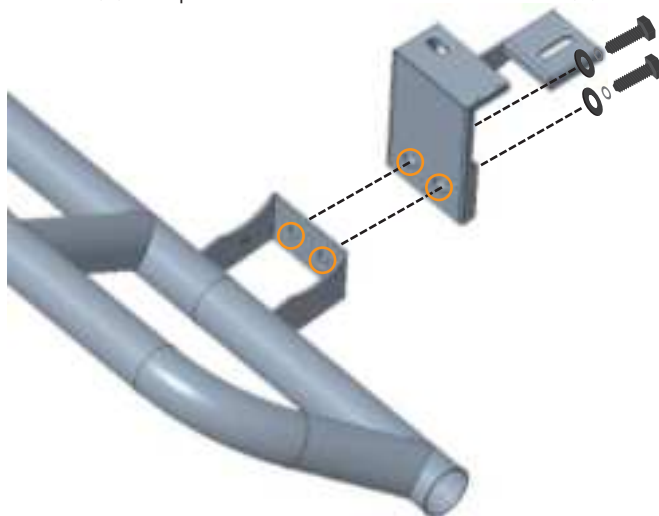


Step 4

Place the pin "1" & "2" into the factory mounting holes.

•(2) Mounting Brackets with Pins "1"

•(2) Mounting Brackets with Pins "2"

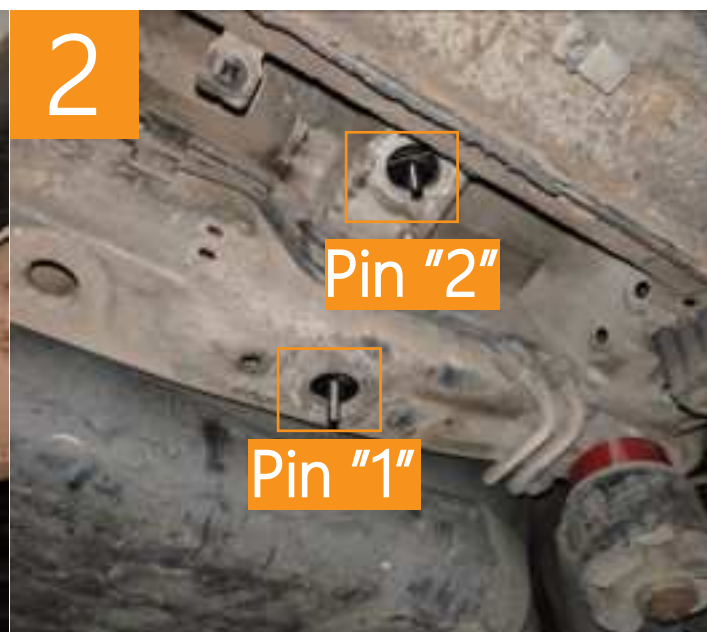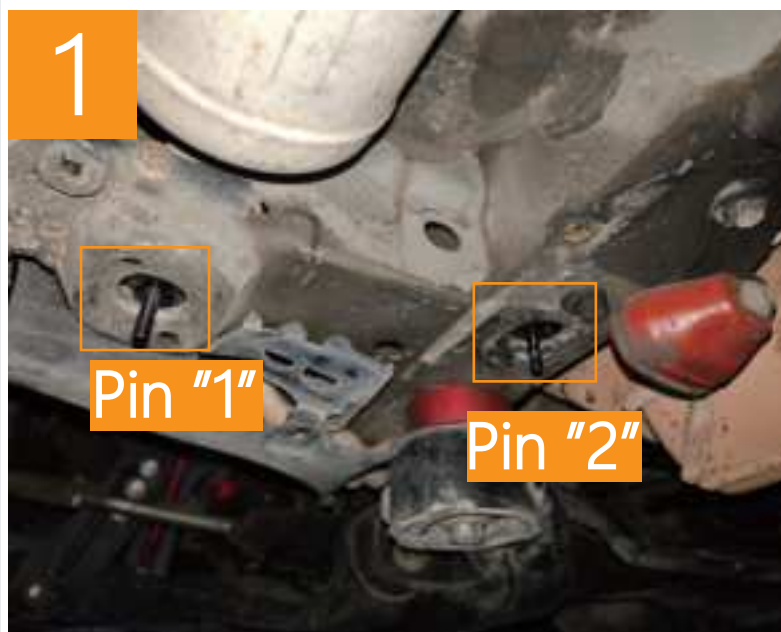

Secure the side guard to your vehicle. **Tighten all bolts.**

•(4) D8 Split Lock Washers

•(4) M8×20×2 Flat Washers

•(4) D8 Flange Lock Nuts



Repeat this step on the passenger side of your vehicle.

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

