Steering wheel control interface installation kit for:

VOLKSWAGEN / SEAT / SKODA

Model: VOLKSWAGEN:
- Caddy, Golf 5 (Type 1K), Jetta (Type 1K5), Passat (Type C), Polo (9N3), Touran 2005 >
- Eos, Golf Plus, 2006 >
- Tiguan 2007 >
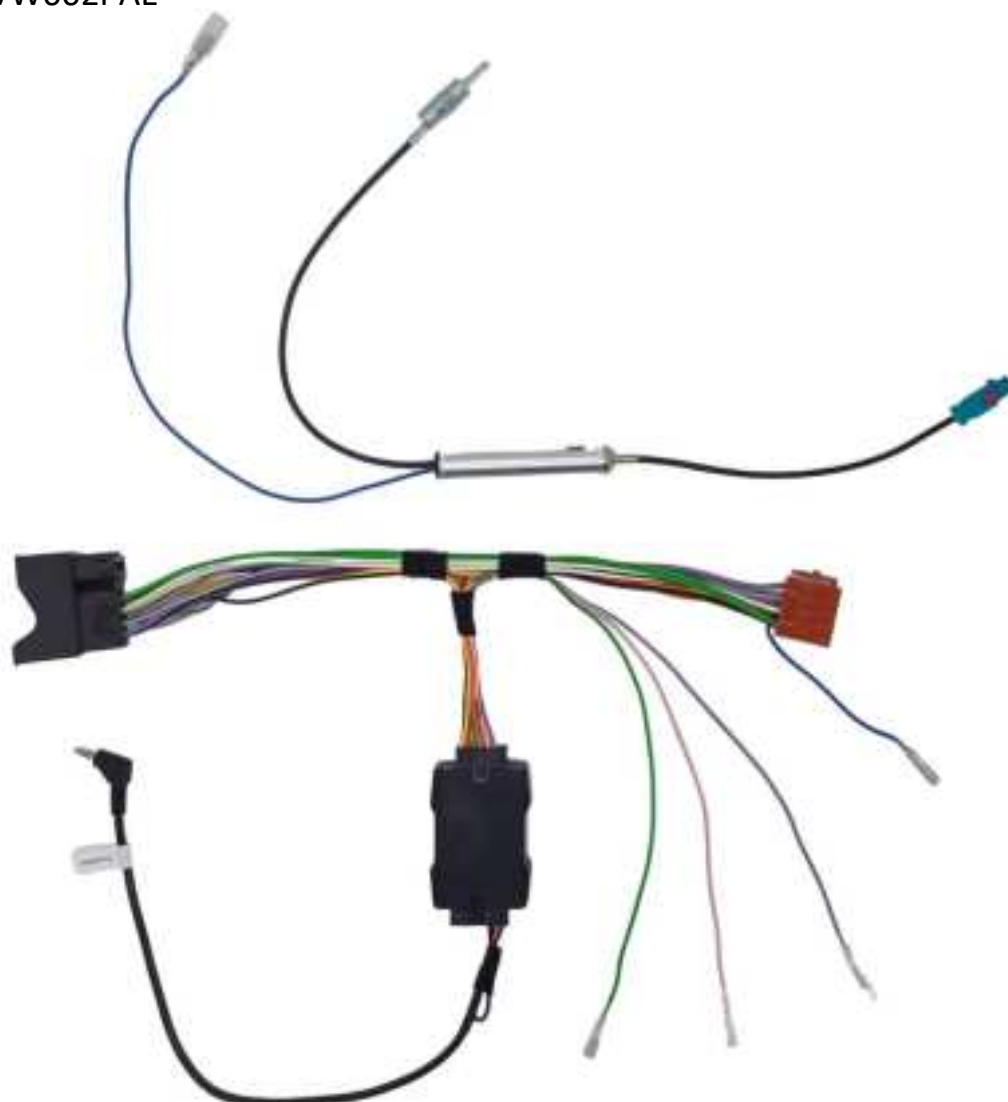- Golf 6, Passat CC, Scirocco 3 2008 >
- Polo 2009 >

SEAT:
- Ibizia 2008 >
- Altea, Altea XL, Leon, Toledo 2009>

SKODA:
- Superb (Type 3T) 2008>
- Octavia 2009>

Kit content: Antenna adapter, SWC CANBUS interface, Wiring harness
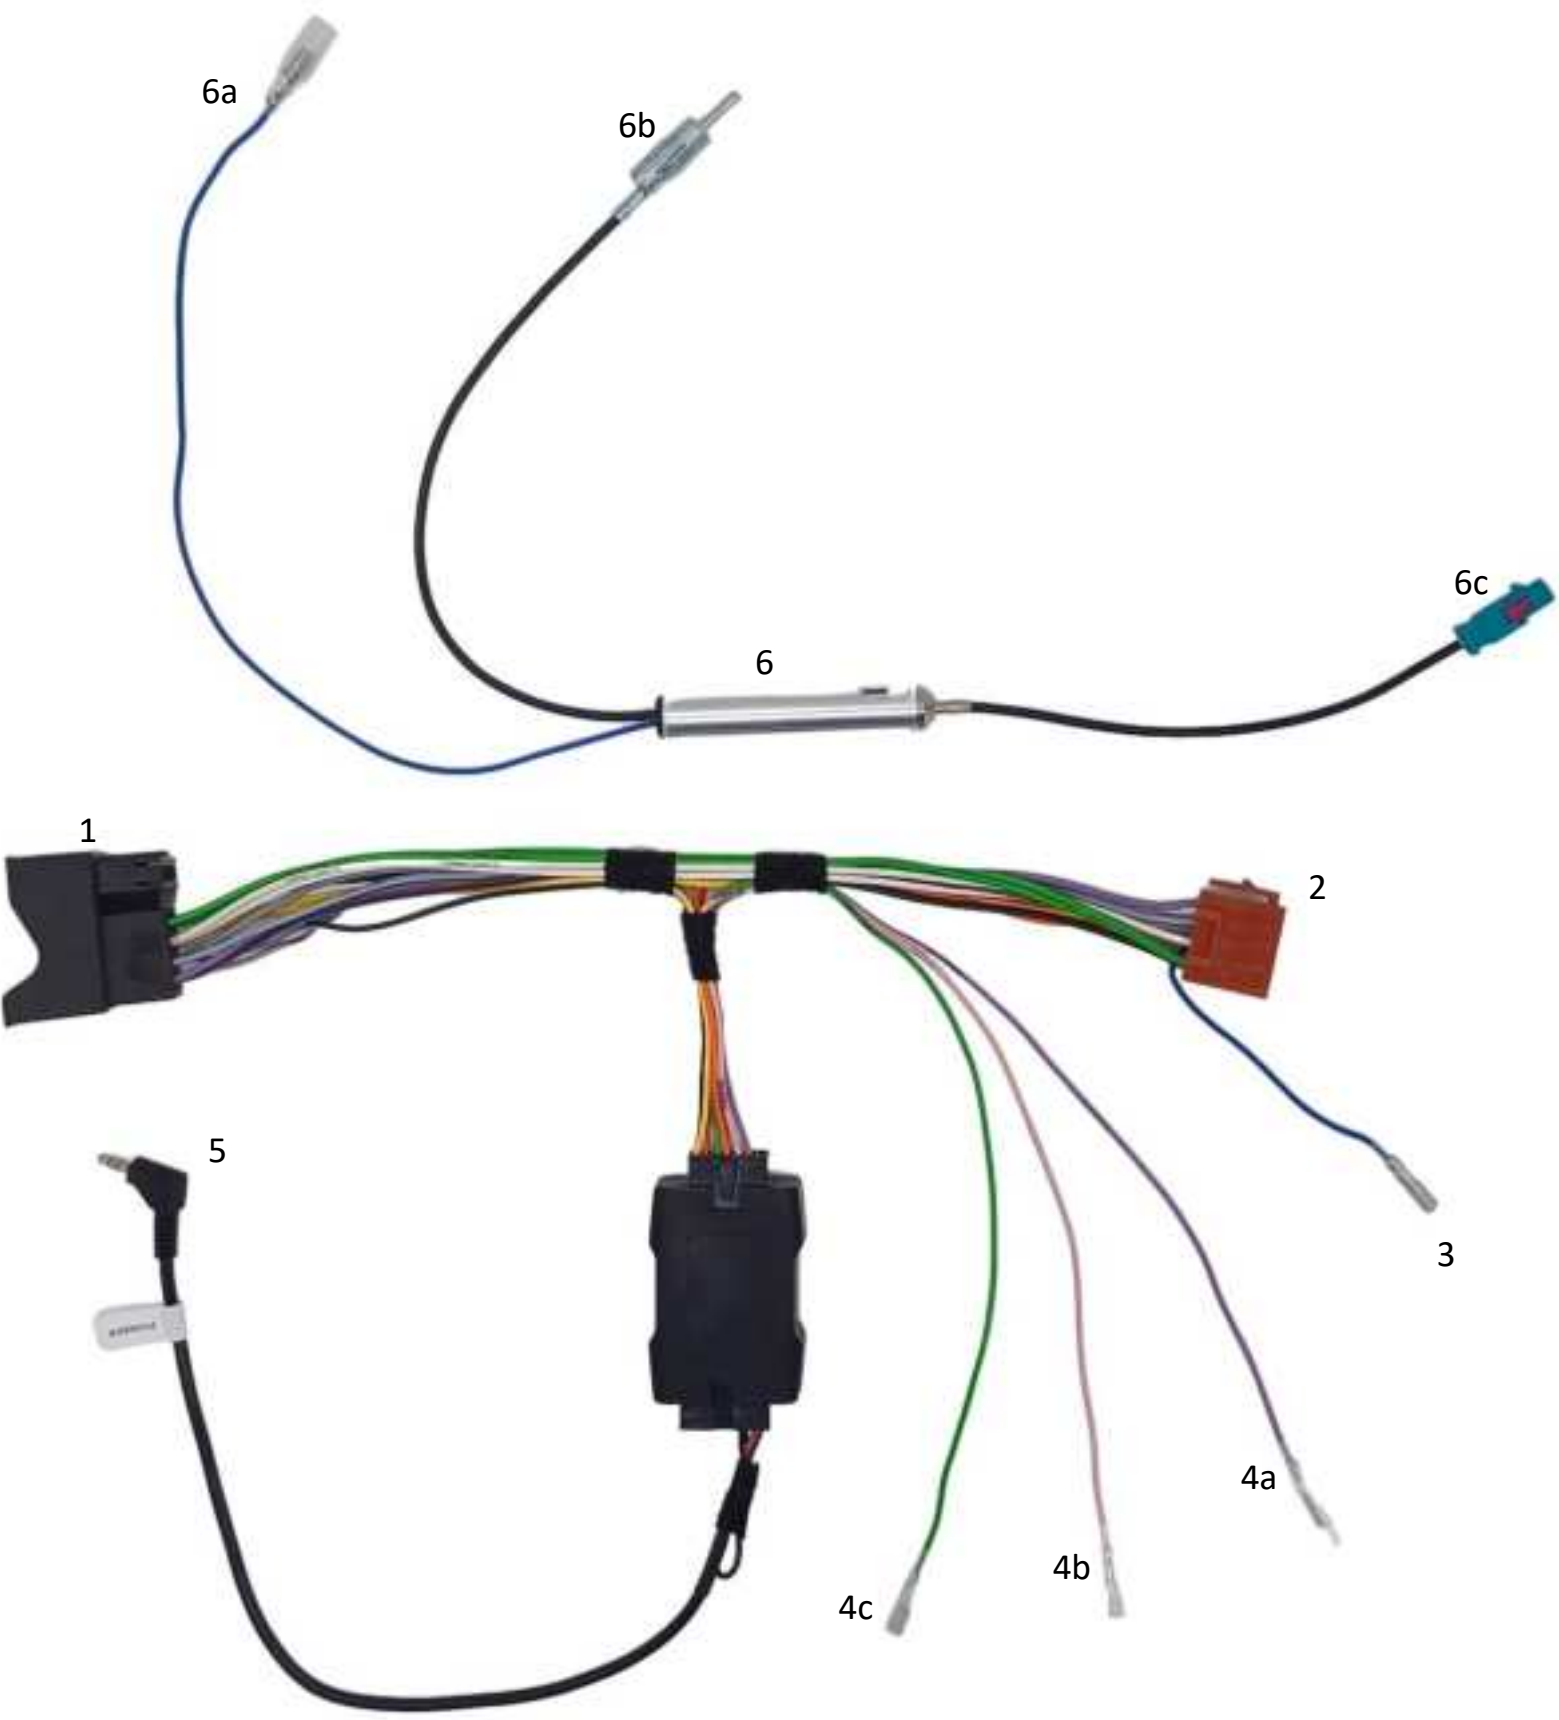
Customer code: CTSVW002PAE

INSTALLATION MANUAL

All installation work must be performed by a qualified professional installer only. The manufacturer / dealer is not liable for any kind of incidental or indirect damages.

WIRING:

6a

6b

6c

6

1

2

5

3

4a

4b

4c

ATTENTION!

In order to prevent ESD damage, the WHEEL REMOTE JACK must be connected before plugging in the connectors on car side.

1- To CAR CONNECTOR

2- To ISO connectors (Black and red housing)

3- To Remote out

4- service provided:
    4a - Violet / White – Reverse
    4b - Pink – Speed pulse
    4c - Green – Park brake

5- SWC - To WIRED REMOTE SOCKET
   (NOTE: do not connect to microphone socket)

6- AERIAL ADAPTER DOUBLE OEM ANTENNA BULK:
   6a- MALE REMOTE OUT - To OUT ANTENNA
   6b- JACK DIN - To RADIO ANTENNA CONNECTOR
   6c- To CAR ANTENNA CONNECTOR

ATTENTION!

Connect "Remote out" (wire n° 3) to "Male remote out - To out antenna" (wire n° 6a) if antenna power is required.
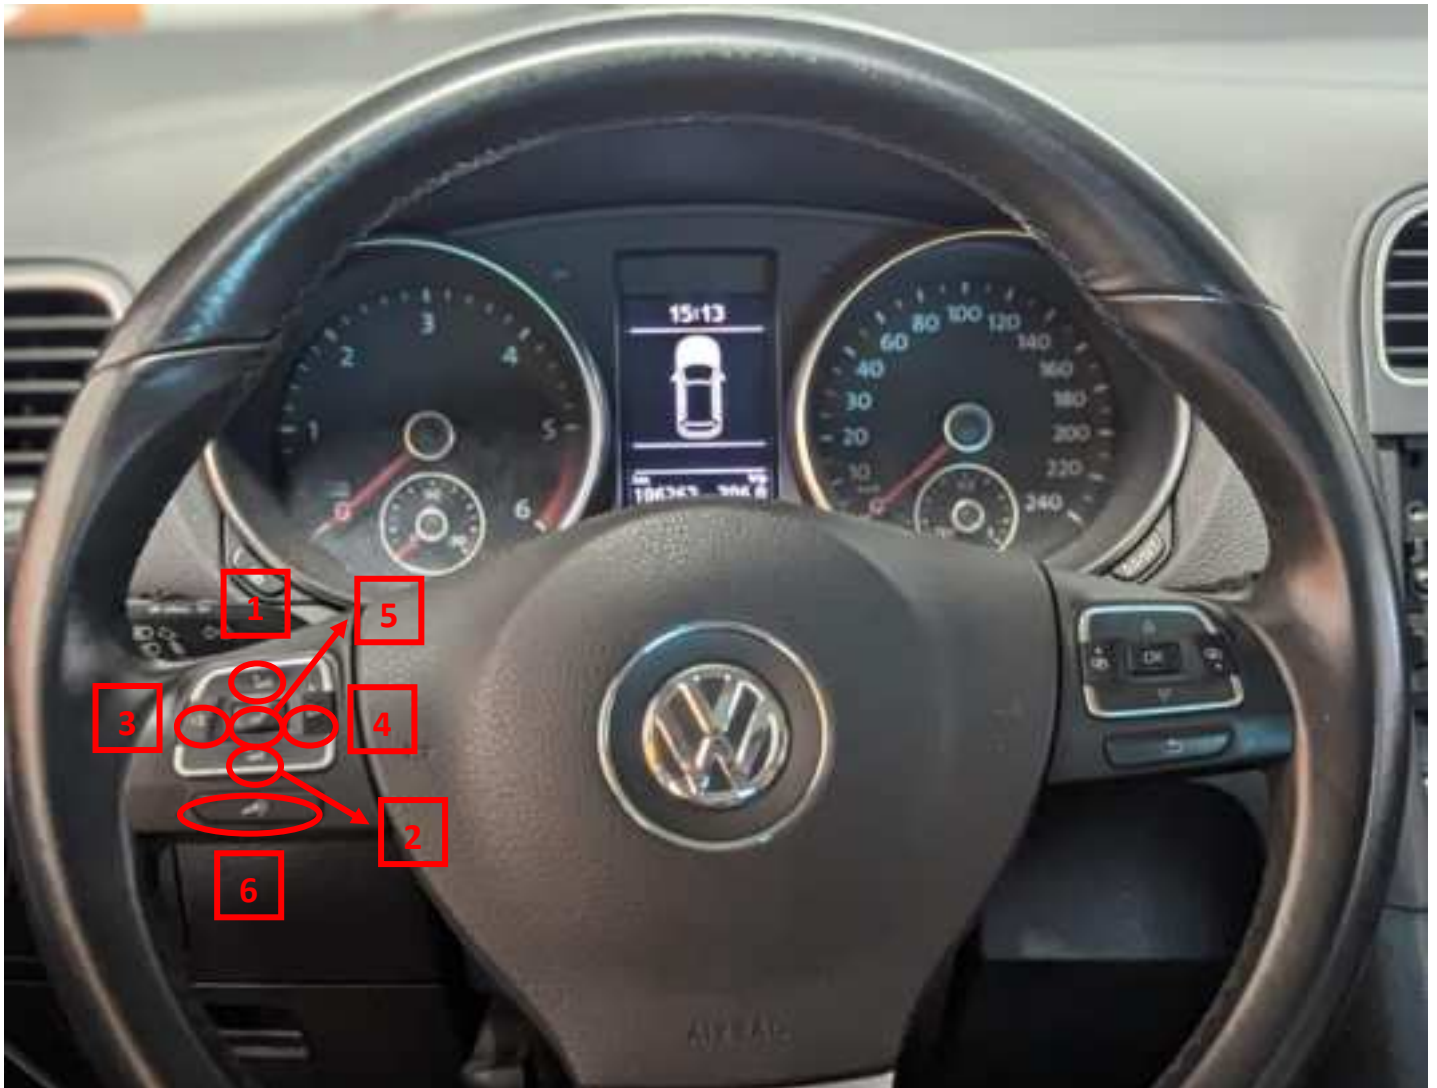
V battery	
Min.	Max.
9 Vdc	16 Vdc

Output voltage
V battery – 0.2 V at 0.5 A
V battery – 1.0 V at 2.0 A

CONFIGURATION:

- Steering button configuration:

An example of a possible steering button configuration:

The steering wheel buttons perform the following functions
(if supported by the radio):

1- Volume +

2- Volume -

3- Seek +

4- Seek -

5- Phone

6- Mute / Voice