

PAPER:

80gsm
Bright white uncoated paper


PRINT COLOURS:

BLACK

C:0 M:0 Y:0 K:100

PRINT FINISH:

Double sided
Folded in the centre

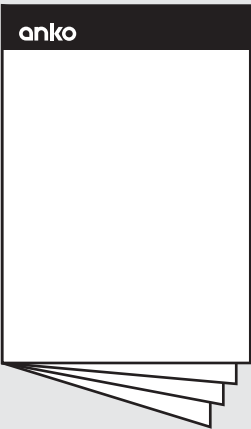

5

S=5mm
B

Use a hex wrench to adjust the height tension of the gas spring arm, to keep different weight of monitors still in any position.

6

S=5mm
B
D

Insert cables into cable covers. Leave enough slack of cables at arm joints for full adjustment.

anko

Gas Lift Monitor Arm

Installation Manual



15° ~ 21°

2~4.5kg

75x75, 100x100

-90°/45°


180°

360°

TOOLS REQUIRED THAT ARE NOT INCLUDED



PARTS INCLUDED

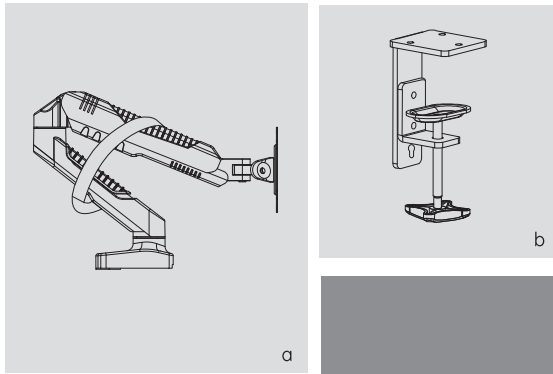

A		M4x12 (x4)		M4x30 (x4)
		12x5.8x16 (x4)		
B		S=4mm (x1)		S=5mm (x1)
				M6x12 (x3)
C		(x1)		(x1)
D		(x1)		

WARNING

⚠ Prior to the installation of this product, the installation instructions must be read and completely understood. Failure to do so may result in personal injury, property damage or voiding of factory warranty.

⚠ Do not install on a structure that is prone to vibration, after movement, uneven or chance of impact. Reinforce the structure as required before installation.

⚠ The desk clamp can support a maximum thickness of 9 cm. Check the desk edge before installation.

⚠ Pay attention to the weight capacity of the mount. Exceeding the limitation can result in disfunction or even serious personal injury and property damage.

⚠ Never operate the mount if parts are missing or damaged. Contact your local service center for warranty service.

⚠ Do not push, pull fiercely. Do not pull the clamp oppositely from the desk. Never shake the base.Ensure the unit is used only on a flat surface. Do not use this unit unless all bolts and screws are firmly secured.Check and tighten all parts regularly. Not a toy, not for children to play with.

PRODUCT DIMENSIONS

— 01 —

OR 4

M4x30
12x5.8x16
A

Desk Clamp installation

OR 2

M6x12
B
S=4mm
B
C

Attach the desk clamp to the aluminum base.

3

S=4mm
B

Tighten clamp using clamp screw until mount is securely fastened to desk. Ensure the desk area which is held by clamp is even and flat.

1

Remove the cable tie and take care to allow the rebound slowly. Beware of sudden spring-back of the arm.

Grommet installation

2

M6x12
B
S=4mm
B
C

Loosen the two screws on the base, pass it through a hole in the desk or clamp and tighten to flat table edge, screw in the two screws that you have just loosened.