

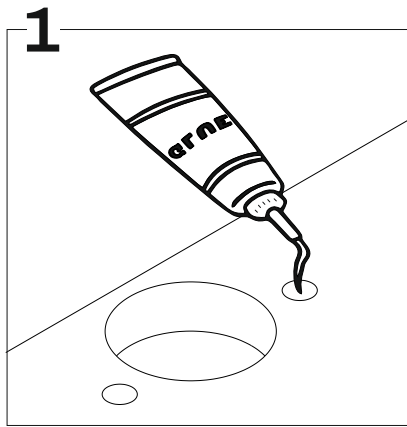


# Special hinge


## Assembly Instruction

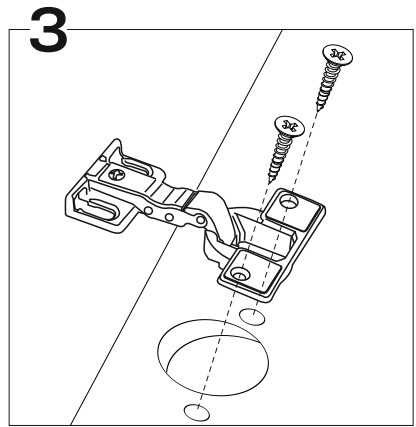


Add Wood Glue

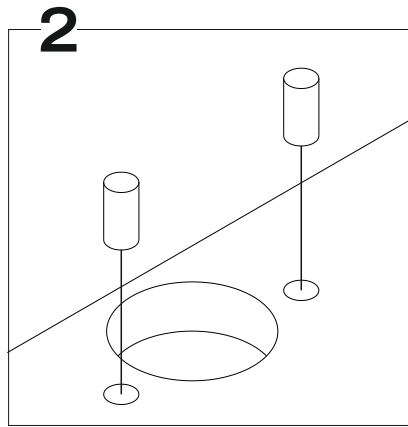

1. Add 5mm dowel
2. Add 30 minutes dry time
3. Allow the glue to dry for about 30 minutes.
4. During this time, the glue will bond firmly with the dowels and the wood, ensuring that the hinges sit stably later.

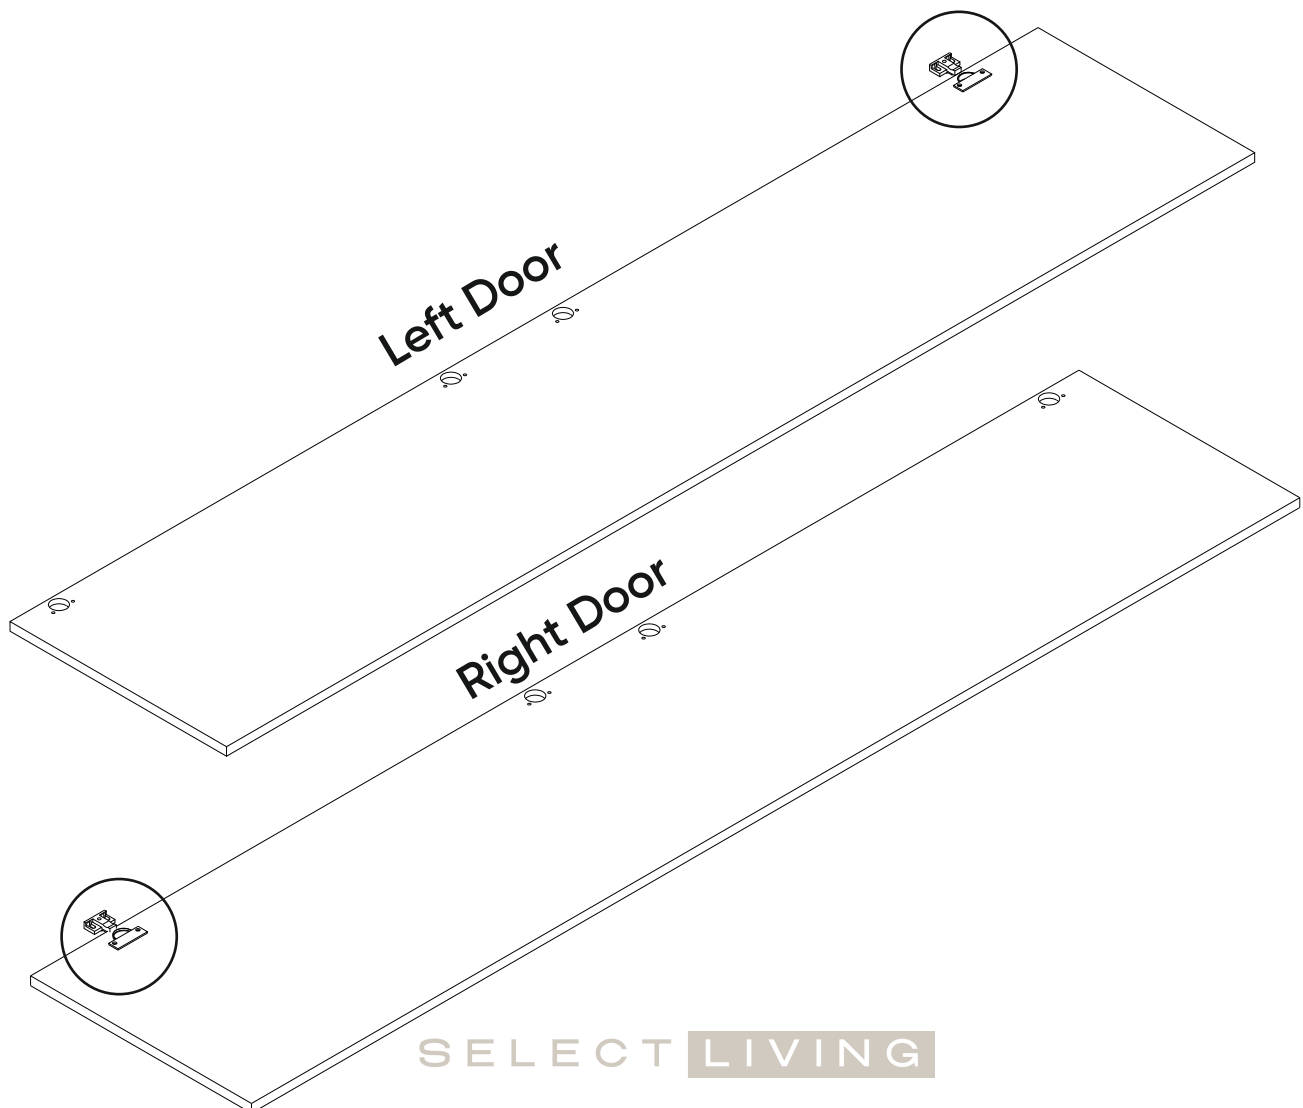

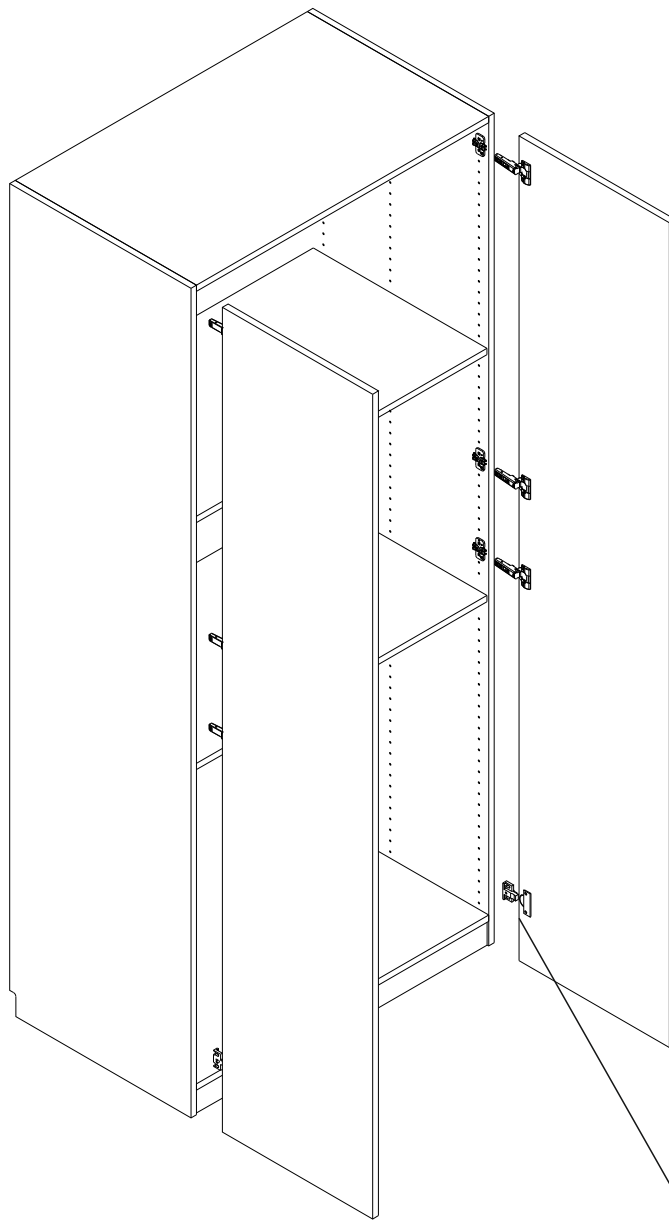

**x2** — Special Hinge

