

HELIAX® SureGuard V2.0 Weatherproofing System for 1/2" SureFlex® Bird-Proofing Jumpers

For 4.3-10 Male Connectors, Connectors to Female Device Ports U.S. Patent 9,216,530 and other patents pending

SureGuard Version 2.0 Weatherproofing boots are designed for installation on smooth cylindrical surfaces. Do not install boot on female device port machined flats or other irregular surfaces. Installation on such surfaces may compromise sealing effectiveness.

Bulletin 7837732 Revision B Page 1 of 2


CommScope Infrastructure Academy offers installation training.

Materials


4.3-10 Boot
For E4415


4.3-10
Cap

Tools


Torque Wrench

CABLE SIZE	CABLE TYPE	INTERFACE TYPE	DEVICE PORT DIAMETER
1/2 in	FSJ4	4.3-10	17.50 - 24.50 mm (0.689 - 0.965 in) (Just for Ericsson RRU 4415)

TOOL PART NUMBER	DESCRIPTION
TW-4310	Torque wrench for coupling torque of 4.3-10 connectors, 22 mm opening

Installation temperature range

-40 °C to +65 °C
(-40 °F to +149 °F)



Scan for Installation video's

- 1

Torque the 4.3-10 connector using the appropriate wrench.


- 2

Push from the back of the boot up towards the RRU connector from one side of the boot. Opposite side is where the power and FO cables are located.


- 3

Push forward and backward the boot several times to ensure it has past over the RRU connector neck.


- 4

Twist and push up the swollen part of the boot several times until the boot stretches to cover the female neck.


- 5

Keep twisting and pushing up until the boot is fully extended to reach the connector base of the RRU and the connector is covered 360degrees uniformly.



HELIAX® SureGuard V2.0 Weatherproofing System for 1/2" SureFlex® Bird-Proofing Jumpers

For 4.3-10 Male Connectors Connectors to Female Device Ports U.S. Patent 9,216,530 and other patents pending

Bulletin 7837732 Revision B Page 2 of 2

CommScope Infrastructure Academy offers installation training.

- 6** Push the gasket through the cable and stopped by boot end face as shown.



- 7** Push the conduit and stopped by gasket and ensure conduit is fully cover the gasket.



- 8** Push cap to cover the boot in and keep the cap as line as boot.




- 9** Screwed cable gland nut by hand as shown.



- 10** Completed.



- 11** Do not hold the connector and bend the cable directly behind it, start bend 30mm min away from the cap end as picture shown.

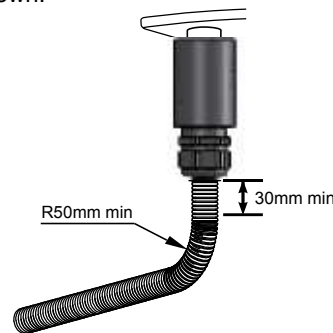

REWORK:

Pull back gasket along with conduit, then pull back sureguard V2.0

CommScope

1100 CommScope Place SE P.O. Box 339, Hickory, NC 28603-0339
(828) 324-2200 (800) 982-1708
www.commscope.com

Technical Support

+1 888 297 6433, Option 3 (Toll Free US and Canada)
+1 828 323 4220, Option 3 (local)
<https://www.commscope.com/wisupport> (open a ticket)

Notice: CommScope disclaims any liability or responsibility for the results of improper or unsafe installation, inspection, maintenance, or removal practices.

Aviso: CommScope no acepta ninguna obligación ni responsabilidad como resultado de prácticas incorrectas o peligrosas de instalación, inspección, mantenimiento o retiro.

Avis : CommScope décline toute responsabilité pour les conséquences de procédures d'installation, d'inspection, d'entretien ou de retrait incorrectes ou dangereuses.

Hinweis: CommScope lehnt jede Haftung oder Verantwortung für Schäden ab, die aufgrund unsachgemäßer Installation, Überprüfung, Wartung oder Demontage auftreten.

Atenção: A CommScope abdica do direito de toda responsabilidade pelos resultados de práticas inadequadas e sem segurança de instalação, inspeção, manutenção ou remoção.

Avvertenza: CommScope declina eventuali responsabilità derivanti dall'esecuzione di procedure di installazione, ispezione, manutenzione e smontaggio improprie o poco sicure.

注意: CommScope 公司申明對於不恰當或不安全的安裝、檢驗、維修或拆卸操作所導致的後果不負責任 何義務和責任