




Your Customized Instructions for Easy Installation & Assembly

We know you will be amazed with the ease of installing elfa. If at any time during installation you have questions, call the store listed on your receipt or 1-800-733-3532. You may also visit [containerstore.com/installation](https://www.containerstore.com/installation) to view video instruction.

Tools needed for the space:




Power drill



Drill bit set




#2 Phillips head bit for power drill



#2 Phillips head screwdriver




Hammer

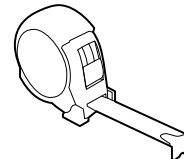


Tape measure



elfa 2' spacer

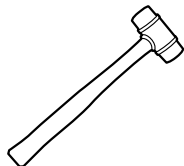


Plastic mallet

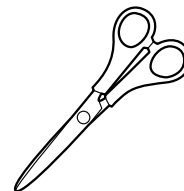


Scissors


Products needed for the space:

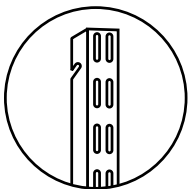


(Qty 12) 84" Hang Standard Platinum

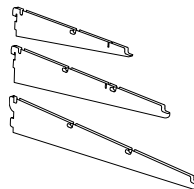


(Qty 40) 16" Ventilated/Decor Shelf Bracket Platinum




(Qty 24) 16" x 18" Ventilated Shelf Platinum



(Qty 6) 18" Closet Rod Brushed Silver, Cut to 18"



(Qty 8) OLD Top Track Cover Platinum Pkg/2




(Qty 16) 16" Left Bracket Cover Platinum

(Qty 16) 16" Right Bracket Cover Platinum

These instructions are only for the items you purchased.

1. Hanging Standard and Brackets

Tools needed for this section:

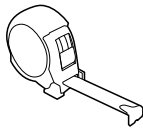


Tape measure




elfa 2' spacer

Products needed for this section:

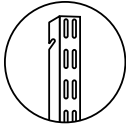


(Qty 12) 84" Hang Standard Platinum

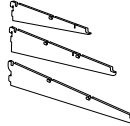

(Qty 40) 16" Ventilated/Decor Shelf Bracket Platinum


Install the Hanging Standards and Shelf Brackets

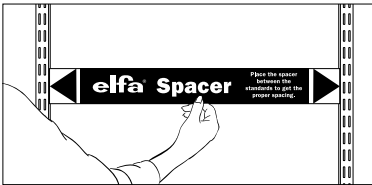


- Refer to your custom elfa design for placement of the Hanging Standards. If your design calls for 2' spacing between Hanging Standards, use the elfa Spacer provided with your order to position your Hanging Standards.

2. Ventilated Shelves

Products needed for this section:



(Qty 24) 16" x 18" Ventilated Shelf Platinum

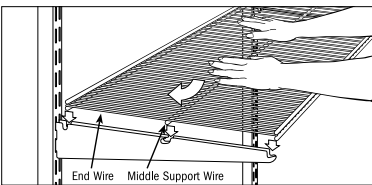

- Install the Ventilated Shelves from shortest to longest, regardless of their location in the design.
- Ventilated Shelves have a top and a bottom. The middle support wire(s) is connected to the bottom of the Shelf.
- Place the shelf wires over the Bracket notches.
- Install the Shelf with end wires inside the Brackets.
- Lock the Shelf into place by pressing down on the middle of the Shelf and pushing toward the wall.




To REPOSITION a Ventilated Shelf after it's been attached to the Brackets: Hold by the Brackets, and lift the front of the Shelf toward the ceiling and outward to release the entire unit from the Standards.



To REMOVE a Ventilated Shelf from a Bracket while on the Standards, hold the Standard steady with one hand. Place the other hand at the back of the Shelf. Pull up and forward to release.

3. Closet Rods

Tools needed for this section:

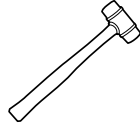


Plastic mallet

Products needed for this section:



(Qty 21) Closet Rod Holder
Platinum




(Qty 6) 18" Closet Rod Brushed
Silver, Cut to 18"
(Qty 6) 18" Closet Rod Brushed
Silver




(Qty 9) Closet Rod End Caps Silver
Pkg/2


Install the Closet Rod Holders and Closet Rods

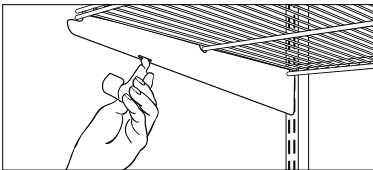

- Insert the Closet Rod Holder into the slot in the bottom of the each Ventilated Shelf Bracket based upon the placement of your closet rods in your custom elfa design.

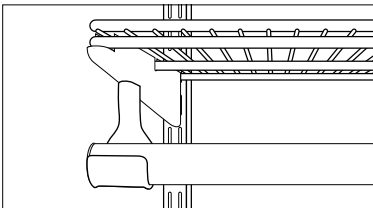

- Tap the End Caps into both ends of the Closet Rod.
- Snap the Closet Rod into the Closet Rod Holders.

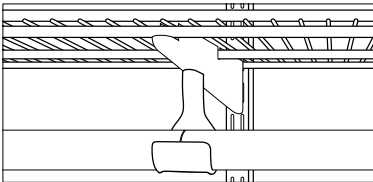

Install Closet Rods that share a Closet Rod Holder

- Closet Rods are typically joined in longer designs.
- Tap the End Caps only into the non-joined ends of each Closet Rod.
- Install joined rods in the center of the Closet Rod Holder, then place the outer ends in the Closet Rod Holder.


4. Finishing Touches

Tools needed for this section:




Scissors

Products needed for this section:

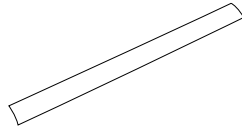

(Qty 8) OLD Top Track Cover
Platinum Pkg/2




(Qty 16)	16" Left Bracket Cover Platinum
(Qty 16)	16" Right Bracket Cover Platinum


Install a Top Track Cover



Install your Top Track Cover ONLY after you have placed all of your components and are satisfied with the positioning of your elfa Shelving.

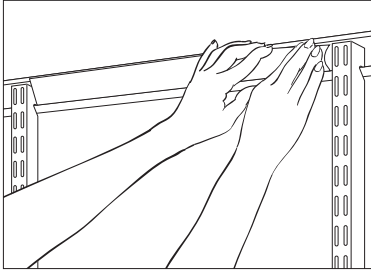

- Because the Top Track Cover is placed between the Hanging Standards, the Shelves must be in place to ensure the spacing between the Hanging Standards is set.
- Start with long pieces first. Place the bottom of the Top Track Cover into the bottom of the Top Track, then ease the top of the Top Track Cover into the top of the Top Track.
- Measure the area on the Top Track where smaller pieces of the Top Track Cover are needed.
- Measure and mark the Top Track Cover where the cuts need to be. The Cover is easily cut in a straight line with scissors.
- Do not overlap segments of the Top Track Cover.

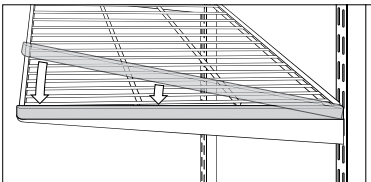

Install Bracket Covers

- Left and Right Bracket Covers are not interchangeable and are clearly labeled.
- Place the outer edge of the Bracket Cover over the outer edge of the Ventilated Shelf Bracket.
- Push down from the back to the front to snap it into place.

Congratulations! Your elfa solution is now complete! Thank you for your purchase and we look forward to seeing you again soon. Now that you have a fabulously organized elfa space, share it with us on Facebook at facebook.com/containerstore.