
PLATFORM C-KING BED

ASSEMBLY INSTRUCTIONS


BOX #1

A. HEADBOARD PANEL 1 PC
B. LEFT HEADBOARD LEG 1 PC
C. RIGHT HEADBOARD LEG 1 PC
D. FOOTBOARD 1 PC
HEADBOARD HARDWARE BOX*

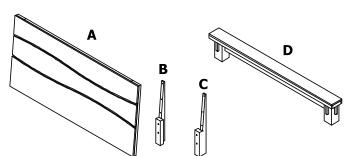


BOX #2

E. LEFT SIDE RAIL 1 PC
F. RIGHT SIDE RAIL 1 PC
G. CENTER SLAT 1 PC
H. SUPPORT LEG 4 PCS

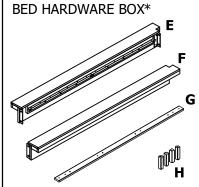


BOX #3

I. SLAT ROLL 1 SET

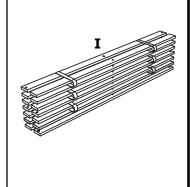

PLATFORM BED ASSEMBLED

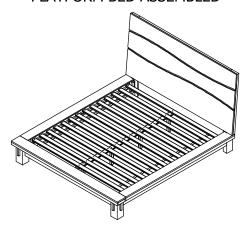

١.													
HEADBOARD HARDWARE PACKED IN BOX											OX #1		
	1	ALLEN BOLT (6x35mm)		2	ALLEN BOLT (6x55mm)		3	ALLEN BOLT (6x70mm)	2 PCS	4	ALLEN KEY	1 PC	

BED HARDWARE PACKED IN BOX #2

6


L													
	1	PHILLIPS HEAD BOLT(8x20mm)		2	SPRING WASHER (M8)	8 PCS	3	FLAT WASHER (M8)	8 PCS	4	METAL PIN (8x40mm)	2 PCS	
	Opport												



WOOD SCREW 9



ALLEN BOLT



ALLEN KEY

TOOL REQUIRED : PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED)

YOUR BOX MAY CONTAIN EXTRA HARDWARE



11






PC


STEP 1:


*USE HEADBOARD HARDWARE FROM BOX #1 FOR STEP 1.

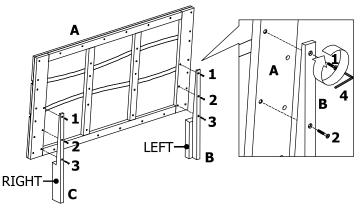

STEP 2:

*USE BED HARDWARE FROM BOX #2 FOR THIS, AND ALL REMAINING STEPS.

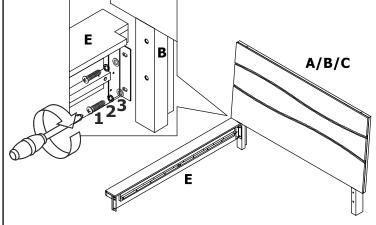


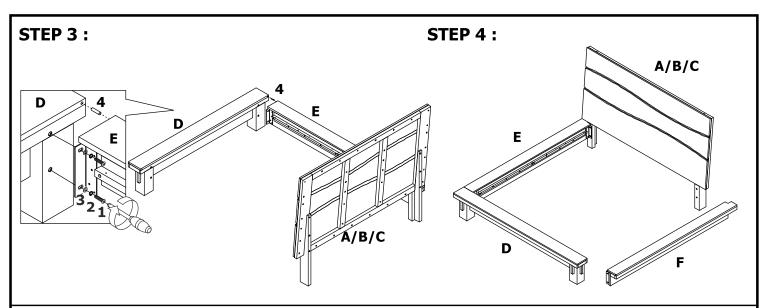




STOP

- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 5.

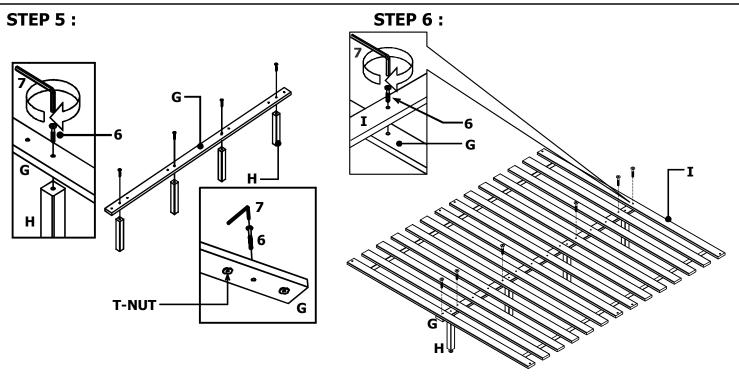

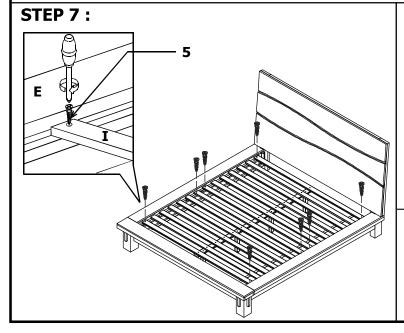


INSTRUCTIONS FOR ADJUSTING LEVELERS:

POSITION THE BED IN YOUR ROOM. LOCATE LEVELERS UNDER EACH SUPPORT LEG (\mathbf{H}) .

TURN LEVELERS COUNTER-CLOCKWISE TO EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH SUPPORT LEG IS APPLYING EQUAL UPWARD PRESSURE ON THE CENTER SLAT.



MAINTENANCE INSTRUCTIONS:

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT.
 DRAGGING CAN DAMAGE THE SUPPORT LEG.
- READJUST LEVELERS AFTER MOVING YOUR BED.

PLATFORM C-KING BED

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

G. CENTER SLAT 1 PC 5. WOOD SCREW (8x30mm) 9 PCS H. SUPPORT LEG 4 PCS 6. ALLEN BOLT (6x40mm) 11 PCS I. SLAT ROLL 1 SET

STEP 1:

USE ALLEN KEY (7) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

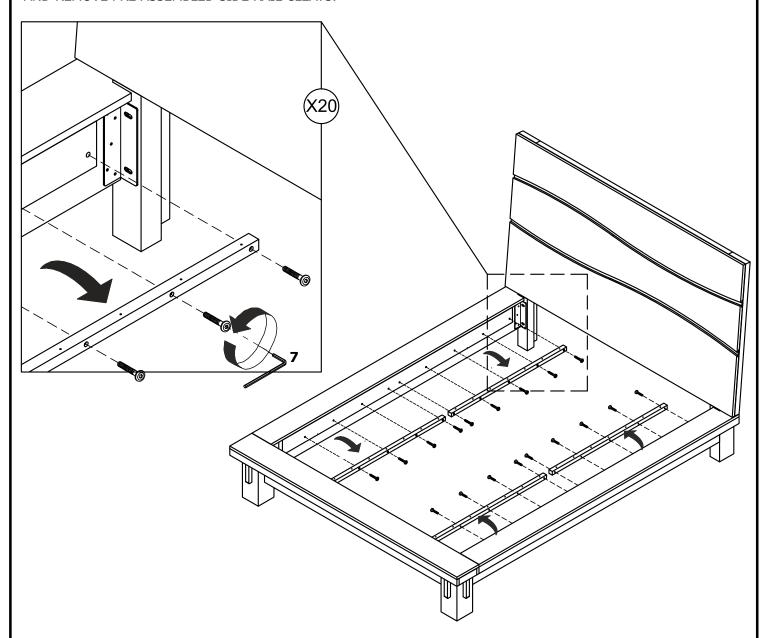

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.