# bouncepad

### **Original Floorstanding**


Assembly Instructions


#### Tools Required:

- Socket Driver
- 10mm Spanner \*or adjustable spanner

BP-IM-047\_REV5 Sheet Code: Release Date: 14/05/2025 Copyright 2025 SpotSpot Ltd. (T/A Bouncepad) all rights reserved. Confidential, no part of this publication

may be reproduced or transmitted in any form without the written permission of the copyright holder.

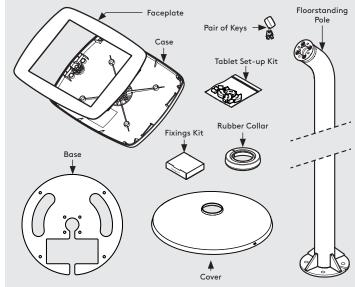

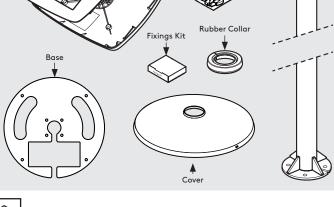



1x Case

Washer

4x M6 Split

Washer

Fixings List

4x M4 Split

4x M6x25mm

Countersunk

4x M4x16mm

Buttonhead Screw \*

Locking Nut

1x T20 Pin

Torx Driver Bit


1x PZ3 Pozi


Driver Bit




In the Box


10mm Spanne

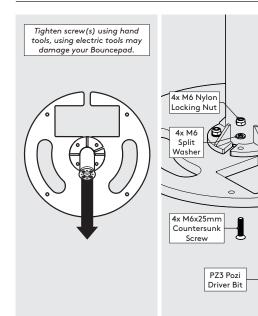



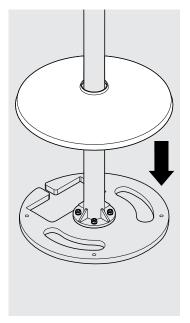


Locate the Cover over the Floorstanding Pole.

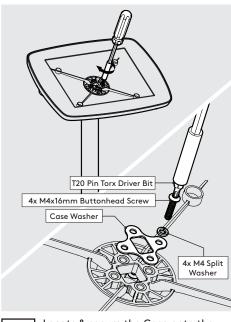


Locate & secure the Case onto the Floorstanding Pole as shown. Tighten by hand.



Unlock & remove the Faceplate from the Case.

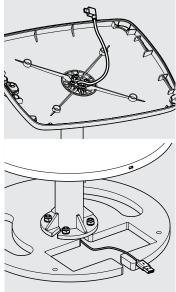



Feed the Power Cable through the Case &

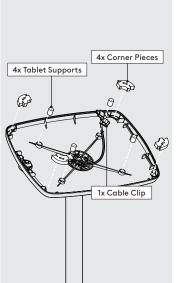

Install the Tablet Setup Kit. Each kit is specific per Tablet & Case.

6

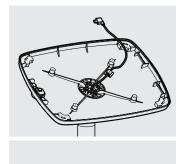

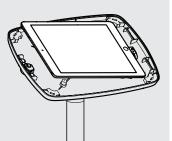


Install the Tablet into the Case & connect to Power Cable.







Floorstanding Pole.






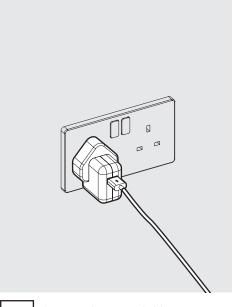


9.1 Connect the Power Cable to its mains power source.

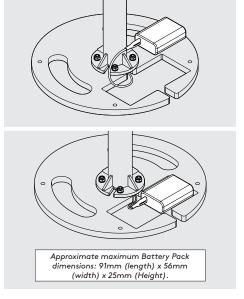


**9.2** If installing a Battery Pack, connect the Power Cable & locate into the Base.

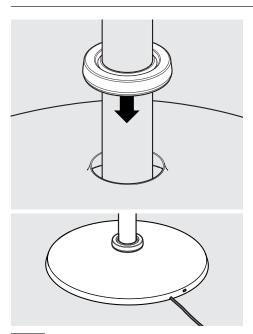

With the Cover on the ground, locate & fit the Rubber Collar.

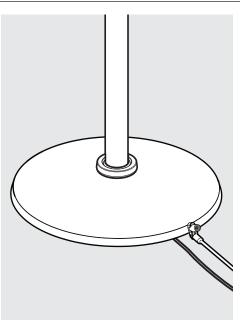

Use a Kensington® Microsaver product to tether to a secure object. (refer to your Kensington® instructions for full details)

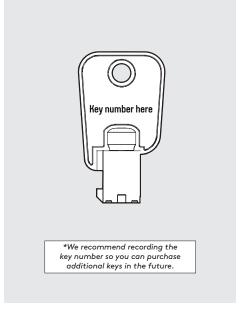

12 Installation is now complete.

## bouncepad

## **Branding Mount**


Assembly Instructions

Follow these instructions for the successful assembly of your Branding board to your Floorstanding.

Sheet Code: BP-OR-IM-011\_REV2 Release Date: 01/04/2019 Copyright 2016 Spotspot Ltd. (T/A


Bouncepad) all rights reserved. Confidential, no part of this publication may be reproduced or transmitted in any form without the written permission of the

copyright holder.

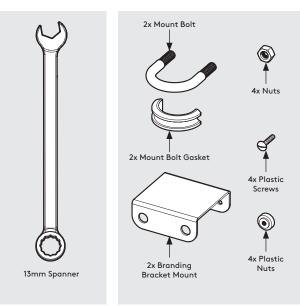


Tools required


Branding Mount - In the Box

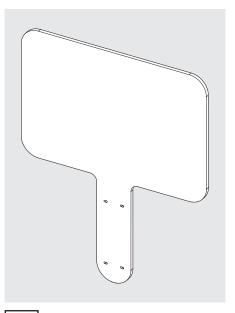


Follow 'A' steps if installing a **A1** Placard board

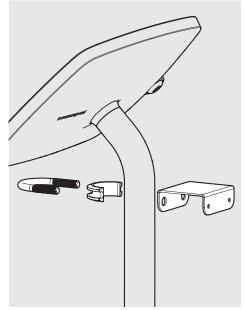

Locate the top Bracket Mount & **A2** Mount Bolt to Floorstanding pole.

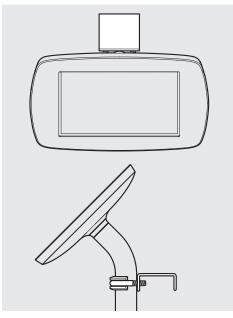


Ensure that the Bracket Mount & **A3** Mount Bolt are positioned correctly as shown.

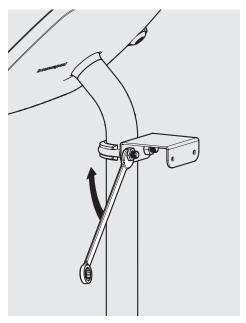


Secure the Bracket Mount & Mount Bolt to the Floorstanding Pole with the supplied Nuts. Tighten evenly.

**A4** 

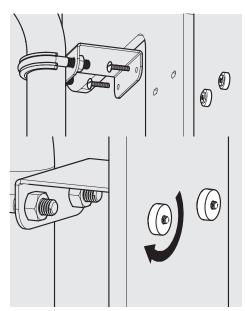


Locate the Placard Board to the Bracket Mount. Secure with the supplied Plastic Screws & Nuts.


**A5** 

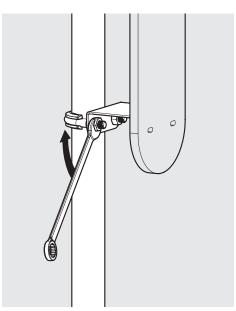


Locate & secure the bottom Bracket A6 Mount & Mount Bolt. Tighten the nuts

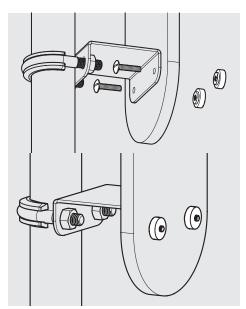


Secure the bottom section of the Placard Board with the Plastic Screws & Nuts. Installation now complete.

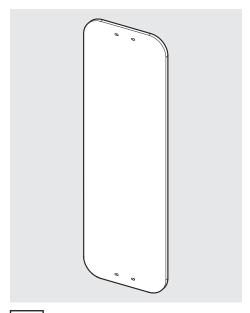


**B1** Follow 'B' if installing a Front Board

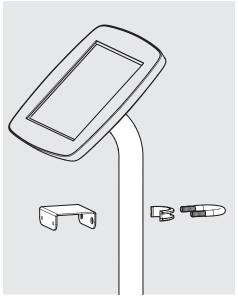


B2 Locate the top Bracket Mount & Mount Bolt to the Floorstanding pole.

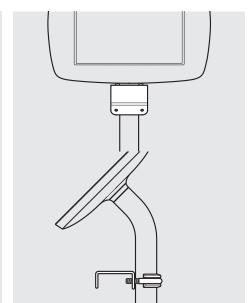


B3 Ensure the Bracket Mount & Mount Bolt are positioned correctly as shown.

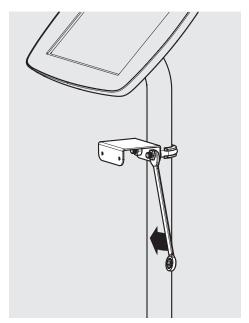

B4
Secure the Bracket Mount & Mount Bolt to the Floorstanding Pole with the supplied Nuts. Tighten evenly.

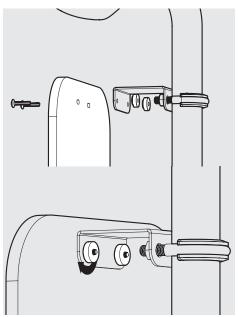


B5 Locate the Front Board to the Bracket Mount. Secure with the supplied Plastic Screws & Nuts.

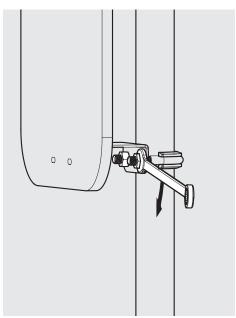

Locate & secure the bottom Bracket Mount & Mount Bolt. Tighten the nuts evenly.

**B6** 

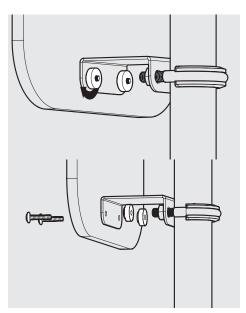

Secure the bottom section of the Front Board with the Plastic Screws & Nuts. Installation now complete.