


Stonemore


Aspen

stonemorehome.com

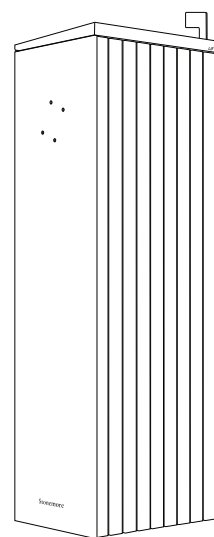


Installation Into Concrete


1. Place your parcel box in the chosen location and mark the four mounting holes

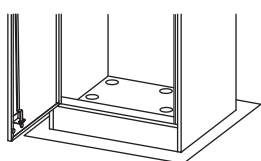


2. Drill holes (10mm diameter x 46 mm deep) into the ground

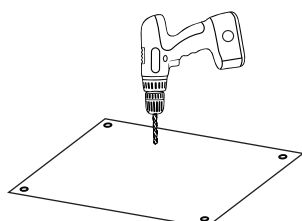


3. Hammer the expansion bolt into the pre-drilled holes

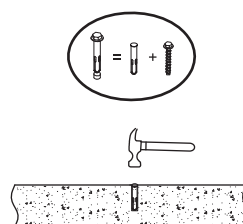


4. Align the hole at the bottom of the parcel box with the pre-drilled holes

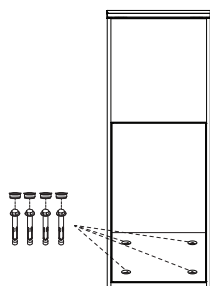


5. Use a wrench to secure the screw from inside

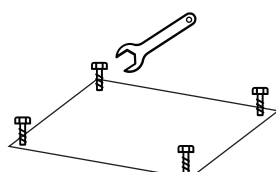

6. Insert impact-absorbing mesh

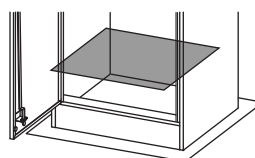

Assembly Kit Included:

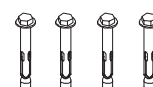

x4 Expansion Bolts



x4 Cap Covers




x2 Keys


Installation Tools: (not included)




Power Drill

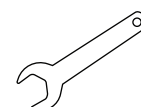

Wrench

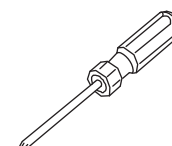


Screwdriver




Hammer

Preparing a Concrete Base for Installation


1. Dig a hole approximately 45 cm x 35 cm x 10 cm deep

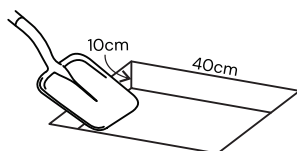

2. Fill the hole with concrete and use a spirit level to level the concrete and leave it to fully dry



3. The installation process is then the same installation as Install Into Concrete above

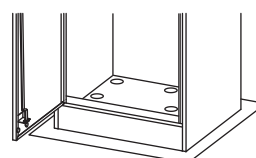

Note:

- To avoid wear, deformation and damage, place the parcel box on a flat surface.
- To avoid fading or paint peeling, do not use ethanol, or other chemical solvents to clean your product.