
WF 310870/WF 310871

If you have any questions, please feel free to contact us. Email: hdteam@aminalife.com

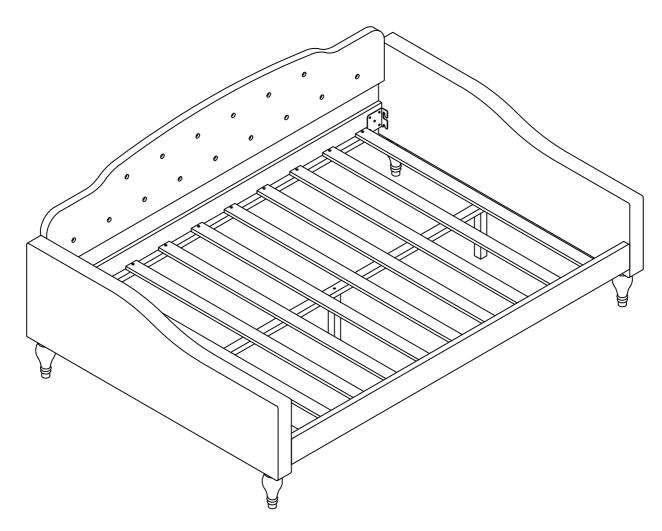

IMPORTANT NOTE


- **PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED
- ** BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP
- **DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP

MADE IN VIETNAM

PAGE 1 OF 7




WF 310870/WF 310871

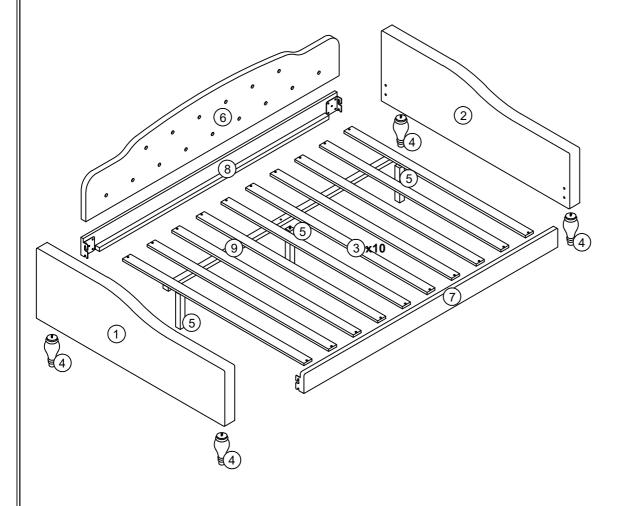


MADE IN VIETNAM

PAGE 2 OF 7


WF 310870/WF 310871

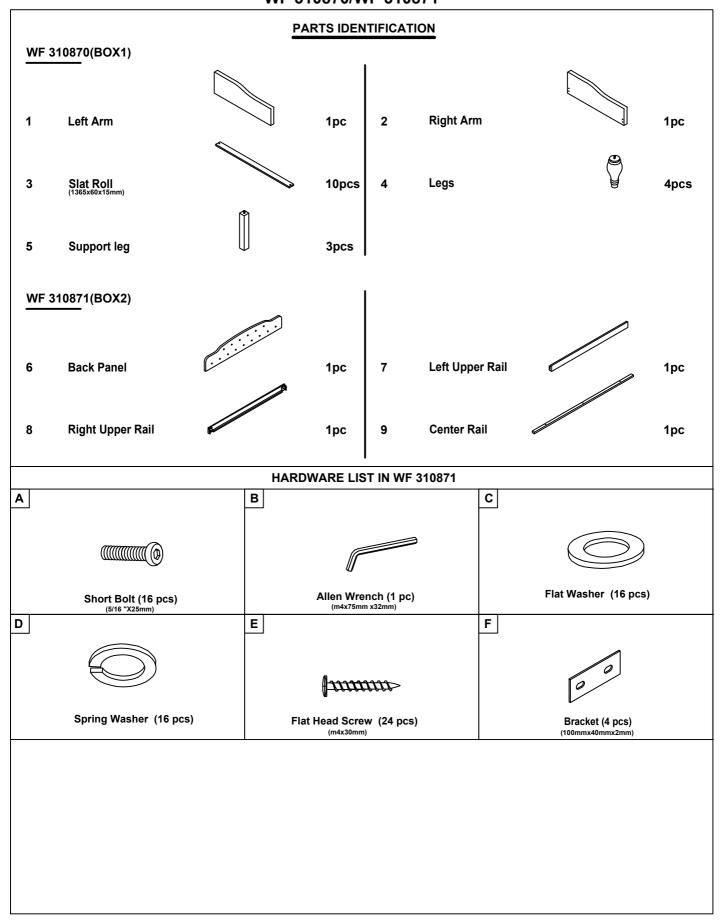

MADE IN VIETNAM PAGE 3 OF 12

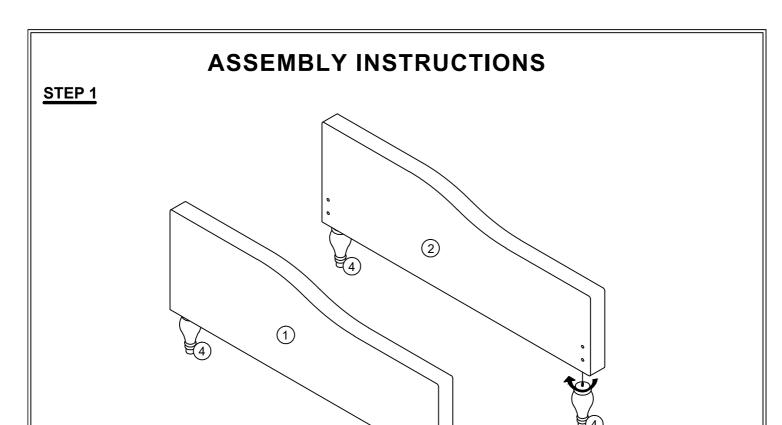


STEP 2

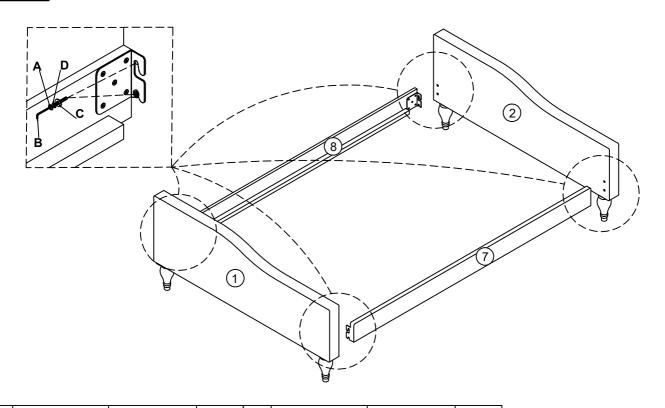


A	Bolt (5/16 "x25mm)	8pcs	D	Spring Washer	8pcs
В	Allen Wrench (M5x75mm x32mm)	1рс	С	Flat Washer	8pcs


MADE IN VIETNAM

PAGE 4 OF 7

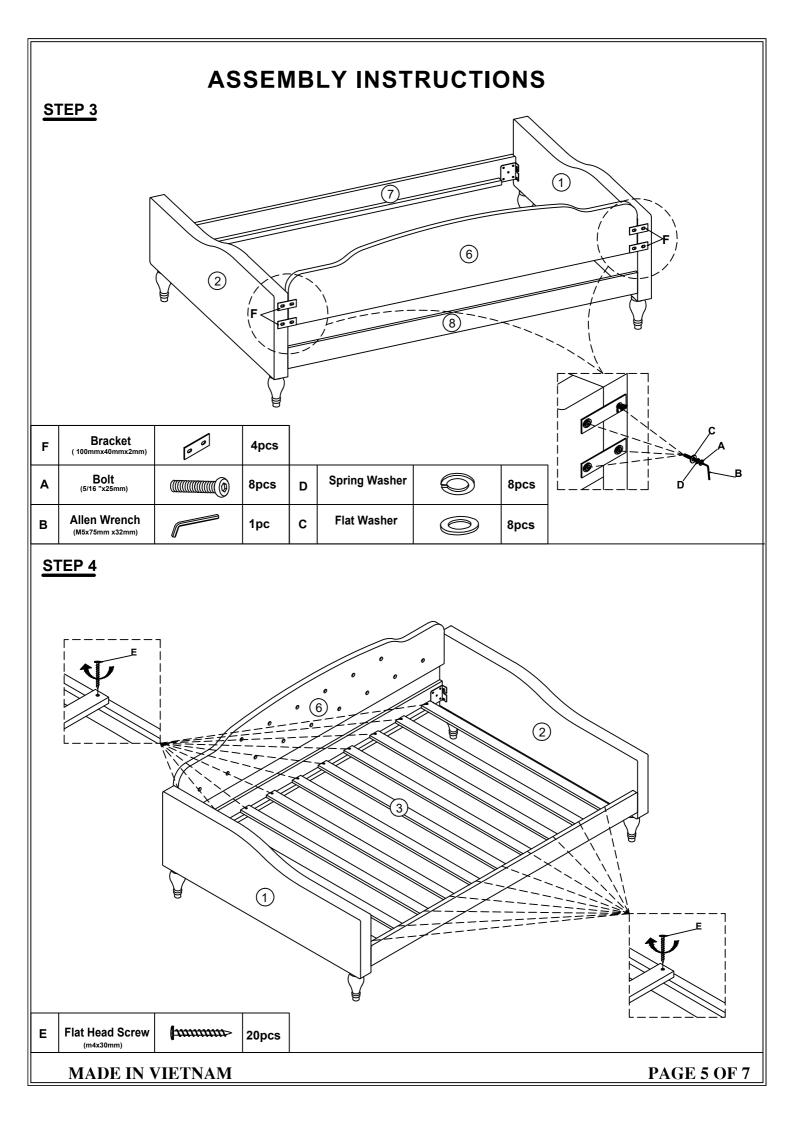

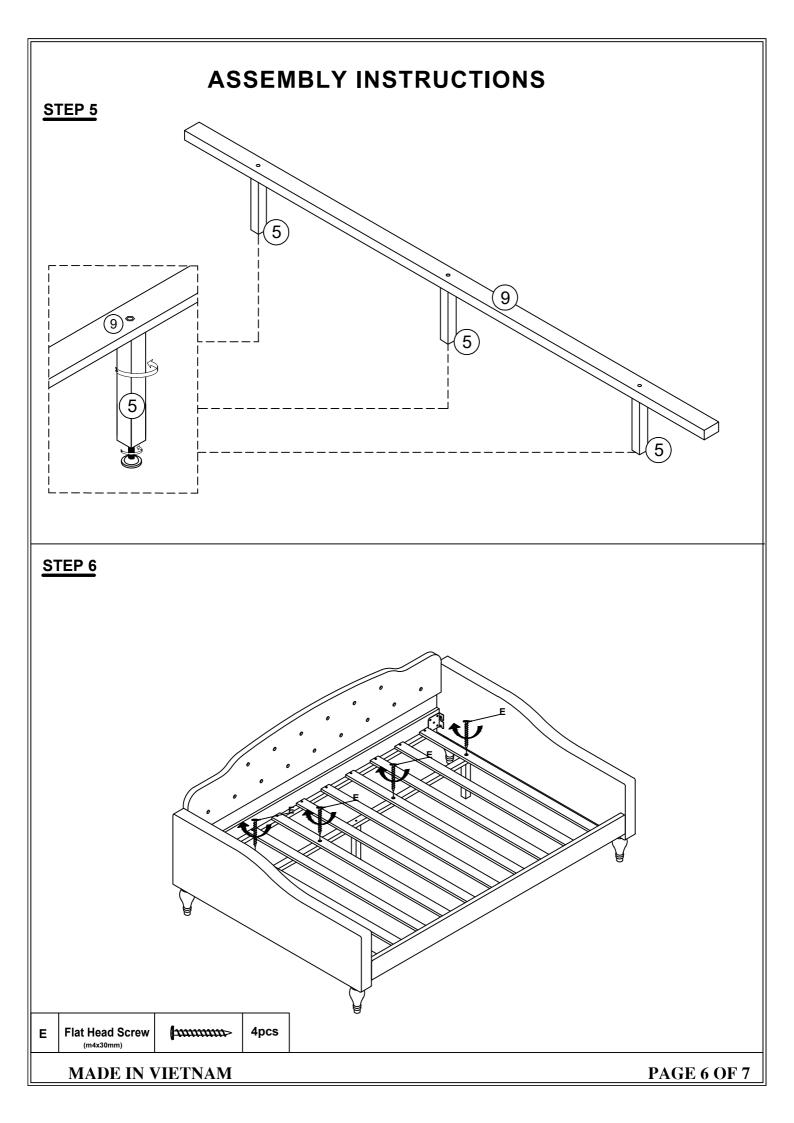

STEP 7
COMPLETE

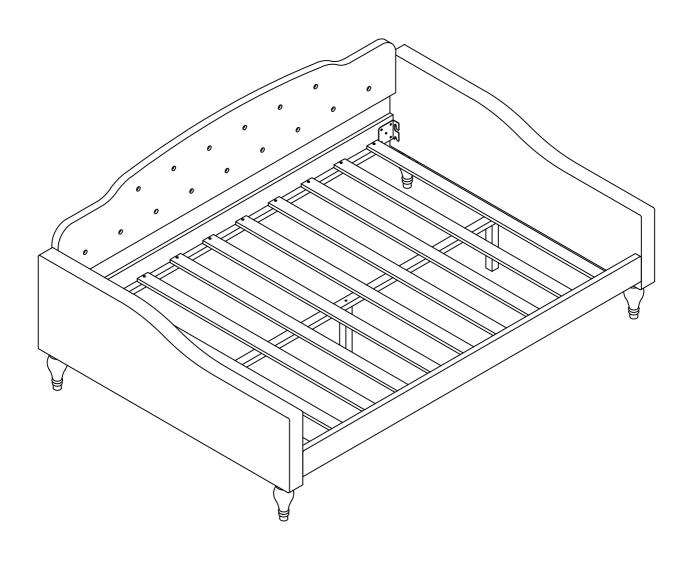

MADE IN VIETNAM