



# OWNER'S MANUAL

## Installation & Operation



Serial No.

Rev 2 07/2024



# Table of Contents





Parts List .....	01
Installation Guide .....	03
Power Foundation Setup for Use on Platform or Storage Bed .....	07
Remote Control Instructions Pairing Remote .....	10
Electronics Quick Reference Guide Synchronizing Two Foundations .....	11
Mobile APP .....	12
Headboard Bracket Installation Guide (Optional) .....	13
Legs Installation Guide Spacing Connector Installation Guide (Optional) .....	14

# Parts List

**revive**






All electronics and components that need to be installed are located in boxes under the foundation or attached to the frame. Before discarding the packing materials, ensure that all the parts are accounted for.






Part Y and part Z are the parts that need to be removed from the bed frame.

CODE	Y	Z
DESCRIPTION	Red Plastic Safety Clip	Locking Pin
IMAGE		
QUANTITY	1 (2 for K/CK)	1 (2 for K/CK)

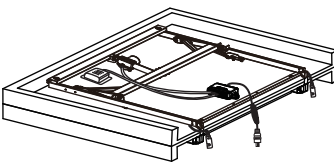

Installation Video

PARTS LIST					
CODE	A	B	C	D	E
DESCRIPTION	Frame	Remote Control	Power Supply with Battery Backup Box	AC Power Cord	AAA Batteries
IMAGE			 6LR61 Alkaline Batteries (Optional)		
QUANTITY	(1)	(1)	(1)	(1)	(3)

CODE	F	G	H	J	K
DESCRIPTION	Sync Cord (TXL/TWIN/CKS Only)	Mattress Retainer Bar (2 for K/CK)	Adjustable Legs	Motion Sensor	Mounting Bracket
IMAGE			 Two-section per leg		
QUANTITY	(1)	(1)	(6)	(2)	(2)






Customer Service Toll Free: 1-844-696-6886

Email: [motoservice@hhcusacorp.com](mailto:motoservice@hhcusacorp.com)






# Parts List

**revive**

## OPTIONAL HEADBOARD BRACKET COMPONENTS (NOT INCLUDED)

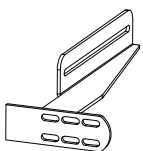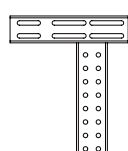
CODE	L	M	N	O	P
DESCRIPTION	Headboard Brackets	T-Brackets	M8×16 Bolts	M8 Nuts	8mm ID Washers
IMAGE					
QUANTITY	(2)	(2)	(8)	(4)	(4)

## OPTIONAL STABILIZER BRACKETS COMPONENTS (NOT INCLUDED)

CODE	S	T	U	V	W
DESCRIPTION	Stabilizer Brackets	M8×16 Bolts	8mm ID Washers	ST4.2×16 Screws	Socket Wrench
IMAGE					
QUANTITY	(4)	(8)	(8)	(8)	(1)

## OPTIONAL EQUIPMENT (NOT INCLUDED)

1/2" (13mm) Socket Wrench / Wrench




# Installation Guide

**revive**

Two people are required to setup the foundation. It takes about 10 minutes.

**1**

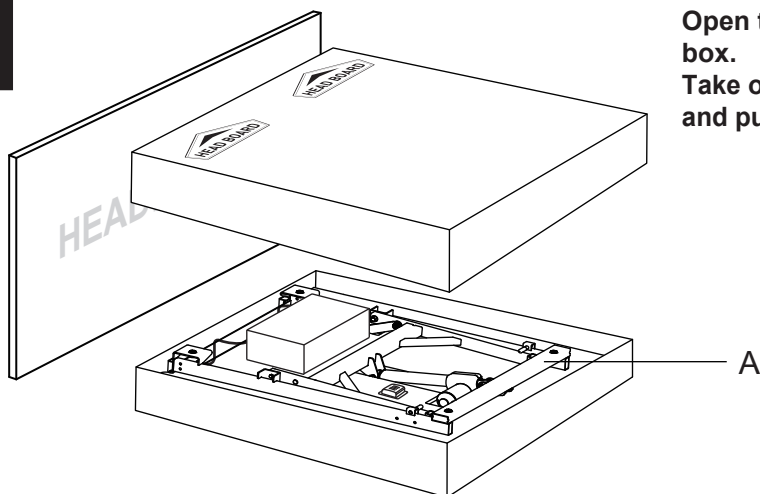


Open the box lid, move away the outer packing box.


Take out all the accessories from the packaging and put them aside.

\* Make sure the adjustable legs are properly tightened, and the plastic caps have been placed at the bottom of the legs. Incorrect installation might cause the part to fail or damage the floor.

Mattress Retainer Bar

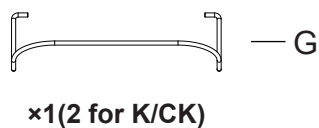


Accessory Box

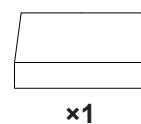


## ACCESSORY BOX:


Adjustable  
Legs

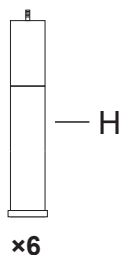


Remote  
Control

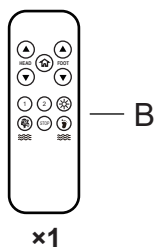


Power Supply with  
Battery Backup Box

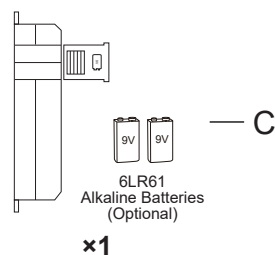

AC  
Power Cord

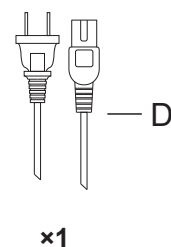


Sync Cord  
(TXL/TWIN/CKS Only)

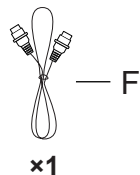


AAA  
Batteries



Mounting  
Bracket

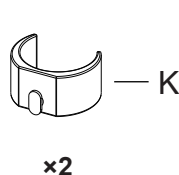

Motion  
Sensor

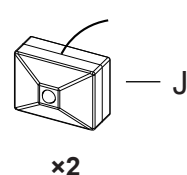


# Installation Guide

revive


2

Install 4 legs, make sure the legs are tight.

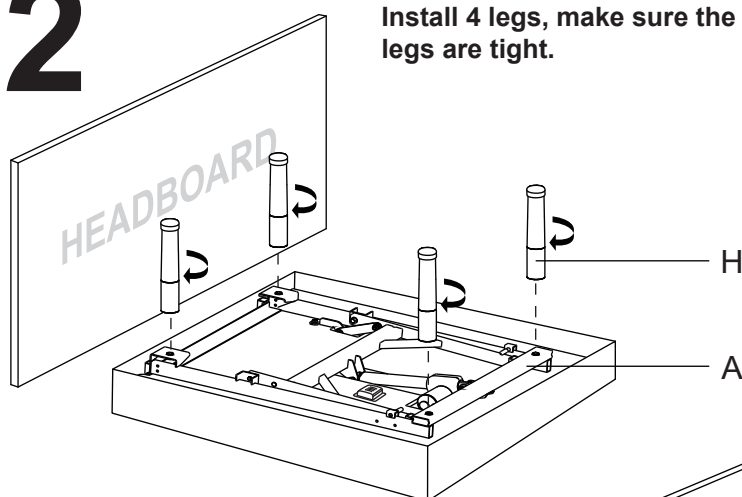


3

Keep the bed folded. Flip over the bed with the bottom box on and let the bed stand on the 4 legs. Move the box away.

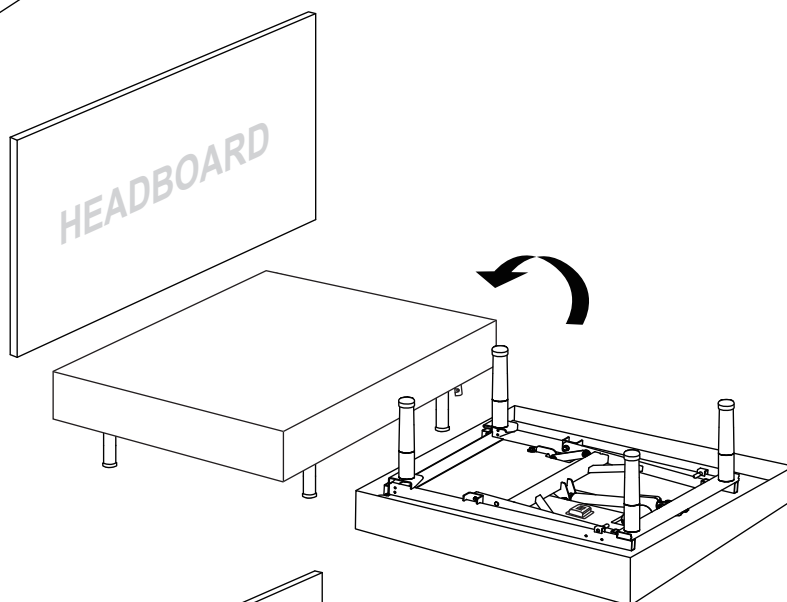

4

Install the remaining 2 legs on the foot end of the bed, make sure the legs are tight. Uncoil the DC power cord (connected to the control box) and put it to the side of the bed.

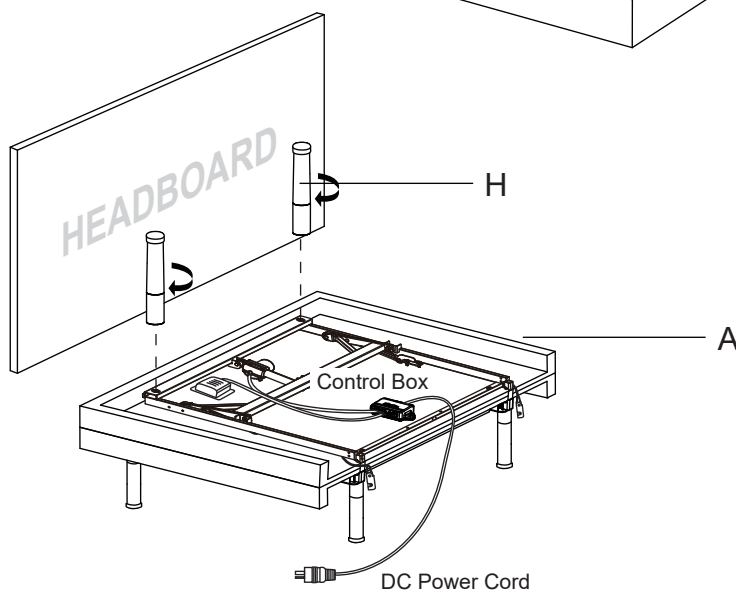


**⚠ WARNING!**

**PLEASE MAKE SURE FOLLOW STEP 5, OR IT WILL DAMAGE TO YOUR POWER FOUNDATION.  
PLEASE MAKE SURE YOU FOLLOW THE INSTRUCTIONS CAREFULLY  
BEFORE UNFOLDING YOUR POWER FOUNDATION.**


**5**

Remove the red plastic safety clip and locking pin before unfolding your power foundation.


Remove the red plastic safety clip.

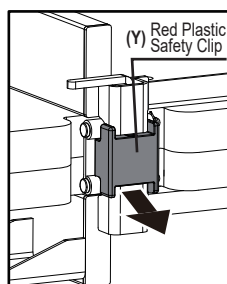

Turn the locking pin 90° in counter clockwise direction.

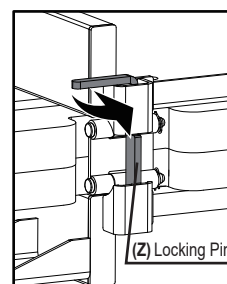


Remove the folding locking pin by pulling upwards.

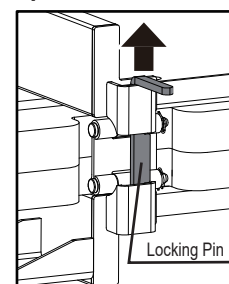


**6**

Install the motion sensor.

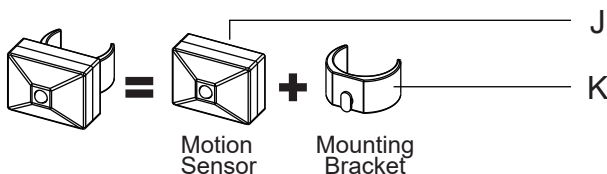


**Prepare the motion sensor hardware.**


**STEP 1:** Connect the motion sensor to the mounting bracket.

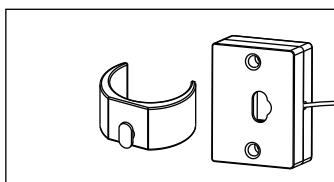

**STEP 2:** Rotate the mounting bracket 90 degrees clockwise.

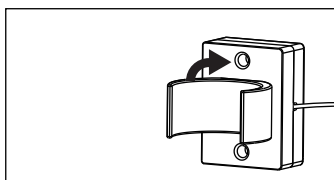


**STEP 3: Done!**

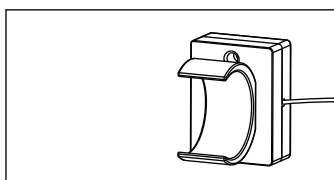


**Connect the motion sensor connectors.**

**STEP 1:** Clip the mounting bracket onto the center adjustable legs as illustrated.

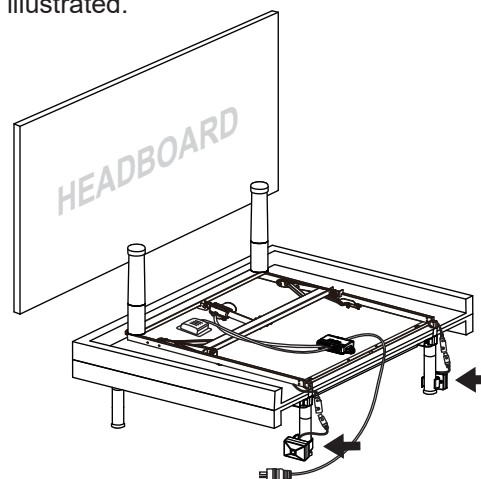

**STEP 2:** Connect the motion sensor connectors as illustrated. Note there are two connectors, one on each side of the bed.

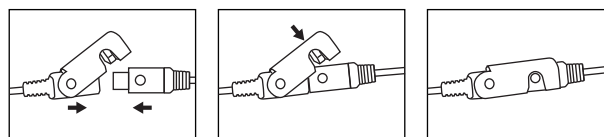




# Installation Guide

revive


7

Make the bed completely flat.

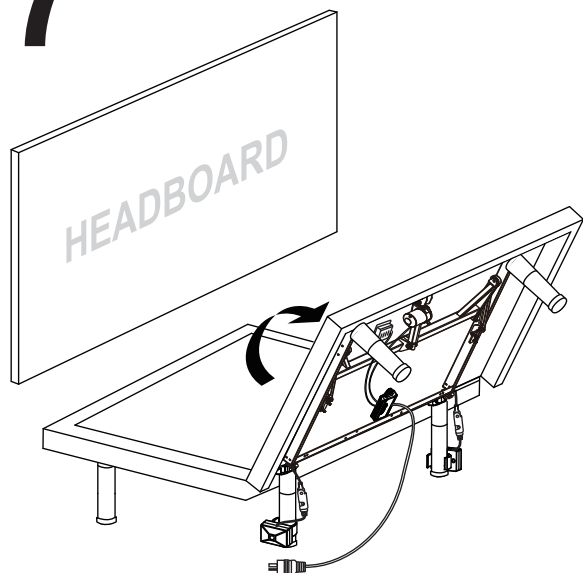


8

Install the mattress retainer bar one side after another.

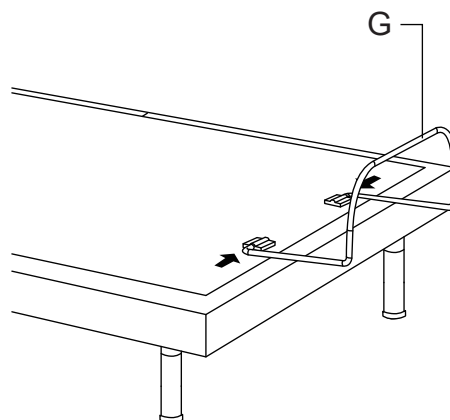

9


Make sure the AC power cord is not connected to the AC power source. Please connect the DC power cord to the power supply, and connect the AC power cord, then last but not least uncoil the AC power cord to connect the power source.

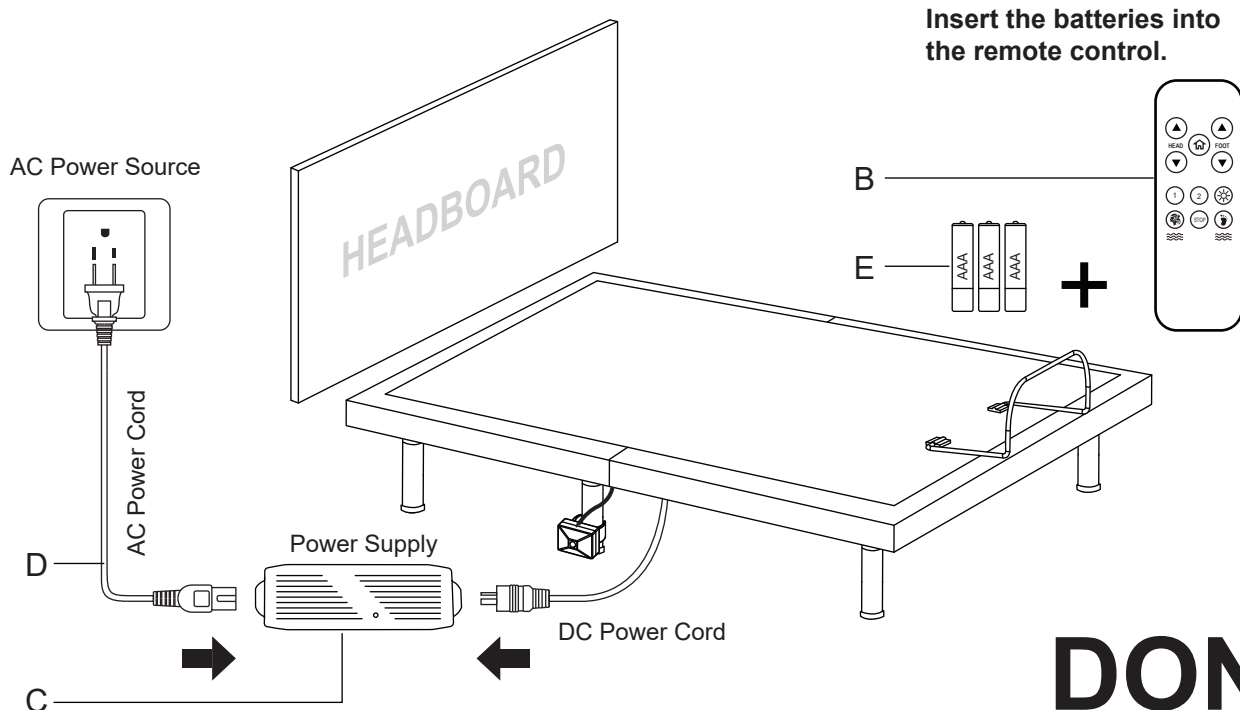


# Power Foundation Setup for Use on Platform or Storage Bed

revive

- 1** Take the bed out of the box, put it on the slat base, do not install any legs. Keep the bed folded.

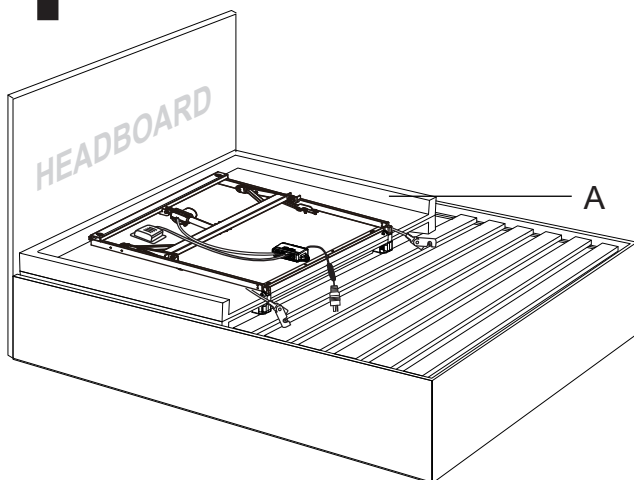

- 2** Uncoil the DC power cord.

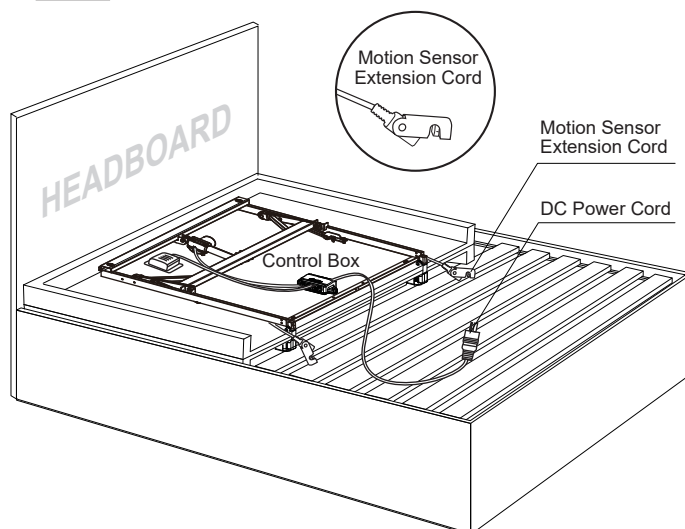


**WARNING!**


**PLEASE MAKE SURE FOLLOW STEP 3, OR IT WILL DAMAGE TO YOUR POWER FOUNDATION.  
PLEASE MAKE SURE YOU FOLLOW THE INSTRUCTIONS CAREFULLY  
BEFORE UNFOLDING YOUR POWER FOUNDATION.**

- 3** Remove the red plastic safety clip and locking pin before unfolding your power foundation.


Remove the red plastic safety clip.

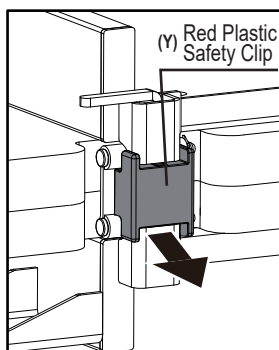

Turn the locking pin 90° in counter clockwise direction.

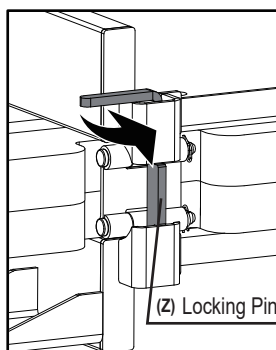

Remove the folding locking pin by pulling upwards.

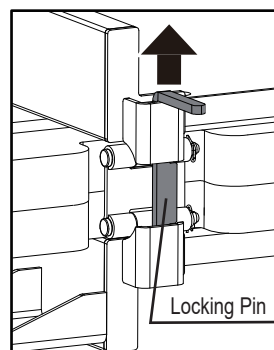

# Power Foundation Setup for Use on Platform or Storage Bed


revive

## 4

**Install the motion sensor.**


**STEP 1:** Connect the motion sensor connectors as illustrated.

**STEP 2:** Use the double-side tape to secure the motion sensor when necessary.

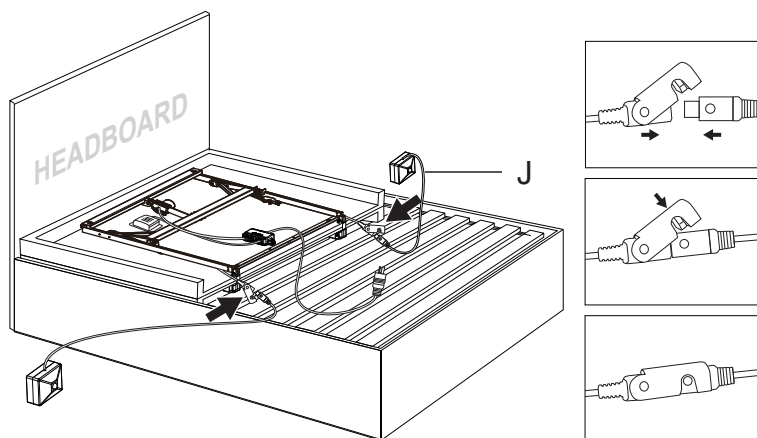


## 5

**Pull the DC power cord towards the direction of the AC power source through either the bottom or the side of the bed frame. Pull the two motion sensors to the two sides of the bed frame. Make the bed completely flat with a flipping motion.**

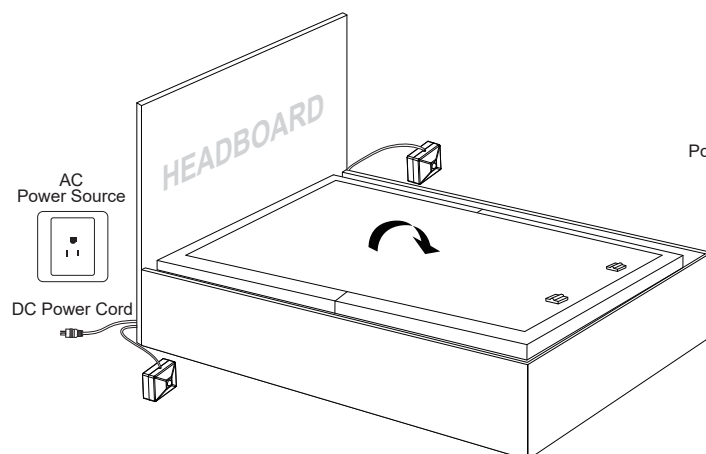

## 6


**Install the mattress retainer bar one side after another.**

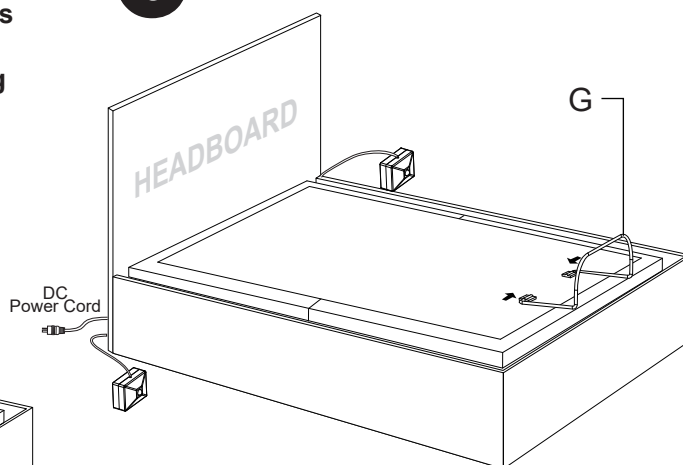

# Power Foundation Setup for Use on Platform or Storage Bed






**revive**

- 7** Make sure the AC power cord is not connected to the AC power source. Please connect the DC power cord to the power supply, and connect the AC power cord, then last but not least uncoil the AC power cord to connect the power source.

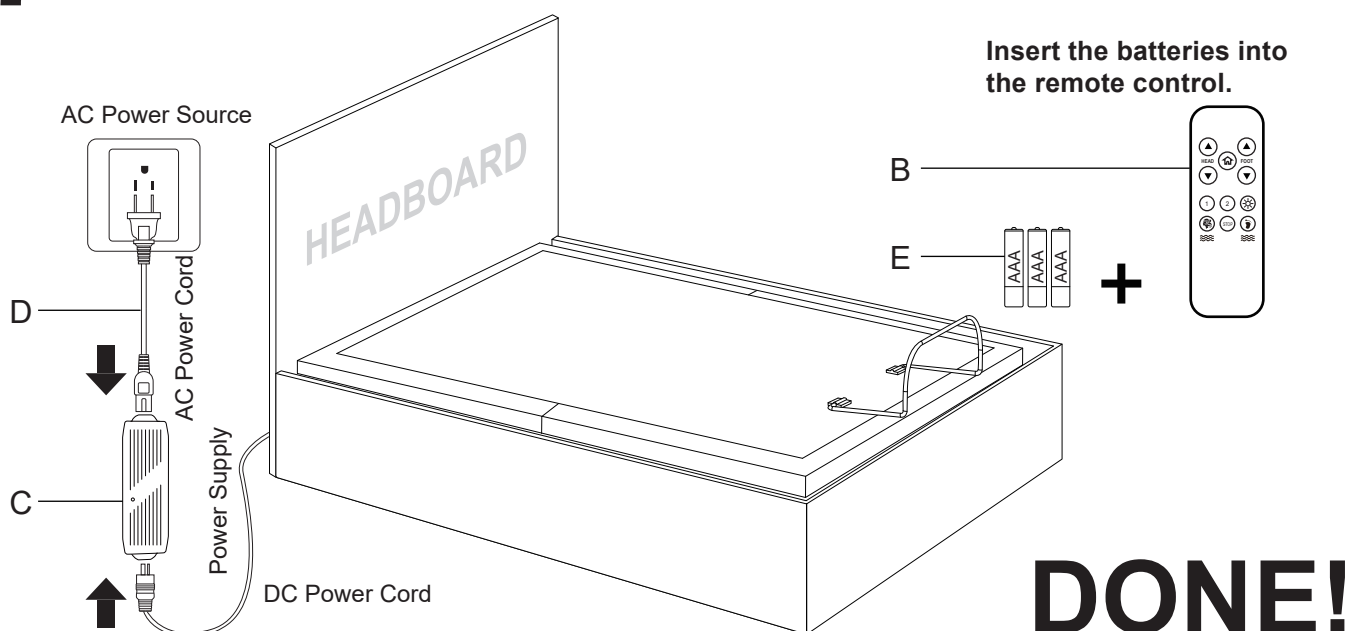


## STABILIZER BRACKET INSTALLATION GUIDE (OPTIONAL)

Stabilizer brackets are optional and not included. They can fix the bed onto the slat base. A Phillips screwdriver and a socket wrench are required to complete the installation.

STABILIZER BRACKETS COMPONENTS	
(4) Stabilizer Brackets	(8) ST4.2×16 Screws
 — S	 — V
(8) 8mm ID Washers	(8) M8×16 Bolts
 — U	 — T
(1) Socket Wrench	
 — W	

Lift the head and foot end of the bed by remote control. Install four stabilizer brackets as shown. Use a phillips screwdriver and a socket wrench to tighten the screws and bolts.

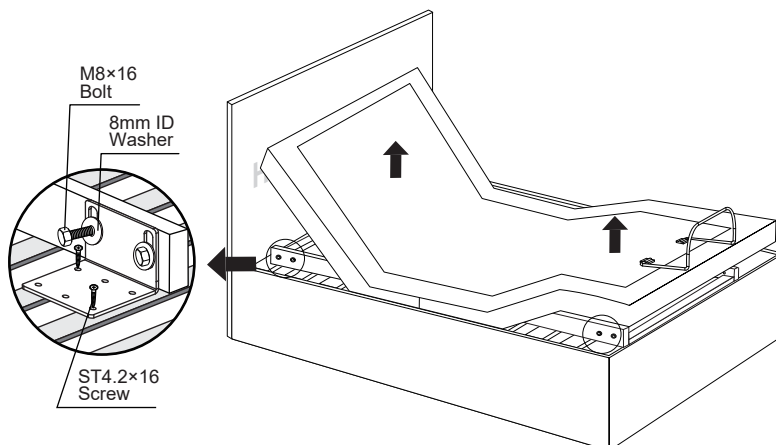


# Remote Control Instructions

## Pairing Remote

revive

### REMOTE CONTROL

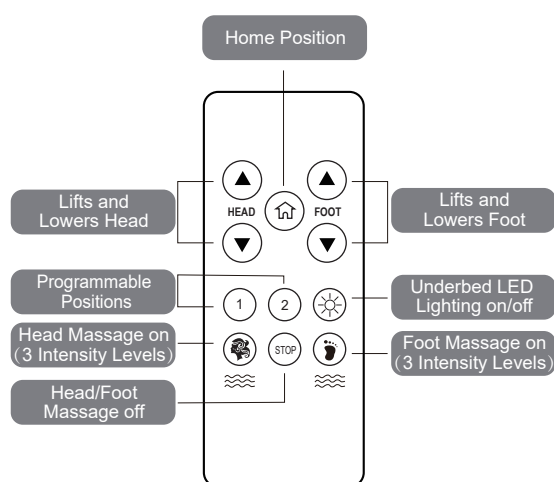

### ADJUST

- ▲ This button lifts the Head /Foot section of the foundation.
- ▼ This button lowers the Head/Foot section of the foundation.

### ONE-TOUCH BUTTON

- 🏠 One-touch HOME (flat) position.
- 1 One-touch programmable positions.
- 2 One-touch programmable positions.

### MASSAGE FEATURES

- 🧠 Turn on the head massage. Cycle through 3 intensity levels.
- 🦶 Turn on the foot massage. Cycle through 3 intensity levels.
- 🛑 Turn off the head/foot massage.

### UNDERBED LED LIGHTING

- ☀ Underbed LED lighting on/off.

### PAIRING REMOTE


The original remote that comes in the box is already paired to the foundation. No further action is required. In the event when the remote is not paired with the foundation, follow the pairing instructions below.

STEP 1: Make sure the batteries are working. Replace them when needed.

STEP 2: Unplug the AC power cord from the power source. If 9V backup batteries (6LR61 alkaline batteries) were installed in the power supply, remove them.

STEP 3: Press and hold **HEAD** (▼) and (▲) simultaneously for 5 seconds until the blue backlights extinguished.

STEP 4: Plug the AC power cord back into the power source. You will hear an activation sound in 2 seconds, indicating the remote is paired to the power foundation.

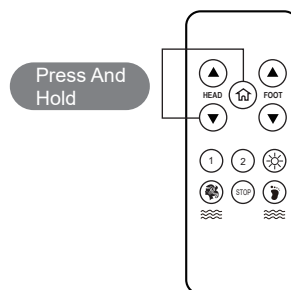

### SETTING PROGRAMMABLE POSITION

STEP 1: Adjust the head and foot to your desired position.

STEP 2: Press and hold the LED on/off button (☀) first, then press and hold one of the picture programmable buttons (1) (2) for 5 seconds until you hear a beep sound. The position is then remember.


STEP 3: To adjust a saved position, repeat step 1 and 2 and the new position will be remember.

# Electronics Quick Reference Guide

## Synchronizing Two Foundations


revive

### OVERVIEW

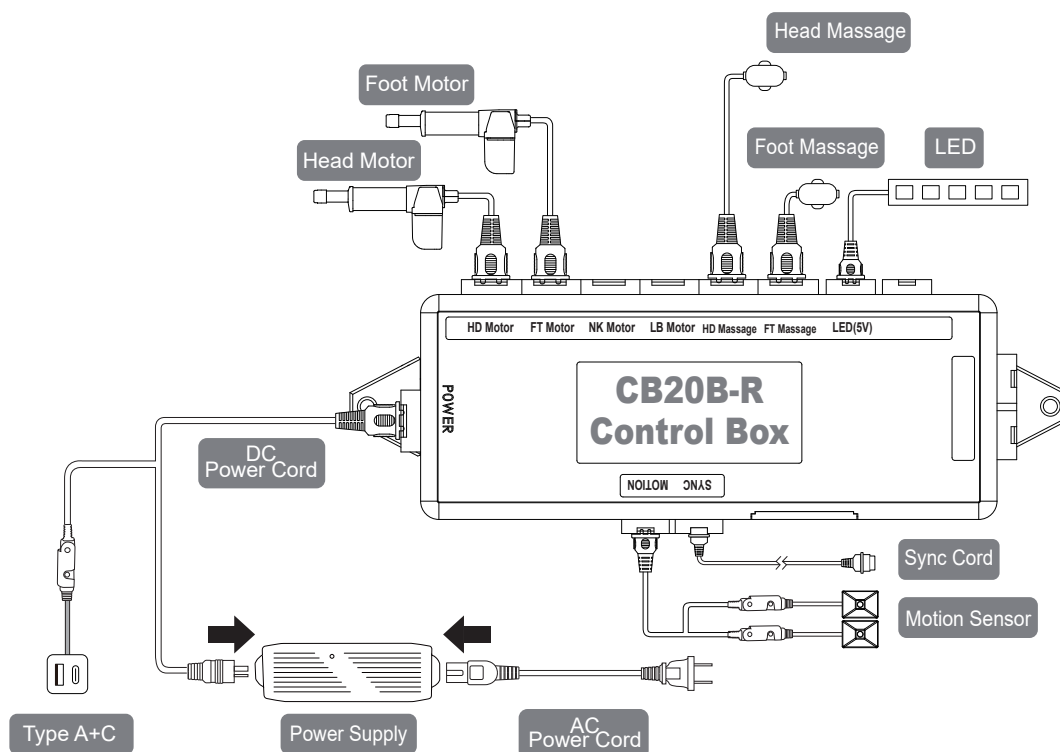

### SYNCHRONIZING TWO FOUNDATIONS

- STEP 1: Unplug foundations from the power source.
- STEP 2: Connect the male ends of the sync cord to the female sync plugs of the control boxes (Refer to below illustration).
- STEP 3: Plug foundations back into the power source.
- STEP 4: Check to ensure all cords are securely attached. Either remote will operate both foundations simultaneously.

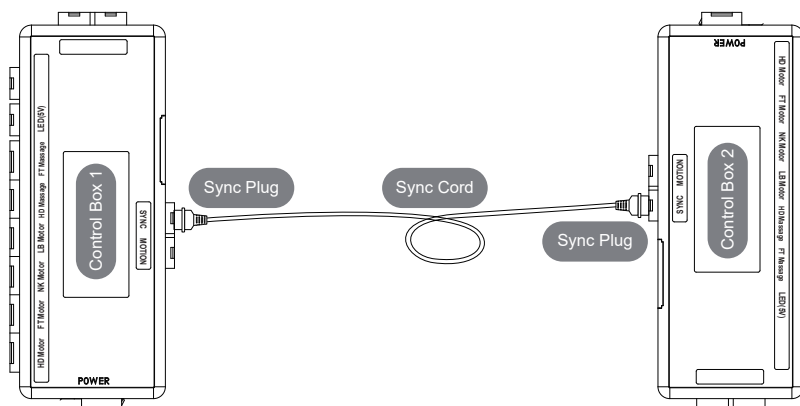

Customer Service Toll Free: 1-844-696-6886

Email: [motoservice@hhusacorp.com](mailto:motoservice@hhusacorp.com)

# Mobile APP

revive

## GENERAL INFORMATION


Mobile App is a mobile application to control the Power Foundation with mobile devices. The application is available for both iOS and Android based smart devices.

The Mobile App uses the latest technology to communicate with your Power Foundation. Make sure your mobile devices has the pairing function for the app to work correctly.


## INSTALL THE APP


### IOS



- Open App Store on your iOS device.
- Tap the Magnify Glass Icon  and search with the keyword **MOTOSLEEP**.
- Tap on **GET** and **INSTALL** to install the app.

### Android




- Open Google Play on your Android device.
- Tap the Magnify Glass Icon  and search with the keyword **MOTOSLEEP**.
- Tap on **GET** and **INSTALL** to install the app.

## DEVICE PAIRING


Before you start, switch on the pairing function on your mobile device. Make sure your Power Foundation is correctly connected and is power-on.

The app will automatically pair your Power Foundation once you start the app and does not require additional settings.

## APP HOME SCREEN

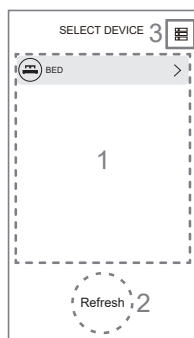

Home Screen

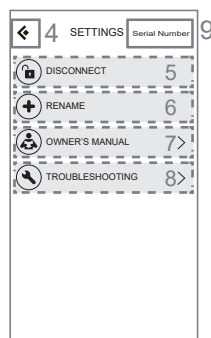


Settings Page

Home Screen	
1	List of products within the connection range*
2	Tap the refresh button to refresh the products list
3	Enter the settings page
Settings Page	
4	Back to the home screen
5	Disconnect from the paired product
6	Rename your power foundation of your choice
7	Owner's manual page
8	Troubleshooting
9	Serial number of the control box

\* The effective connection range is  $\pm 32$ ft.

## APP REMOTE CONTROL

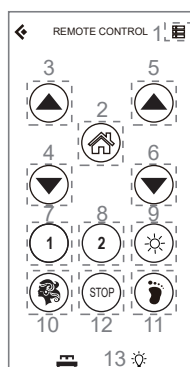

Remote Control			
1	Enter the Settings Page	8	Programmable Position 2
2	One-touch Flat Position	9	Underbed LED Lighting
3	Head Lifting Function	10	Head Massage (3 Intensity Levels)
4	Head Lowering Function	11	Foot Massage (3 Intensity Levels)
5	Foot Lifting Function	12	Massage off
6	Foot Lowering Function	13	Mood Light Setting
7	Programmable Position 1		

\* Remote interface varies in between different adjustable base models. If you wish to disconnect from the current paired adjustable base, enter the settings page and tap the disconnect button.

Customer Service Toll Free: 1-844-696-6886






Email: [motoservice@hhcusacorp.com](mailto:motoservice@hhcusacorp.com)

# Headboard Bracket Installation Guide (Optional)

**revive**

Headboard brackets are optional and not included.  
A 1/2" (13mm) socket wrench and 1/2" (13mm) wrench are required to complete the installation.


## OPTIONAL HEADBOARD BRACKET COMPONENTS

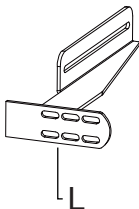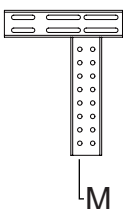(2) Headboard Brackets	(2) T-Brackets	(8) M8×16 Bolts	(4) M8 Nuts	(4) 8mm ID Washers
				

## STEP 1


a) Align the headboard bracket slot with the mounting holes on the bed frame. **DO NOT OVERTIGHTEN.** Too much force may damage the thread.

b) The headboard bracket has 2 adjustable slots to accommodate any frame type. Use the (2) M8×16 bolts and (2) 8mm ID washers to secure the bracket. Make sure the bolts are tight.

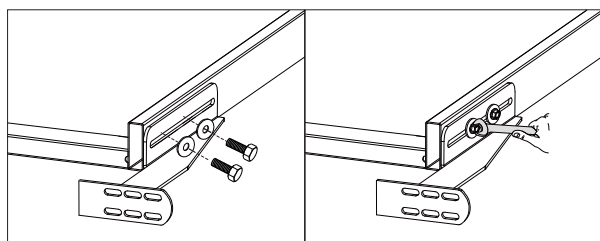

## STEP 2

a) To put the T-Bracket and headboard bracket together, you will need (2) M8×16 bolts and (2) M8 nuts. Slip the bolts through the holes from T-Bracket to headboard bracket with the head of bolt facing outward. Use the 1/2" (13mm) socket wrench and 1/2" (13mm) wrench to tighten the bolts.

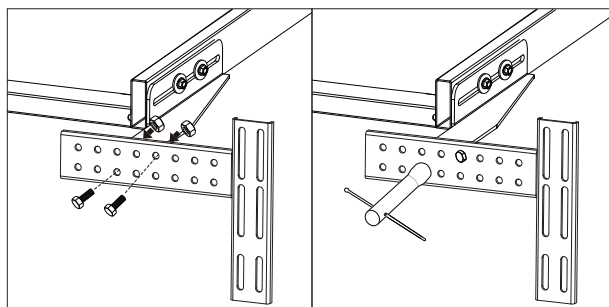

## STEP 3

Repeat Step 1 to 2 to install the other headboard bracket on the other side of the bed.




# Legs Installation Guide Spacing Connector Installation Guide (Optional)

**revive**

## LEGS INSTALLATION GUIDE

Support leg may be needed on some slat/platform bed frames, refer to the leg configuration table for height adjustment.

\* Make sure the adjustable legs are properly tight, and the plastic caps have been placed at the bottom of the legs. Incorrect installation might cause the part to fail or damage the floor.

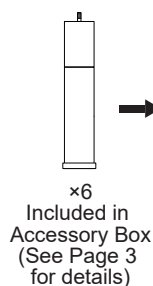

Leg Configuration Table			
Leg Configuration			
Leg Height	4 "	7 <sup>7</sup> / <sub>8</sub> "	11 <sup>3</sup> / <sub>8</sub> "

## SPACING CONNECTOR FOR TXL/TWIN/CKS (OPTIONAL)

Install two spacing connectors to ensure the gap between the two power foundations is consistent.



### (2) SPACING CONNECTOR (TXL/TWIN/CKS ONLY)



Figure (A)

## PRODUCT SERIAL NUMBER (FIGURE B)

Each power foundation has its unique serial number. The serial number can be found on the metal frame near the legs at the foot area.

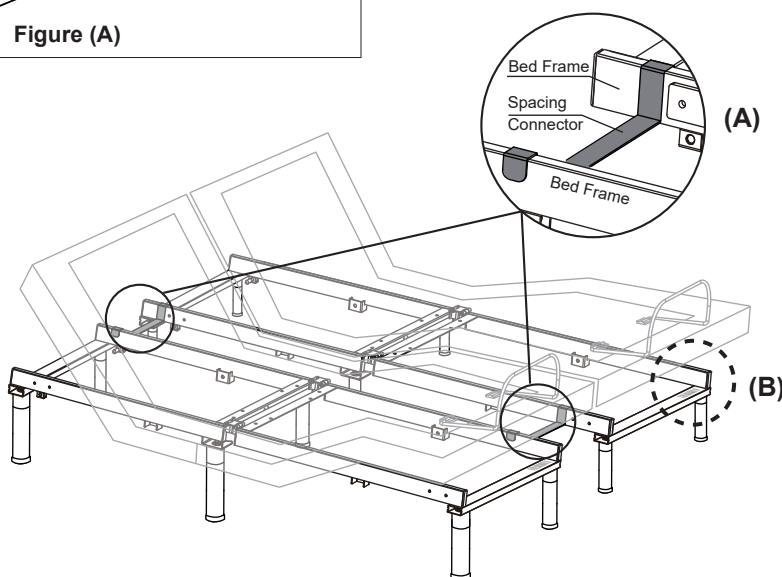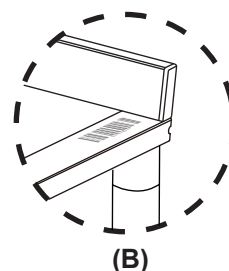

Lift the head and foot section of the bed and install the spacing connector as shown.

PRODUCT PROTECTED BY FOLLOWING PATENTS:  
— US PATENT: 10, 306, 994  
— CN PATENT: 2, 017, 212, 139, 372  
— CN PATENT: 2, 017, 212, 138, 628  
— CN PATENT: 2, 018, 209, 869, 548  
— CN PATENT: 2, 023, 220, 840, 177

Customer Service Toll Free: 1-844-696-6886

Email: [motoservice@hhcusacorp.com](mailto:motoservice@hhcusacorp.com)







revive

Thank you for purchasing a Power Foundation.

Contact Customer Service Toll Free at

1-844-696-6886

Email: [motoservice@hhcusacorp.com](mailto:motoservice@hhcusacorp.com)