CORSTON
ARCHITECTURAL DETAIL
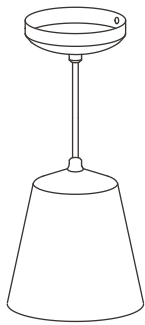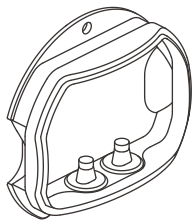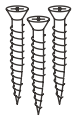
Richmond pendant light
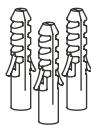INSTRUCTIONS

INCLUDED

Light body x1

Ceiling mount x1
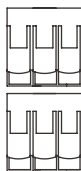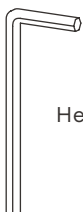
Wall screw x3

Anchor x3
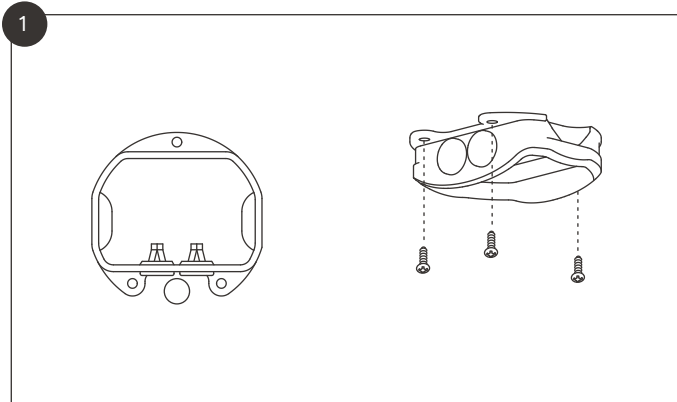
2-terminal WAGO x1

3-terminal WAGO x2
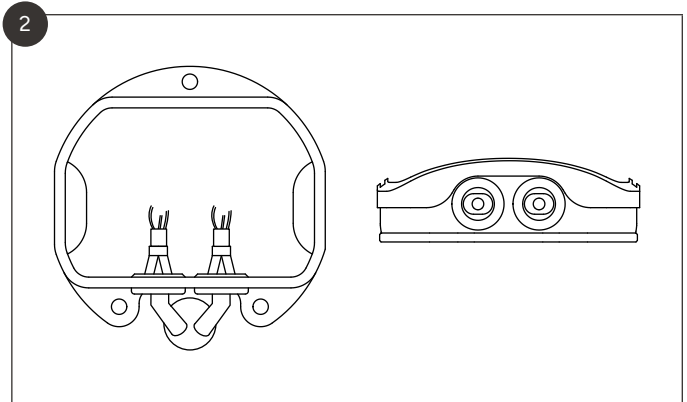
Hex key x1

TOOLS YOU'LL NEED

Crosshead screwdriver

Note: the glass cover protects the bulb in wet environments and is required for the IP rating. If the light is installed in a dry setting, you can remove the glass cover to increase the life expectancy of the bulb.
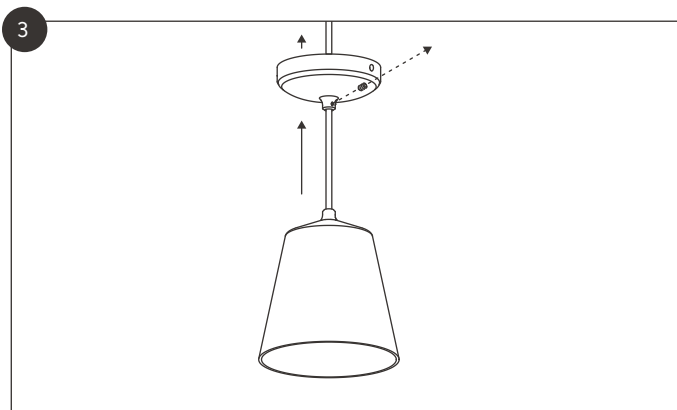
CORSTON
ARCHITECTURAL DETAIL

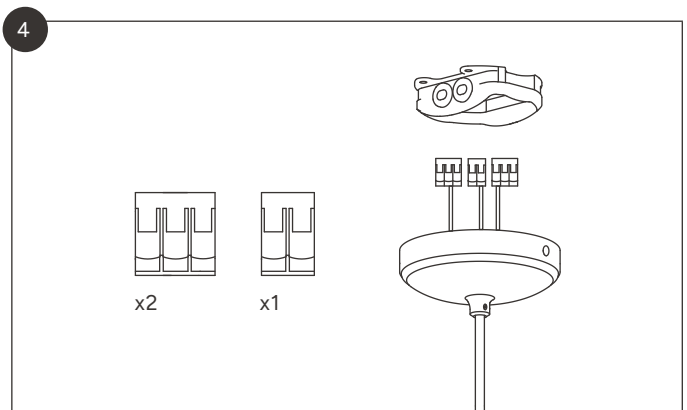## Richmond pendant light instructions

1

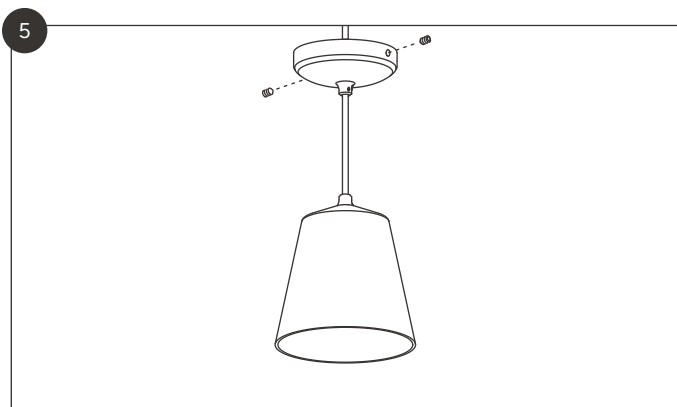Install the pendant light mount, using wall plugs if needed. See **page 3** for dimensions.
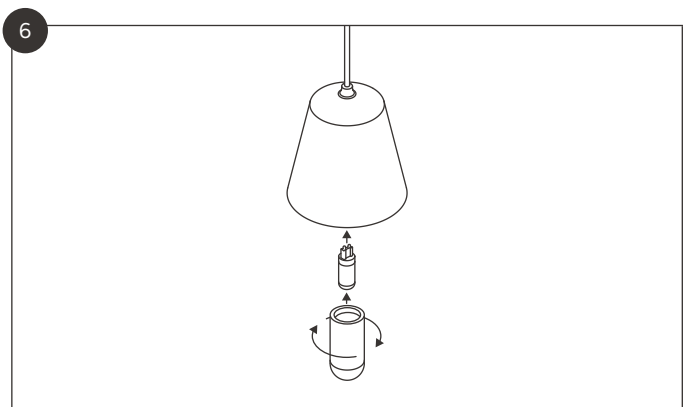
2

Push the wires through the grommet.

3

Adjust the cable length using the grub screw.

4

x2   x1

Make the connections in the base using the WAGO connectors provided.

5

Tighten the grub screws.

6

Unscrew the glass cover to fit the bulb.

CORSTON
ARCHITECTURAL DETAIL

Richmond pendant light instructions

All holes Φ5mm

Print on A4

73mm

46mm