



## Aoocci C3 Series User Manual

<https://aoocci.com>  
[support@aoocci.com](mailto:support@aoocci.com)

### Power Connect Precautions:

1. The smart screen's power wire (Red ACC+12V) must be connected to your motorcycle's ACC+12V (Not B+ on the battery).
2. The smart screen's negative wire (Black) must be connected to the negative terminal of your motorcycle's battery.

### NOTE:

1. If the smart screen's power wire (Red ACC+12V) is connected to the motorcycle's battery's constant power (B+), the screen will not turn off when the ignition is off.
2. If the smart screen's power wire (Red ACC+12V) is connected to a motorcycle which a power supply greater than 12V, it will burn out the smart screen.


### Connect to Bluetooth headphones or helmet:

1. Bluetooth earphones and helmets can only be connected to your mobile phone for use, and can not be connected directly to the smart screen.
2. Before or after successfully enabling CarPlay or Android Auto through your phone with the screen's Bluetooth, you need let your phone connect to Bluetooth earphones or helmets. This will allow you to hear the audio from your phone through your Bluetooth device.


### Other Notes:

1. Smart screen can only be connected to the DVR and TPMS monitors produced by our company.
2. The USB power supply is unstable, it is recommended to connect to the motorcycle's ACC+ (12V).
3. Do not use a high-pressure water gun to rinse the screen, camera, and tire pressure monitor.

### Installation Diagram:

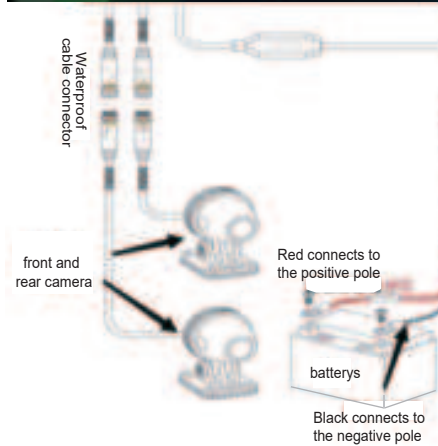

### Bracket installation:

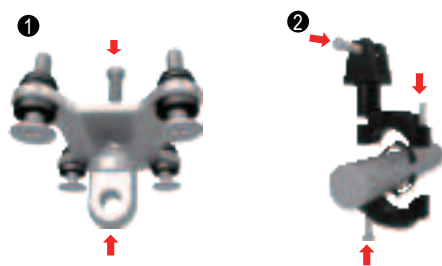

1. Twist the ball head onto the back clip (to be tightened)
2. Variable diameter handle set, supporting 12-28 cm original handlebars for each vehicle model .



3. Install the host on the bracket, adjust it to the appropriate position according to the vehicle model, and then tighten the screws to complete the installation.


### Tire pressure installation guide



1. Set the tire pressure unit according to the requirement, either Bar or Psi.
2. Set the air pressure alarm value according to different car models. The tire pressure will be red-warned if it is too low or too high compared to the set value.
3. Tire pressure pairing: A corresponds to the front wheel (FRO), B corresponds to the rear wheel (BAC). Click to pair Install the A tire pressure sensor and activate it on the front wheel, then install the B tire pressure sensor and activate it on the rear wheel.

**Note:** If the tire pressure value is not displayed, please pair again. If you need to replace the sensor, please unpair and then pair with a new tire pressure sensor.

### Operation of the Driving Recorder :

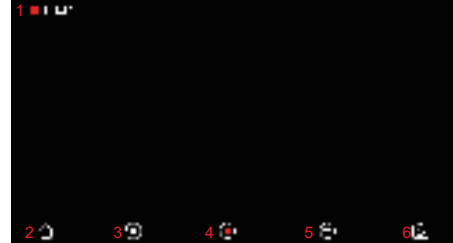

1. recording time.
2. homepage.
3. video playback.
4. Stop recording-Start recording.
5. swap the front and rear recordings.
6. take a photo.

### Replay interface function introduction



1. video playback
2. video recording
3. function settings
4. homepage
5. unlocked video photo
6. locked video
7. photo
8. play/pause
9. lock video
10. full screen
11. switch between front and rear screen recording
12. checklist
13. delete the checklist

### 5. Connecting the Mobile Phone to View the Recorder



- 1: On the display, click on CarPlay — WiFi Video.
  - 2: Scan the QR code to download the APP
  - 3: Turn on the WiFi switch on your phone to connect to the display's WiFi ( password: 12345678).
  - 4: After a successful connection, the mobile phone can display the recorder screen.
- [Note: Android phones can download videos to the local phone. while Apple phones can only download to iCloud.]