






 **SYNERGEE[®]**

ADJUSTABLE INCLINE BENCH

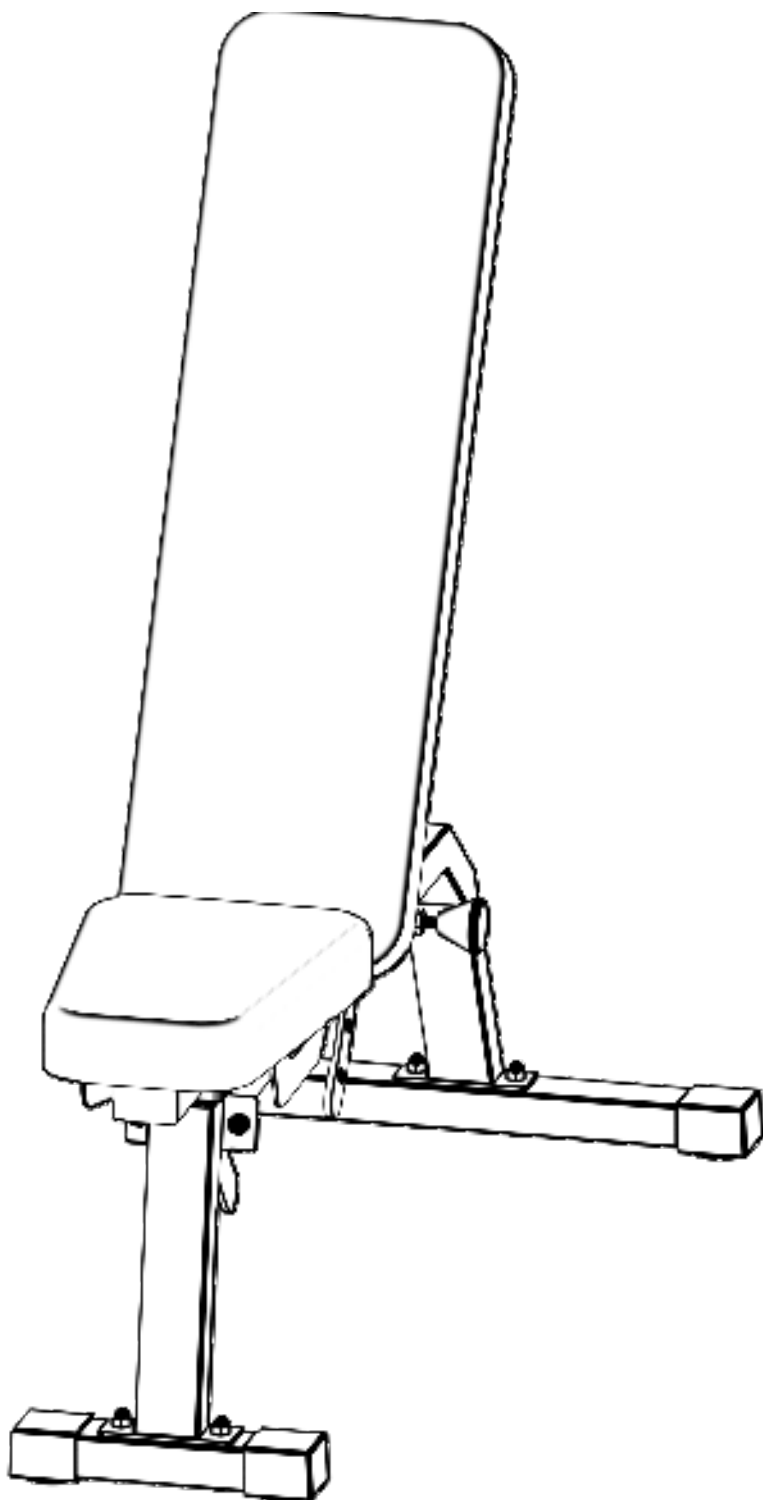

PARTS LIST

IF ANY PIECES ARE MISSING, PLEASE CONTACT US IMMEDIATELY:
HELLO@SYNERGEEFITNESS.COM OR 1.855.217.7136

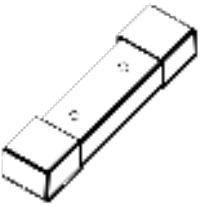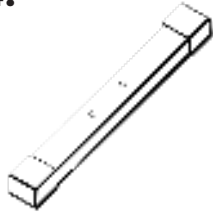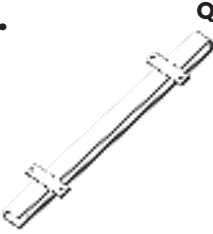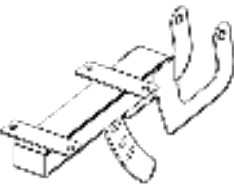1.  02-09-01 QTY x1	2.  02-09-02 QTY x1	3.  02-09-03 QTY x1	4.  02-09-04 QTY x1	5.  02-09-05 QTY x1
6.  02-09-06 QTY x1	7.  02-09-07 QTY x1	8.  02-09-08 QTY x1	9.  02-09-09 QTY x1	10.  02-09-10 QTY x2

PARTS LIST

IF ANY PIECES ARE MISSING, PLEASE CONTACT US IMMEDIATELY:
HELLO@SYNERGEEFITNESS.COM OR 1.855.217.7136

A. QTY x12  M8x20 FULLY THREADED BOLT	B. QTY x2  M10x20 FULLY THREADED BOLT	C. QTY x4  M10x55 FULLY THREADED BOLT	D. QTY x1  M10x100 PARTIALLY THREADED BOLT	E. QTY x12  M8 WASHER
F. QTY x14  M10 WASHER	G. QTY x6  M10 CAP NUT	H. QTY x1  M10 NUT		




HARDWARE SIZING CHART

**M8x20
BOLT**




**M10x20
BOLT**

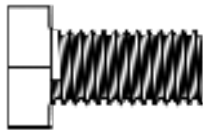

**M10x55
BOLT**



**M10x100
BOLT**

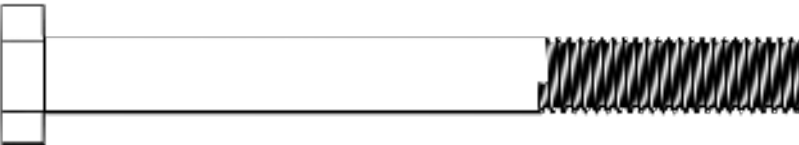


ASSEMBLY

STEP: 1

STEP PART GUIDE

#	PART NAME	QTY
1.	02-09-01	1
2.	02-09-02	1
3.	02-09-03	1
4.	02-09-04	1
B.	M10X20 FULLY THREADED BOLT	2
C.	M10X55 FULLY THREADED BOLT	4
F.	M10 WASHER	12
G.	M10 CAP NUT	6

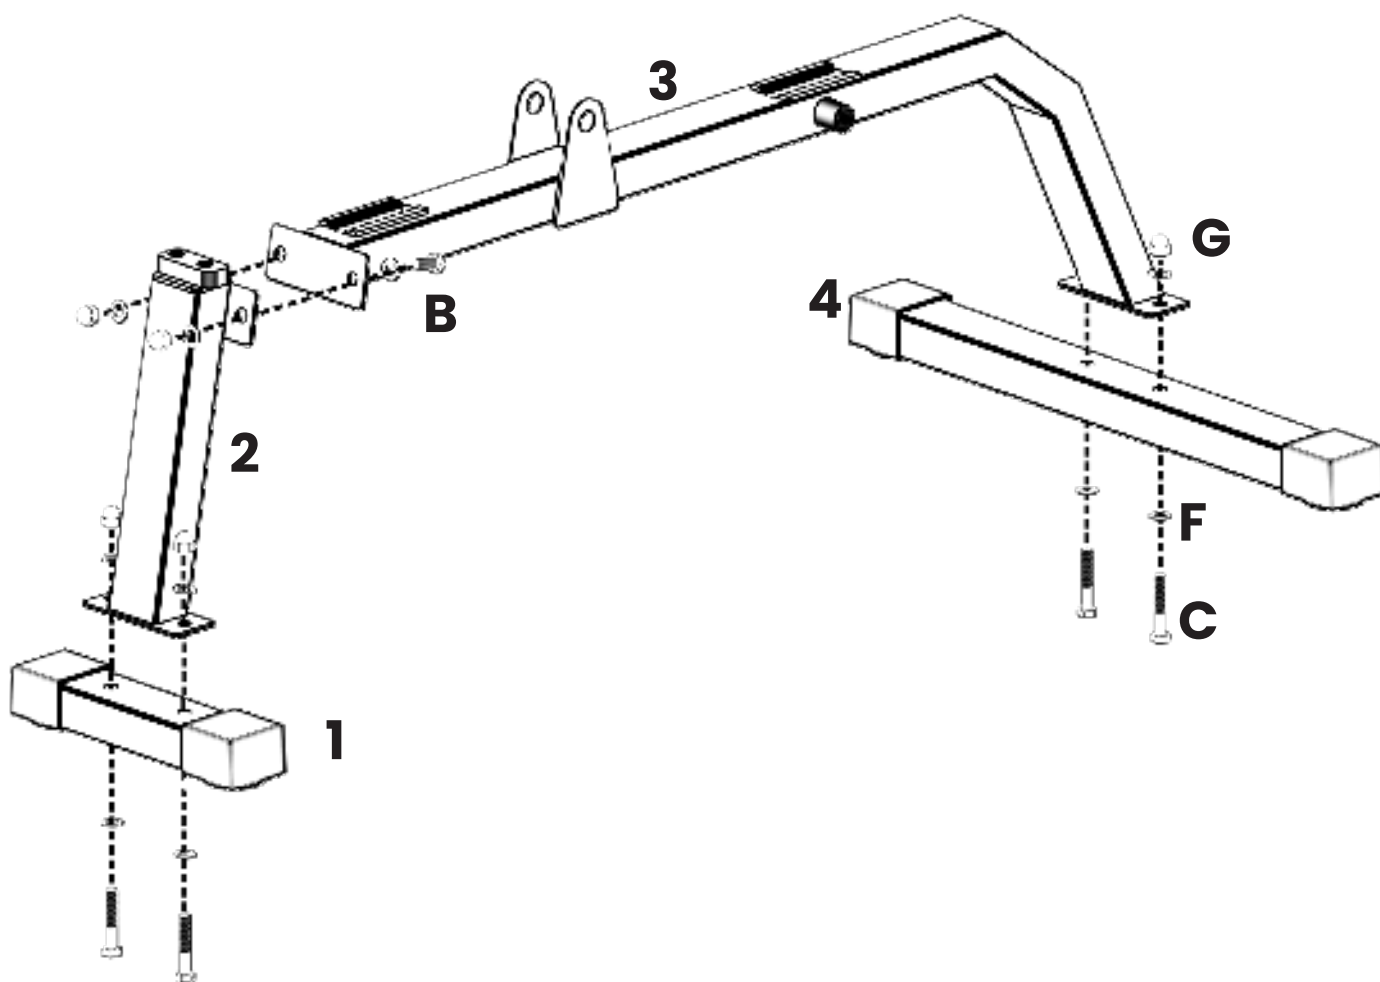


ASSEMBLY

STEP: 2




ATTENTION

ENSURE THE LOGO IS
IN THE TOP LEFT SIDE
OF THE SEAT

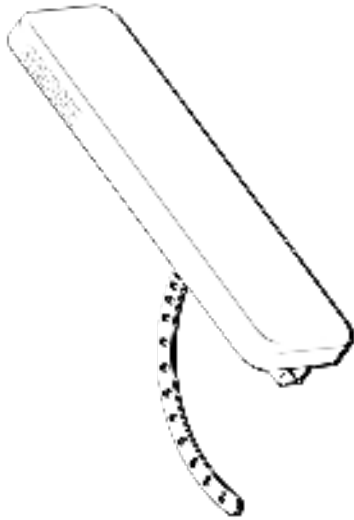

STEP PART GUIDE

#	PART NAME	QTY
5.	02-09-05	1
6.	02-09-06	1
7.	02-09-07	1
A.	M8x20 FULLY THREADED BOLT	8
E.	M8 WASHER	8

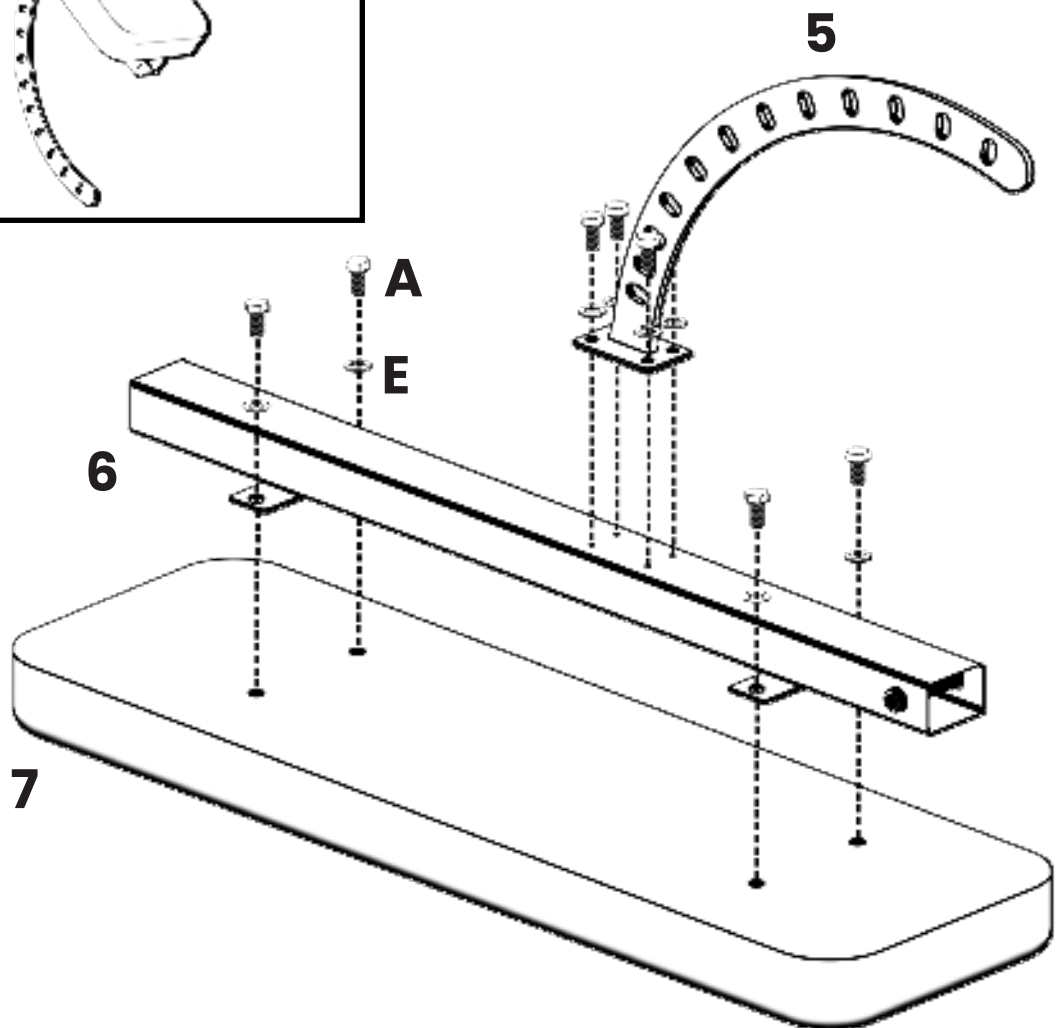


ASSEMBLY

STEP: 3

STEP PART GUIDE

#	PART NAME	QTY
8.	02-09-08	1
9.	02-09-09	1
A.	M8x20 FULLY THREADED BOLT	4
E.	M8 WASHER	4


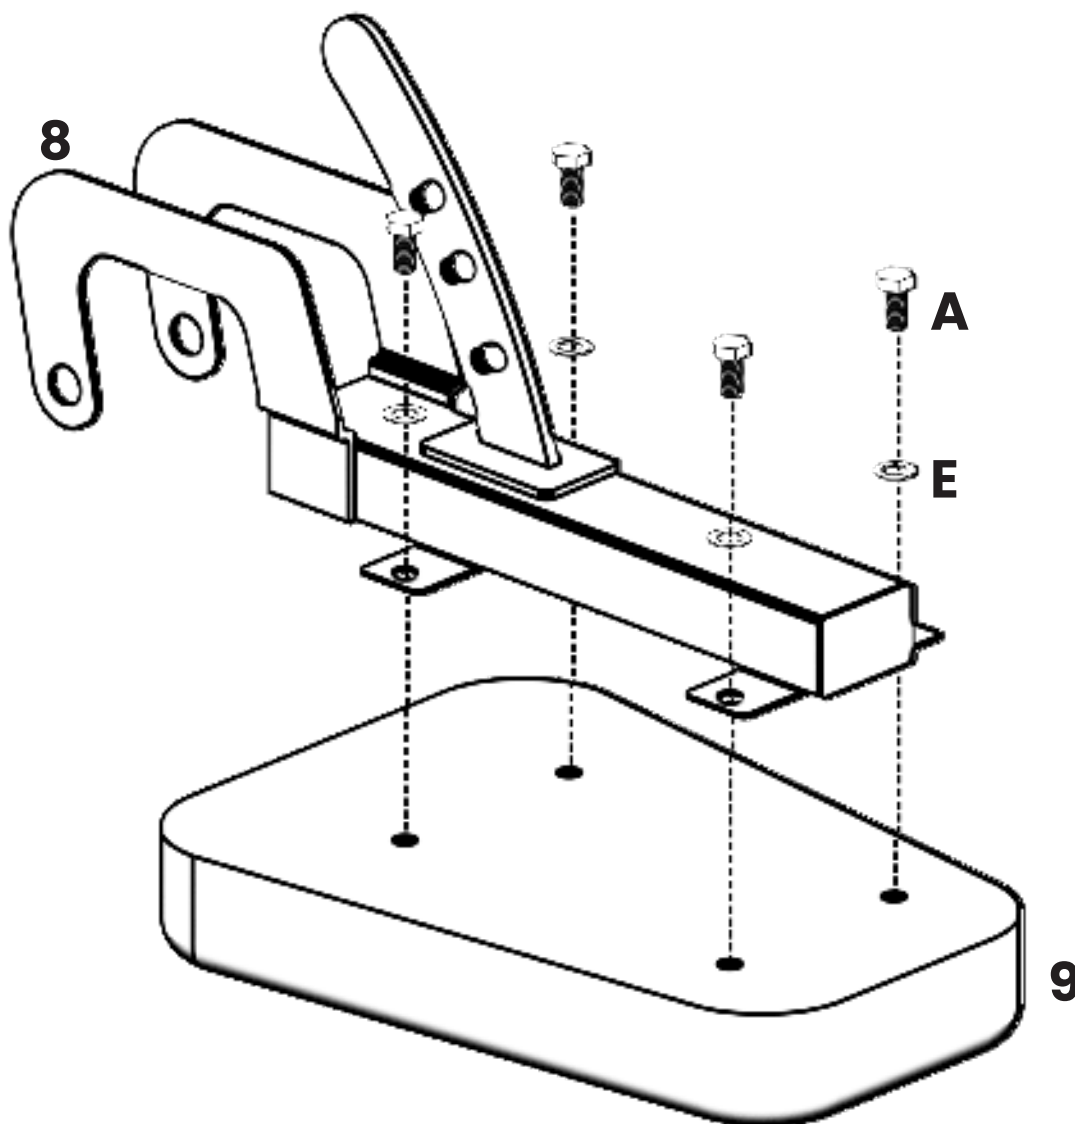


ASSEMBLY

STEP: 5-A

STEP PART GUIDE

#	PART NAME	QTY
-	ASSEMBLY FROM STEP 2	-
-	ASSEMBLY FROM STEP 3	-

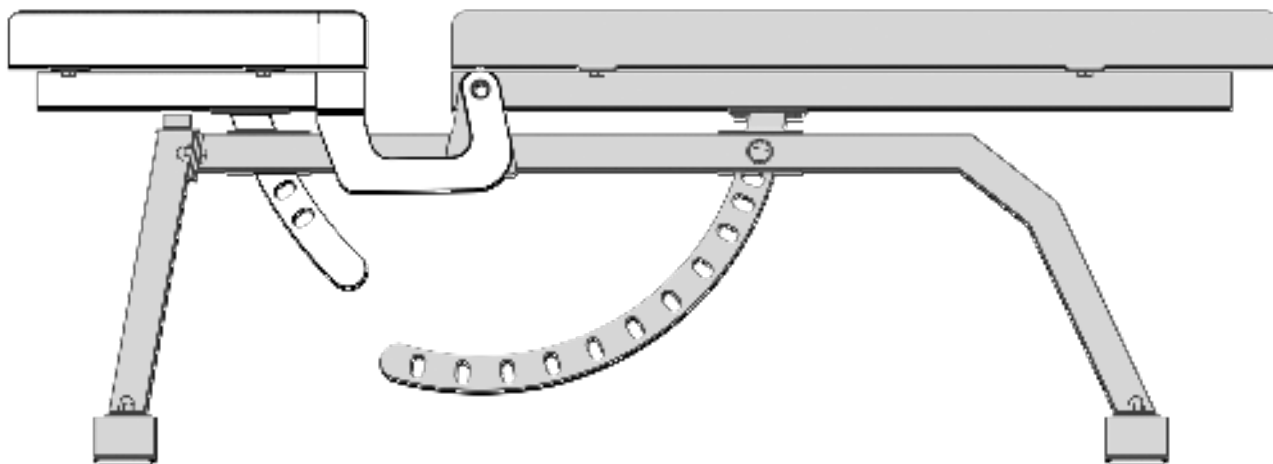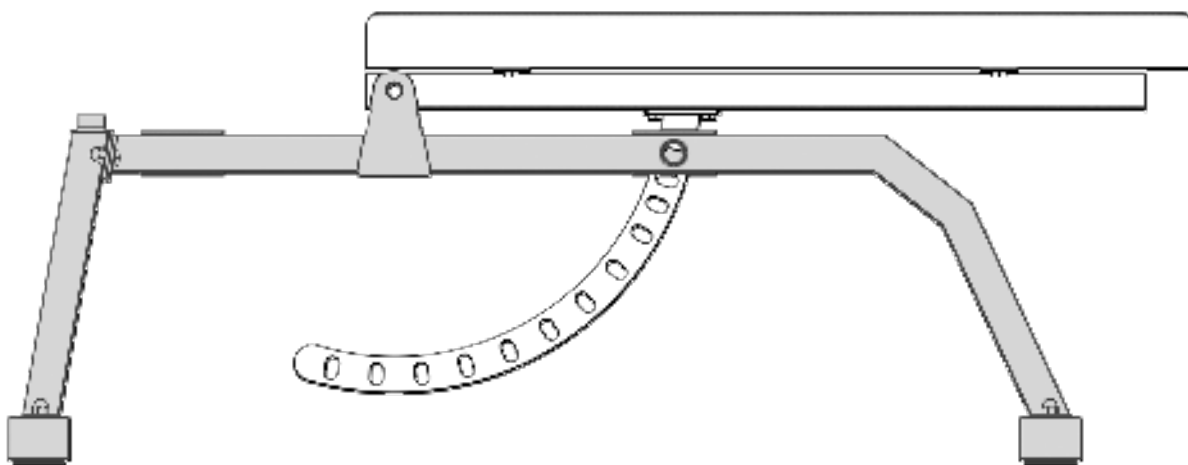


ASSEMBLY

STEP: 5-B

STEP PART GUIDE

#	PART NAME	QTY
D.	M10x100 PARTIALLY THREADED BOLT	1
F.	M10 WASHER	2
H.	M10 NUT	1

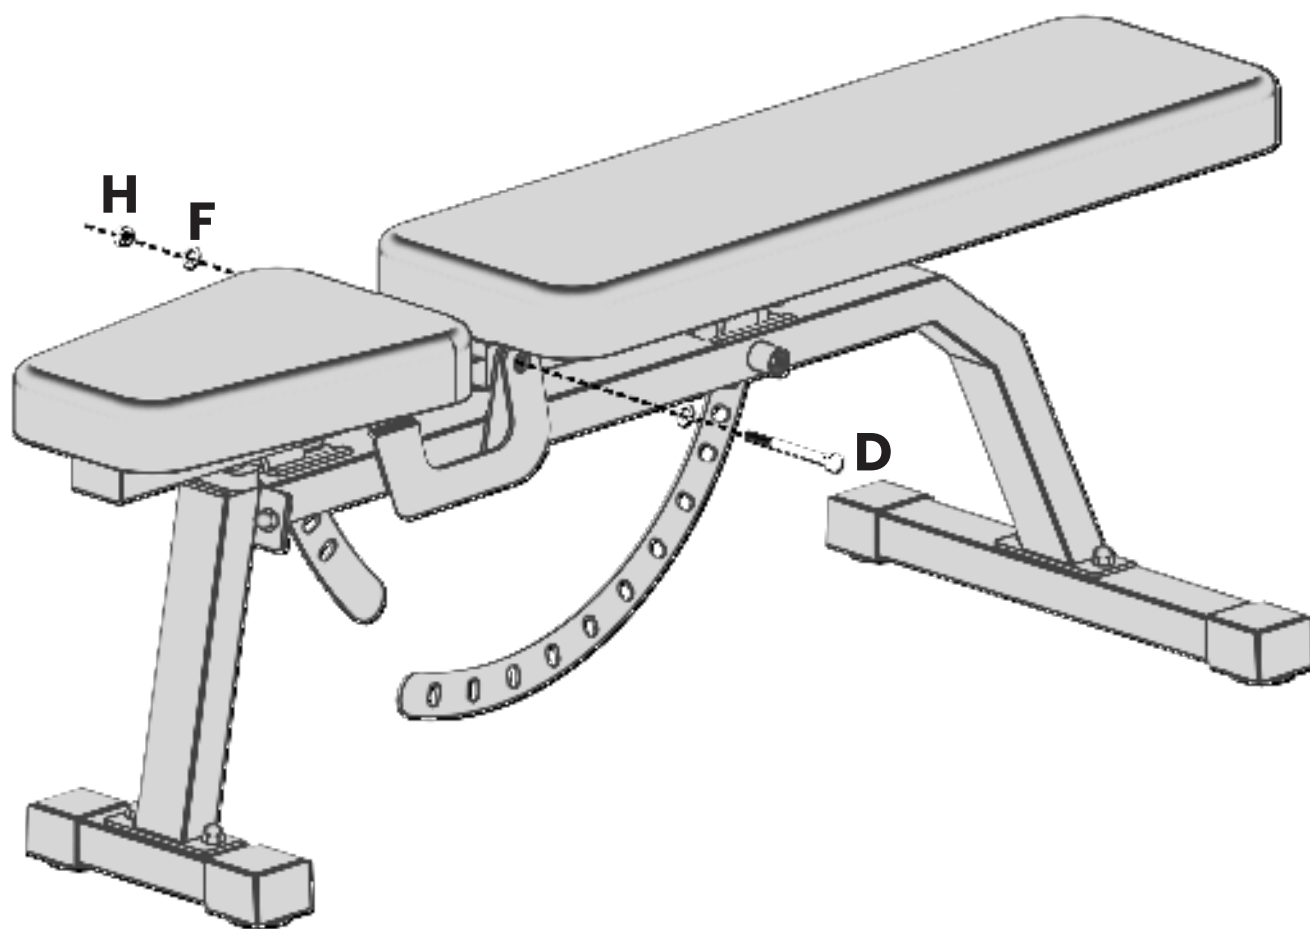

ASSEMBLY

STEP: 6

STEP PART GUIDE

#	PART NAME	QTY
10.	02-09-10	2

