
Installation & Assembly

Compression must wait for 72 hours before it can be unfolded, and it needs to be flapped by hand




Parts list 1

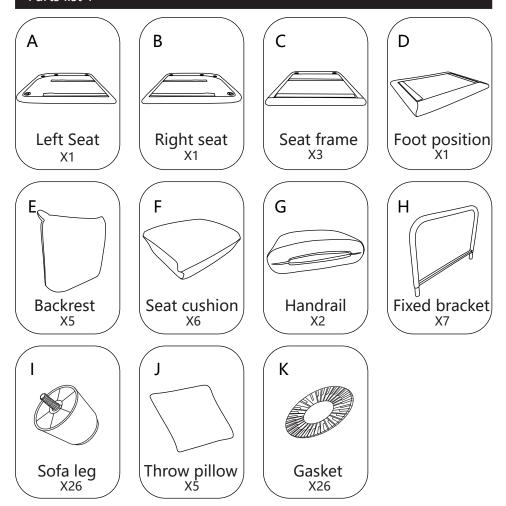


Ax1 Ex1 Fx1 Gx1 Hx2 Ix5 Jx1 Kx5
Bx1 Ex1 Fx1 Gx1 Hx2 Ix5 Jx1 Kx5
Cx2 Ex2 Fx2 Hx2 Ix8 Jx2 Kx8
Cx1 Dx1 Ex1 Fx2 Hx1 Ix8 Jx1 Kx8


Open the carton, remove the compression bag, cut the compression bag (beware of sharp objects scratching the interior of the sofa), and wait for the sponge to bounce back.

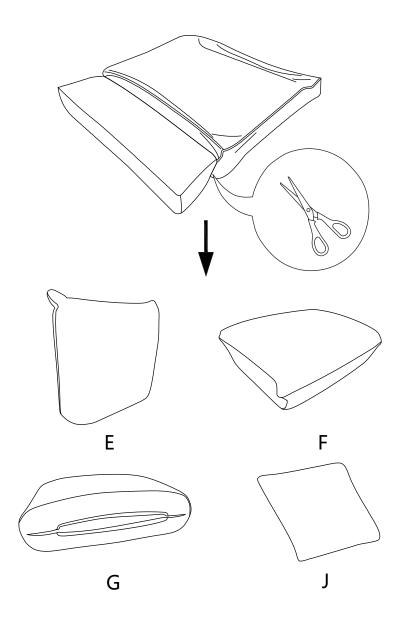


Press the support frame (H) from the top down into the holes above the three seat frames to ensure that all are pressed into the bottom.

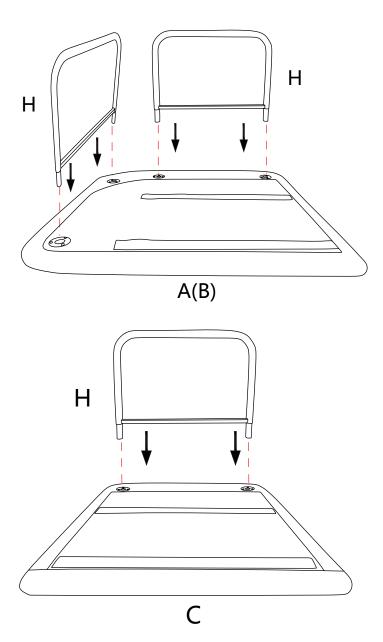


Flip all the seat frames (A&B&C&D) to the bottom and install all the round feet (I) into the corresponding holes. Note: The sofa legs marked by the red circles on the left and right seat frames (A&B) are the holes installed at the bottom of the Fixed brackets, so the Fixed brackets need to be installed in advance.

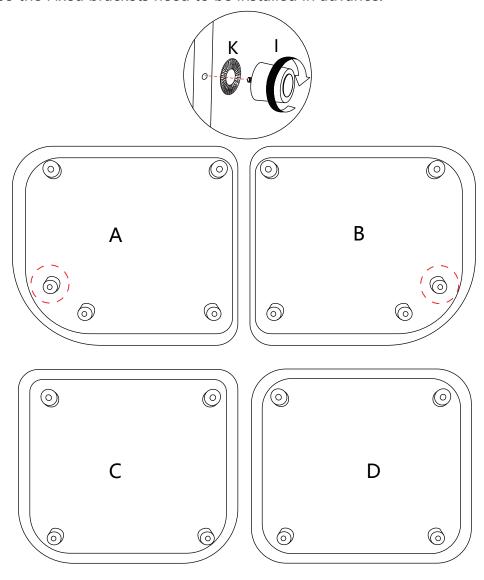

Just insert the armrest (G) and backrest (E) into the support frame from top to bottom.

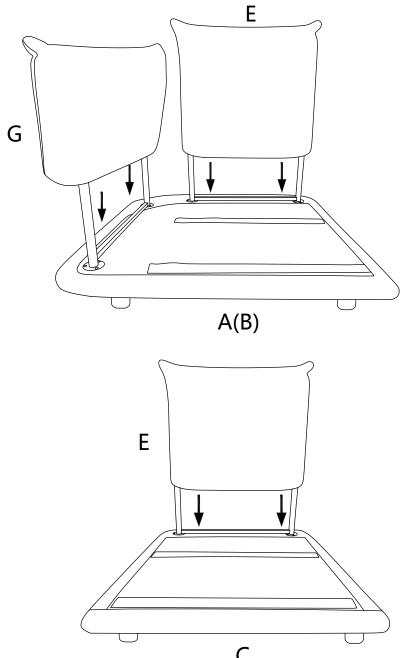

Fasten the mouth facing down plug-in from top to bottom to the entrance facing up plug-in to complete the combination of seats. Finally, tear the sticky cloth off the seats.

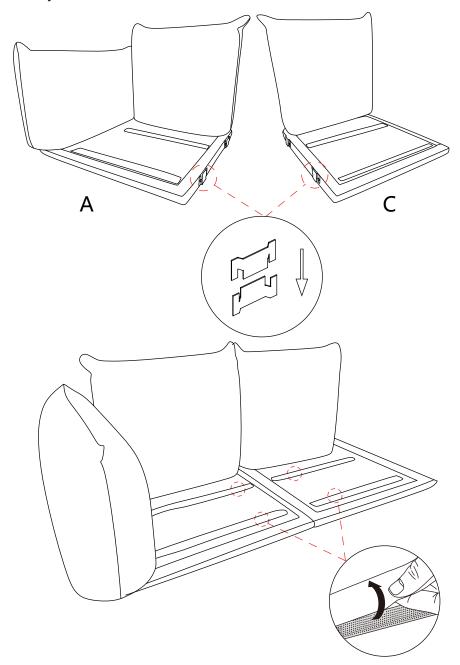

Finally, only the seat cushion (F) and throw pillow (J) need to be placed on the sofa, and this product can be arbitrarily combined with the number of products purchased by users.

