


Instructions

- **Slide the weight to the opposite side of the BOSFab leader wrap.** This isn't essential, but it helps the BOSFab leader wrap slide further onto the diver.

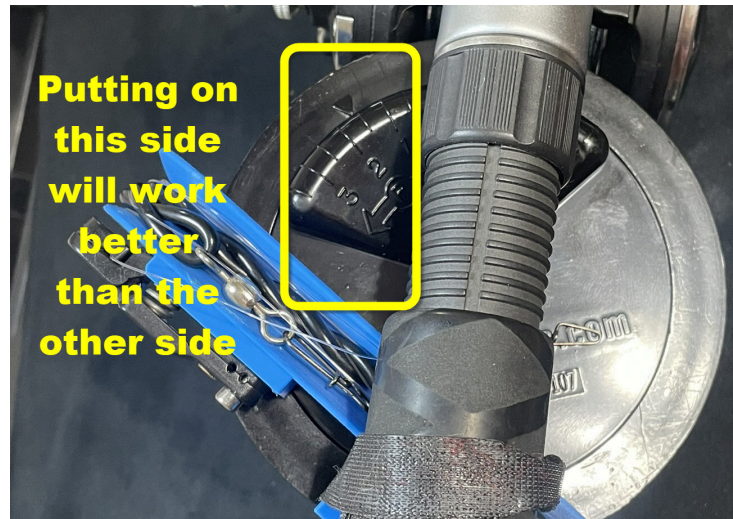

- **Position the leader wrap on the diver with the clip facing down and out.** Facing the front or the back of the diver does not matter.



- **If using velcro to attach to your rod, snap the diver release closed and tuck the diver under the bottom of the reel and velcro the BOSFab leader wrap to the rod.** This helps keep the line more centered and prevents the diver from pulling to one side. Every rod and reel is going to be a bit different and you may have to try and see what works best for your setup.

