

USER MANUAL

TAIL LIGHTS



Model.: WJ20-0004

Chevy Silverado 1500/2500 1999-2002

Chevy Silverado 1500/2500 2003-2006

Chevy Silverado 3500 2001-2006

Chevy Silverado Classic Body Style 2007 (NOT FIT other models)

GMC Sierra 1500/2500 1999-2002


GMC Sierra 3500 2001-2002

REQUIRED TOOLS


Socket




Ratchet



Flathead
Screwdriver



Phillips
Screwdriver



Panel
Remover



Installation Instructions

1



2. Open the tail gate and locate the two screw and remove them.



3. Remove the taillight by pulling straight out



4. Remove all sockets from the taillight housing



5



Brake Light
Running Light

Turn Signal Light

Reversing Light


Turn Signal Light



VENT PIPE

Installation Point

6. Place the sockets to the new taillight.

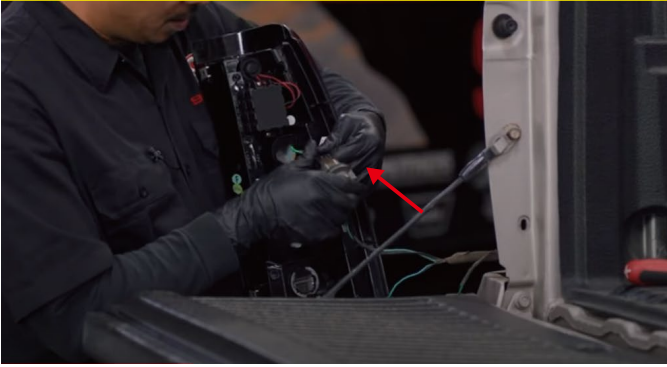

7. Place the taillight into the truck housing, secure with screws.



8

2pcs Bolts



9. Repeat the steps 2~8 for the other side.

