

## 3 DOOR 2 DRAWER WARDROBE ASSEMBLY INSTRUCTIONS

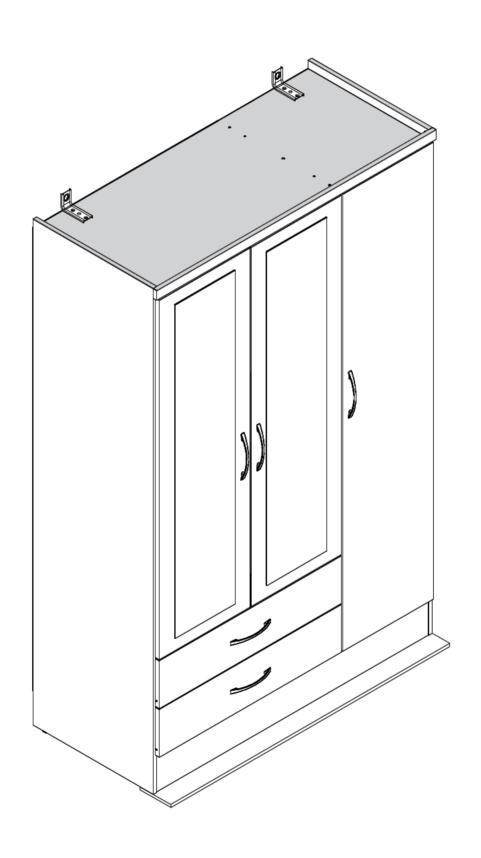

# IMPORTANT PLEASE READ BEFORE YOU CONTINUE FURTHER FOR DOMESTIC USE ONLY CARE AND MAITENANCE

- After unpacking this product please keep the original packaging in case it needs to be returned for any reason.
- Please ensure all fittings and parts are present before commencing with assembly.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible
- Never drag or push products as this could cause damage to the joints making it inferior.
- Do not drag or push items across your furniture as this may cause the surface to scratch.
- Do not place this product next to radiator or in direct sunlight.
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- · Make sure any spillage is Wiped o ffimmediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use soft cotton or micro fibre cloth and do not use detergents of any kind.
- Do not place on a wet or damp floor as staining may occur to your floor.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.

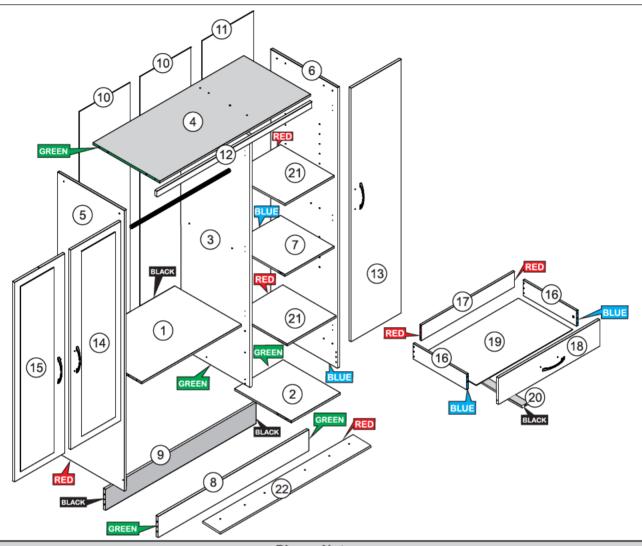

Please Note:
The parts below have been stamped with the part number/color to help identify them during assembly

### **PARTS LIST**

Part Number	Part Description	Quantity	Carton 2/3	
1	Large Base Panel - Black	1		
2	Small Base Panel - Green	2/3		
3	Division Panel - Green	1	1/3	
4	Top Panel - Green	1	2/3	
5	Left Side Panel - Red	1	1/3	
6	Right Side Panel - Blue	1	1/3	
7	Shelf - Blue	1	2/3	
8	Front Baseboard - Green	1	2/3	
9	Back Baseboard - Black	1	2/3	
10	Small Back Panel 2		3/3	
11	Large Back Panel	1	3/3	
12	Frame	1	1/3	
13	Large Door	1	3/3	
14	Right Small Door	1	3/3	
15	Left Small Door	1	3/3	
16	Drawer Side - Blue	4	2/3	
17	Drawer Back Panel - Red	2	2/3	
18	Drawer Front	2	2/3	
19	Drawer Botom	2	1/3	
20	Drawer Bottom Support Bar - Black	2	2/3	
21	Movable Shelf - Red	2	2/3	
22	Anti Tip Device - Red	1	1/3	



#### IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.






#### **AVOID SCRATCHES!**

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.





Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.







### ANTI-TOPPLE WARNING!

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


#### **IMPORTANT!**


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


#### **FITTINGS** Α В D Flat Head Screw Flat Head Screw Flan Head Screw Ø6,0 x 10mm (8x) Ø4,0 x 14 mm (52x) Ø4,0 x 20mm (10x) Support Pin 6X8 (8x) +/2 +/2 Ε G Flat Head Screw Flat Head Screw Ø3.5 x 40mm (4x) Ø4,0 x 50 mm (30x) Dowel Ø6,0 x 30mm (48x) Н Door Stopper (2x) Nail 10 x 10 (98x) 'L' Metallic Support (8x) M 0 $\{mummmmmmr$ 0 Flan Head Screw Hanging Rail Support (2x) Ø5,0 x 50mm (2x) Hinge (9x) Plastic Foot (3x) P Q Drawer Runners (2x) Hinge Plate (9x) +/2 R S Flan Head Screw 3,5 x14mm (9x) Hole Plugs (22x) Back Panel Strip (1x) Handle (5x) +/1 +/1 V X Y Glue Cam Bolt (4x) Glue (2x) Cam Nut (4x) Hanging Rail (1x) +/2 2/+ Z **A1 B1** Flat Head Screw Back Panel Bracket (16x) Ø4,0 x 12mm (25x) (2x)\* Use of power tools to assemble this product will invalidate \* Please check contents and read the instructions before commencing assembly. any claim and damage this product making it unsafe !!! \* Assemble this product following the enclosed instructions carefully. \* Please assemble on a clean soft surface to avoid damage. \* Please take care to avoid damaging panels during assembly. **TOOLS REQUIRED** 2,5m x 3m

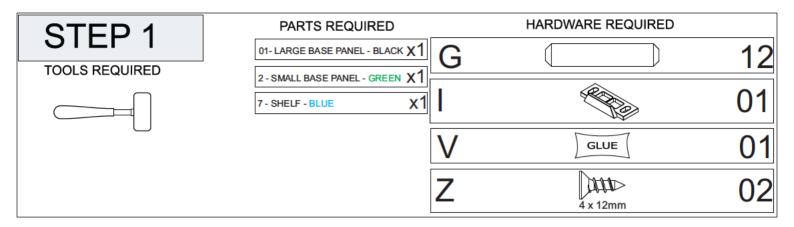


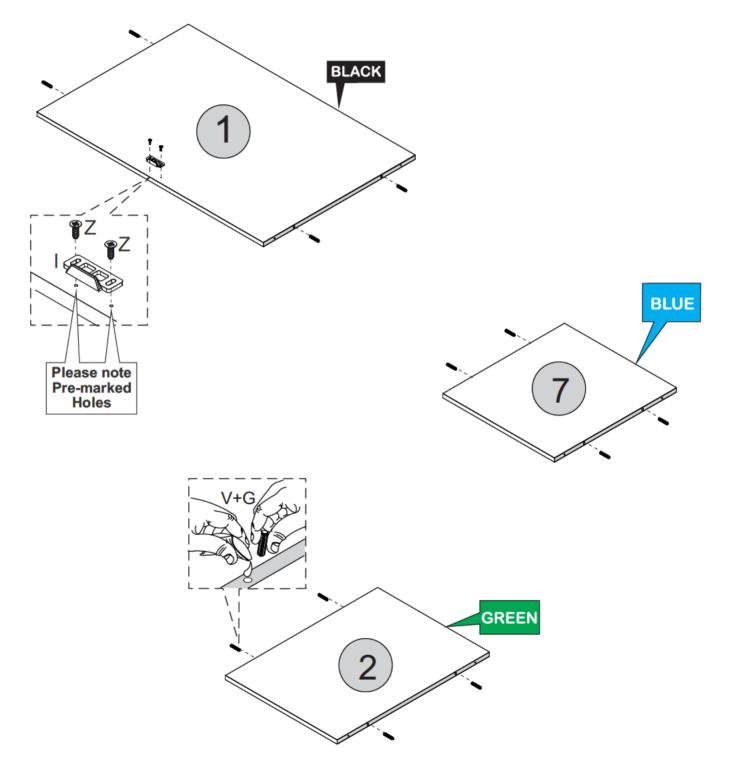


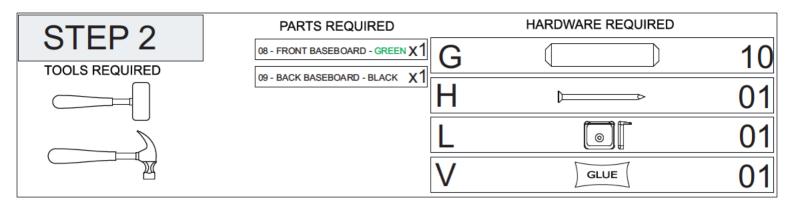


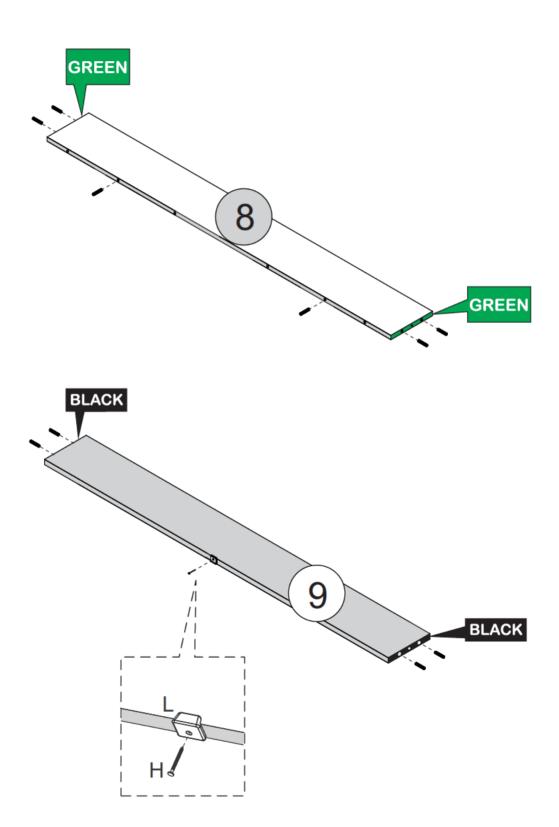


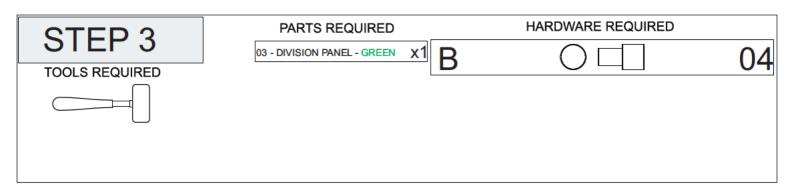


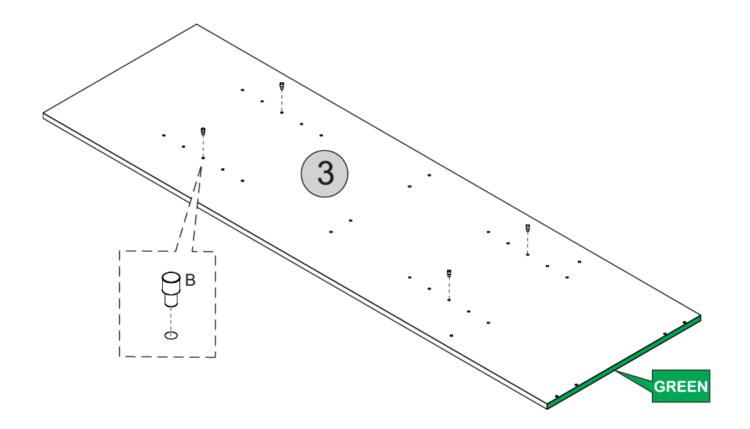


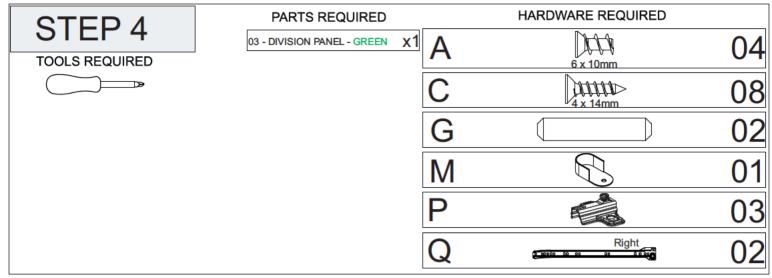


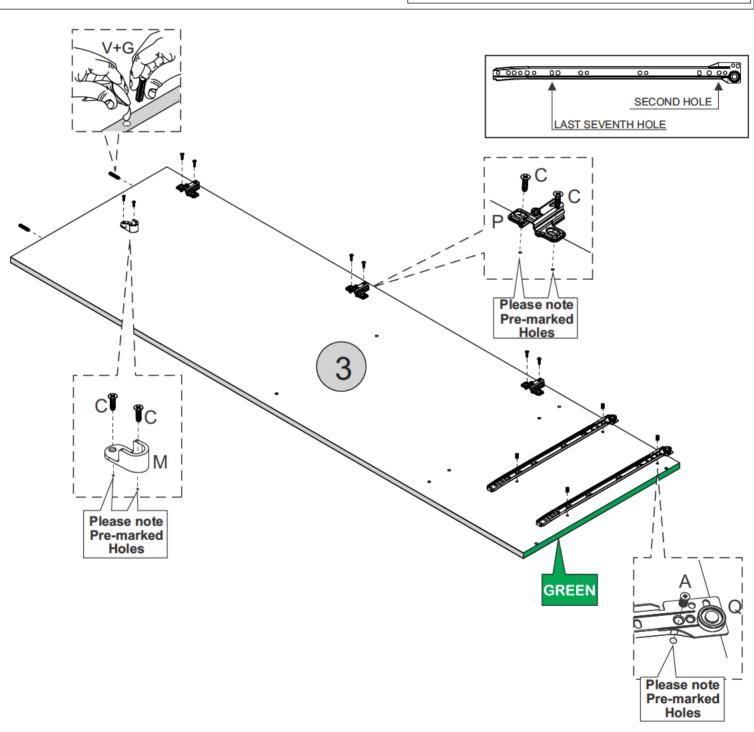


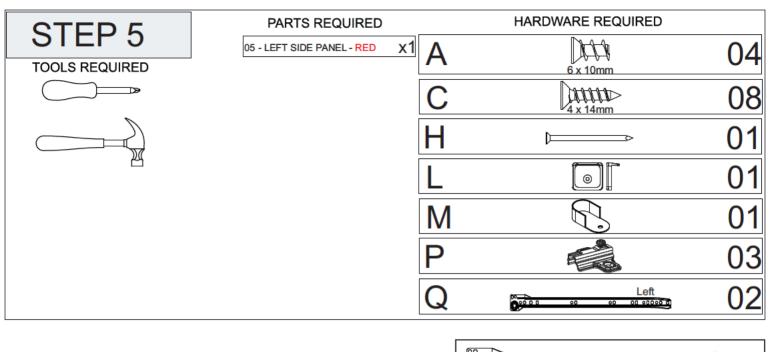


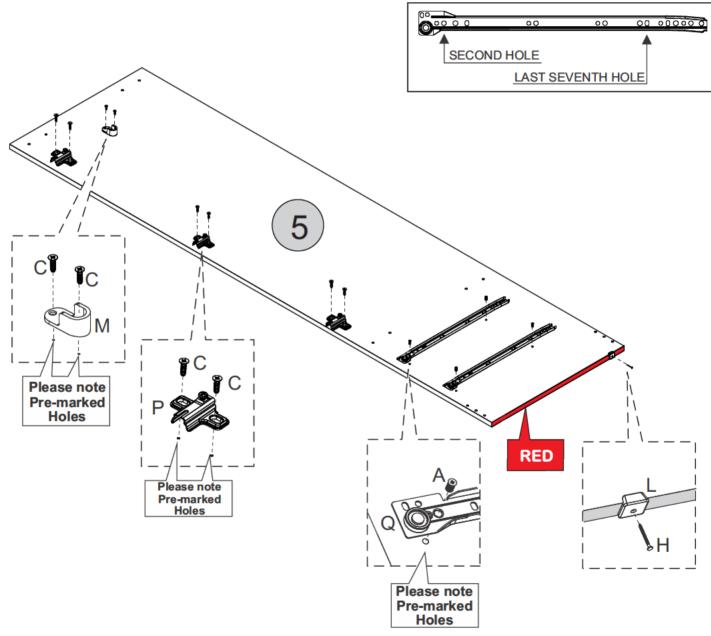


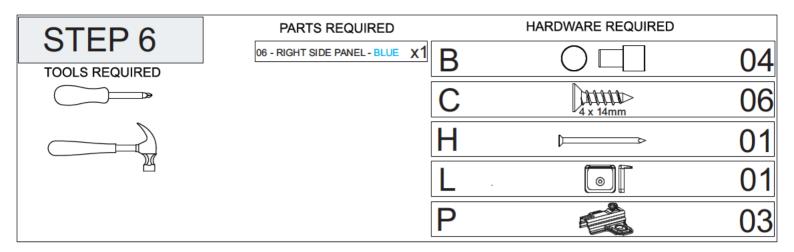


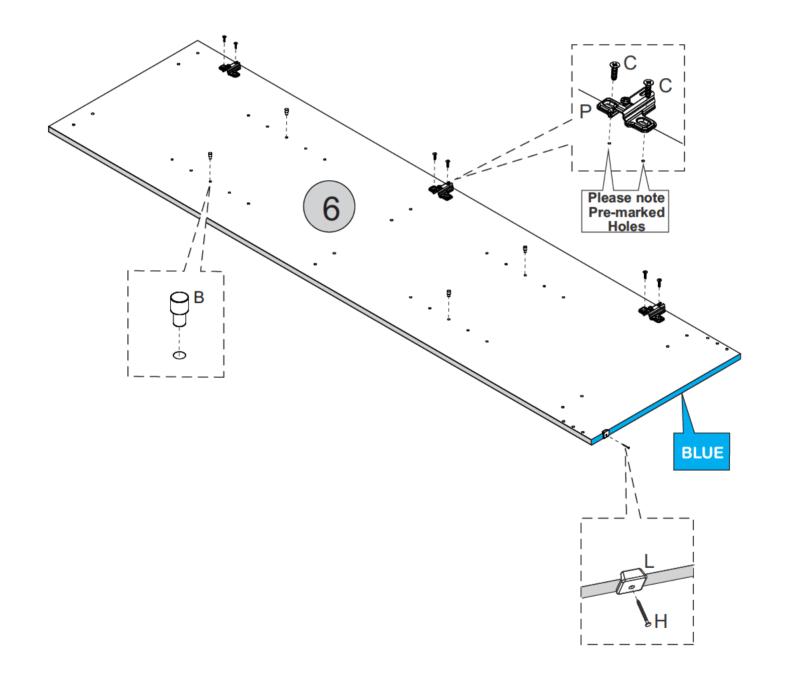


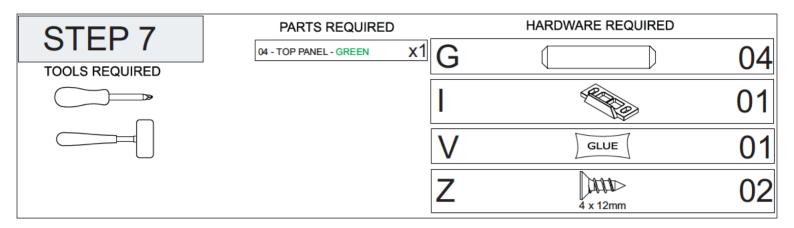

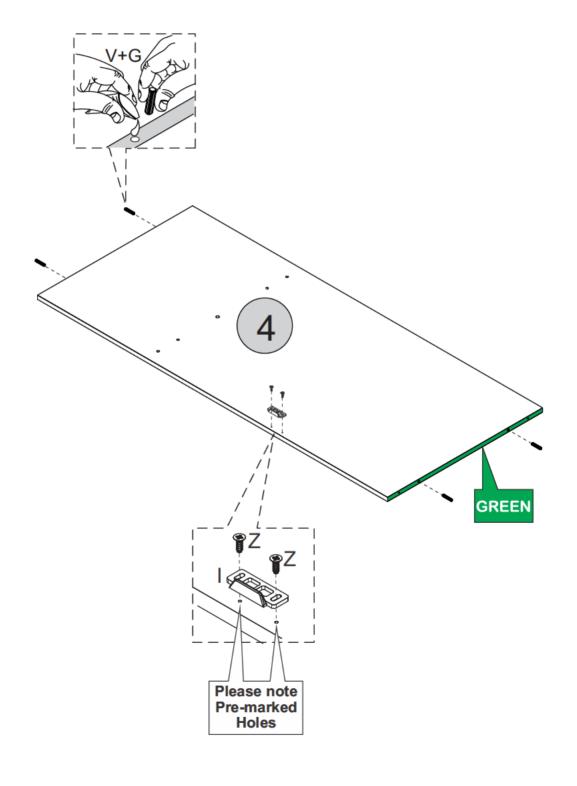


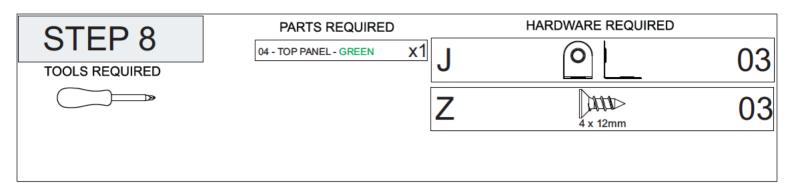


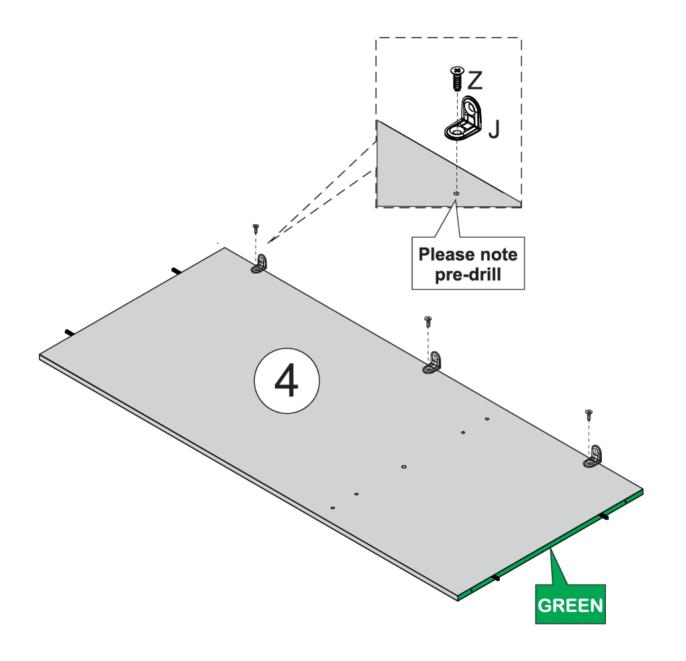

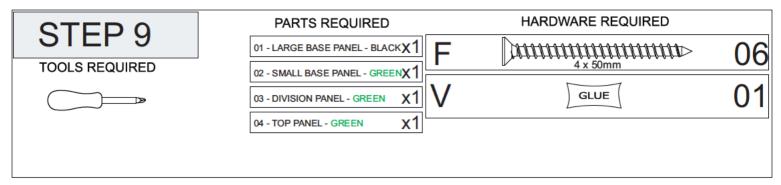





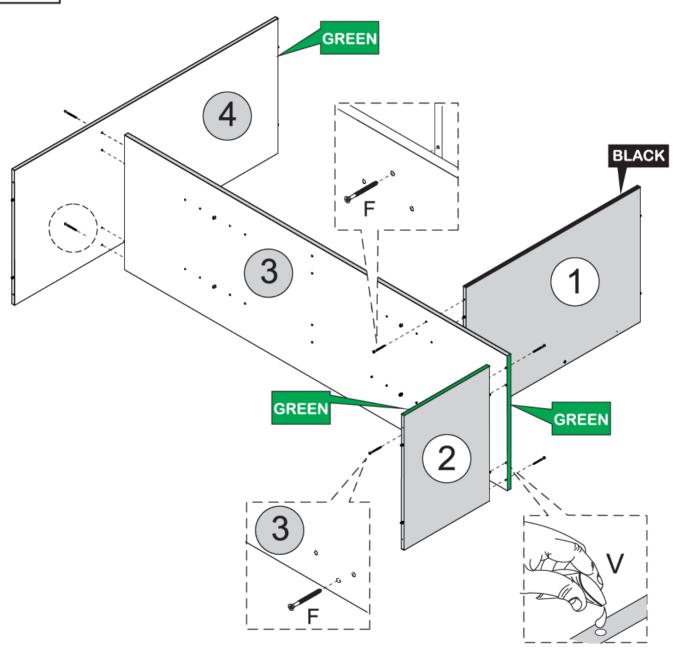


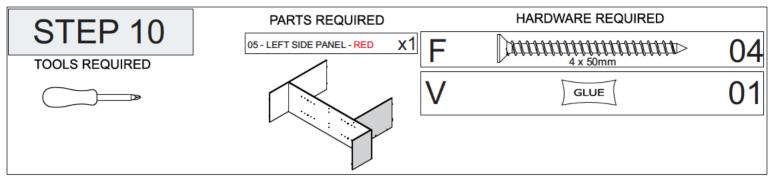




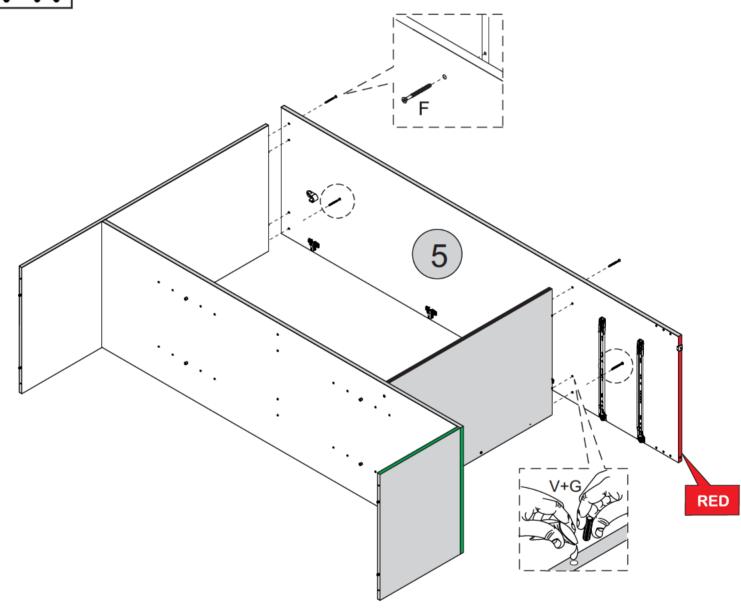

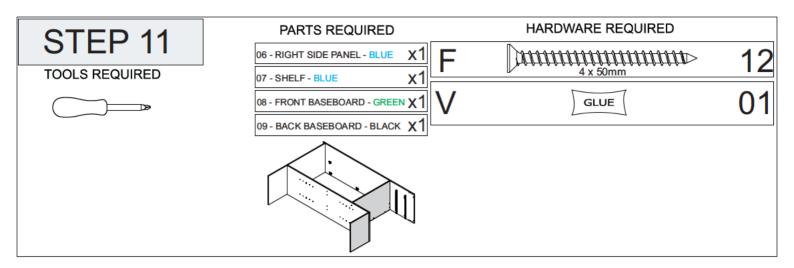

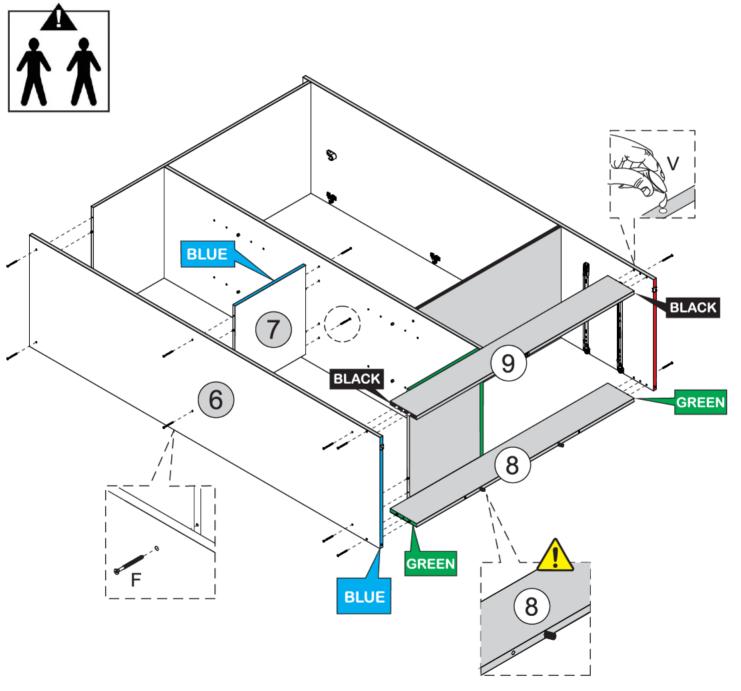

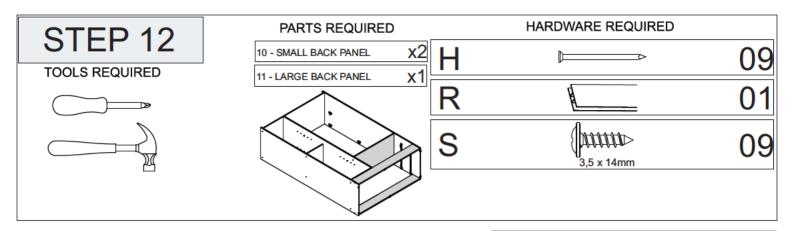


### IMPORTANT PLEASE FOLLOW!

Please make sure Part 10/11 is lined up correctly at the top before placing fitting H into the panel as this can affect the alignment of the doors once assembled.


### IMPORTANT PLEASE FOLLOW!


Please make sure Part 10/11 isn't overhanging at the sides before you screw fitting B into the plinth.

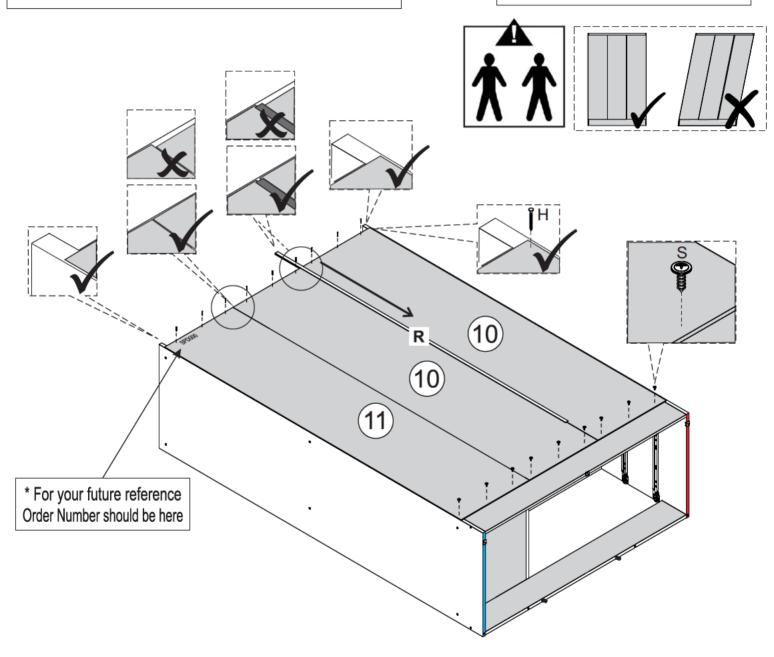



STEP 13	PARTS REQUIRED		HARDWARE REQUIRED	
		Н		50
TOOLS REQUIRED		Λ.4		40
		A1	•	16
<u> </u>				



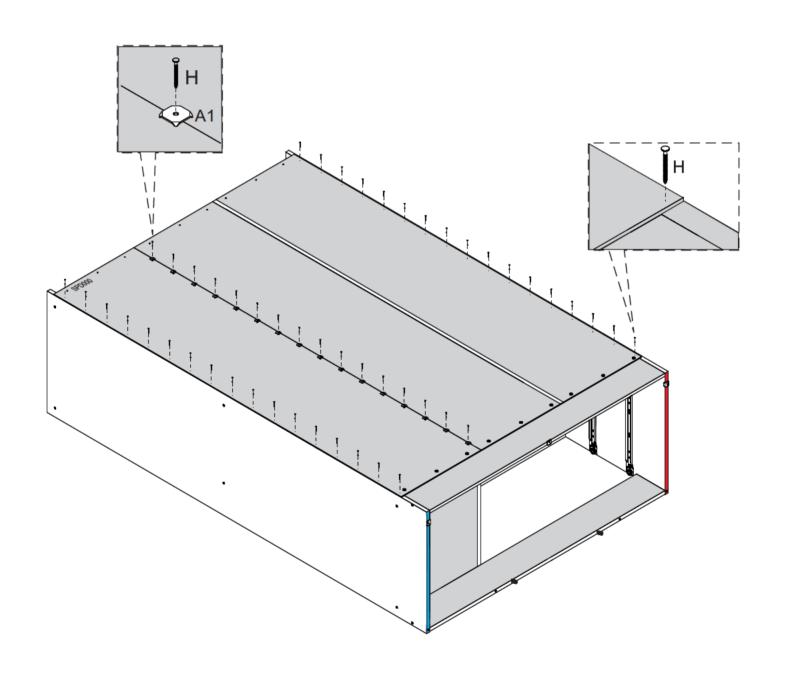


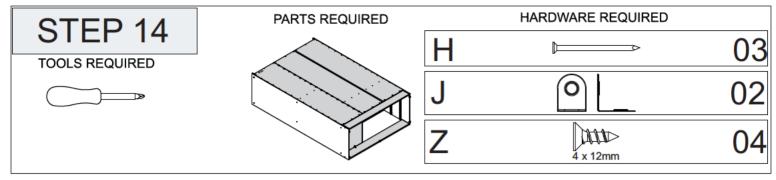


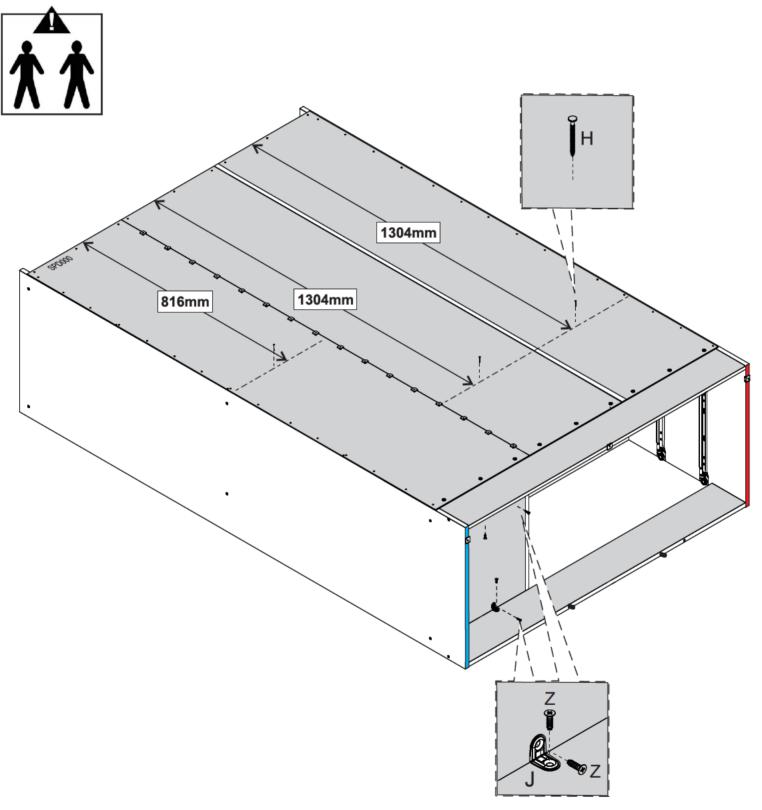

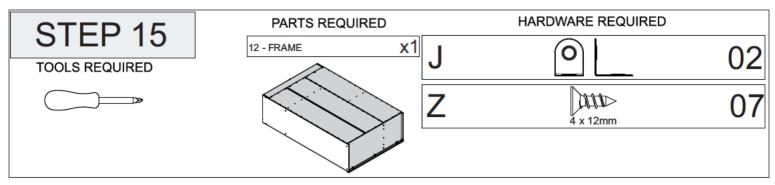





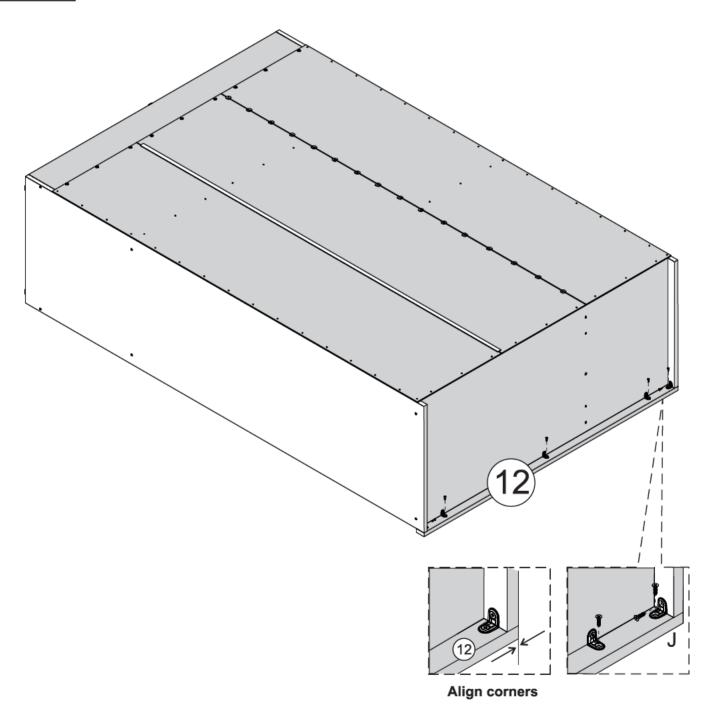

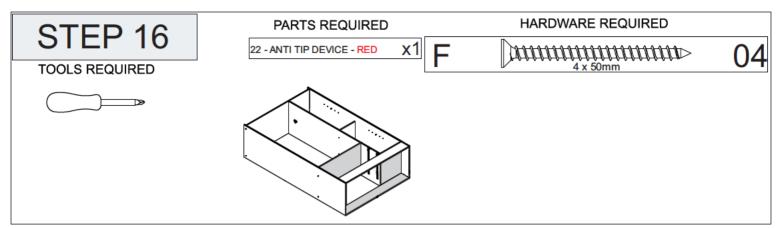





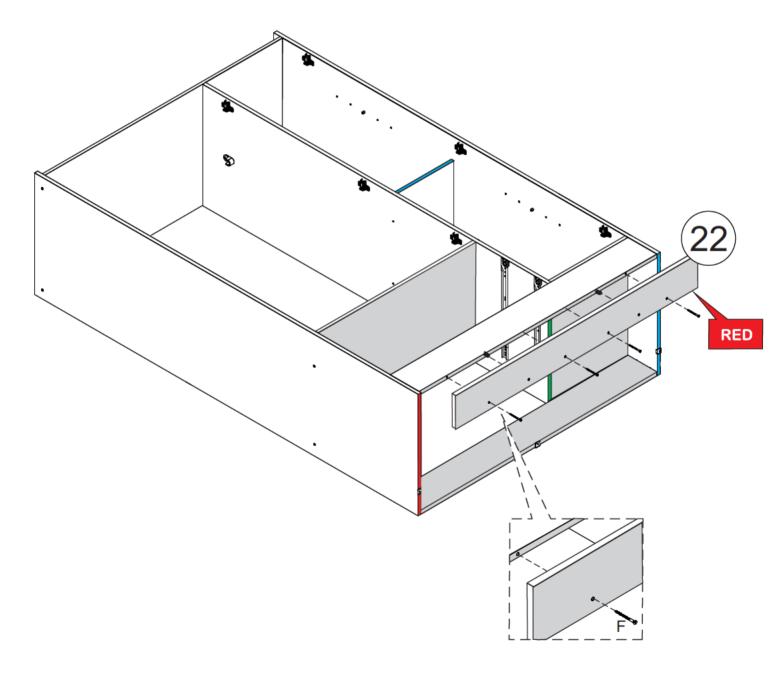

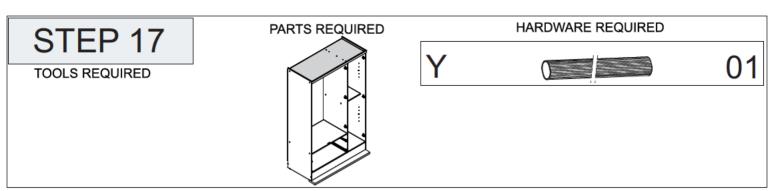




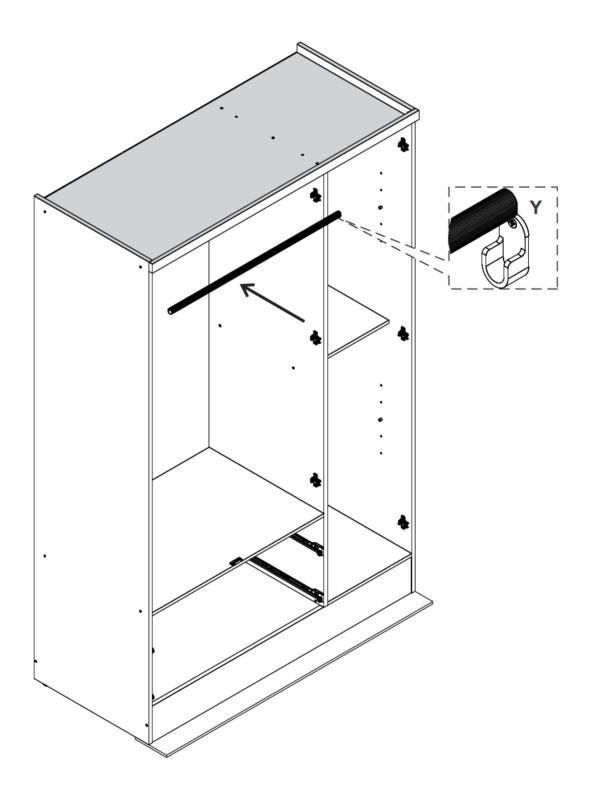

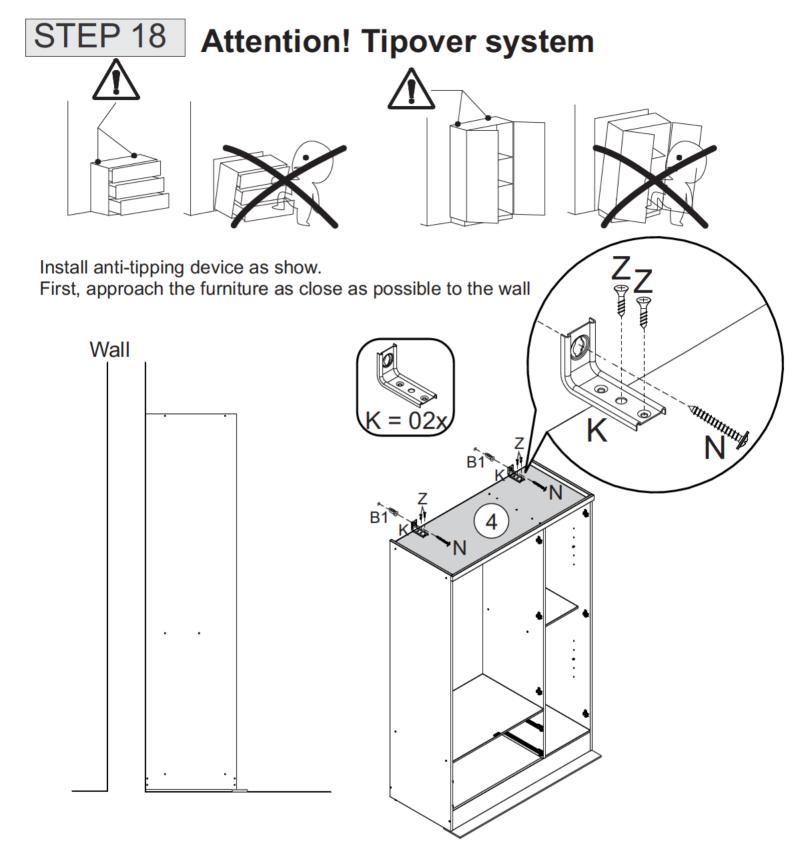


You will need a pencil to mark where you should drill the wall with a 3/8´´ drill bit to put in the hardware ( B1 )

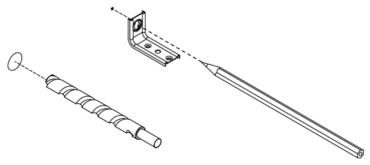


### STEP 19 Attention! Tipover system




Put hardware (B1) in to the hole that you drilled on the wall

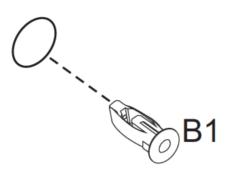




connect the hardware (K) on the wall using the wardware (N)

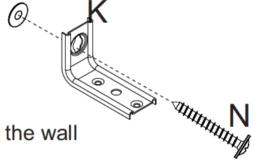

\*Hardware (B1) plugged in the wall





\*Connect the wardware (K) on the part 4 (green) with hardware(Z)

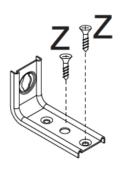



### STEP 20


After installing the anti-tip system your product are ready to use

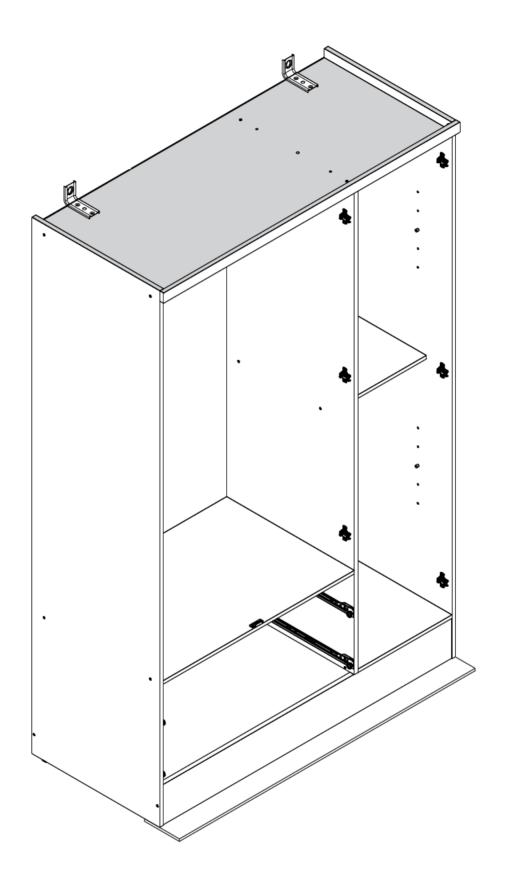


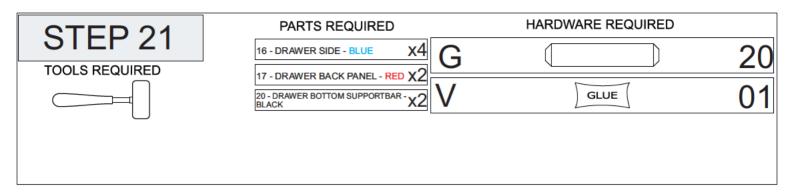


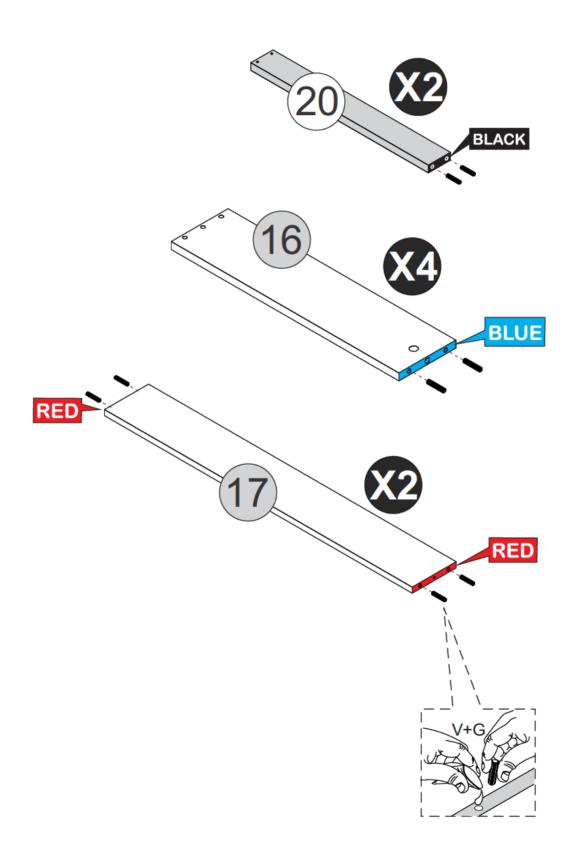


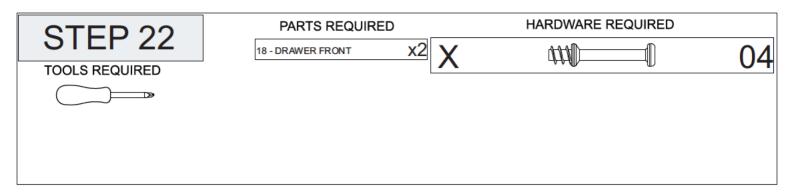


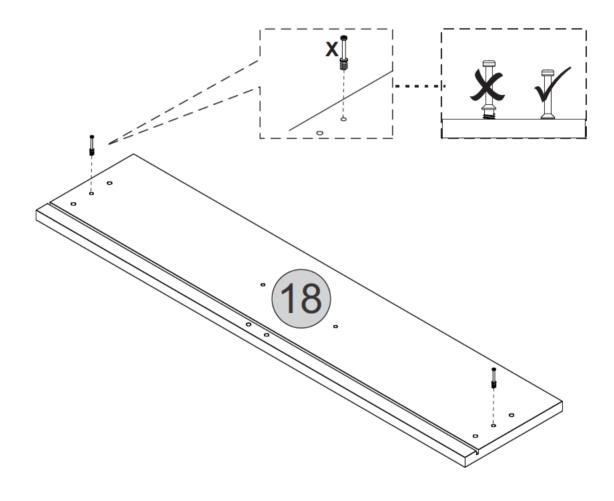


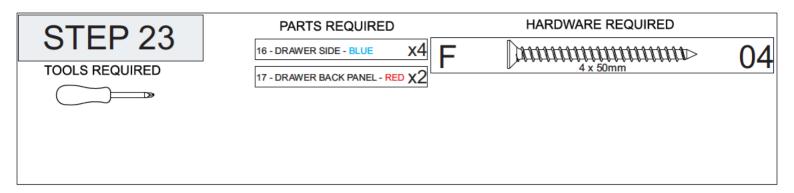


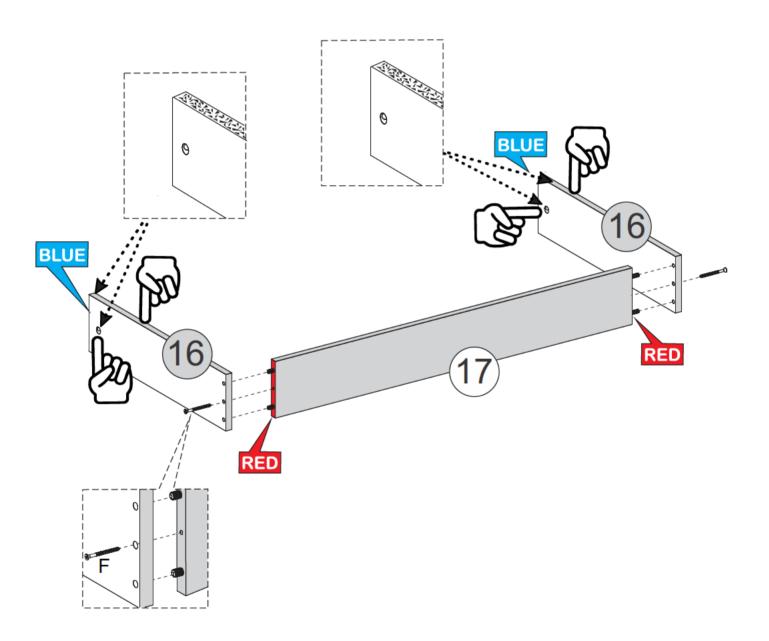


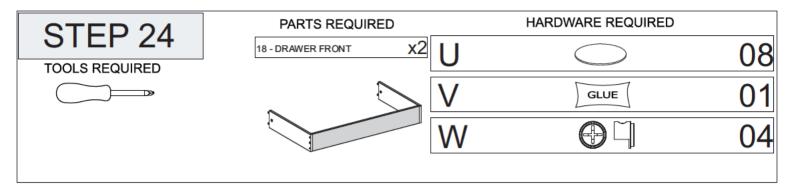


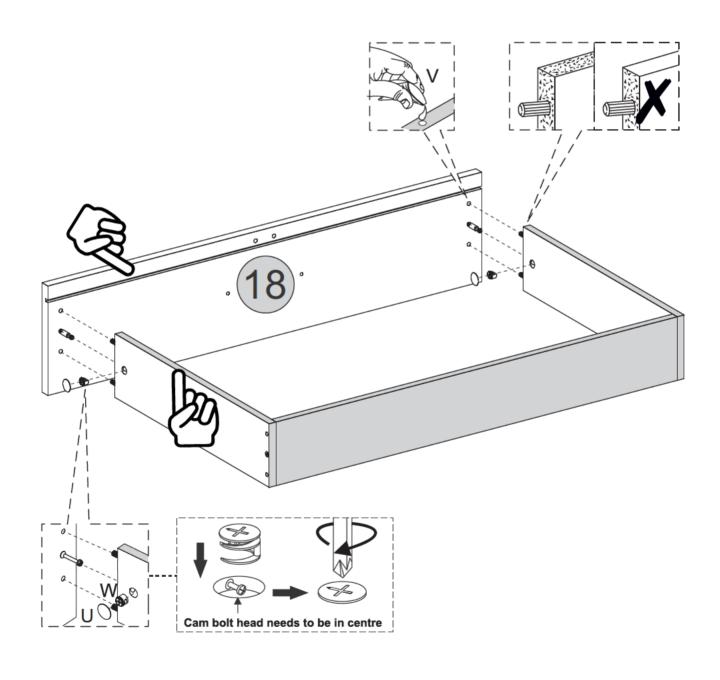


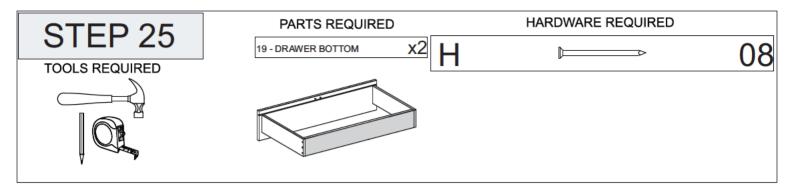


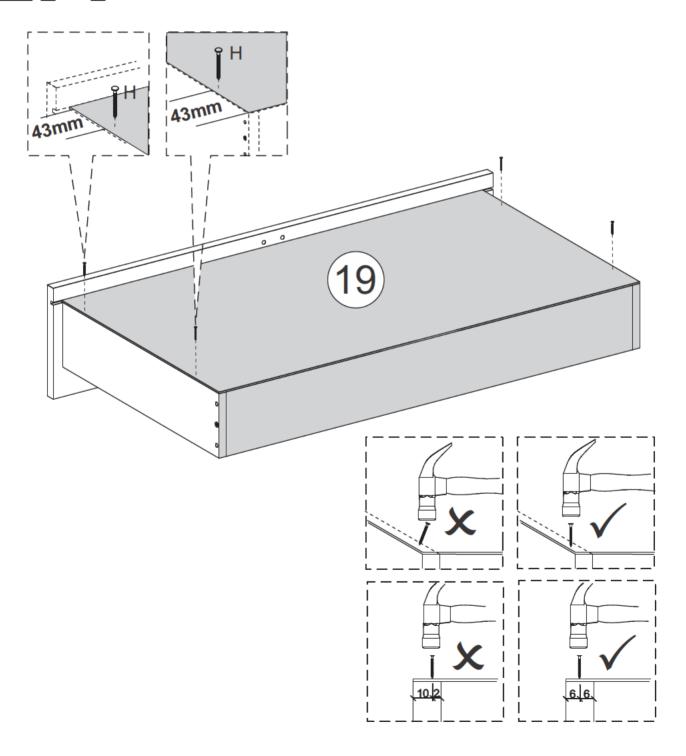


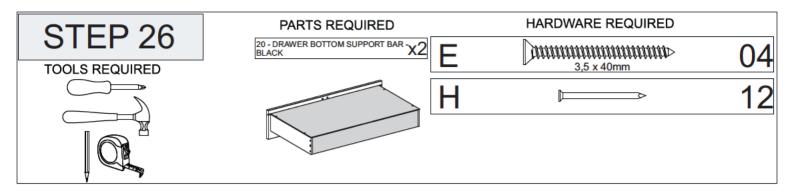


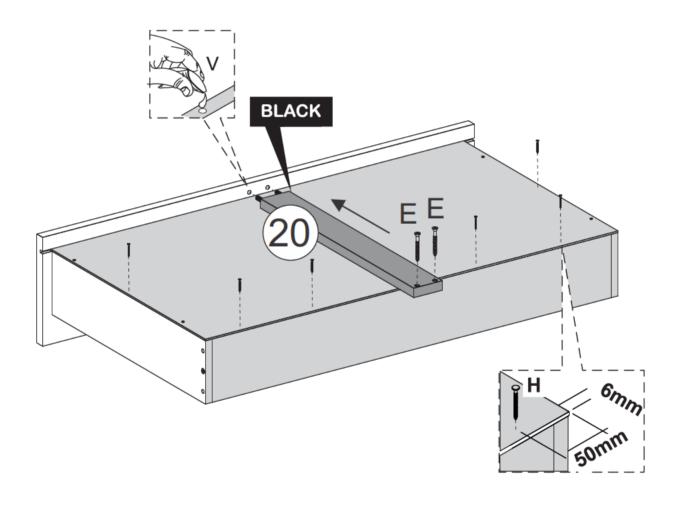

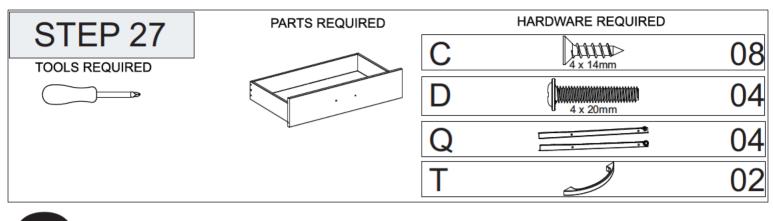

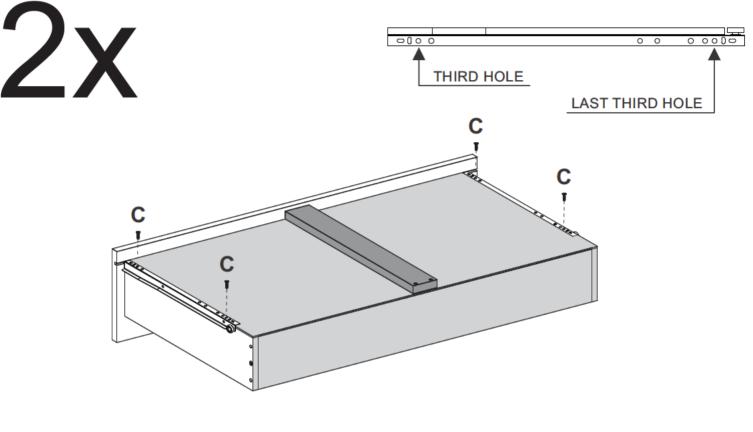

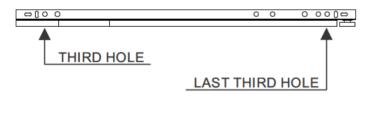

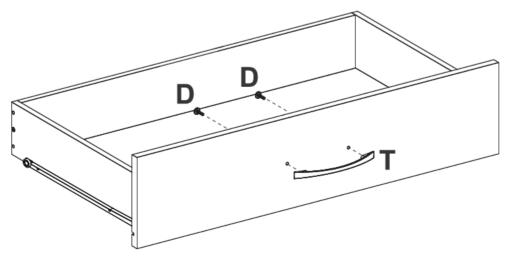

## STEP 28 TOOLS REQUIRED

PARTS REQUIRE	D	HARDWARE REQUIRED	
13 - LARGE DOOR	x1 <b>C</b>	ittiti	18
14 - RIGHT SMALL DOOR	x1	⊮4 x 14mm	
15 - LEFT SMALL DOOR	x1 O		09

