


3 DOOR 2 DRAWER WARDROBE

ASSEMBLY INSTRUCTIONS



IMPORTANT
PLEASE READ BEFORE YOU CONTINUE FURTHER
FOR DOMESTIC USE ONLY
CARE AND MAINTENANCE

- After unpacking this product please keep the original packaging in case it needs to be returned for any reason.
- Please ensure all fittings and parts are present before commencing with assembly.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible
- Never drag or push products as this could cause damage to the joints making it inferior.
- Do not drag or push items across your furniture as this may cause the surface to scratch.
- Do not place this product next to radiator or in direct sunlight.
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is Wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use soft cotton or micro fibre cloth and do not use detergents of any kind.
- Do not place on a wet or damp floor as staining may occur to your floor.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.

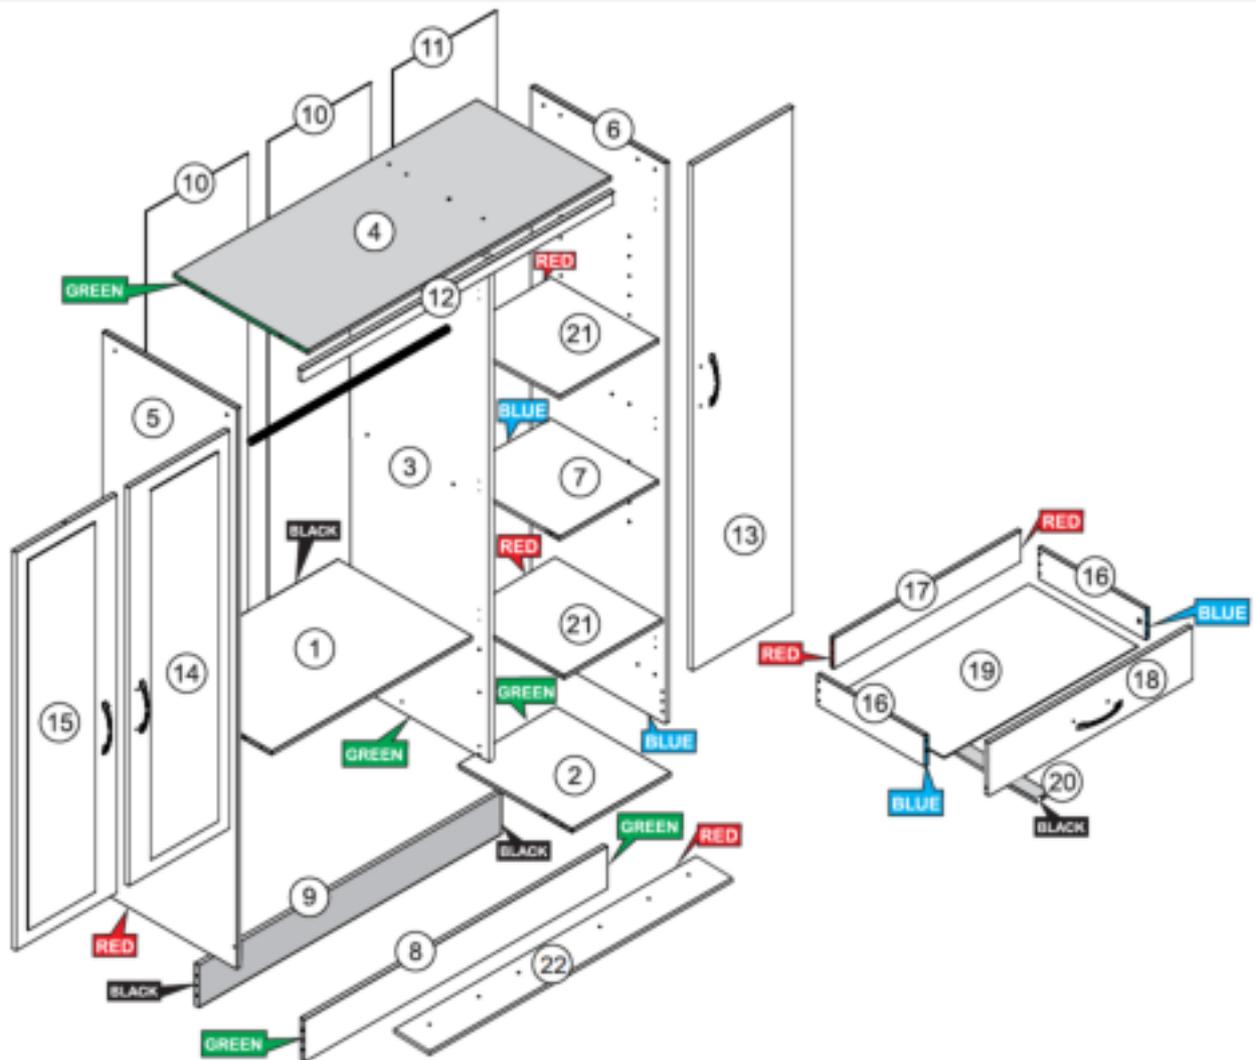

Please Note:

The parts below have been stamped with the part number/color to help identify them during assembly


PARTS LIST

Part Number	Part Description	Quantity	Carton
1	Large Base Panel - Black	1	2/3
2	Small Base Panel - Green	1	2/3
3	Division Panel - Green	1	1/3
4	Top Panel - Green	1	2/3
5	Left Side Panel - Red	1	1/3
6	Right Side Panel - Blue	1	1/3
7	Shelf - Blue	1	2/3
8	Front Baseboard - Green	1	2/3
9	Back Baseboard - Black	1	2/3
10	Small Back Panel	2	3/3
11	Large Back Panel	1	3/3
12	Frame	1	1/3
13	Large Door	1	3/3
14	Right Small Door	1	3/3
15	Left Small Door	1	3/3
16	Drawer Side - Blue	4	2/3
17	Drawer Back Panel - Red	2	2/3
18	Drawer Front	2	2/3
19	Drawer Bottom	2	1/3
20	Drawer Bottom Support Bar - Black	2	2/3
21	Movable Shelf - Red	2	2/3
22	Anti Tip Device - Red	1	1/3



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

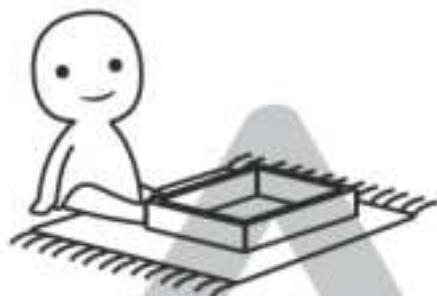

AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.












IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

FITTINGS

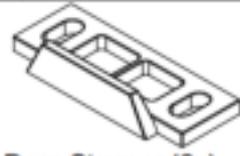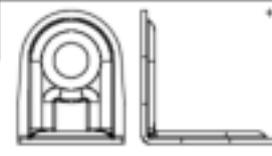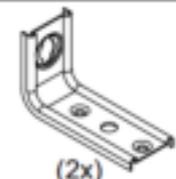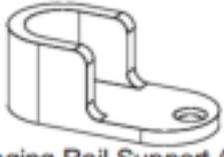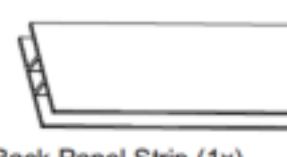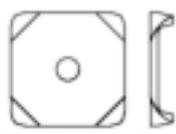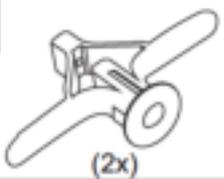A  ⁺¹ Flat Head Screw Ø6,0 x 10mm (8x)	B  Support Pin 6X8 (8x)	C  ⁺² Flat Head Screw Ø4,0 x 14 mm (52x)	D  ⁺² Flan Head Screw Ø4,0 x 20mm (10x)
E  ⁺¹ Flat Head Screw Ø3,5 x 40mm (4x)	F  ⁺² Flat Head Screw Ø4,0 x 50 mm (30x)	G  ⁺² Dowel Ø6,0 x 30mm (48x)	
H  ⁺² Nail 10 x 10 (98x)	I  ⁺¹ Door Stopper (2x)	J  ⁺² 'L' Metallic Support (8x)	K  ⁺¹ (2x)
L  ⁺¹ Plastic Foot (3x)	M  ⁺¹ Hanging Rail Support (2x)	N  ⁺¹ Flan Head Screw Ø5,0 x 50mm (2x)	O  ⁺¹ Hinge (9x)
P  ⁺¹ Hinge Plate (9x)	Q  ⁺¹ Drawer Runners (2x)		
R  ⁺¹ Back Panel Strip (1x)	S  ⁺¹ Flan Head Screw 3,5 x 14mm (9x)	T  ⁺² Handle (5x)	U  ⁺² Hole Plugs (22x)
V  ⁺¹ Glue (2x)	W  ⁺¹ Cam Nut (4x)	X  ⁺¹ Cam Bolt (4x)	Y  ⁺¹ Hanging Rail (1x)
Z  ⁺² Flat Head Screw Ø4,0 x 12mm (25x)	A1  ²⁺ Back Panel Bracket (16x)	B1  ⁺¹ (2x)	

• Use of power tools to assemble this product will invalidate any claim and damage this product making it unsafe !!!
 • Please assemble on a clean soft surface to avoid damage.

• Please check contents and read the instructions before commencing assembly.
 • Assemble this product following the enclosed instructions carefully.
 • Please take care to avoid damaging panels during assembly.

TOOLS REQUIRED



STEP 1

TOOLS REQUIRED




PARTS REQUIRED




01 - LARGE BASE PANEL - BLACK	X1
2 - SMALL BASE PANEL - GREEN	X1
7 - SHELF - BLUE	X1

HARDWARE REQUIRED

G		12
I		01
V		01
Z		02

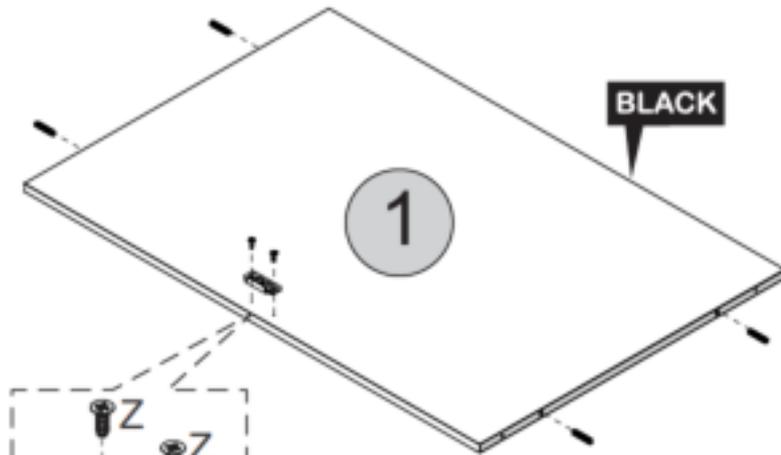


Please note
Pre-marked
Holes

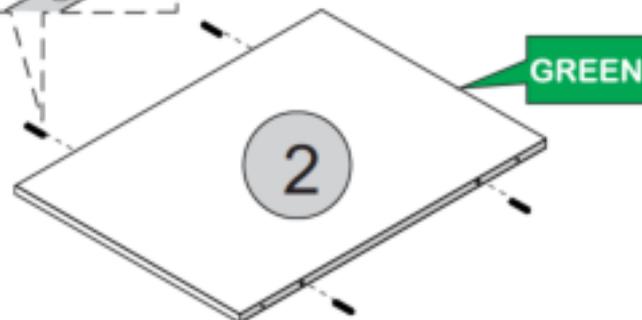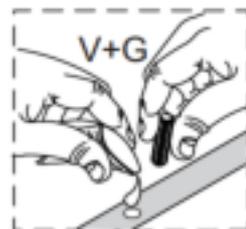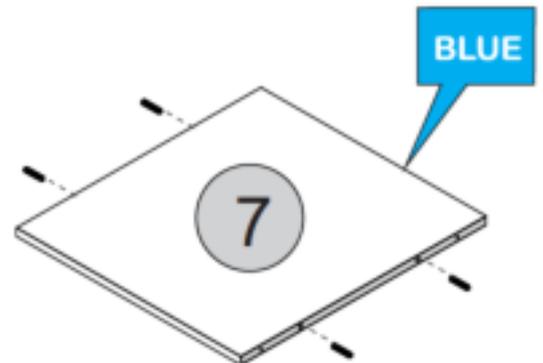

STEP 2

TOOLS REQUIRED

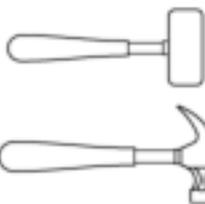

PARTS REQUIRED

08 - FRONT BASEBOARD - GREEN X1

09 - BACK BASEBOARD - BLACK X1



HARDWARE REQUIRED

G		10
---	--	----

H		01
---	---	----

L		01
---	---	----

V		01
---	---	----

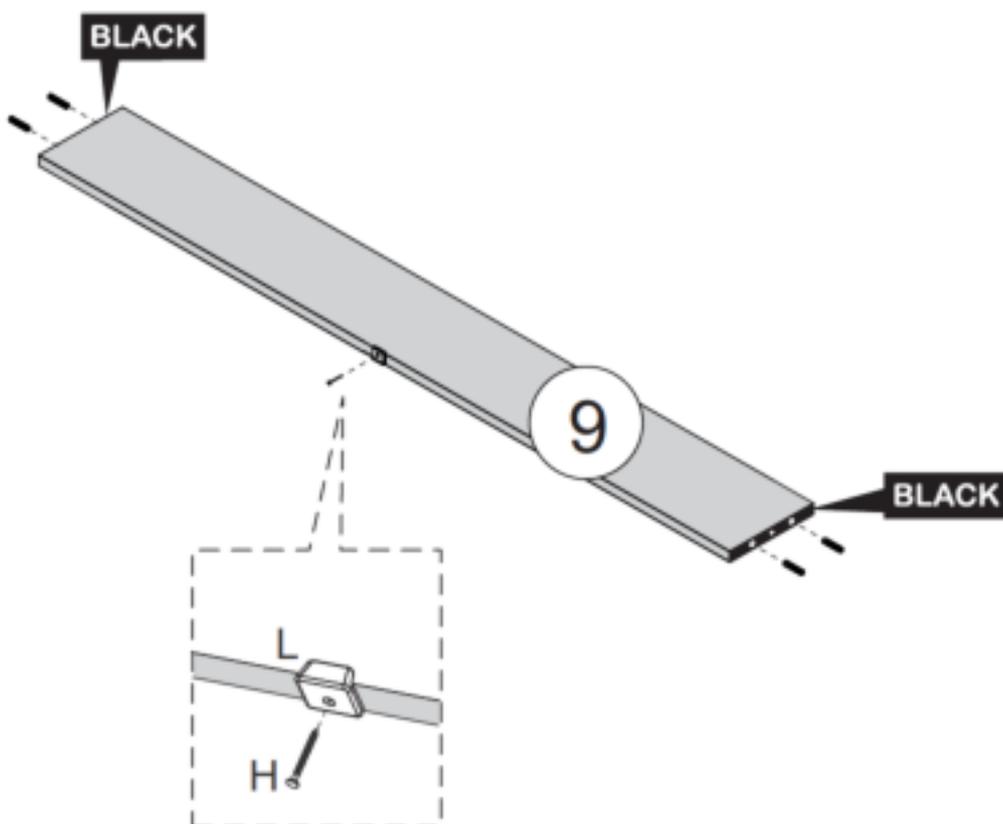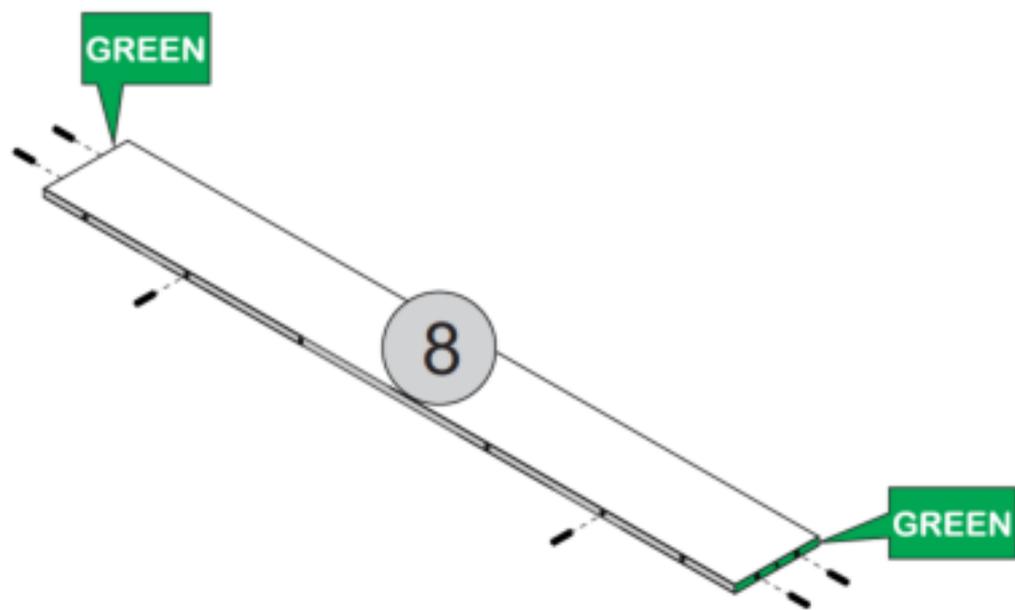


STEP 3

PARTS REQUIRED

HARDWARE REQUIRED



03 - DIVISION PANEL - GREEN x1

B



04

TOOLS REQUIRED

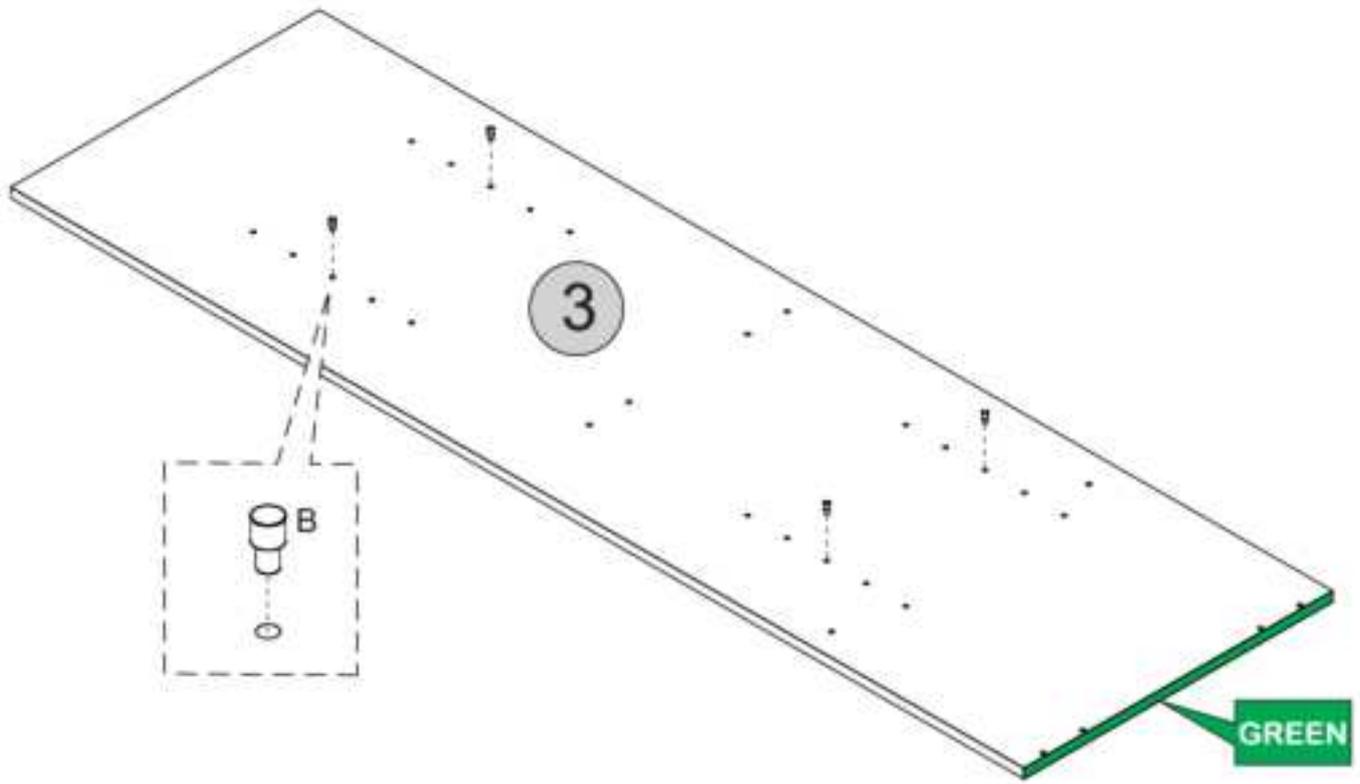

STEP 4

TOOLS REQUIRED




PARTS REQUIRED

03 - DIVISION PANEL - GREEN x1


HARDWARE REQUIRED

A	6 x 10mm	04
C	4 x 14mm	08
G		02
M		01
P		03
Q	Right	02

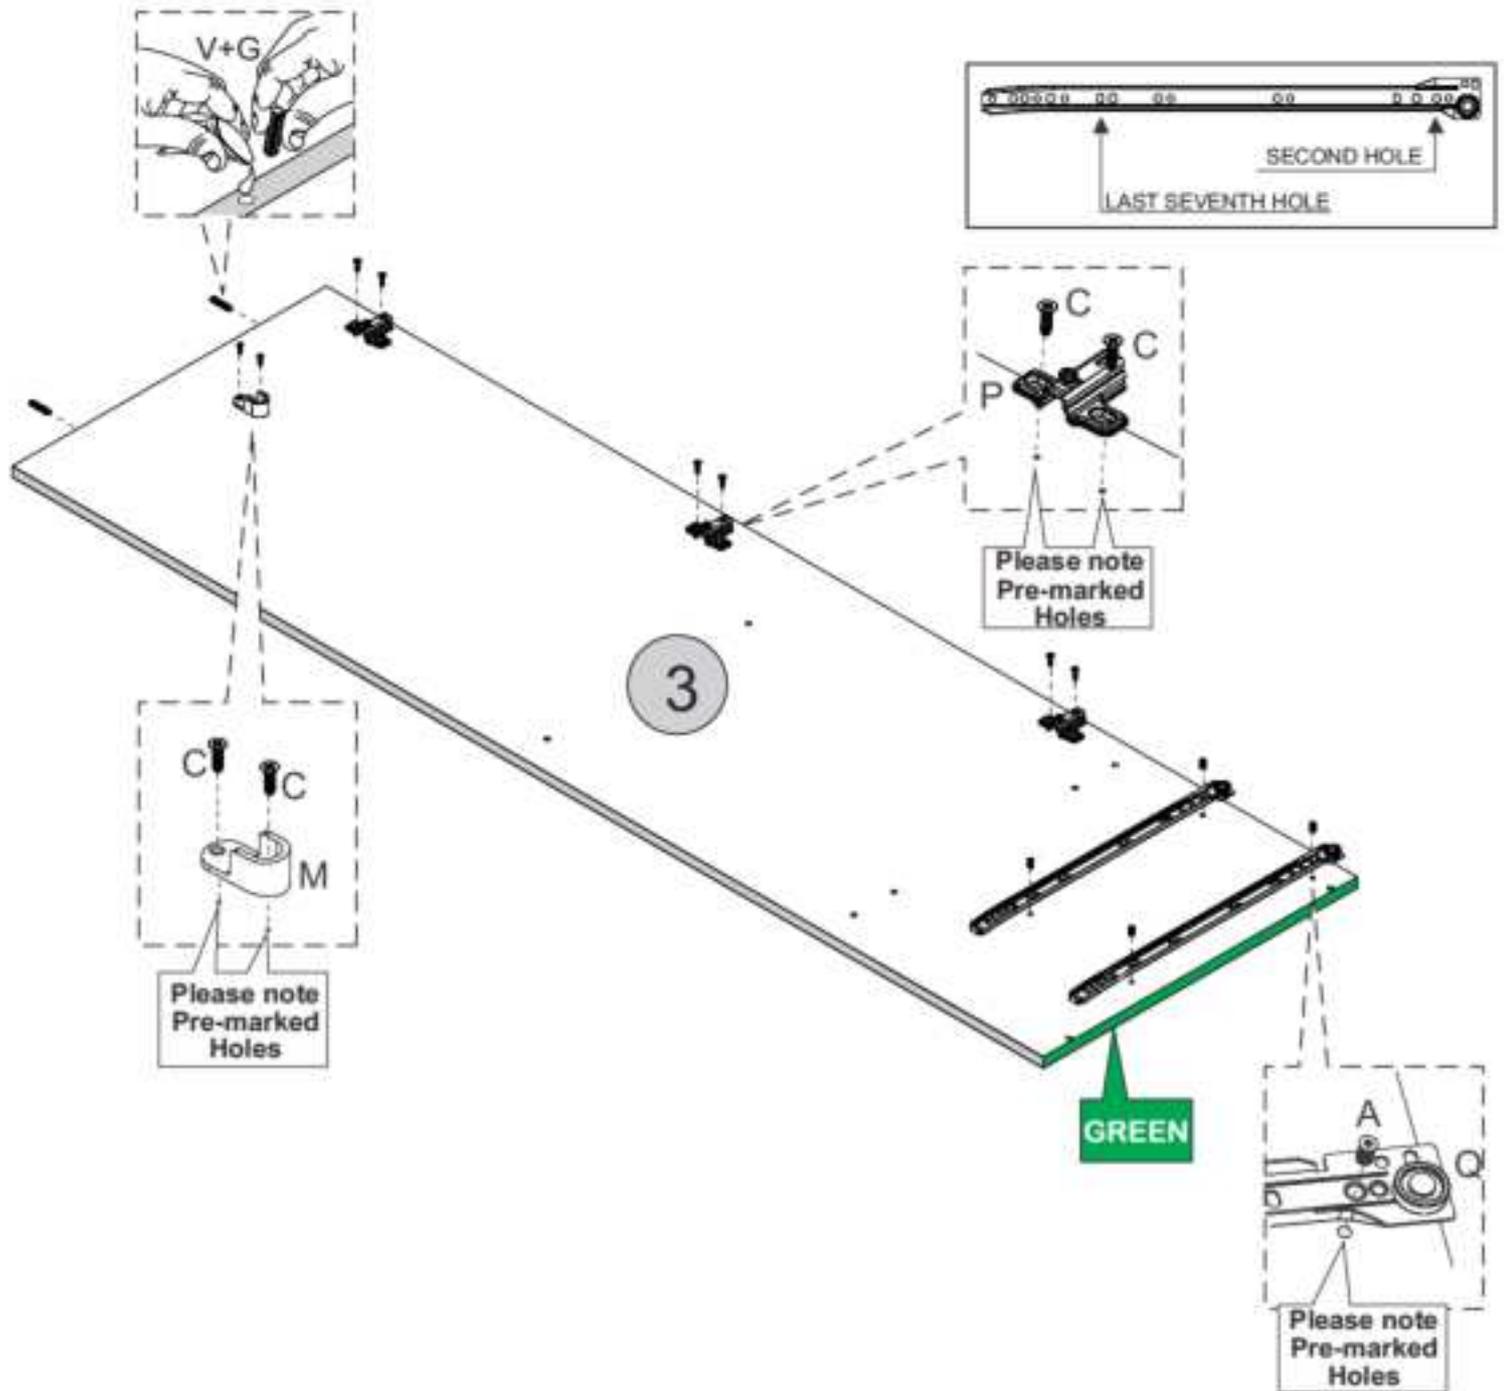

STEP 5


TOOLS REQUIRED





PARTS REQUIRED

05 - LEFT SIDE PANEL - RED x1

HARDWARE REQUIRED

A	 6 x 10mm	04
C	 4 x 14mm	08
H		01
L		01
M		01
P		03
Q	 Left	02

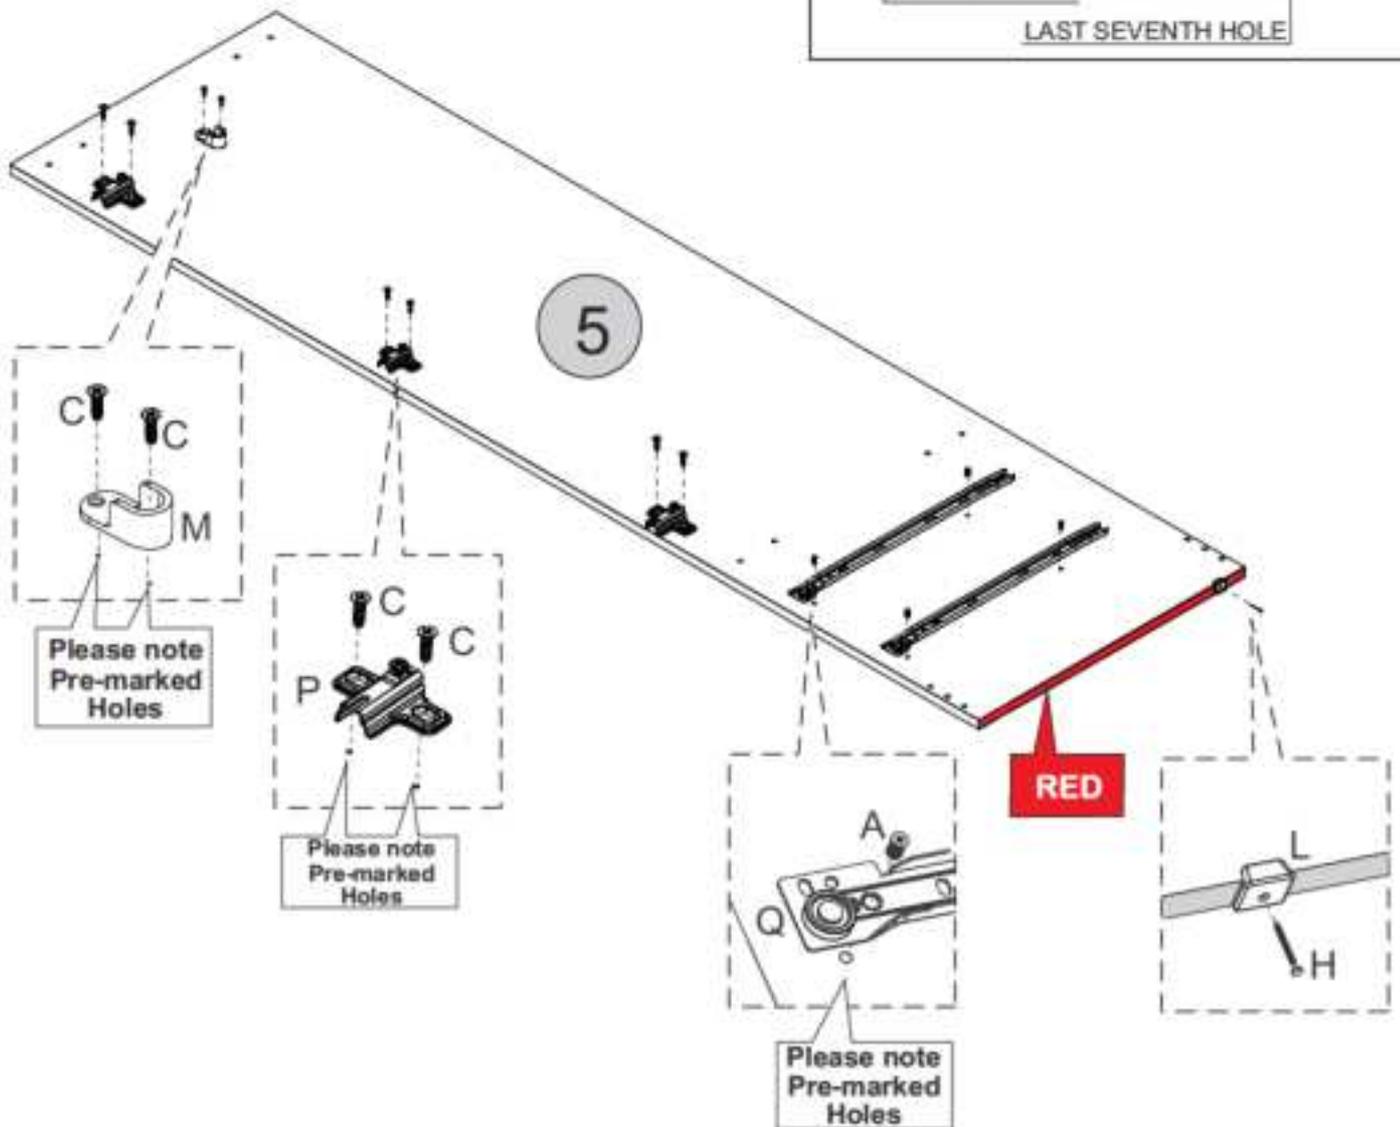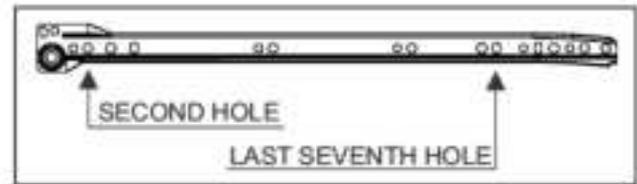


STEP 6




PARTS REQUIRED

06 - RIGHT SIDE PANEL - BLUE X1

HARDWARE REQUIRED


B			04
C		4 x 14mm	06
H			01
L			01
P			03

TOOLS REQUIRED

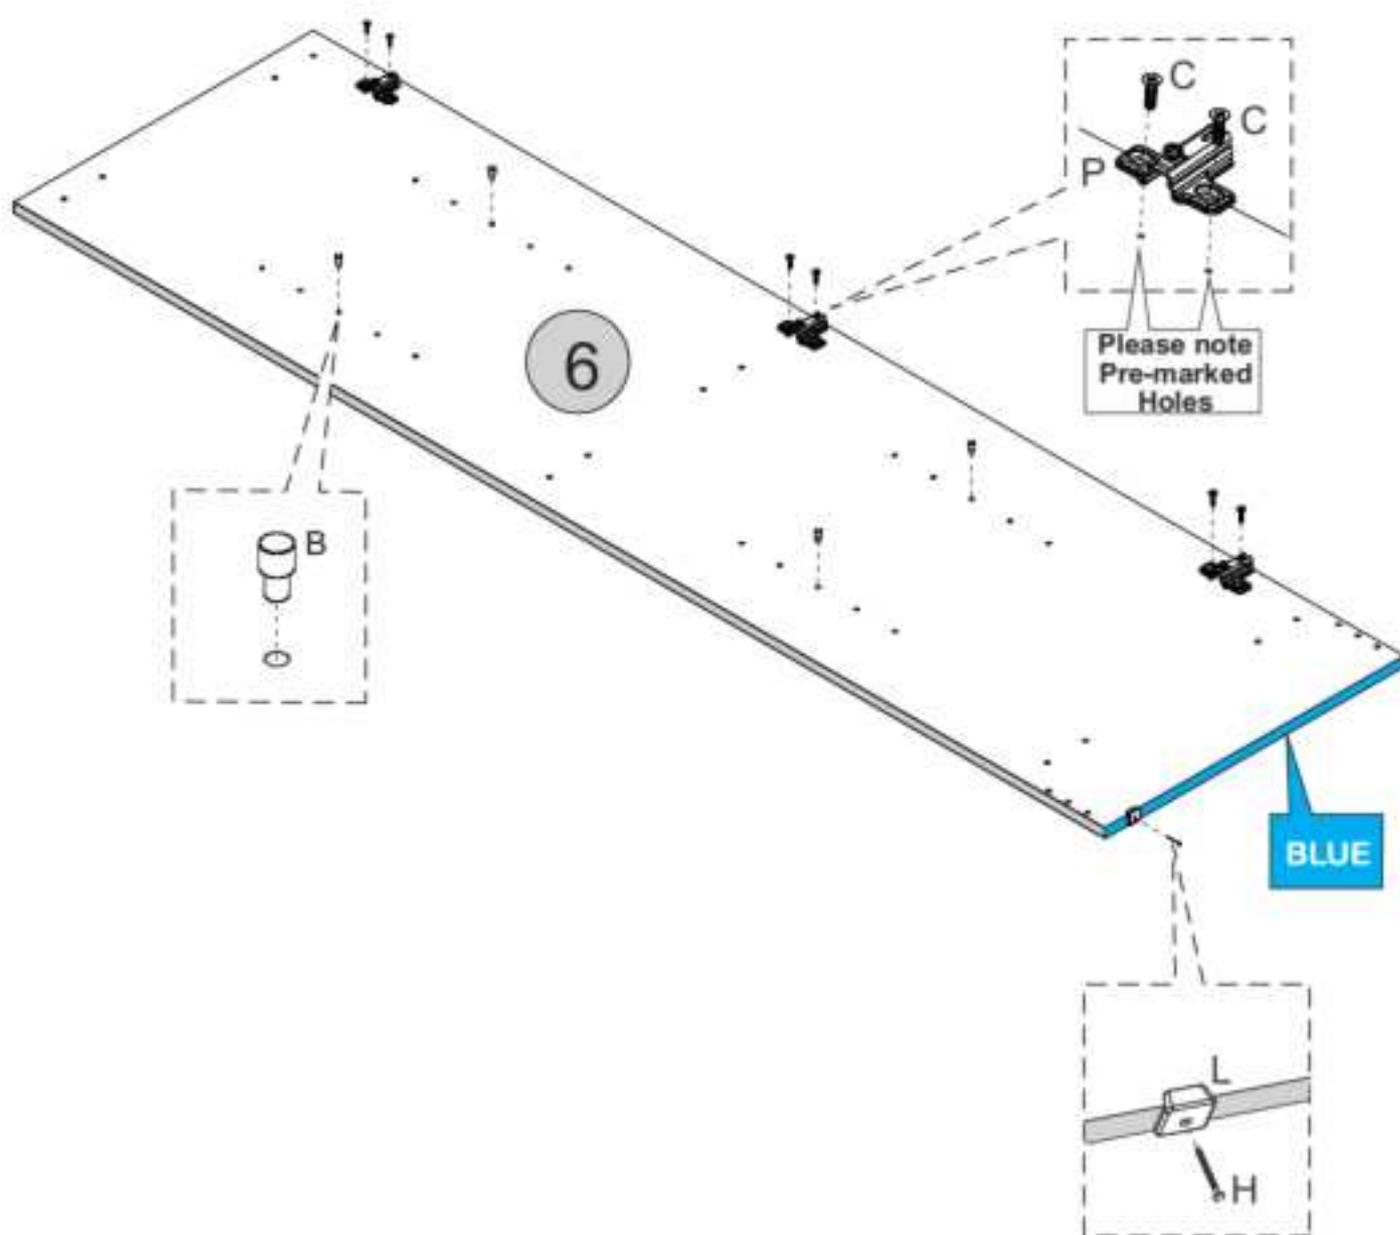

STEP 7

TOOLS REQUIRED

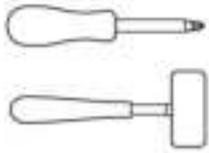


PARTS REQUIRED

04 - TOP PANEL - GREEN X1

HARDWARE REQUIRED

G		04
I		01
V		01
Z	 4 x 12mm	02

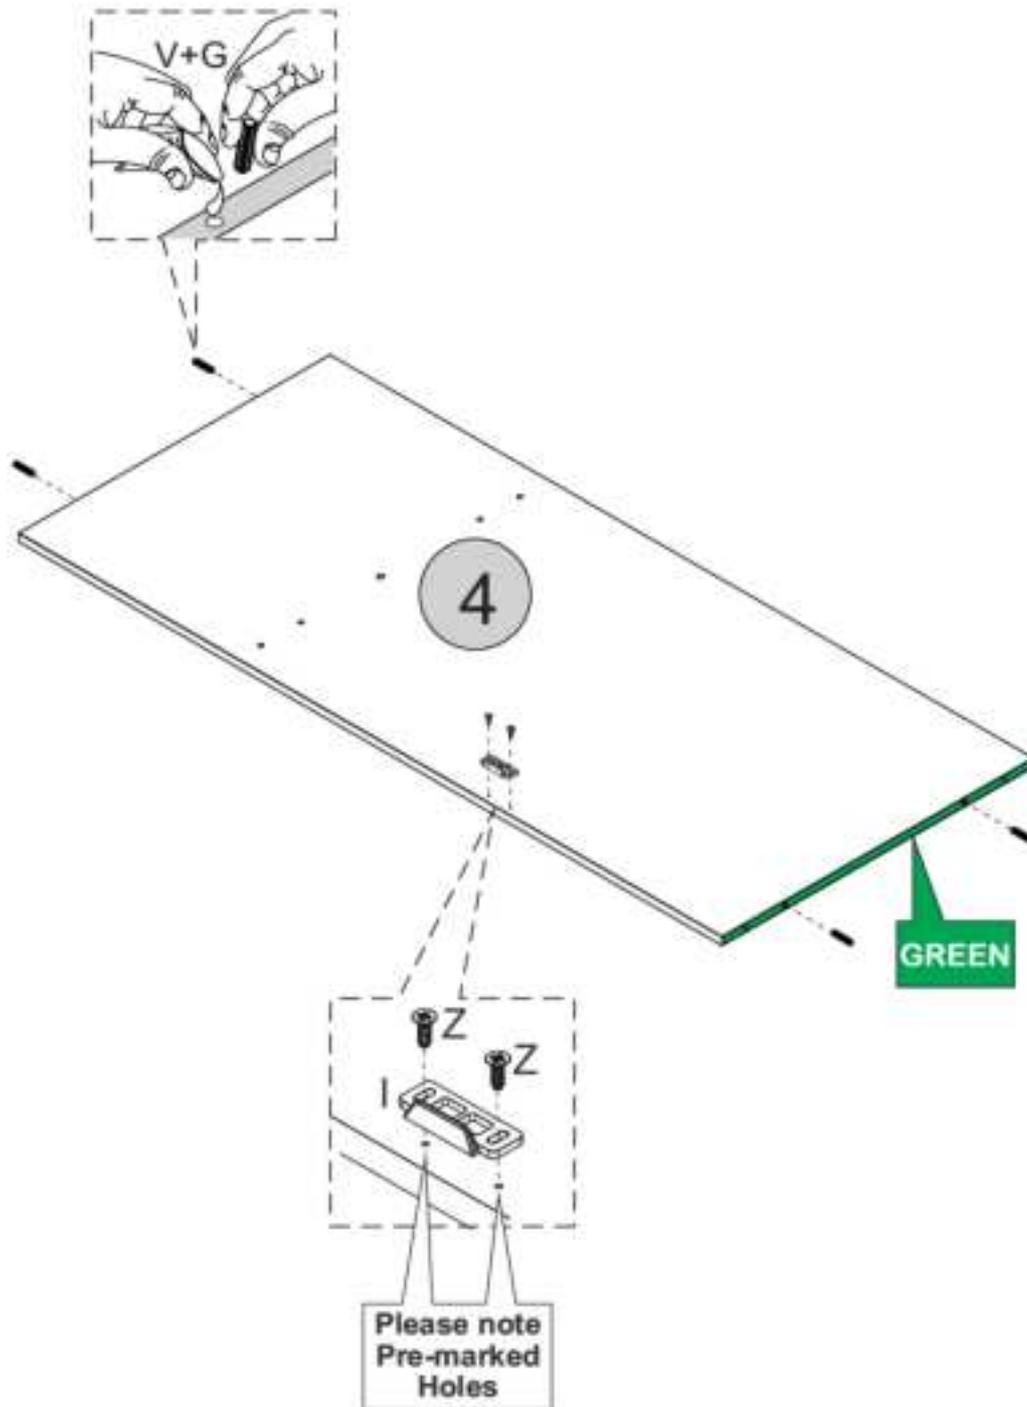

STEP 8

PARTS REQUIRED


04 - TOP PANEL - GREEN X1

HARDWARE REQUIRED

J  03

Z  03
4 x 12mm

TOOLS REQUIRED

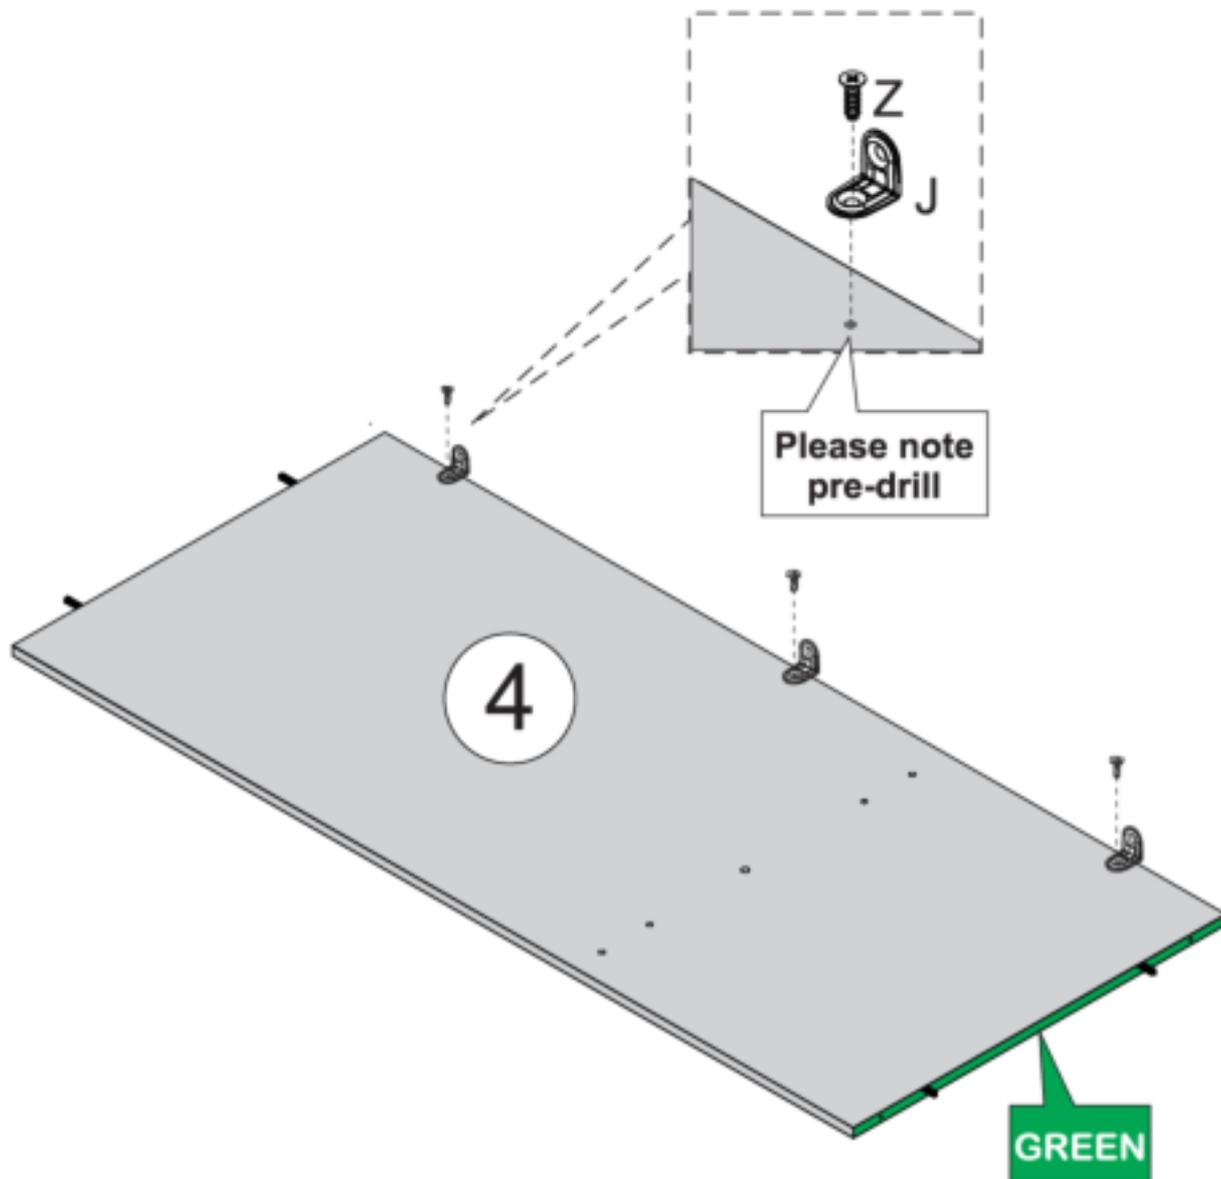


STEP 10

TOOLS REQUIRED



PARTS REQUIRED

G5 - LEFT SIDE PANEL - RED x1

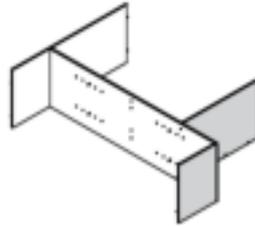

HARDWARE REQUIRED

F



4 x 50mm


04

V



GLUE

01

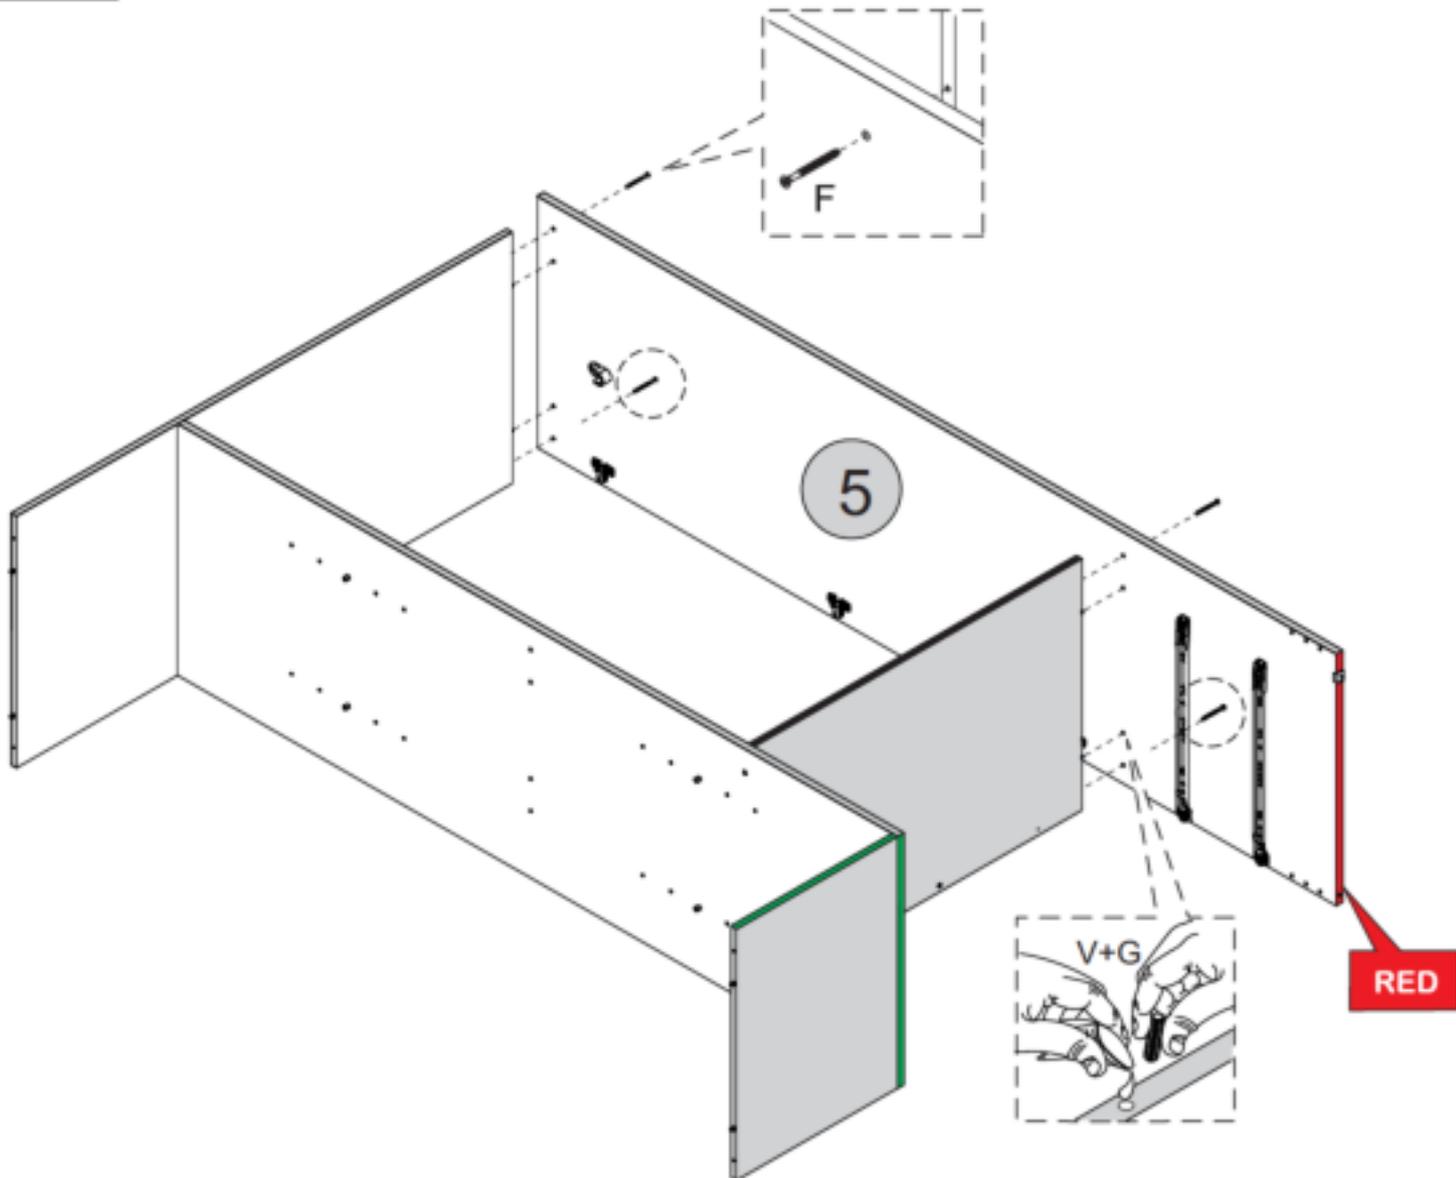

STEP 11

TOOLS REQUIRED





PARTS REQUIRED

06 - RIGHT SIDE PANEL - BLUE	X1
07 - SHELF - BLUE	X1
08 - FRONT BASEBOARD - GREEN	X1
09 - BACK BASEBOARD - BLACK	X1


HARDWARE REQUIRED

F	 4 x 50mm	12
V		01

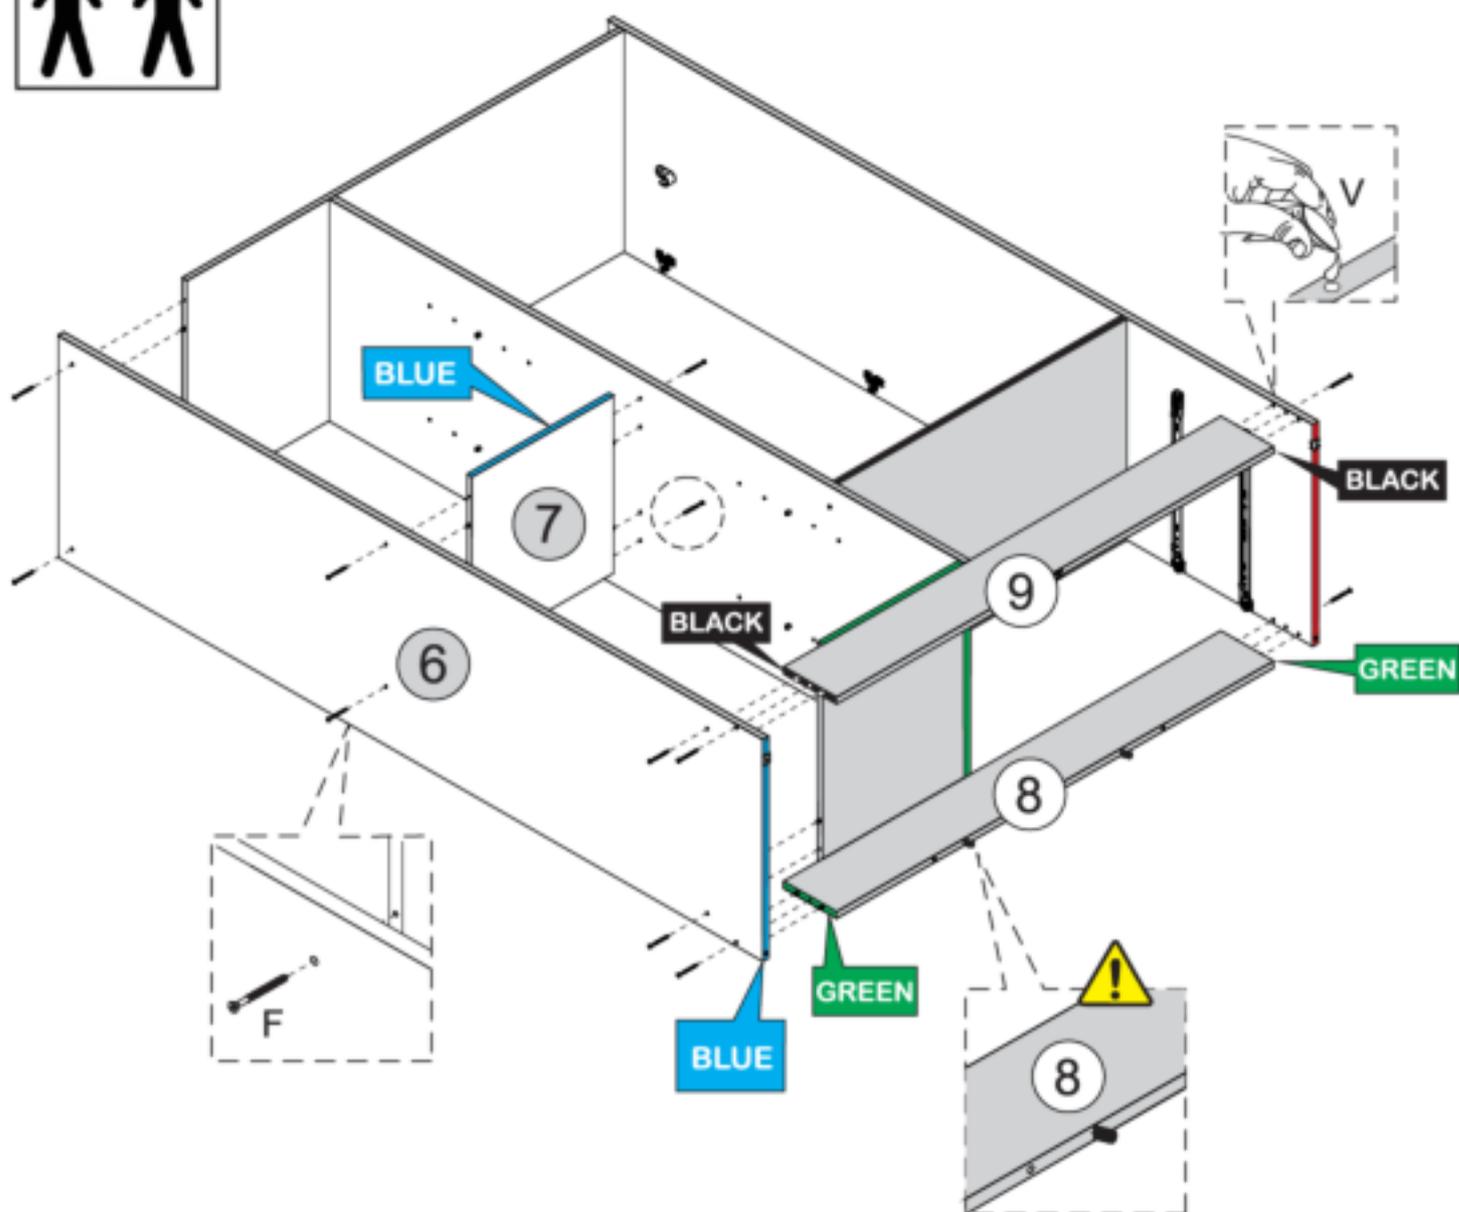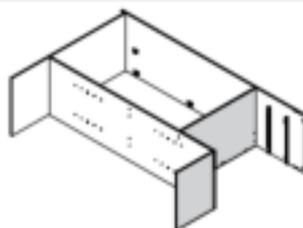


STEP 12

TOOLS REQUIRED

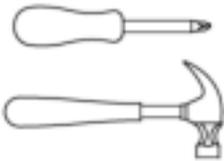

PARTS REQUIRED

10 - SMALL BACK PANEL	x2
11 - LARGE BACK PANEL	x1

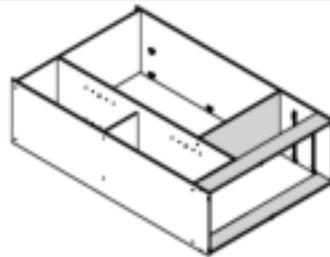

HARDWARE REQUIRED


H		09
R		01
S		09

IMPORTANT PLEASE FOLLOW !

Please make sure Part 10/11 is lined up correctly at the top before placing fitting H into the panel as this can affect the alignment of the doors once assembled.


IMPORTANT PLEASE FOLLOW !

Please make sure Part 10/11 isn't overhanging at the sides before you screw fitting B into the plinth.

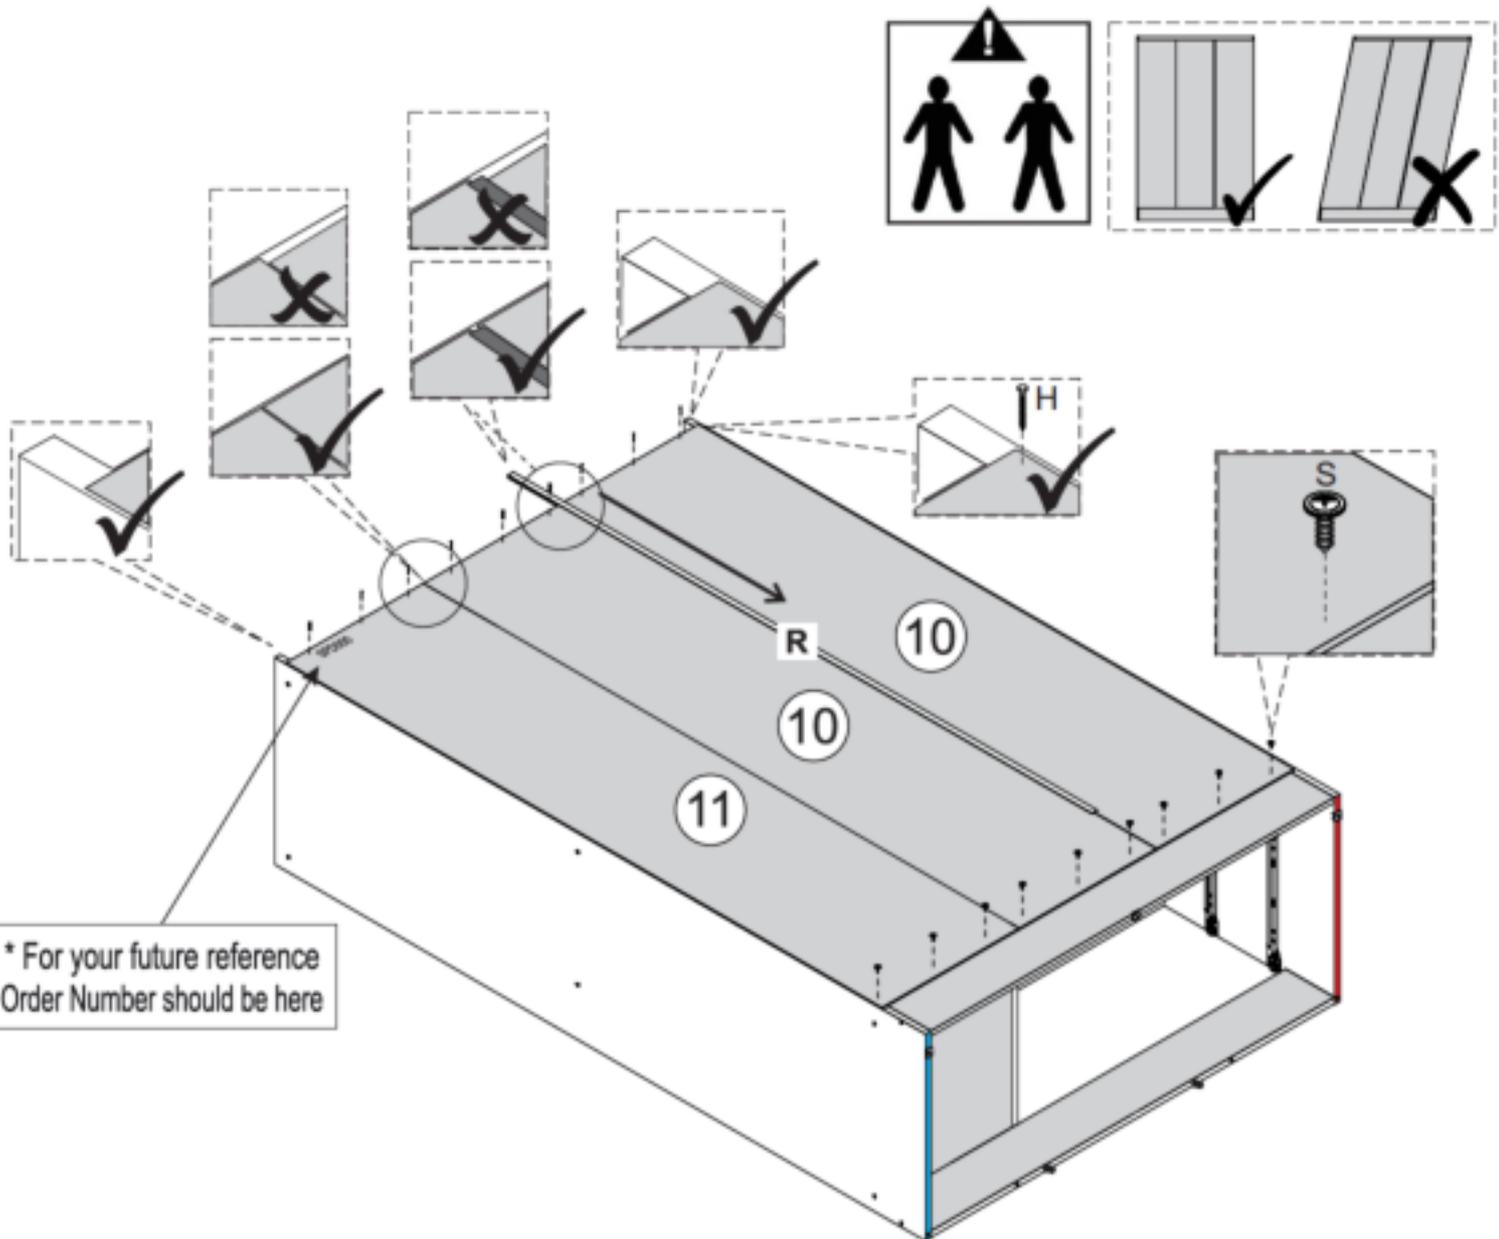


STEP 13

TOOLS REQUIRED




PARTS REQUIRED

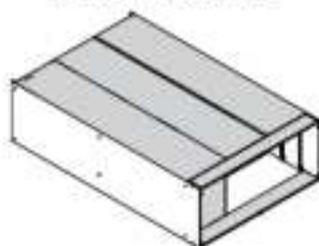

HARDWARE REQUIRED

H		50
A1		16

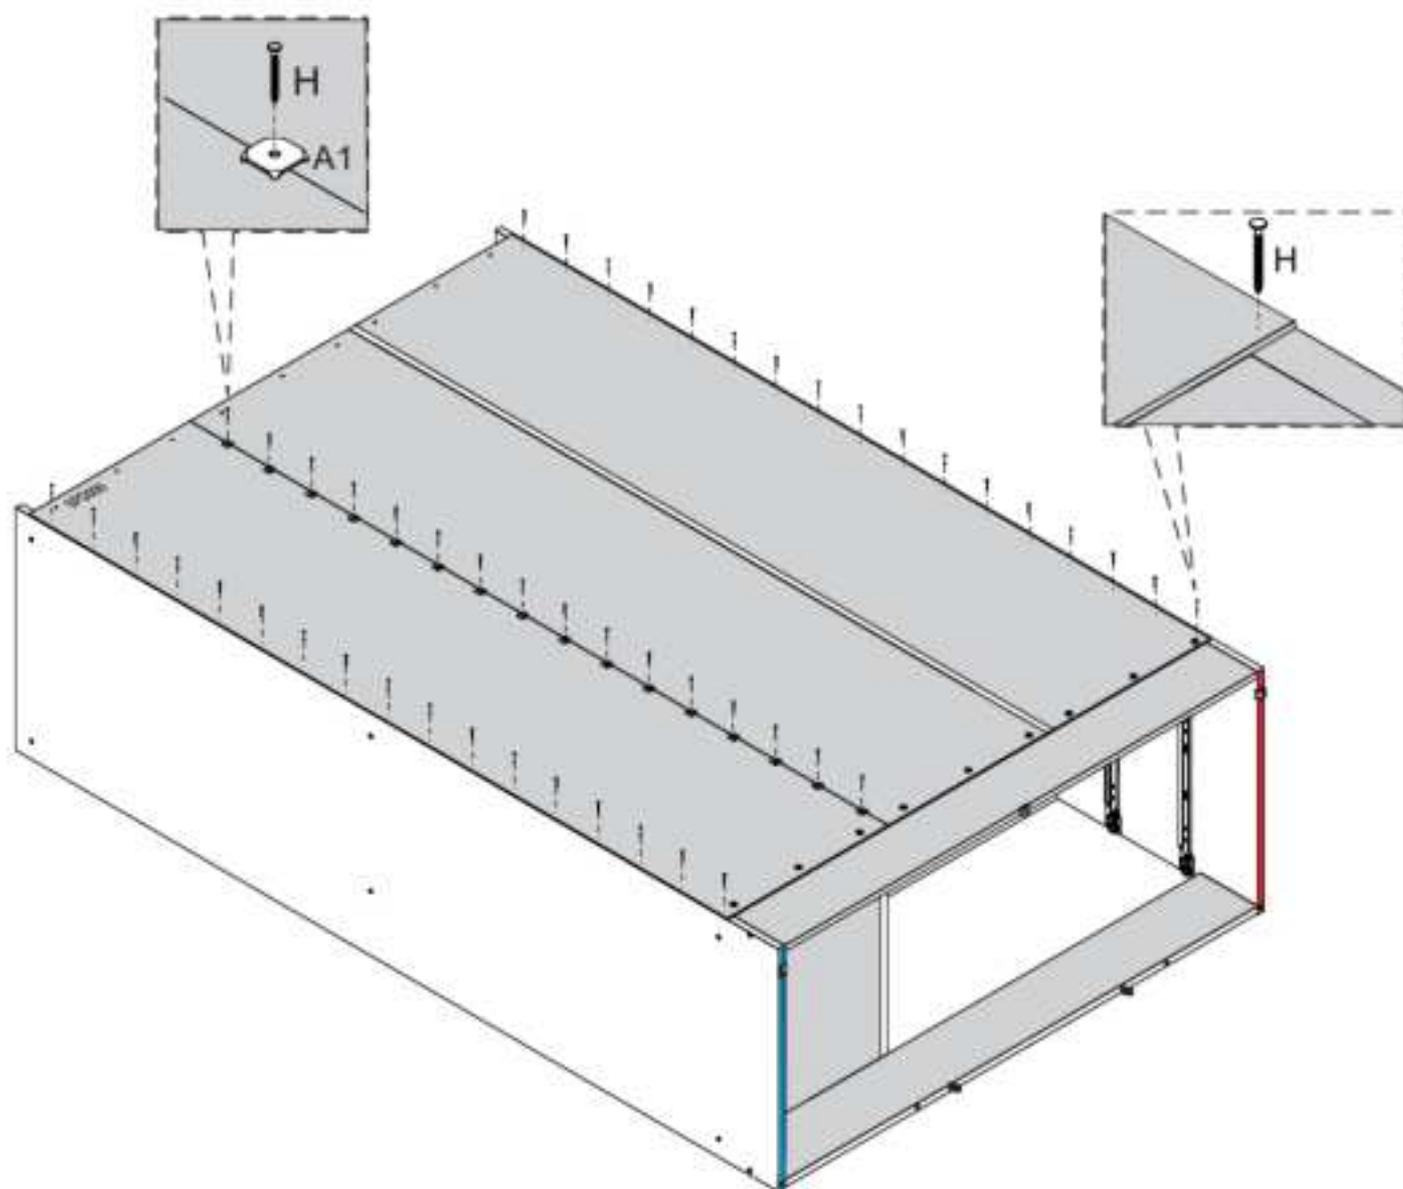


STEP 14

TOOLS REQUIRED




PARTS REQUIRED

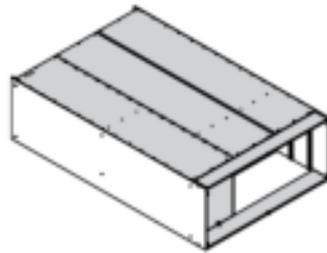

HARDWARE REQUIRED

H		03
J		02
Z	 4 x 12mm	04

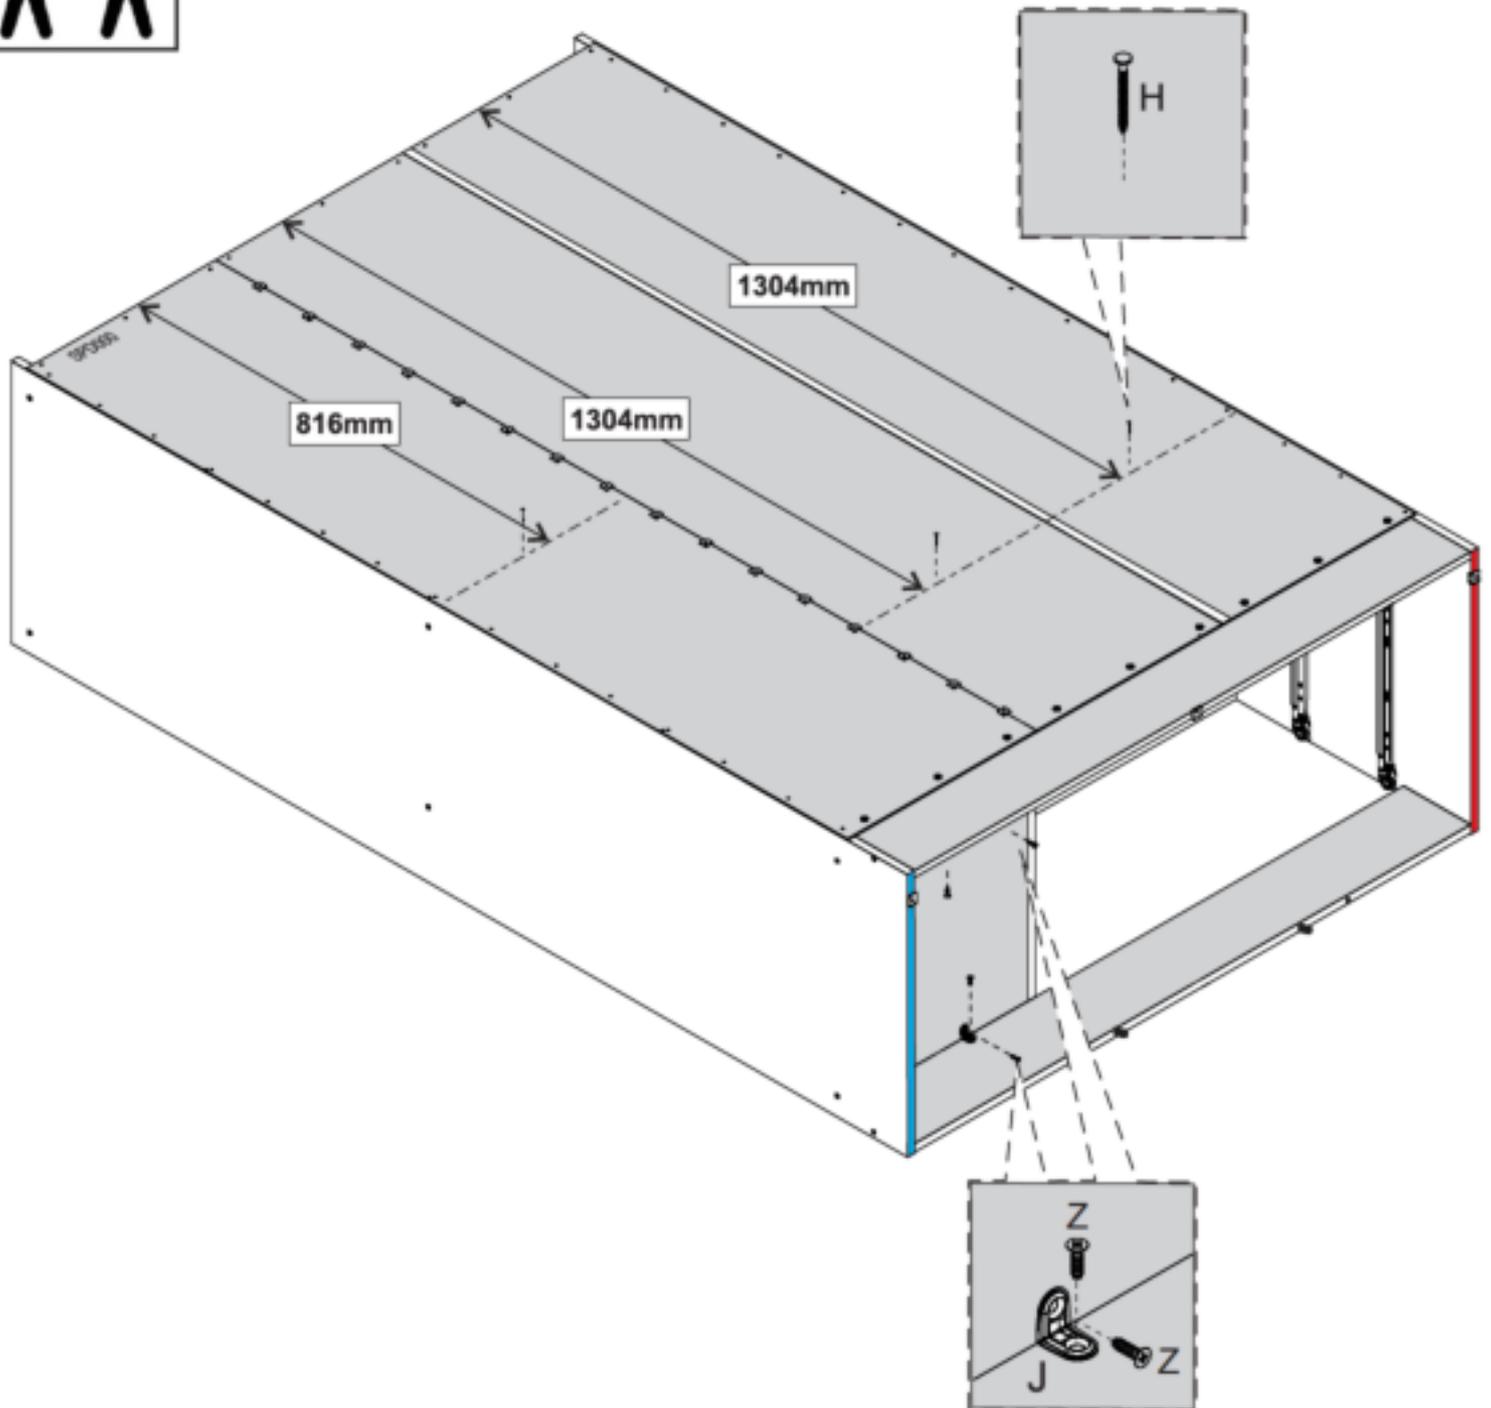


STEP 15

TOOLS REQUIRED





PARTS REQUIRED

12 - FRAME x1

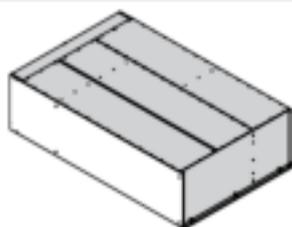

HARDWARE REQUIRED

J		02
Z		07

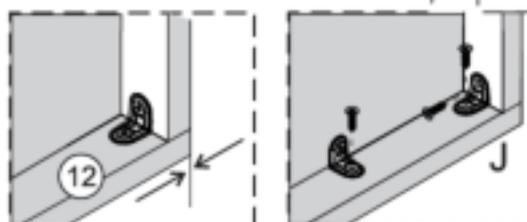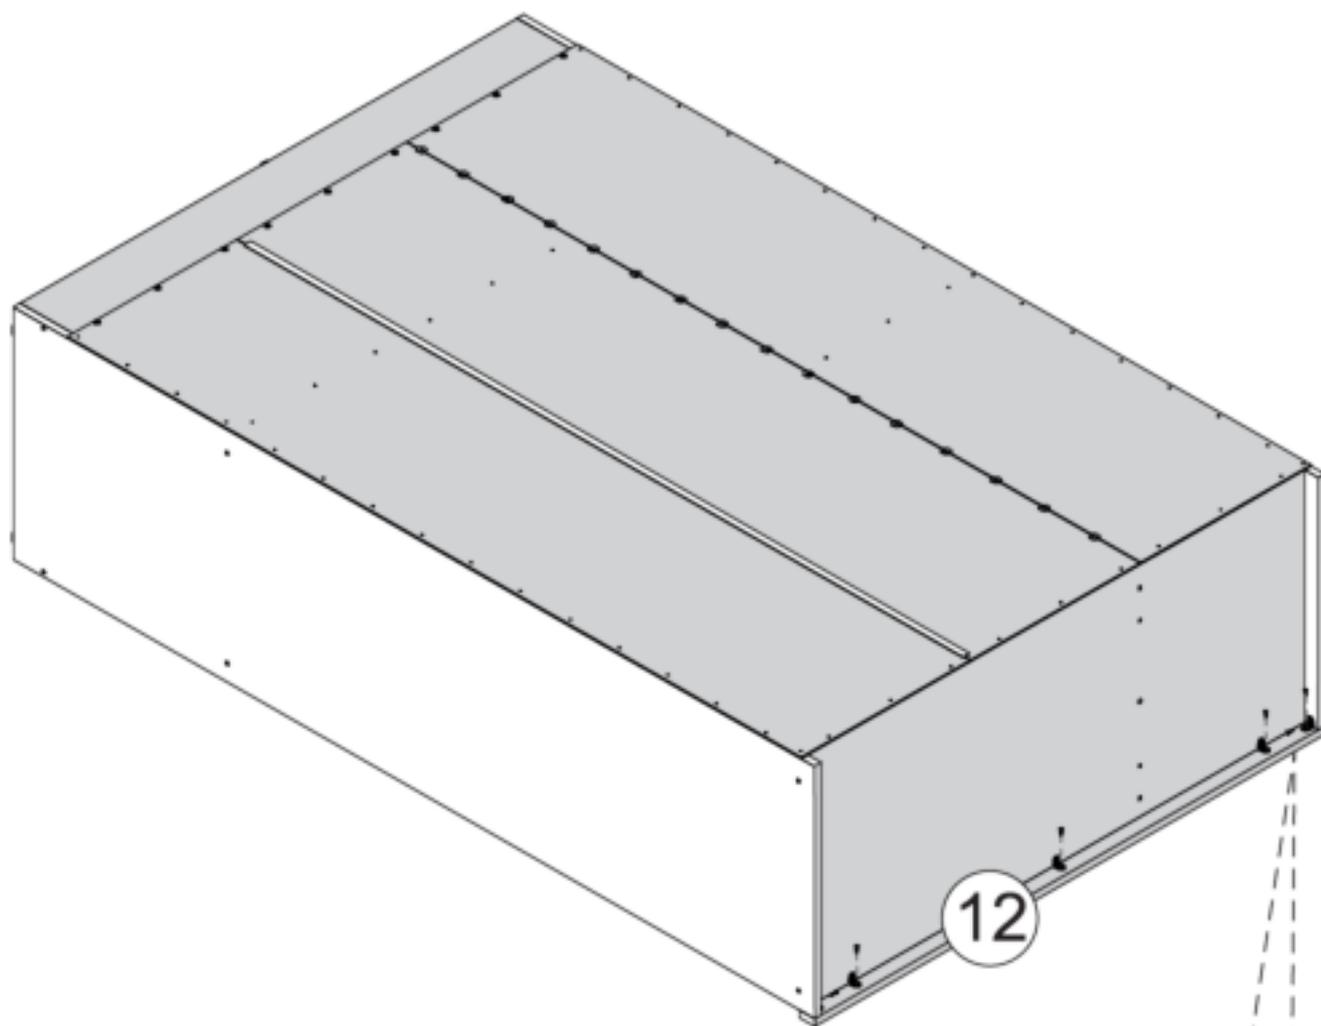

Align corners

STEP 16

PARTS REQUIRED

22 - ANTI TIP DEVICE - RED x1

F



HARDWARE REQUIRED



4 x 50mm

04


TOOLS REQUIRED

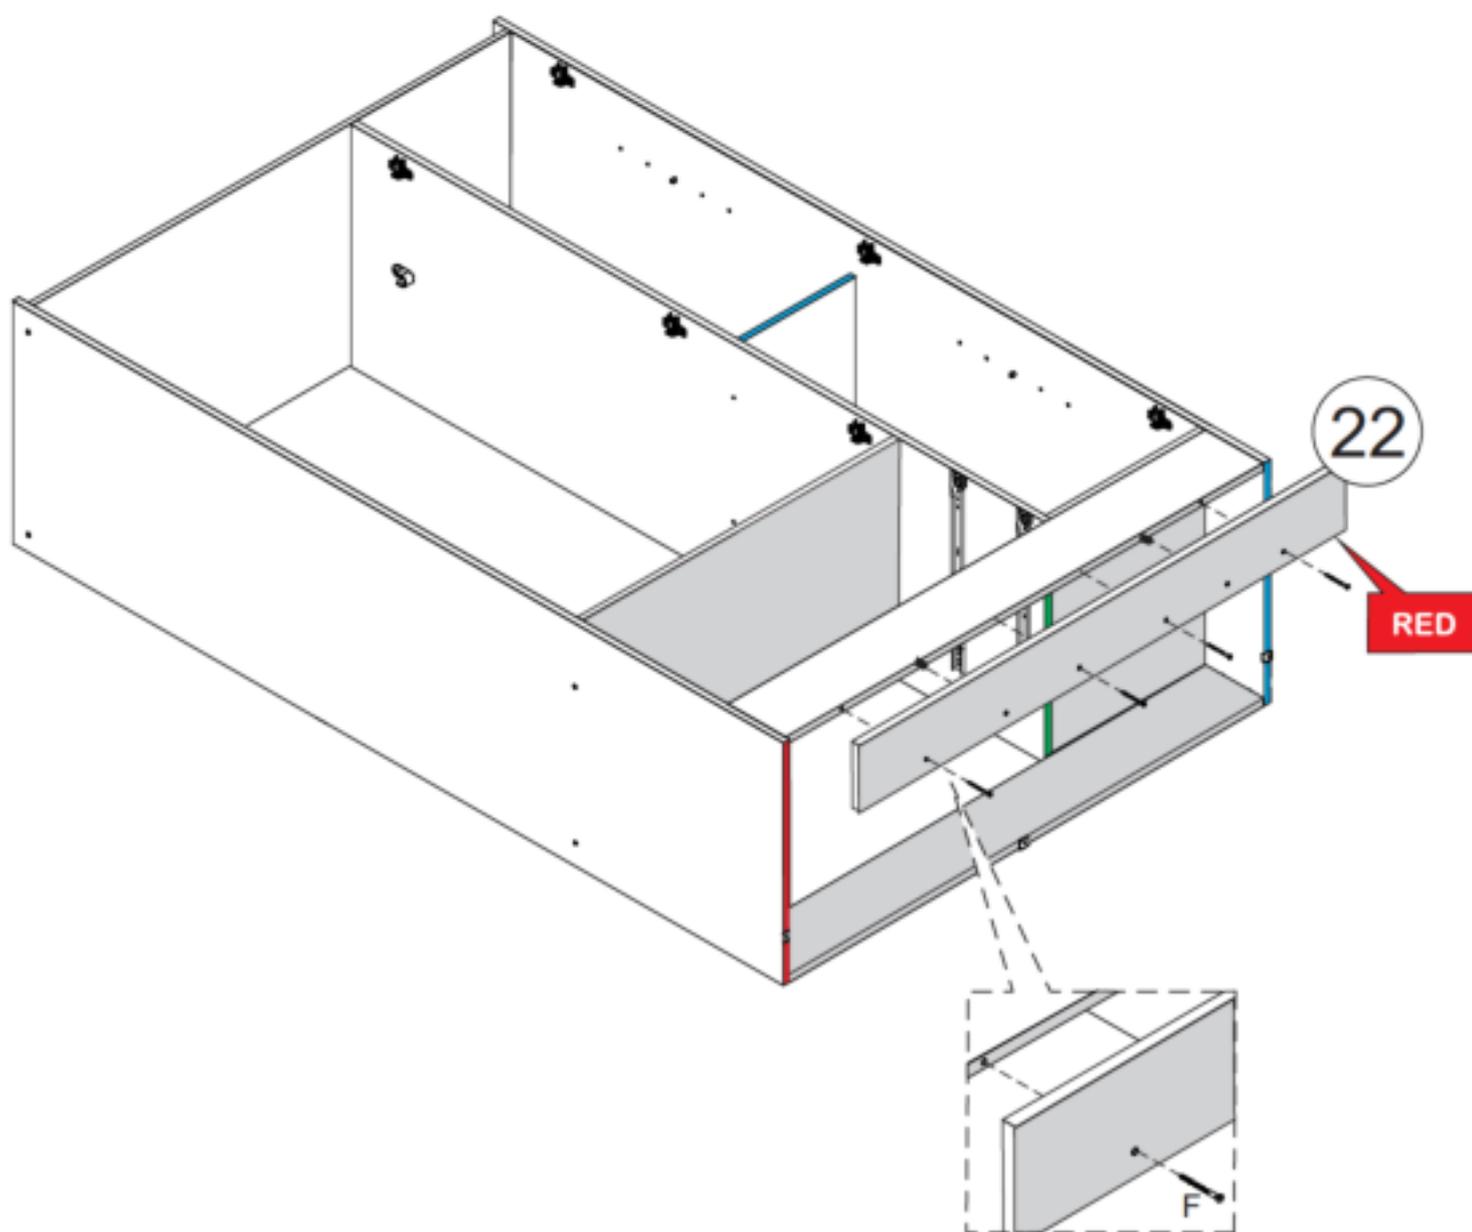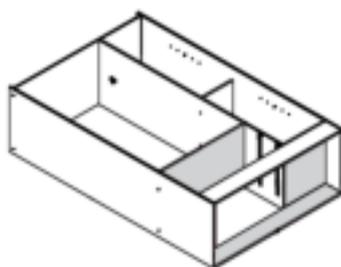

STEP 17

TOOLS REQUIRED

PARTS REQUIRED

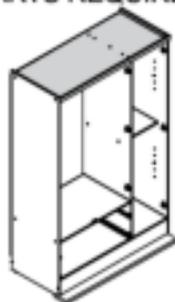


HARDWARE REQUIRED

Y



01

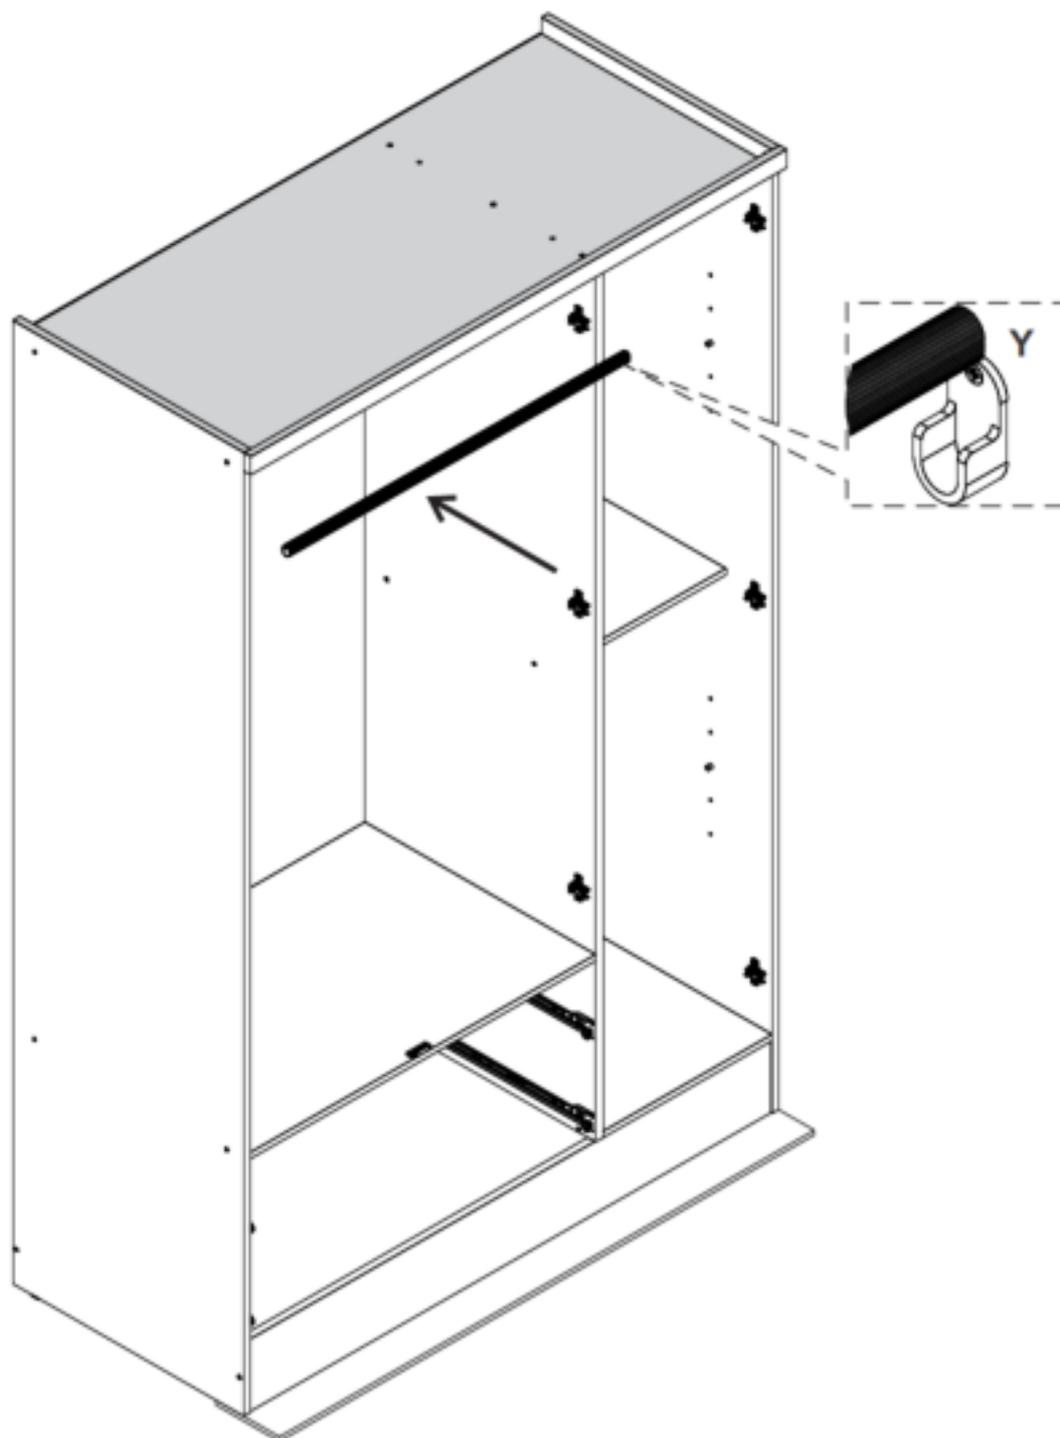


STEP 18


Attention! Tipover system



Install anti-tipping device as show.
First, approach the furniture as close as possible to the wall

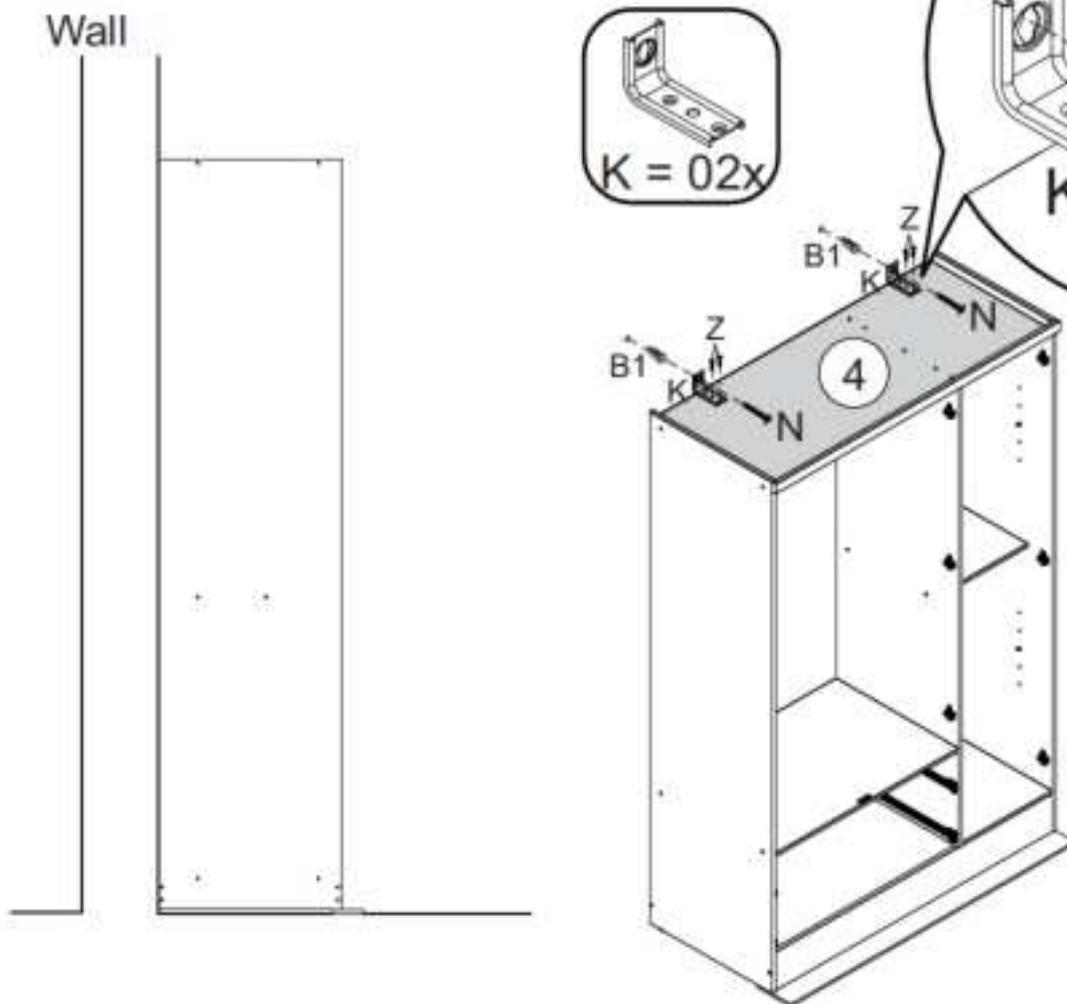

You will need a pencil to mark where you should drill the wall with a 3/8" drill bit to put in the hardware (B1)

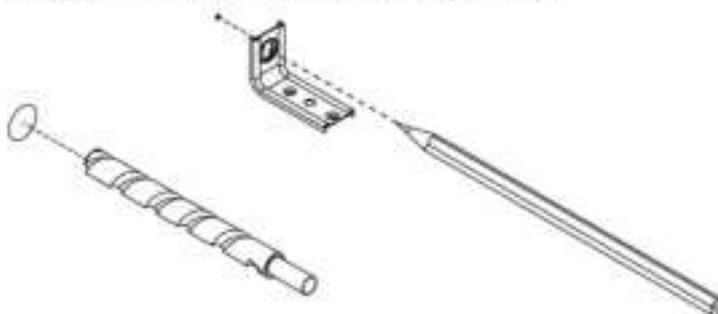



Use the 3/8 drill bit to drill the wall

STEP 19


Attention! Tipover system




Put hardware (B1) in to the hole that you drilled on the wall

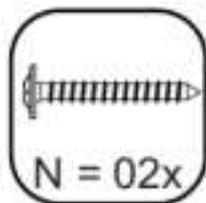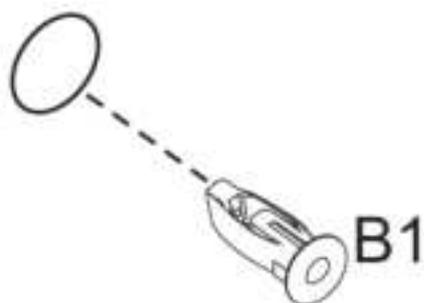


connect the hardware (K) on the wall using the hardware (N)

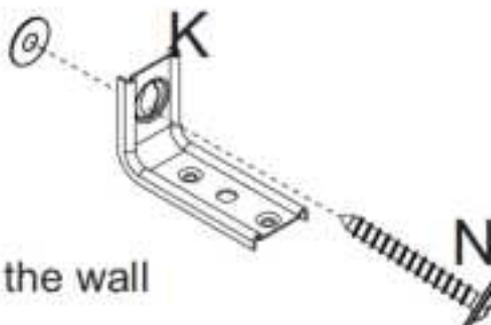

*Hardware (B1) plugged in the wall

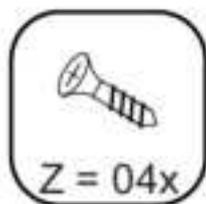


*Connect the hardware (K) on the part 4 (green) with hardware(Z)

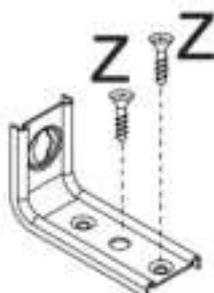


STEP 20

After installing the anti-tip system your product are ready to use

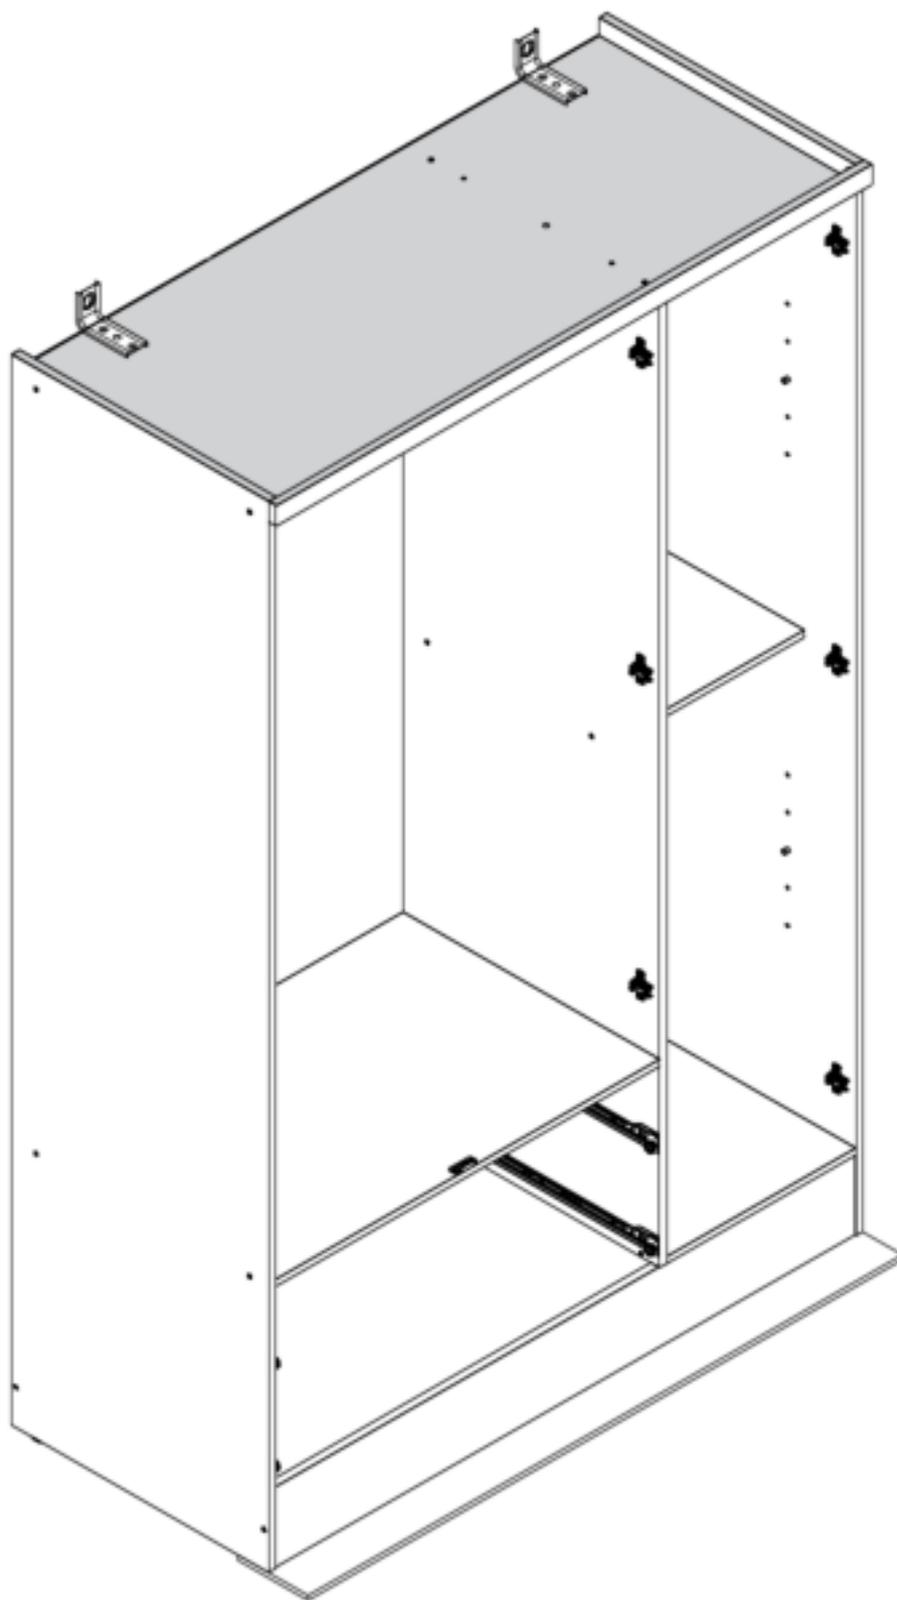

STEP 21

TOOLS REQUIRED




PARTS REQUIRED

16 - DRAWER SIDE - BLUE	x4
17 - DRAWER BACK PANEL - RED	x2
20 - DRAWER BOTTOM SUPPORTBAR - BLACK	x2

HARDWARE REQUIRED

G		20
V		01

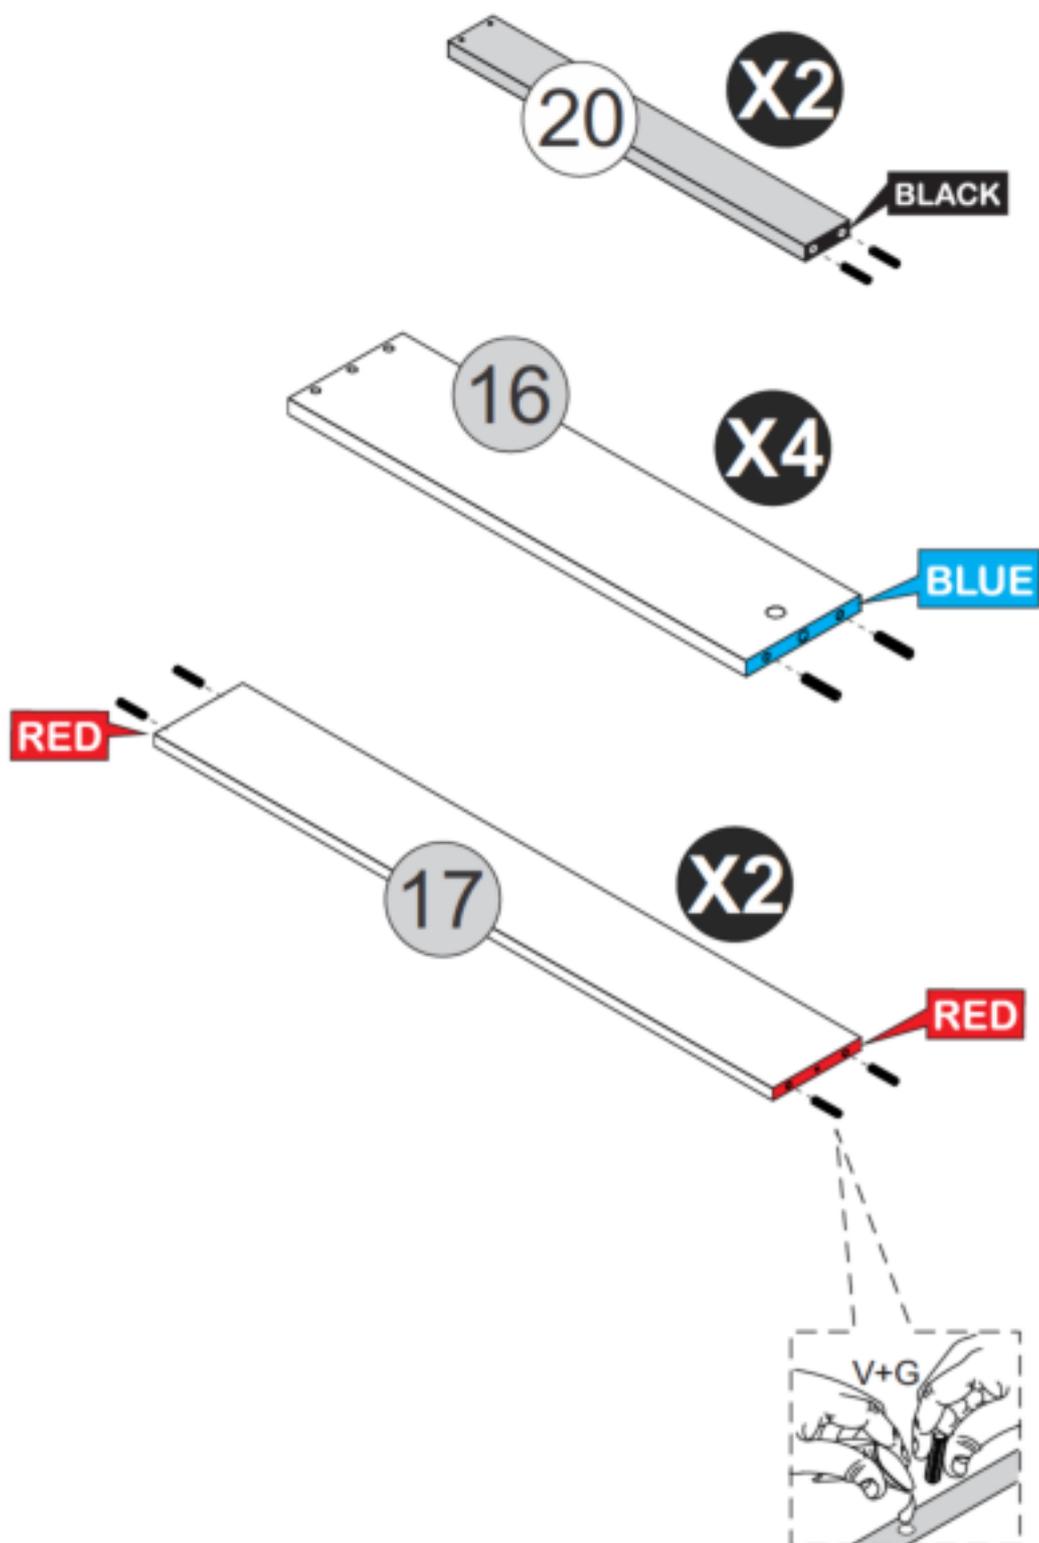


STEP 22

PARTS REQUIRED

18 - DRAWER FRONT x2

X

HARDWARE REQUIRED




04

TOOLS REQUIRED



2x

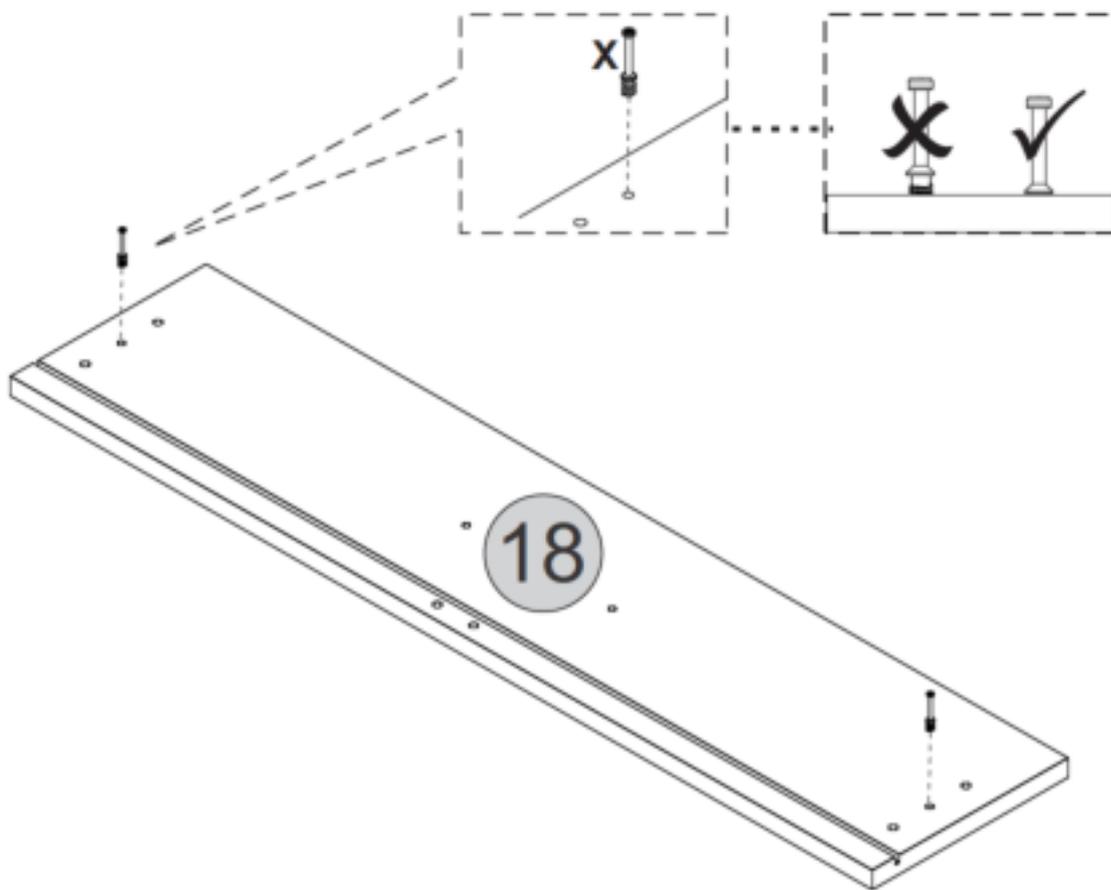

STEP 23

TOOLS REQUIRED




PARTS REQUIRED

16 - DRAWER SIDE - BLUE x4

17 - DRAWER BACK PANEL - RED x2

HARDWARE REQUIRED


F



4 x 50mm

04

2x

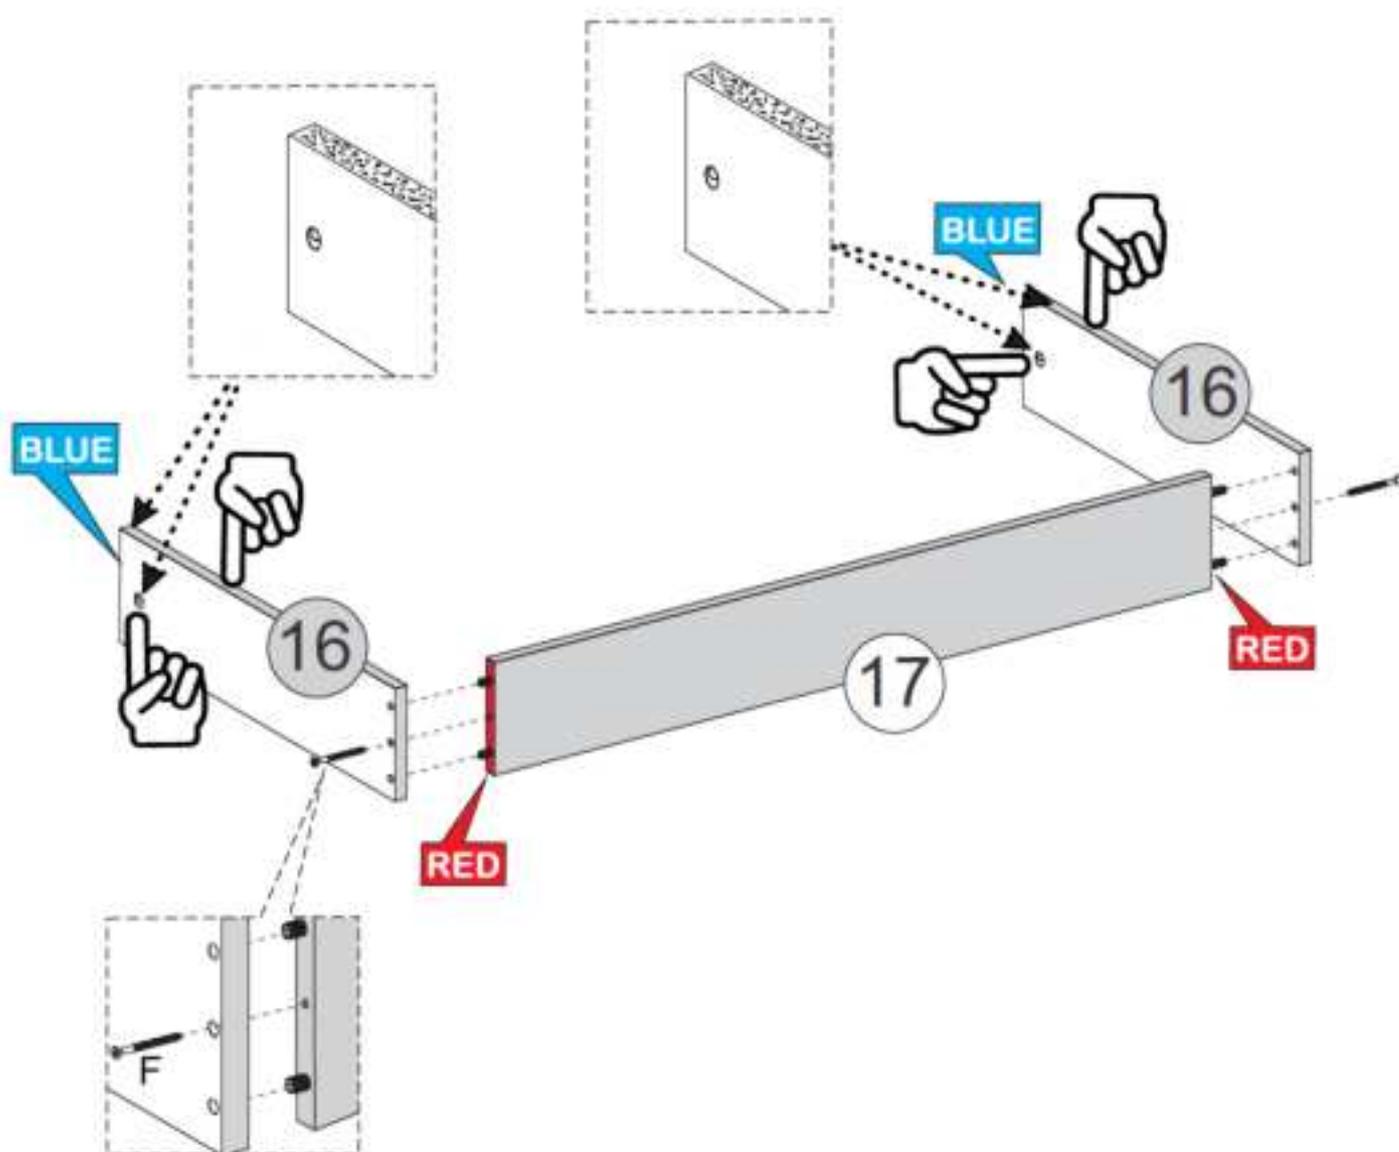


STEP 24

TOOLS REQUIRED



PARTS REQUIRED

18 - DRAWER FRONT x2

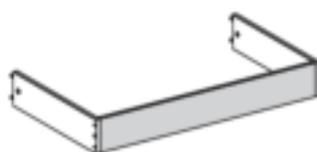


HARDWARE REQUIRED

U  08

V  01

W  04

2x

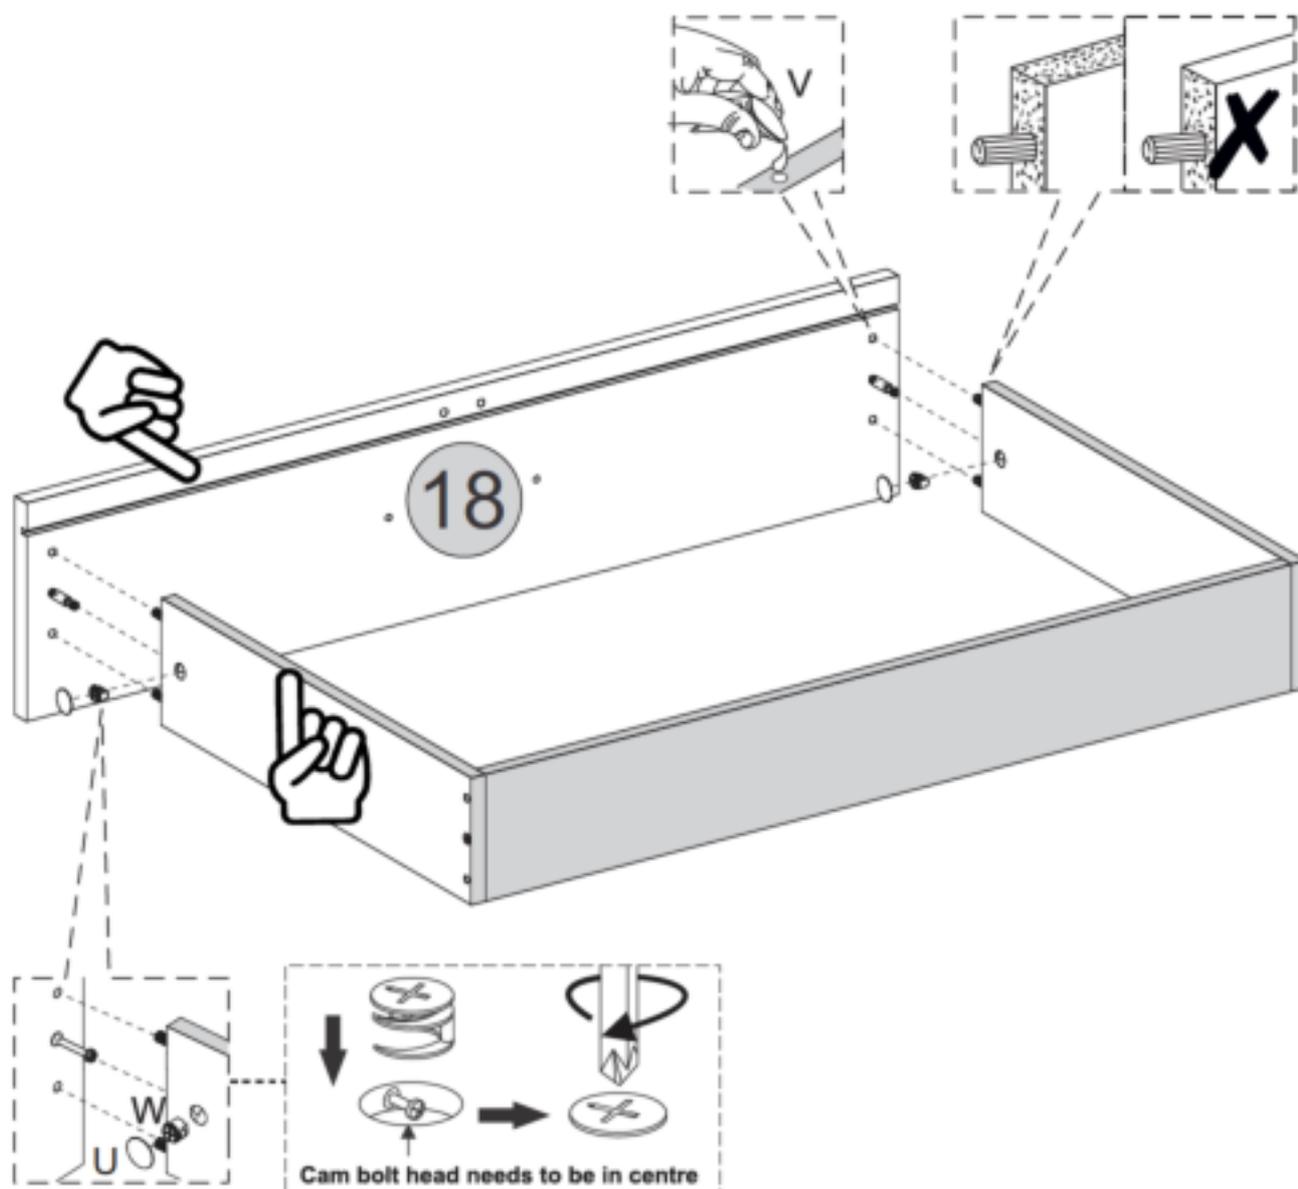

STEP 25

PARTS REQUIRED

19 - DRAWER BOTTOM x2


HARDWARE REQUIRED

H





08

TOOLS REQUIRED

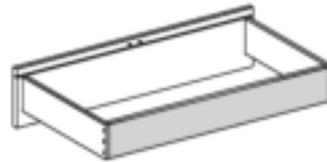


2x

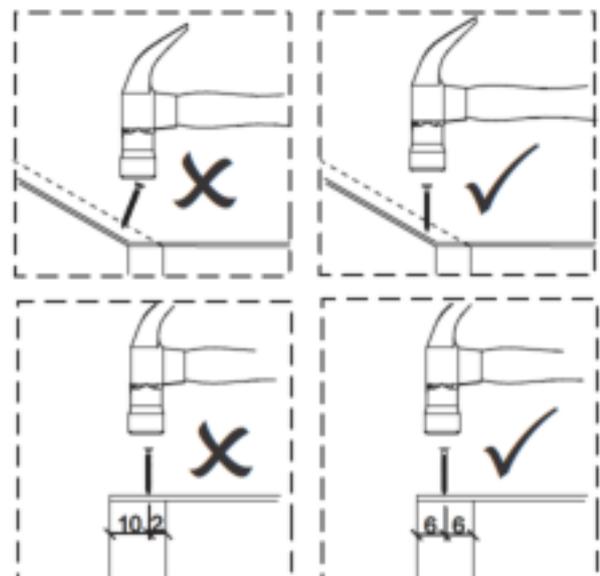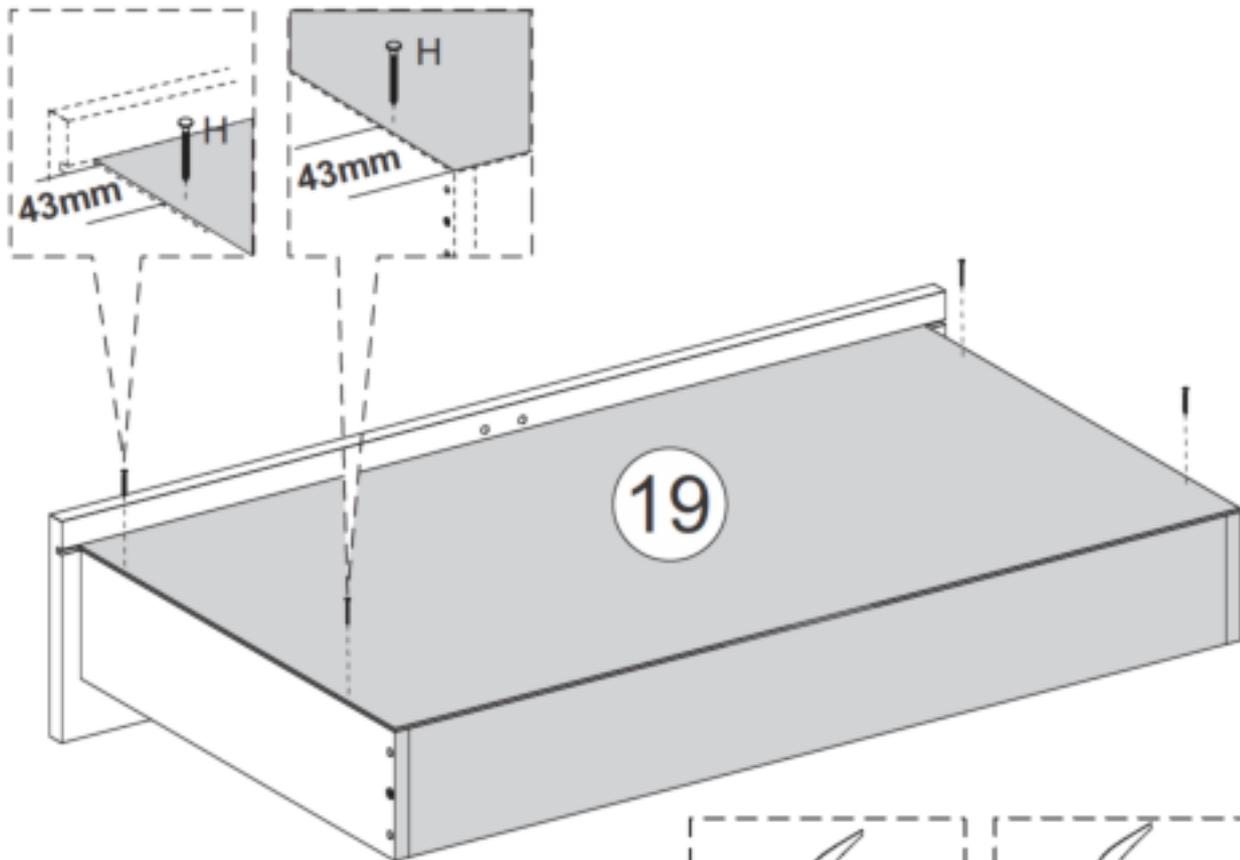

STEP 26


PARTS REQUIRED

20 - DRAWER BOTTOM SUPPORT BAR
BLACK x2

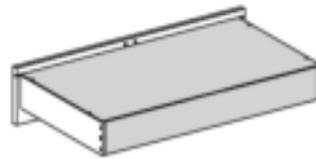

HARDWARE REQUIRED

E



04


3.5 x 40mm

H




12

TOOLS REQUIRED

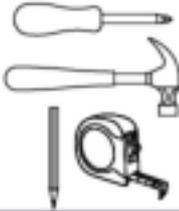

2x

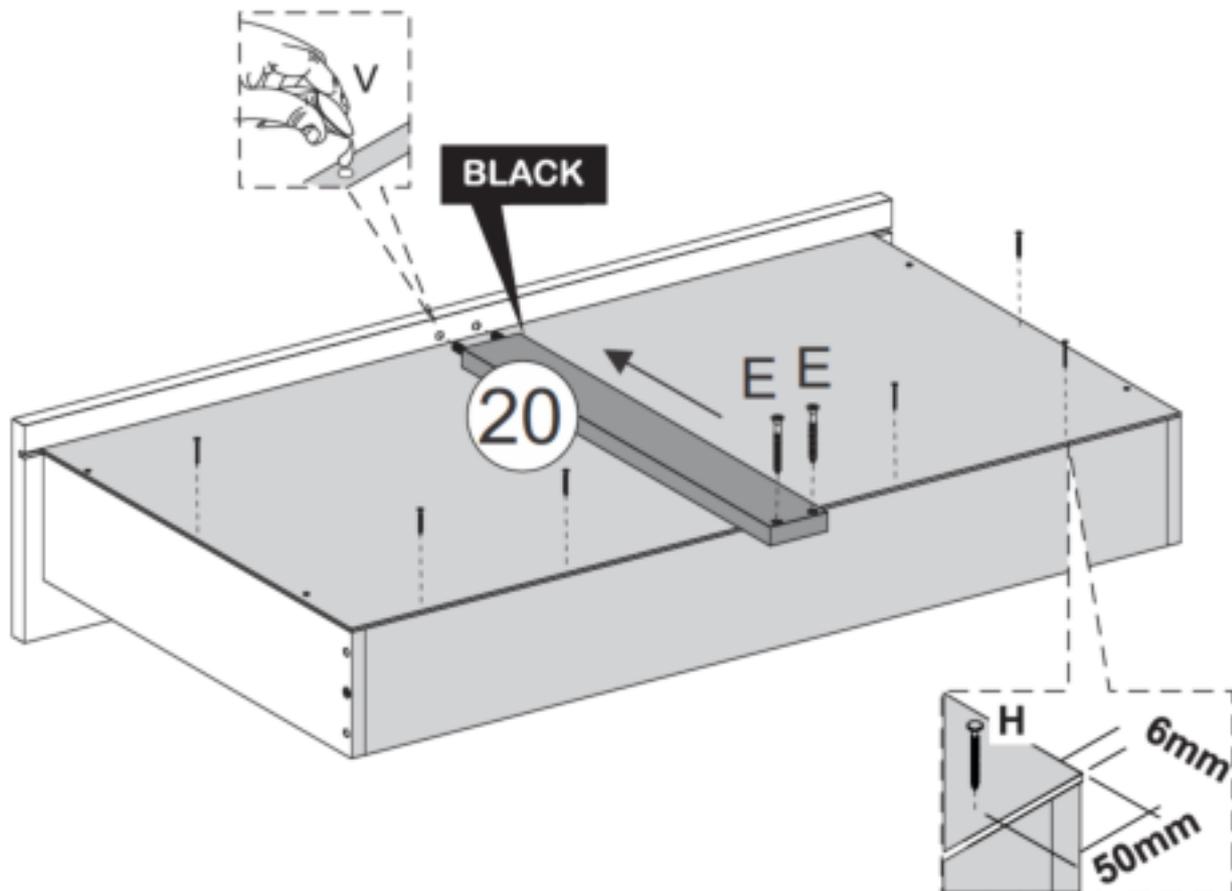


STEP 27

TOOLS REQUIRED






PARTS REQUIRED

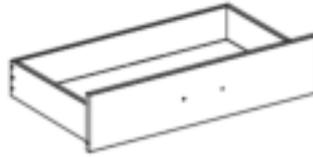

HARDWARE REQUIRED

C	 4 x 14mm	08
D	 4 x 20mm	04
Q		04
T		02

2x

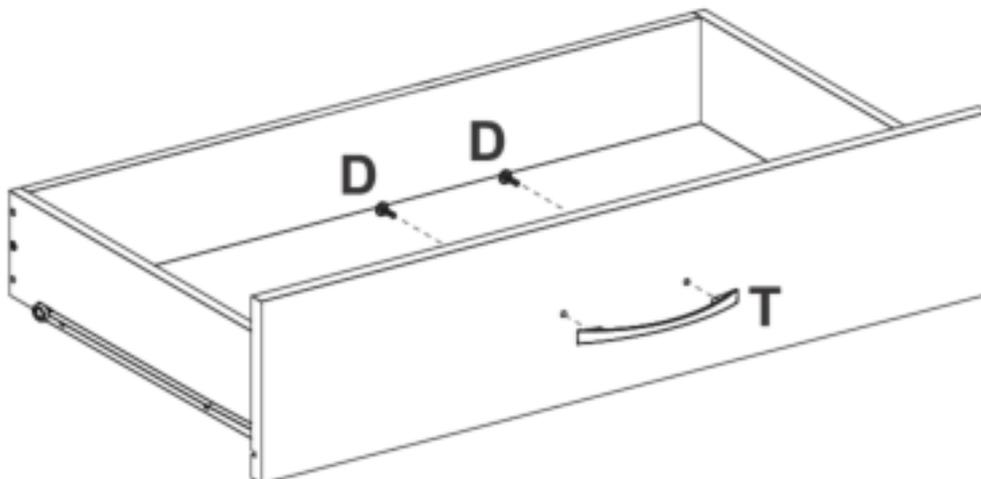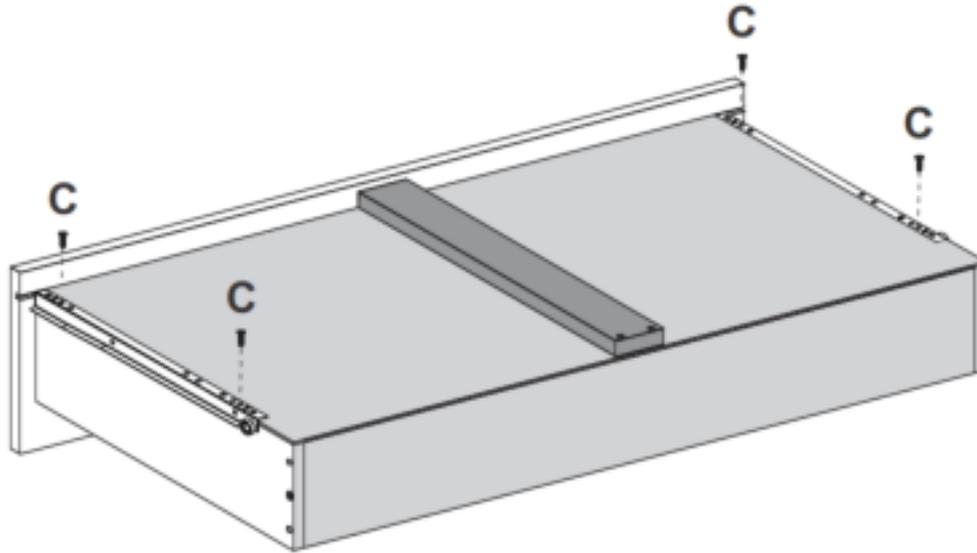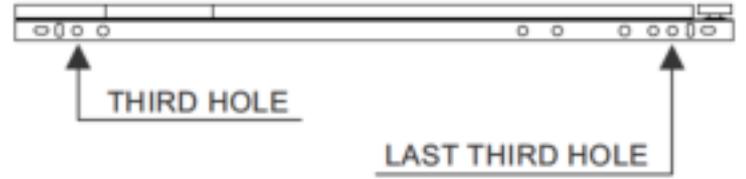

STEP 28

TOOLS REQUIRED




PARTS REQUIRED

13 - LARGE DOOR	X1
14 - RIGHT SMALL DOOR	X1
15 - LEFT SMALL DOOR	X1

HARDWARE REQUIRED

C	 4 x 14mm	18
O		09

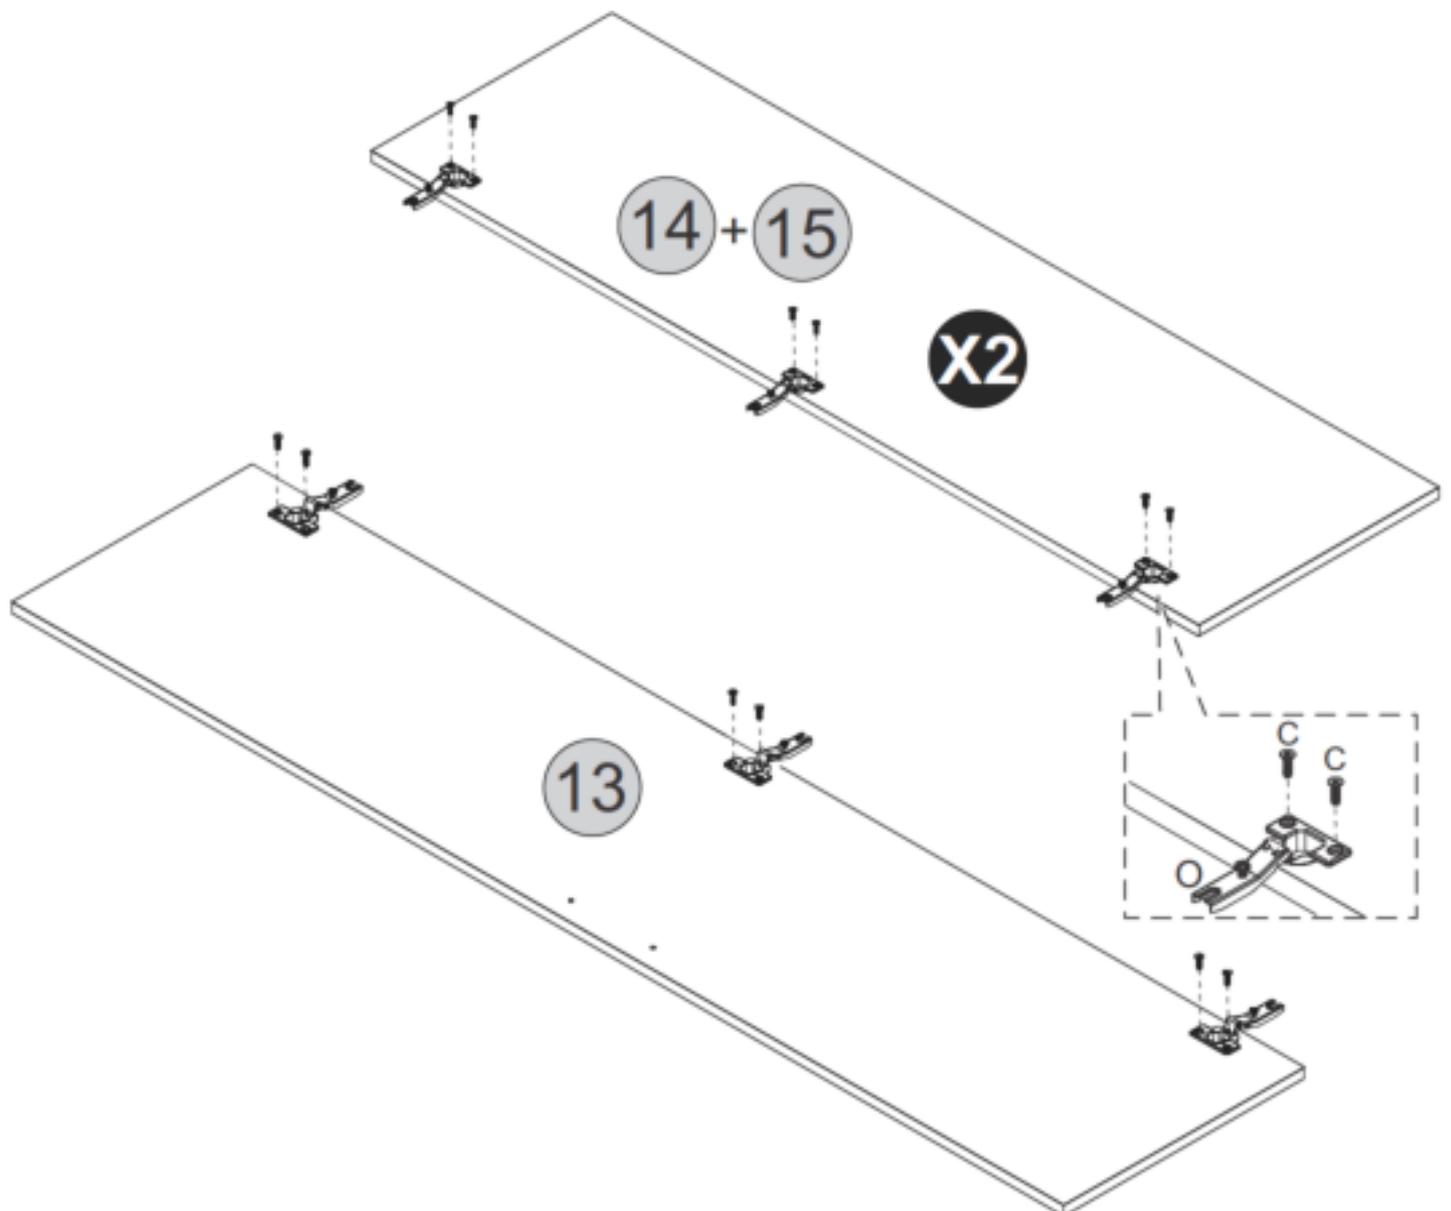

STEP 29

PARTS REQUIRED

13 - LARGE DOOR	x1
14 - RIGHT SMALL DOOR	x1
15 - LEFT SMALL DOOR	x1
21 - MOVABLE SHELF - RED	x2



HARDWARE REQUIRED

U




14

TOOLS REQUIRED

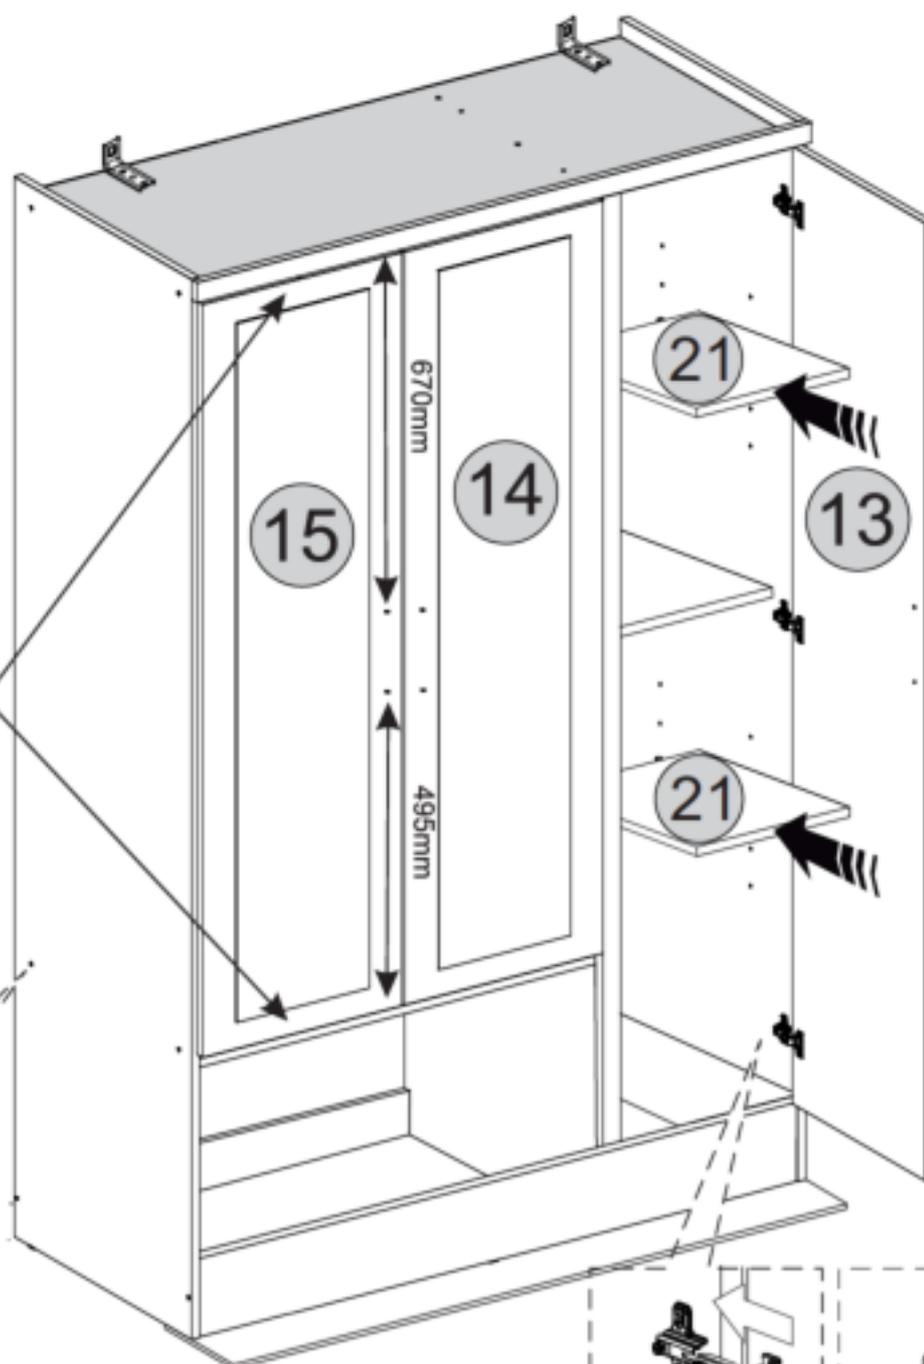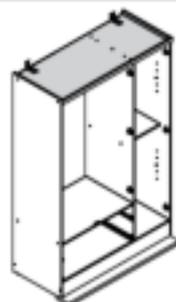


Please note the top or bottom edges of the doors are labelled LEFT or RIGHT to make them easier to identify when assembling.

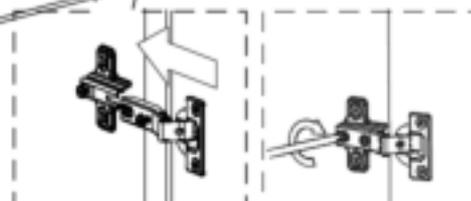


STEP 30

TOOLS REQUIRED



PARTS REQUIRED

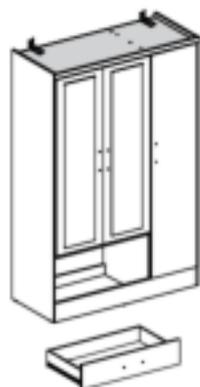

HARDWARE REQUIRED

D




4 x 20mm

06

T



03

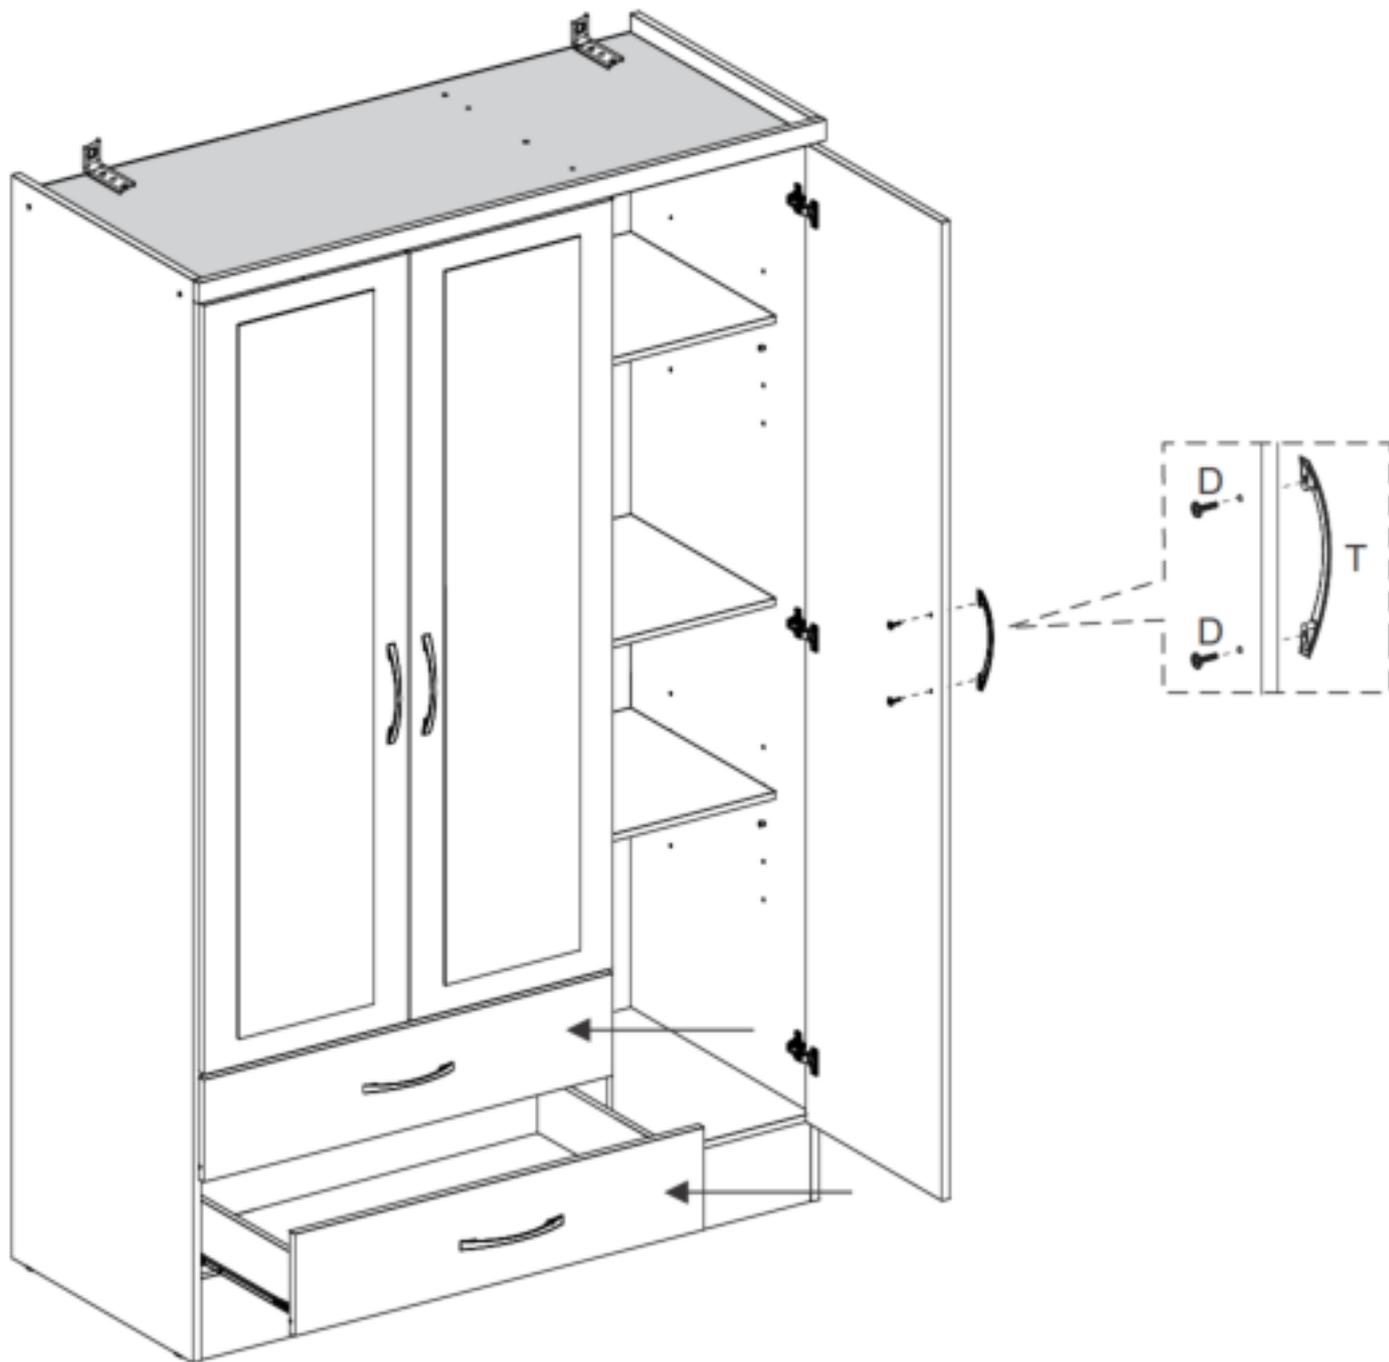


STEP 31

PARTS REQUIRED


HARDWARE REQUIRED

C



04


TOOLS REQUIRED

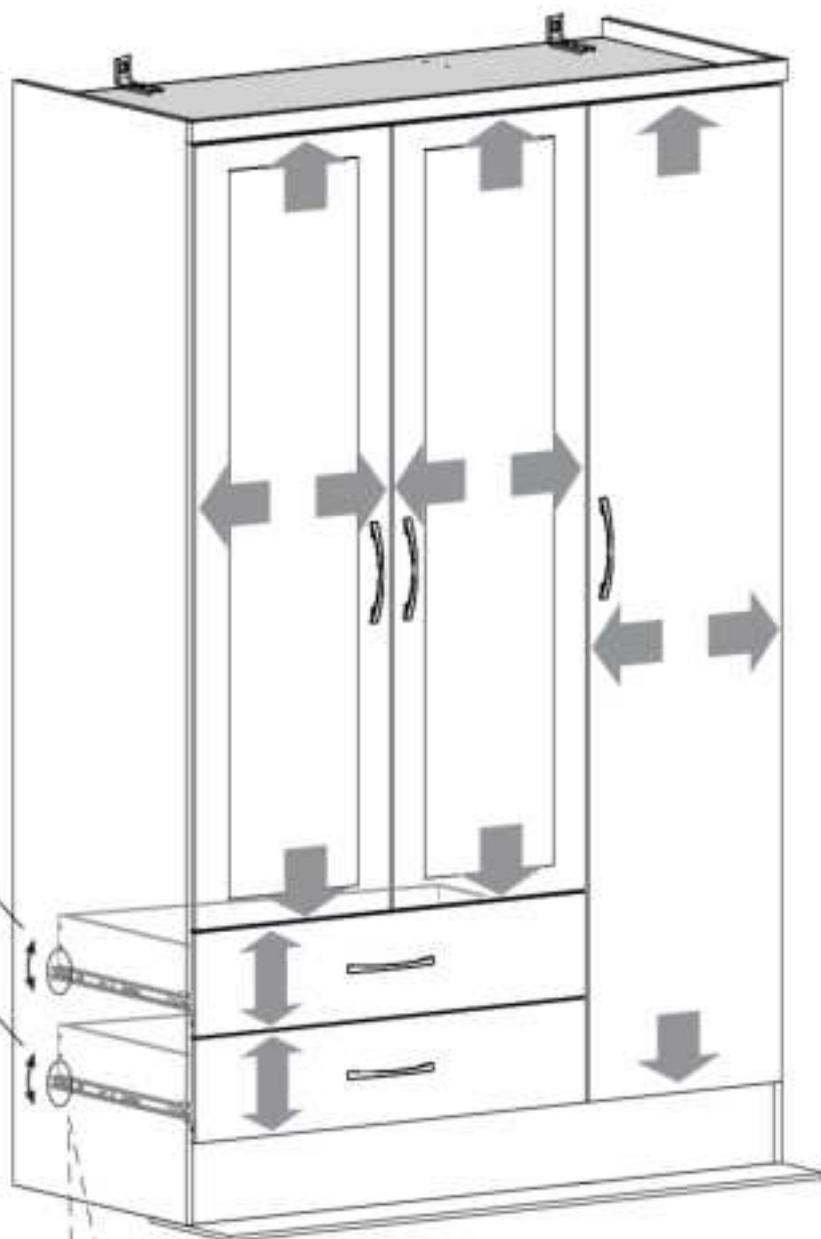


Detail 26

Detail 26




Height Adjustment

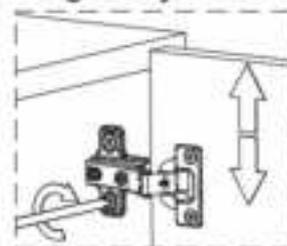


Internal Adjustment

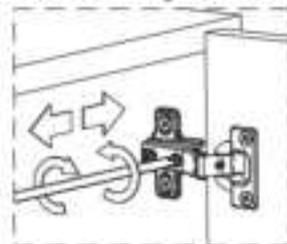

Depth Adjustment

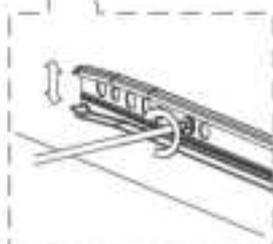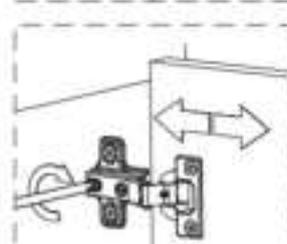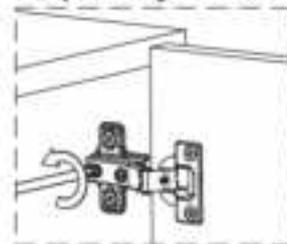

Drawer Adjustment

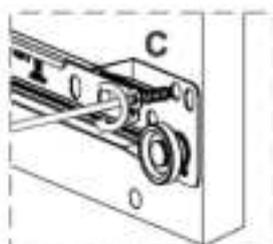

Drawer Lock

