




MAKE A DIFFERENCE

Side Guards

BXG.9821-S
(INSTALLATION INSTRUCTION)

ATTENTION • Please verify all parts are present and read instructions carefully before starting installation.
• Please feel free to contact your distributor if you have any kind of question about your purchase.

CONTENTS

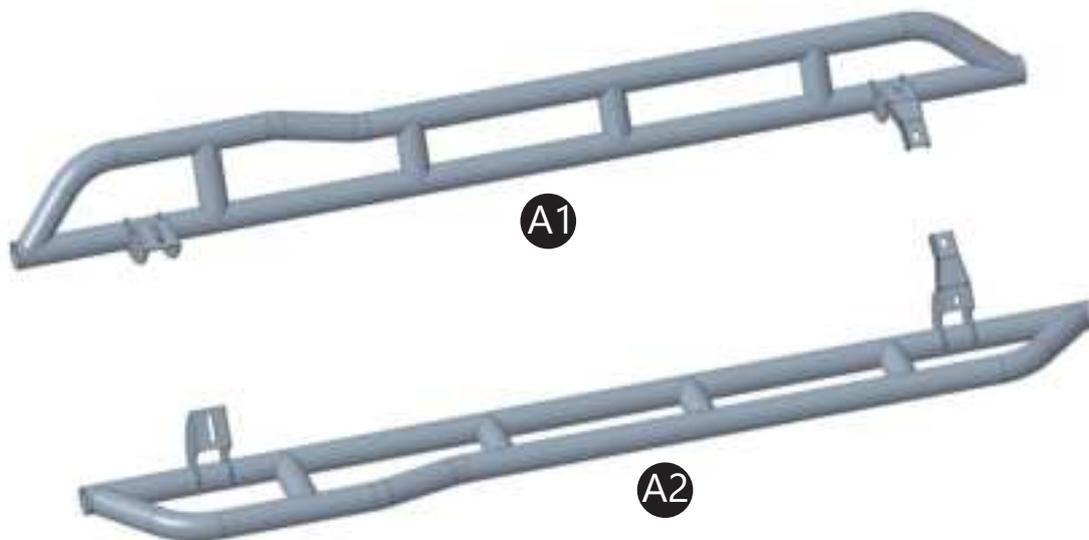

A1: Driver Side Side Guard

A2: Passenger Side Side Guard

Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
8	Hex Bolt	M8x25		8	Flat Washer	M8x20x2	
8	Split Lock Washer	D8					

TOOLS REQUIRED

◆ Drive Socket Ratchet Wrench

◆ 13mm Deep Socket


To view online instruction, please scan the QR code.




3 INSTALLATION INSTRUCTION

Step 1

Remove the factory side steps. Find the factory installation holes.

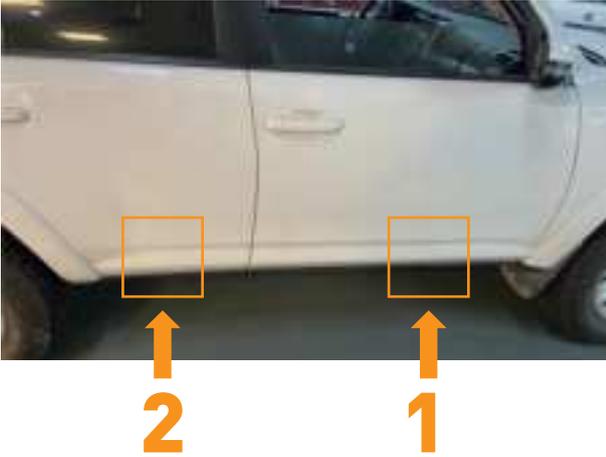


Step 3

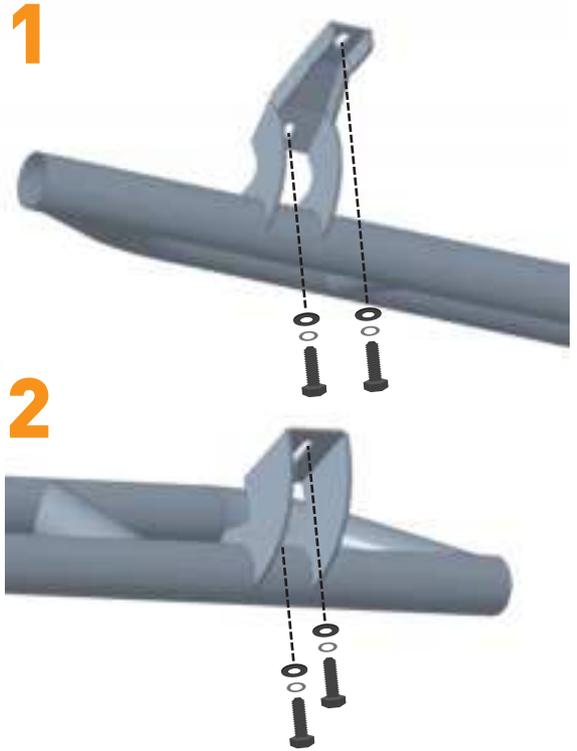

Step 2

Distinguish the side guards.

Driver Side

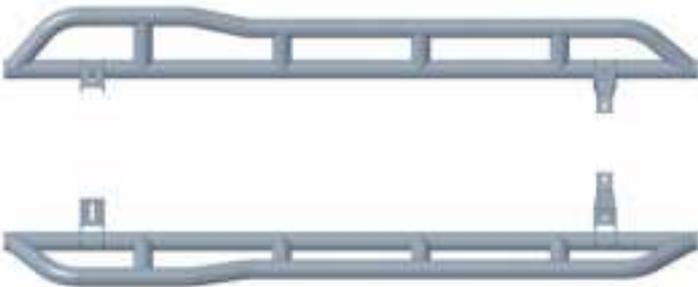

Passenger Side

Step 4

Repeat all steps on the other side of the vehicle.

Step 3

Install the side guard to your vehicle.

- (4) M8x25 Hex Bolts
- (4) M8x20x2 Flat Washers
- (4) D8 Split Lock Washers



Step 5

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!



Google **Hooke Road** to find your parts.

Feel Free To Share Your Vehicle [@HookeRoad4x4](#)
With The Hashtag [#hookeroad](#) If You'd Like

