

Installation Instructions



I - Sheet Number LUNDRB14 Rev.B

Lund Part# 26410010

26410011

26410010-SC

Rock Rail Running Boards for GM trucks


Important Safety Information



- To be used with Lund® branded products only.
- Do not stand on Lund running board or bracket while vehicle is in motion.
- Do not use the brackets as a jacking point for the vehicle.
- Do not use the bracket system or running boards to fasten cargo.
- Periodically check all components for tightness.
- Be sure to wear safety glasses while installing brackets.
- When using power tools, read and understand all operating instructions.

Contents

NOTE: Actual product may vary from illustration. (Extended / double cab kit contains fewer parts.)

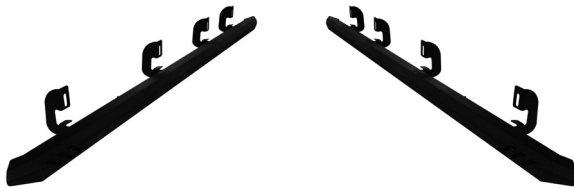

Driver Side Running Board

Passenger Side Running Board



(8) M8 U-nut



(16) M8 Flat Washer




(16) M8x30 Hex Bolt



(16) M8 Flat Washer


Tools Required

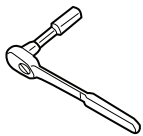

Ratchet and Extension



Socket Set

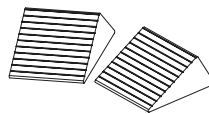

Wheel Chocks



Grease Pencil



Safety Glasses


Preparation Before Installation

- Park your vehicle in a clean, level location. Check to make sure the vehicle is in park, or for manual drive models, place the transmission in first gear. Engage the parking brake. Chock wheels.
- Unpack the kit and identify the parts according to the content descriptions.
- An assistant is recommended to help position the running board properly during the installation.

Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Identify the (4) mounting locations for each running board bracket by looking under the driver side of the vehicle and finding the holes in the rocker panel. Note which holes correspond with the holes in the running board brackets. Mark the holes in the rocker panel with a grease pencil. **NOTE:** For extended cab / double cab trucks, there are only (3) mounting locations.

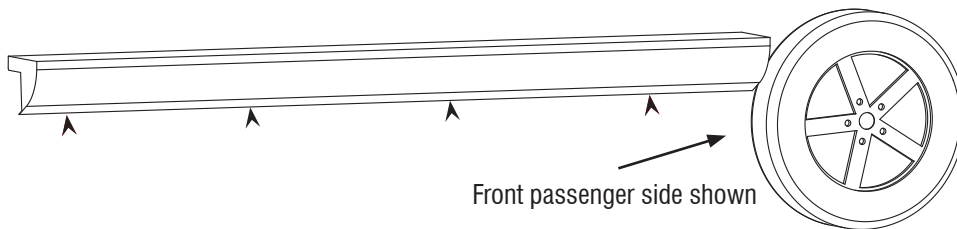

1

Take note how some holes align with a factory installed nut.

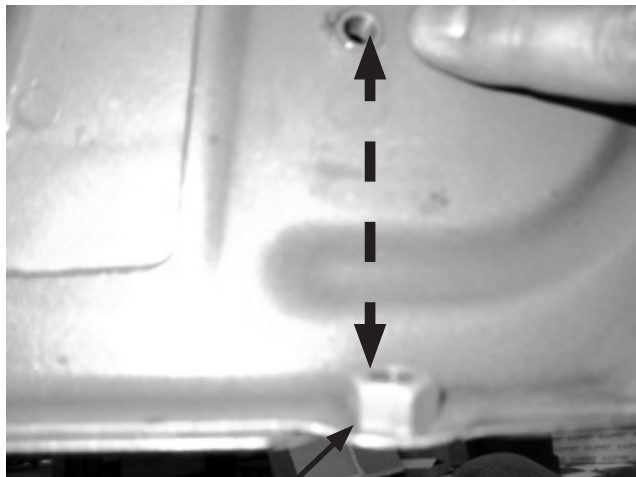

Factory installed nut



Install (1) U-nut clip at remaining hole locations.




Install U-nut

2



Align running board brackets so that the slots in the brackets align with the holes and nuts located in **Steps 2 and 3**. Thread a bolt with lock and flat washers in the top bracket hole and into the top hole in the rocker panel. Do not tighten at this time. Repeat for remaining (3) bracket mounting locations.

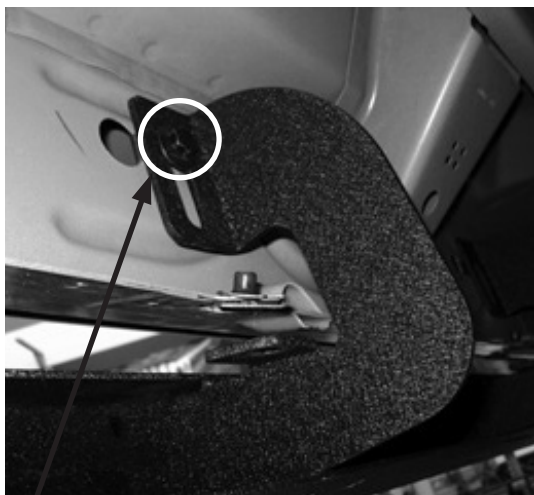


Install bolt and washer

3



Thread another bolt with washers through the lower bracket hole, and into either the factory installed nut, or the U-nut, as applicable. Repeat for remaining (3) bracket mounting locations.

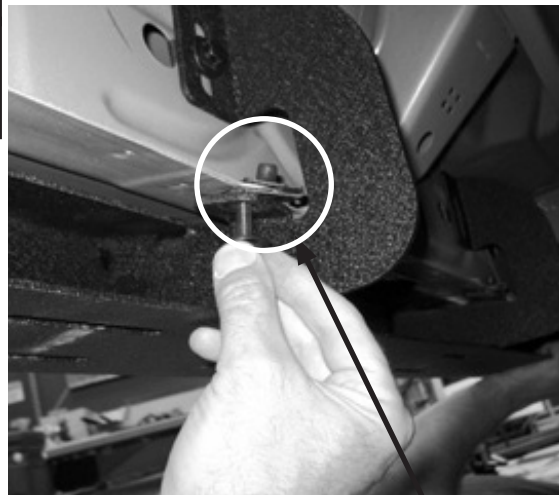

Install bolt and washer

4

5

Installation Steps

NOTE: Actual application may vary slightly from illustrations.

Check boards for final position and tighten all hardware to 18-20 lb-ft. Repeat **Steps 1-6** for passenger side.



6

Inspection After Installation

- Inspect all bolts and nuts for proper tightness.

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.
- Do not use cleaning solvents of any kind.

Congratulations!

You have purchased one of the many quality Lund[®] branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

LUND[®]