



MAKE A DIFFERENCE

Front Bumper

BXG.5300

(INSTALLATION INSTRUCTION)

ATTENTION • Please verify all parts are present and read instructions carefully before starting installation.
Please feel free to contact your distributor if you have any kind of question about your purchase.

1 CONTENTS

Left

Right

**B1****A****B2****C1****C2****D**

x4

A: Main Body

B1&B2: Wings

C1&C2: License Plate Bracket

D: Sensor Brackets

Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
6	Hex Bolt	M12×30		2	Flat Washer	M6×12×1	
2	Button Bolt	M6×16		6	Hex Nut	M12	
8	Button Bolt	M4×20		2	Nylon Lock Nut	M6	
6	Split Lock Washer	D12		1	L-Wrench	M4	
6	Flat Washer	M12×30×2		2	EVA		

2 TOOLS REQUIRED

◆ Drive Ratchet Handle

◆ 10mm, 19mm Wrench

◆ 4mm Hex Bit Socket

◆ 19mm Shallow Socket

To view online instruction, please
scan the QR code.




3 INSTALLATION INSTRUCTION

Step 1

Place the vehicle in park, remove the factory bumper from the frame.



Step 3

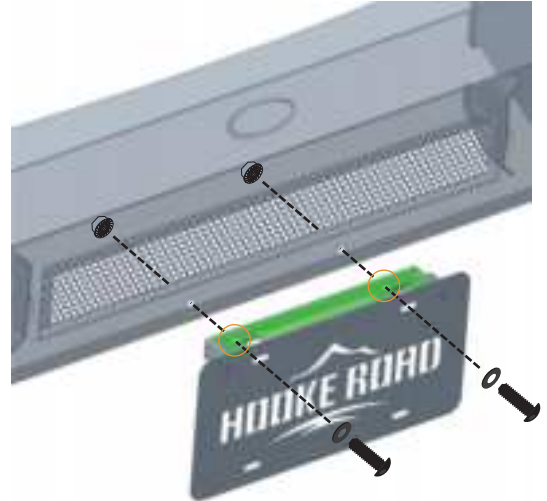


Step 4

Secure the bumper to the vehicle frame. Adjust the bumper to the desired position. Repeat this step on the other side of the vehicle.

Finally, tighten all bolts.


•(6) Factory Bolts

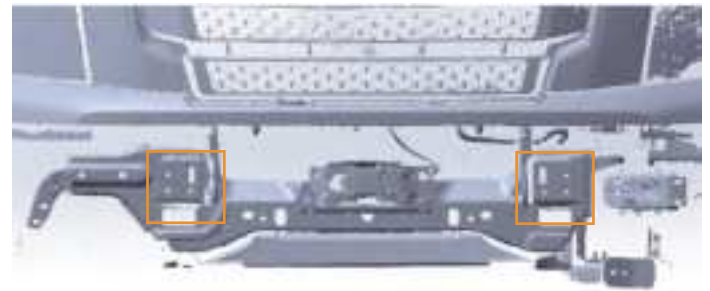

Step 2

First, stick the EVA to the main body. Assemble your Hooke Road bumper. Align the outer profile with the inner profile and tighten the hardware. Repeat this step on the other side of the bumper.

- (6) M12×30 Hex Bolts
- (6) M12×30×2 Flat Washers
- (6) D12 Split Lock Washers
- (6) M12 Hex Nuts
- (2) EVA

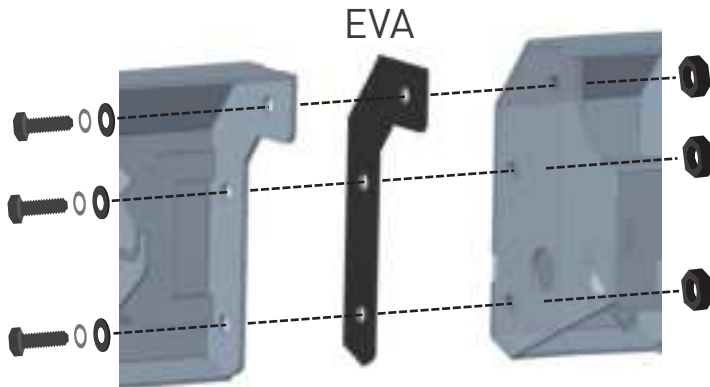

Step 5

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!



Step 3

Assemble the license plate bracket, then secure it to the bumper and tighten the hardware.

- (2) M6×16 Bottom Bolts
- (2) M6×12×1.3 Nylon Round Spacers
- (2) M6×12×1 Flat Washers
- (2) M6 Nylon Lock Nuts