

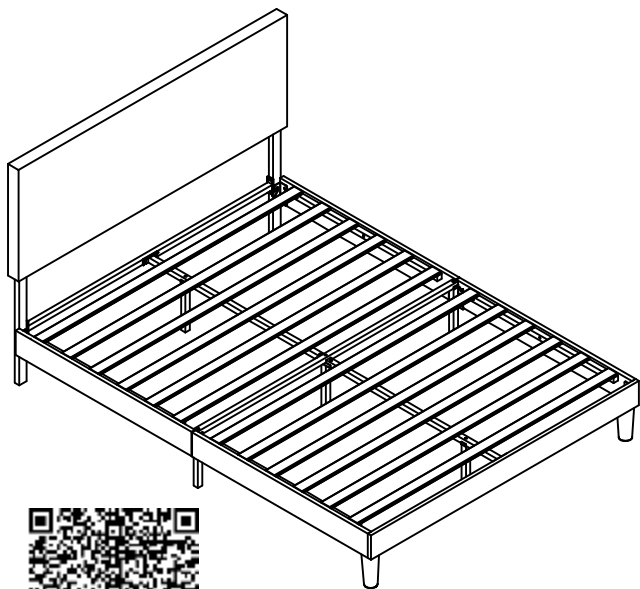
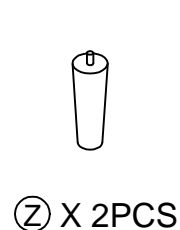
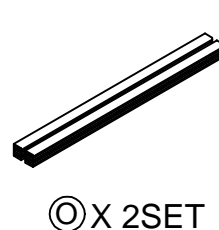
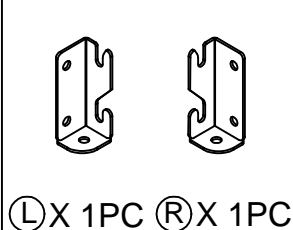
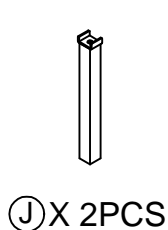
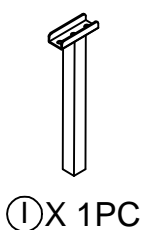
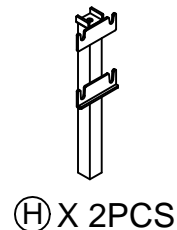
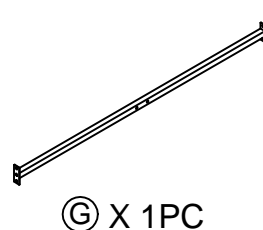
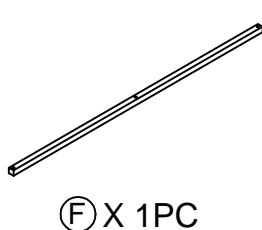
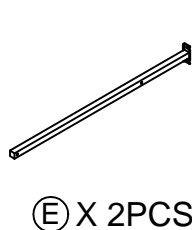
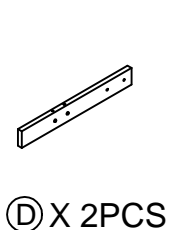
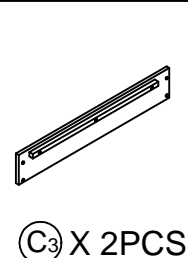
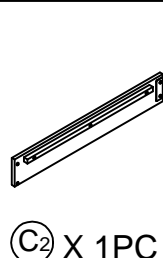
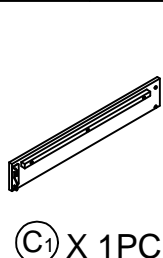
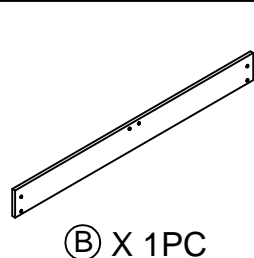


F 12007/12008/12009/12010/12011/12012




Assembly Instructions – Please keep for future reference

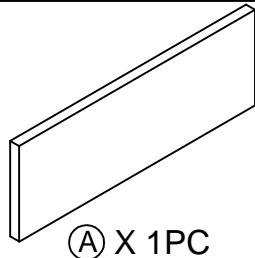


Please scan the QR code to watch the assembly guide video

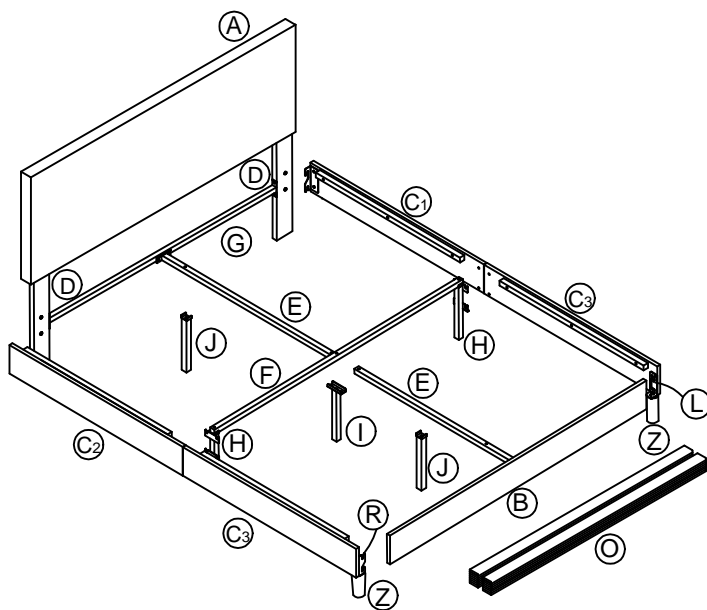

Hardware

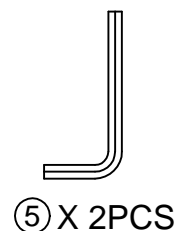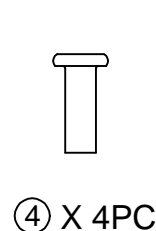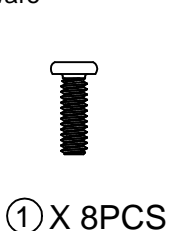

Step 1

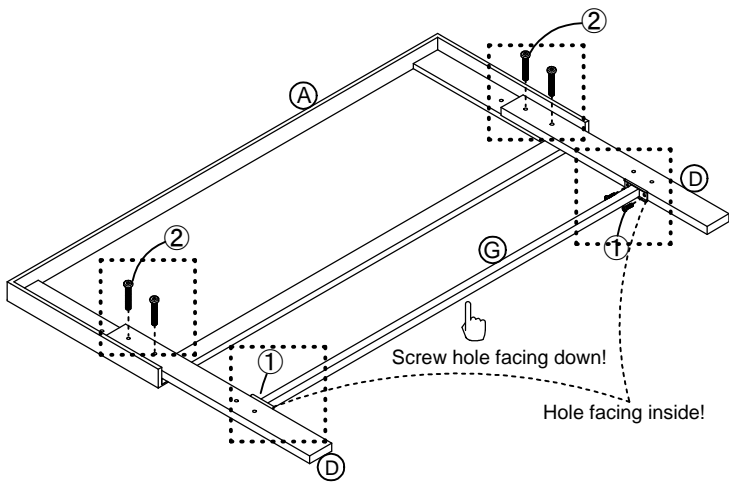


Attach **DX2** to **A** with ②, Attach **G** to **D** with ①.

① X 4PCS ② X 4PCS



Step 2

Attach **Z X 2** to **L** and **R**.



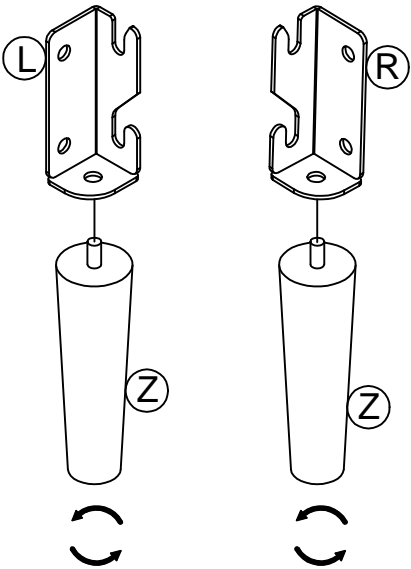


Step 3

Hang **C1** and **C3** on **H**.

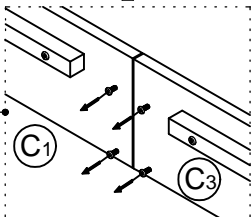
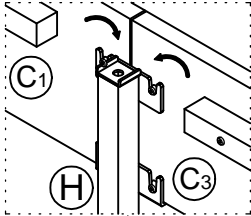


Rotate part of screw out.

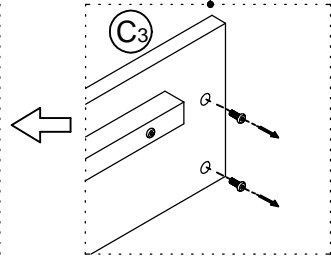
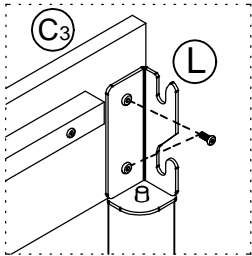
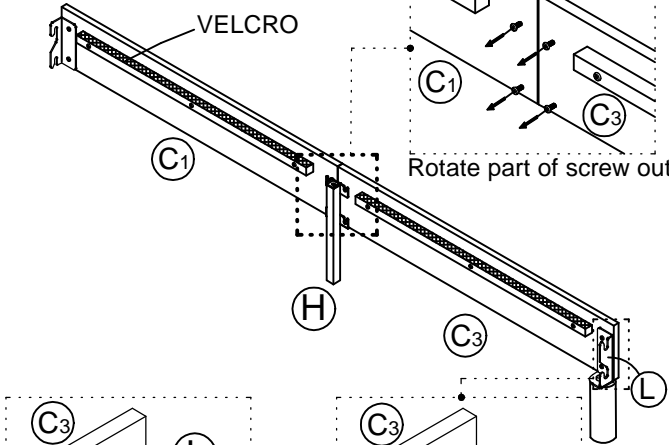


Step 4


Hang **C2** and **C3** on **H**.

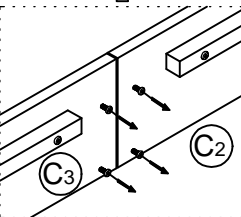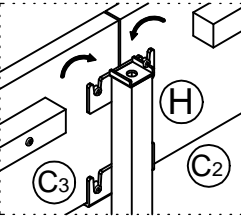

Rotate part of screw out.

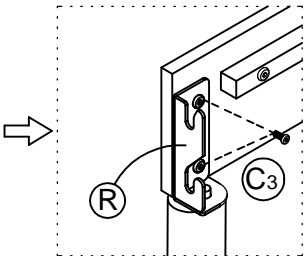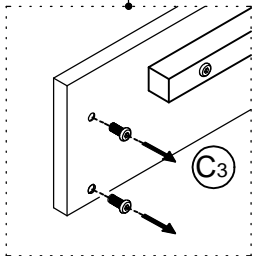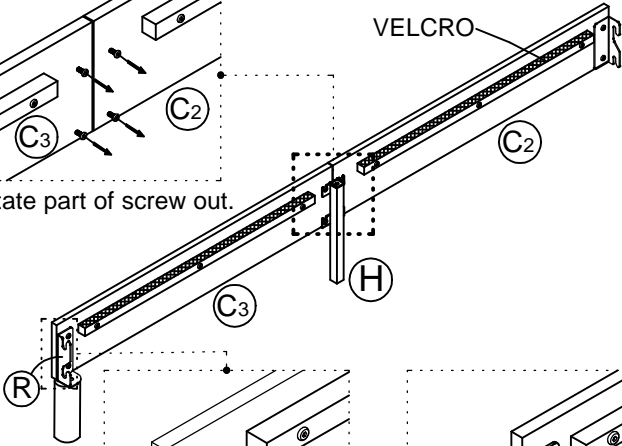


Step 5

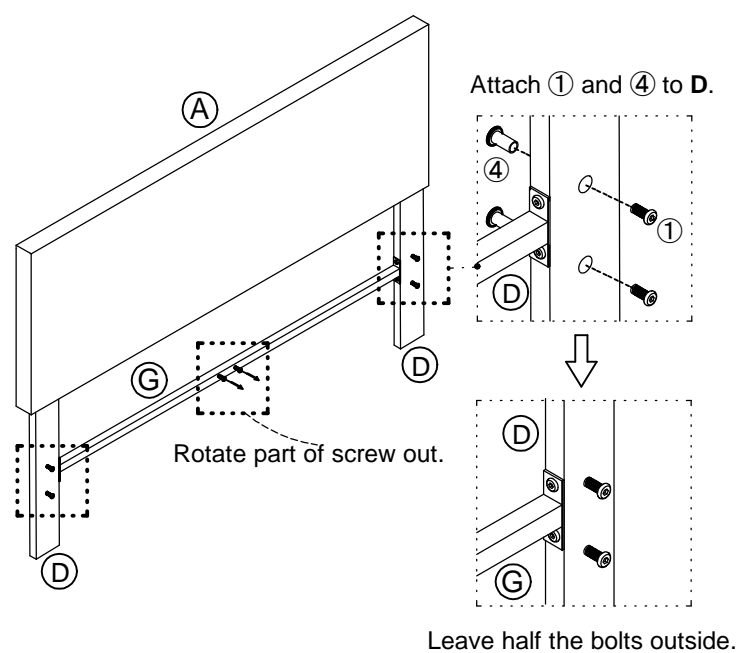


①X 4PCS ④X 4PCS


Step 6

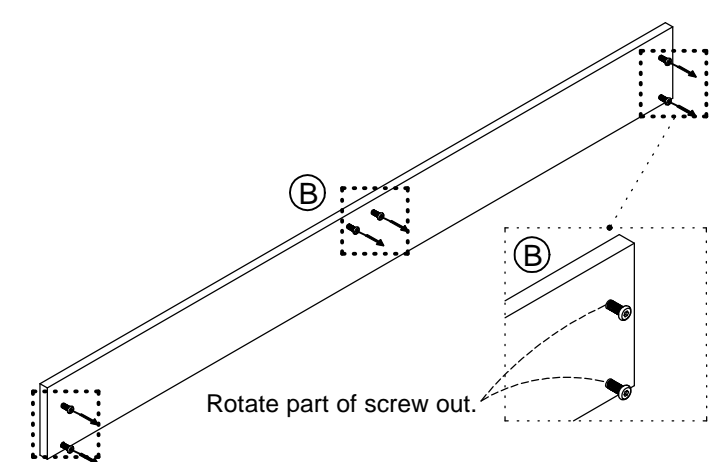

Step 7

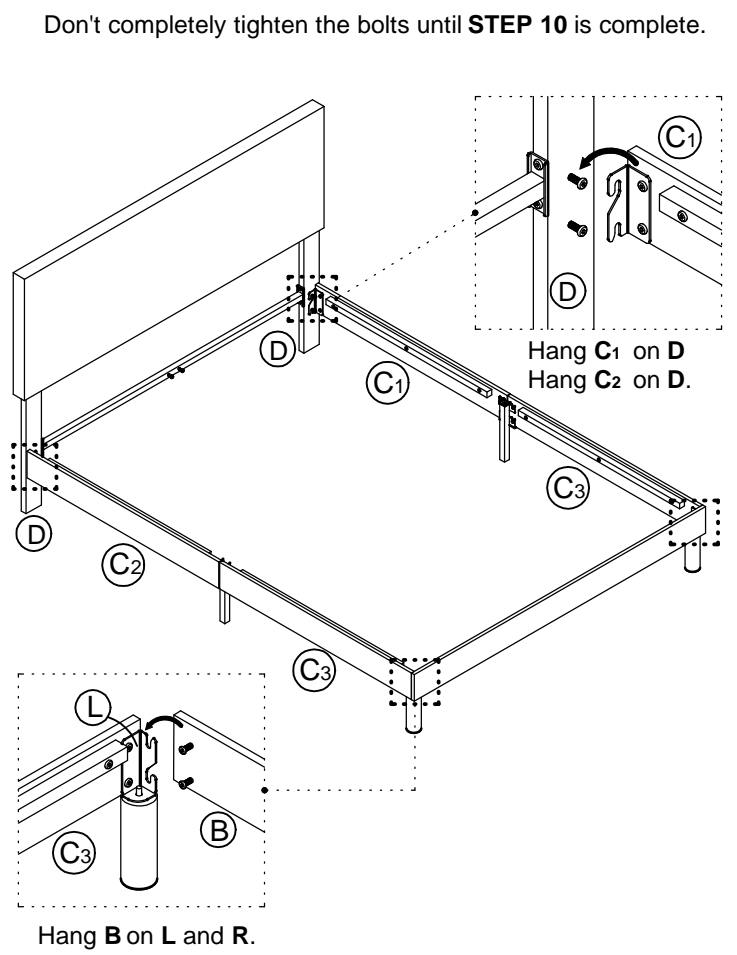


Step 8

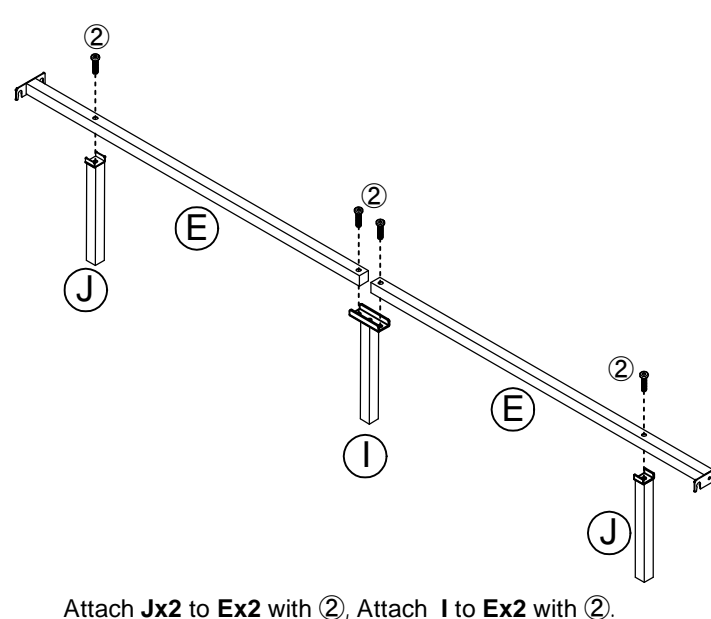


②X 4PCS

Step 9

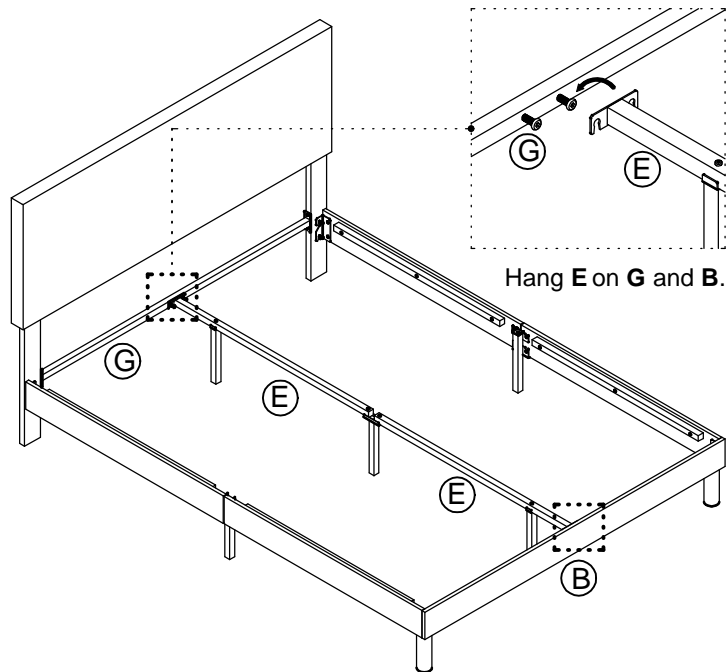

Step 10

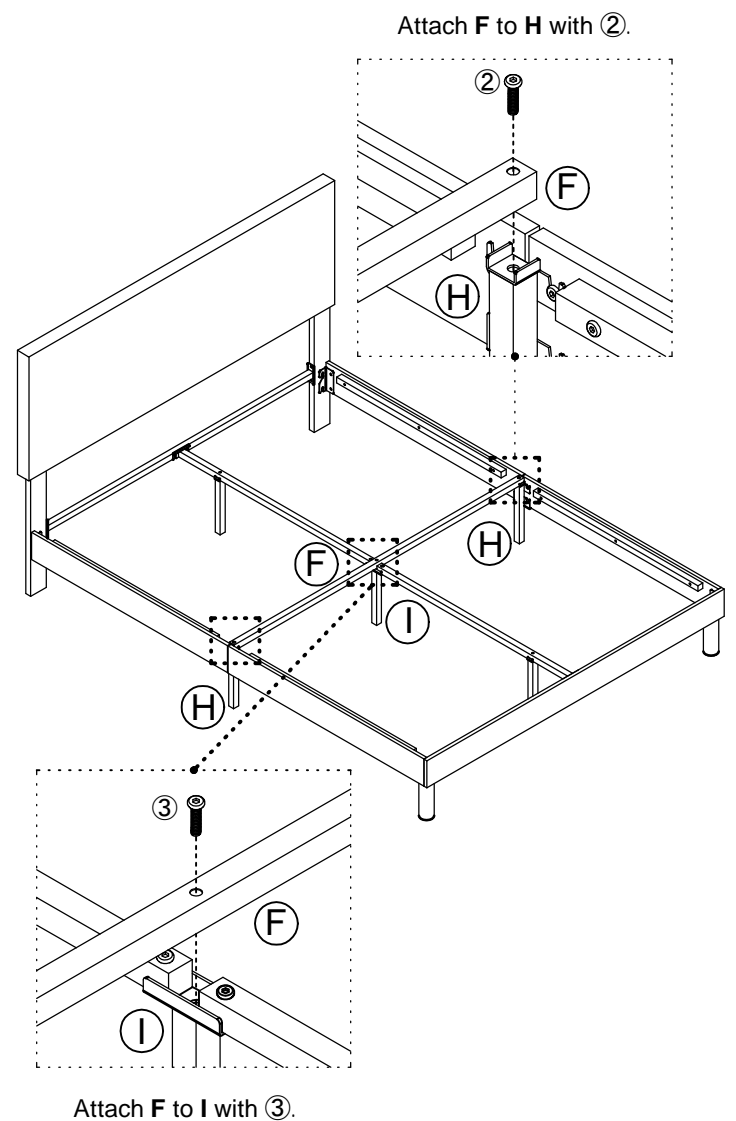

②X 2PCS ③X 1PC

Step 11

