

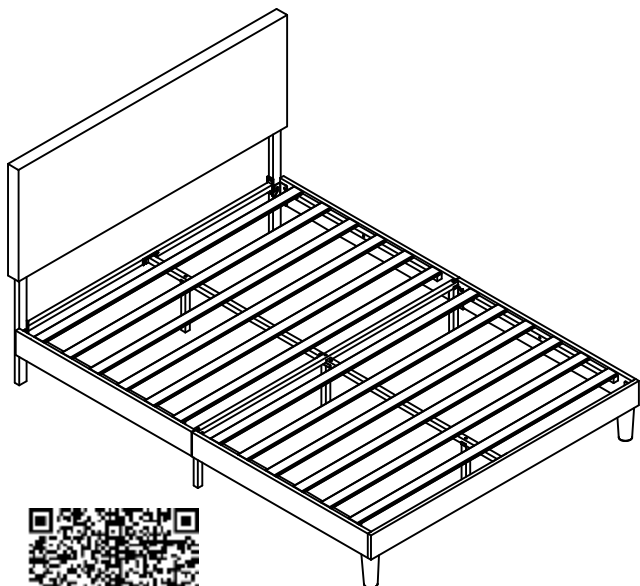


F 12007/12008/12009/12010/12011/12012


Assembly Instructions Please keep for future reference

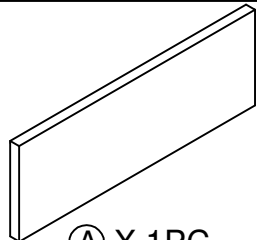


Please scan the QR code to watch the assembly guide video

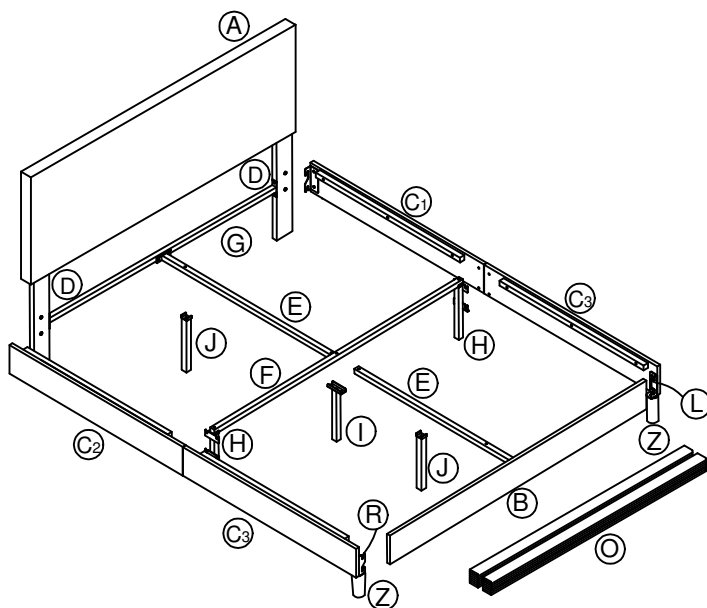


① X 1PC

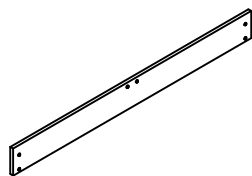


② X 1PC

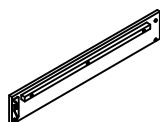


③ X 1PC

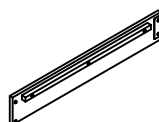


④ X 1PC

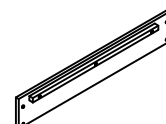


⑤ X 2PCS




⑥ X 2PCS

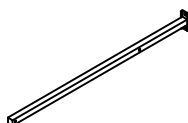

⑦ X 2PCS

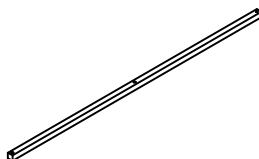


⑧ X 1PC

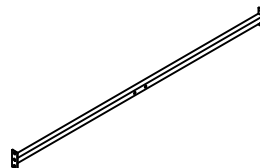

⑨ X 1PC




⑩ X 2PCS



⑪ X 1PC



⑫ X 2PCS

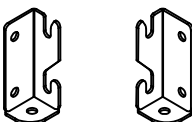

⑬ X 1PC ⑭ X 1PC



⑮ X 2SET



⑯ X 2PCS

Hardware




① X 8PCS



② X 10PCS



③ X 1PC




④ X 4PC



⑤ X 2PCS

Step 1

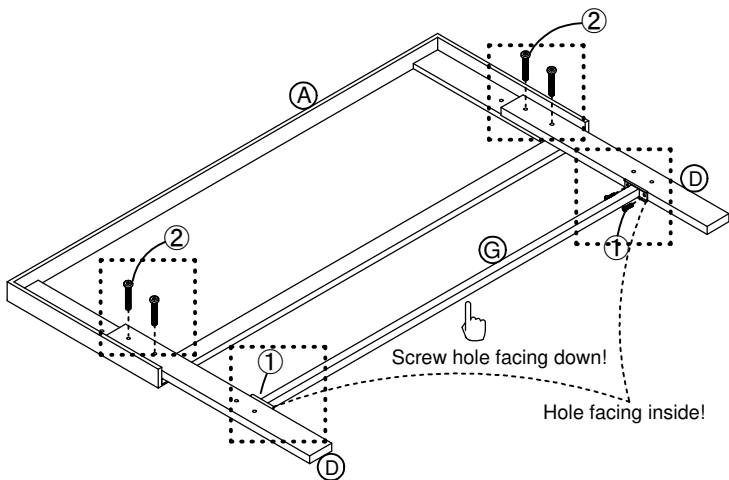


Attach **DX2** to **A** with ②, Attach **G** to **D** with ①.

① X 4PCS ② X 4PCS



Step 2

Attach **Z X 2** to **L** and **R**.


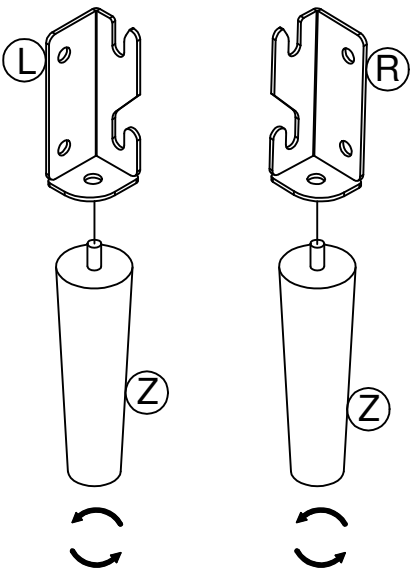


Step 3


Hang **C1** and **C3** on **H**.

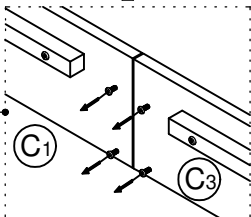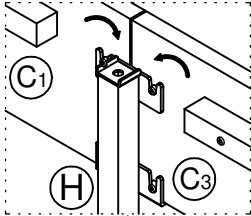

Rotate part of screw out.

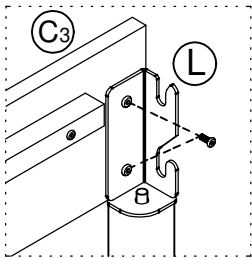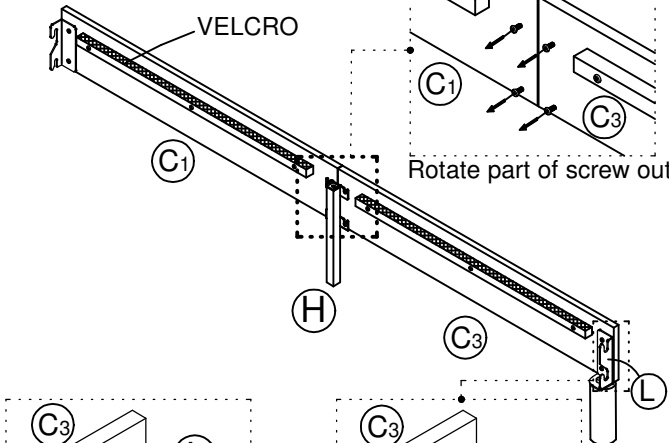



Attach **L** to **C3**.

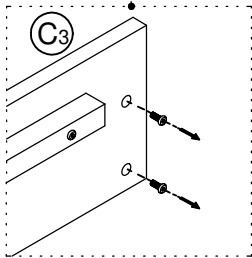



Screw out the bolt.

Step 4


Hang **C2** and **C3** on **H**.

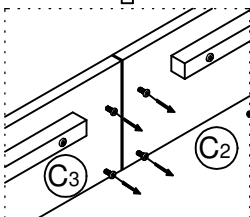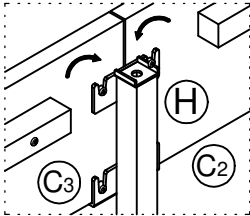

Rotate part of screw out.

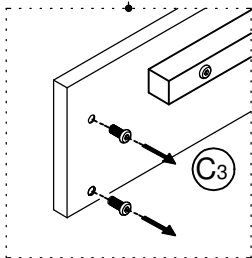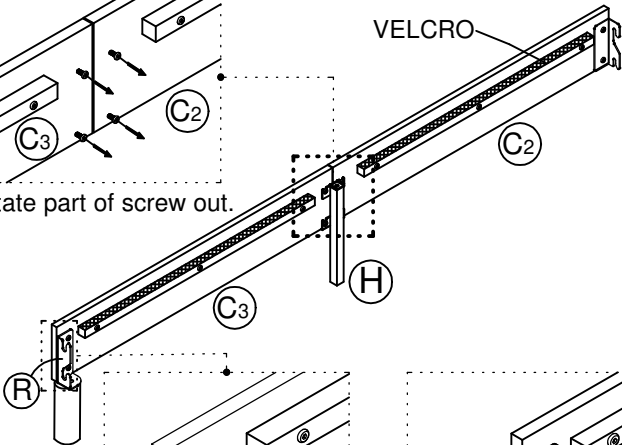


Screw out the bolt.

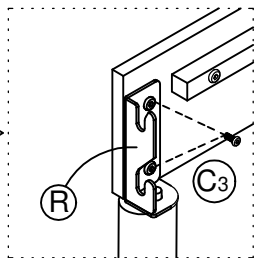


Attach **R** to **C3**.

Step 5

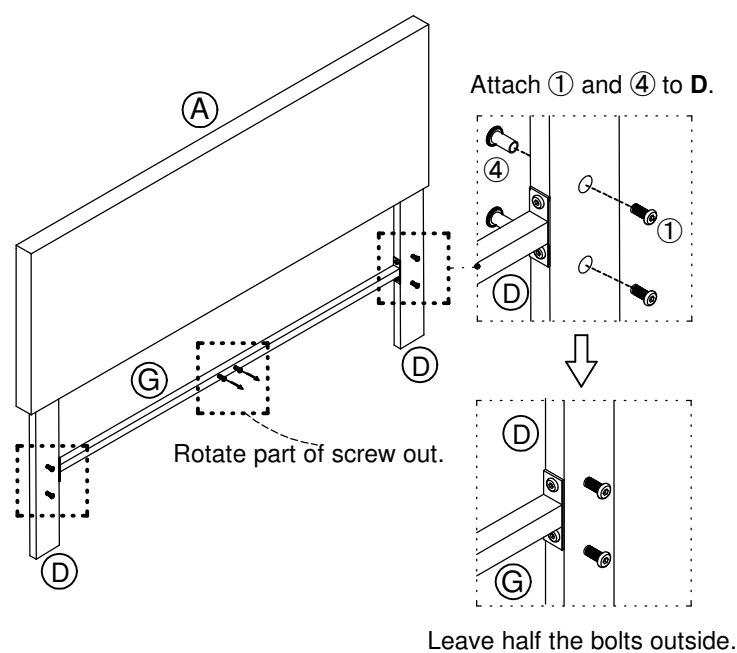


①X 4PCS ④X 4PCS

Step 6

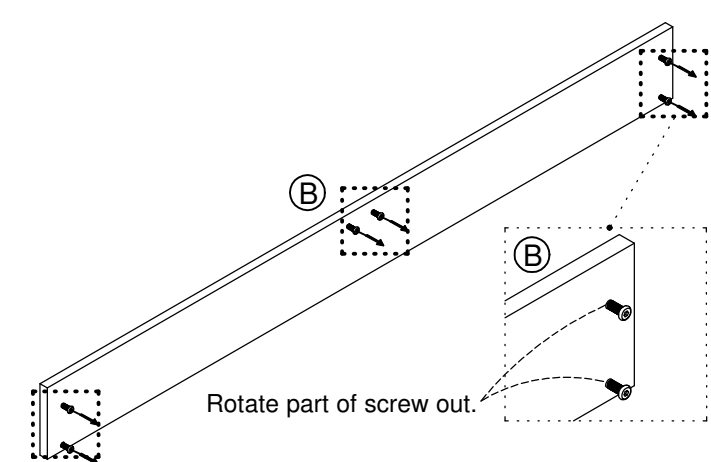


Step 7

Don't completely tighten the bolts until **STEP 10** is complete.

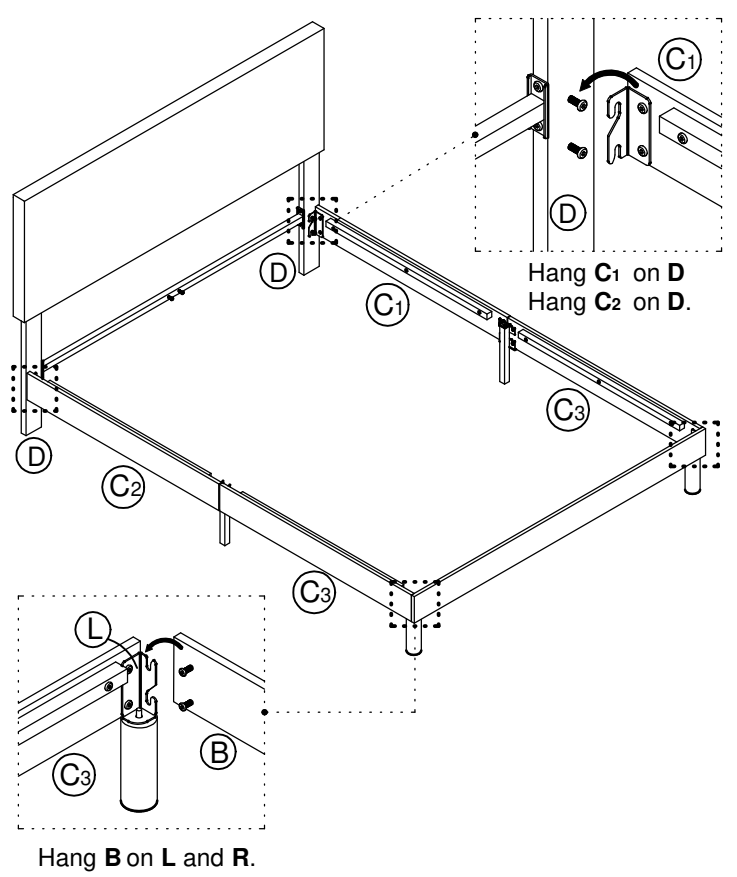


Step 8

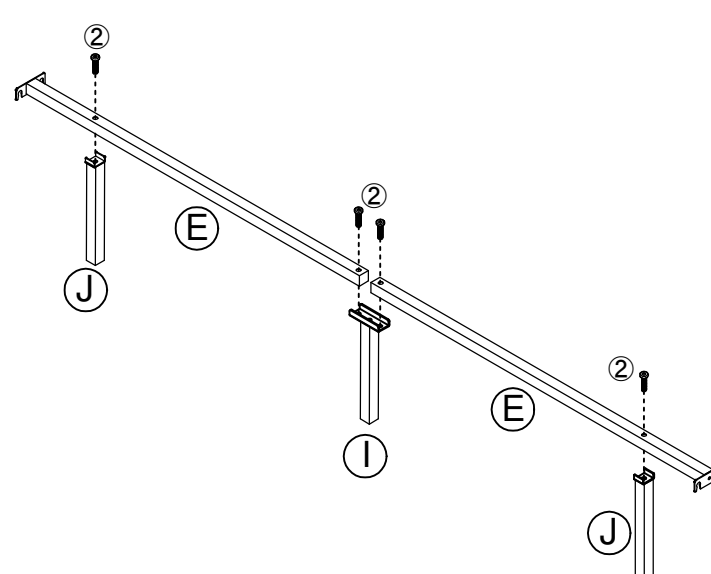


②X 4PCS

Step 9

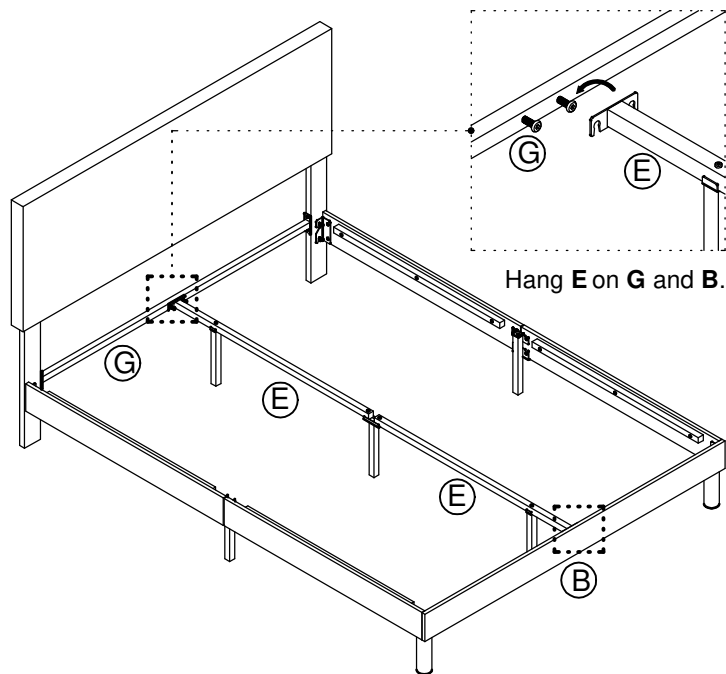

Step 10

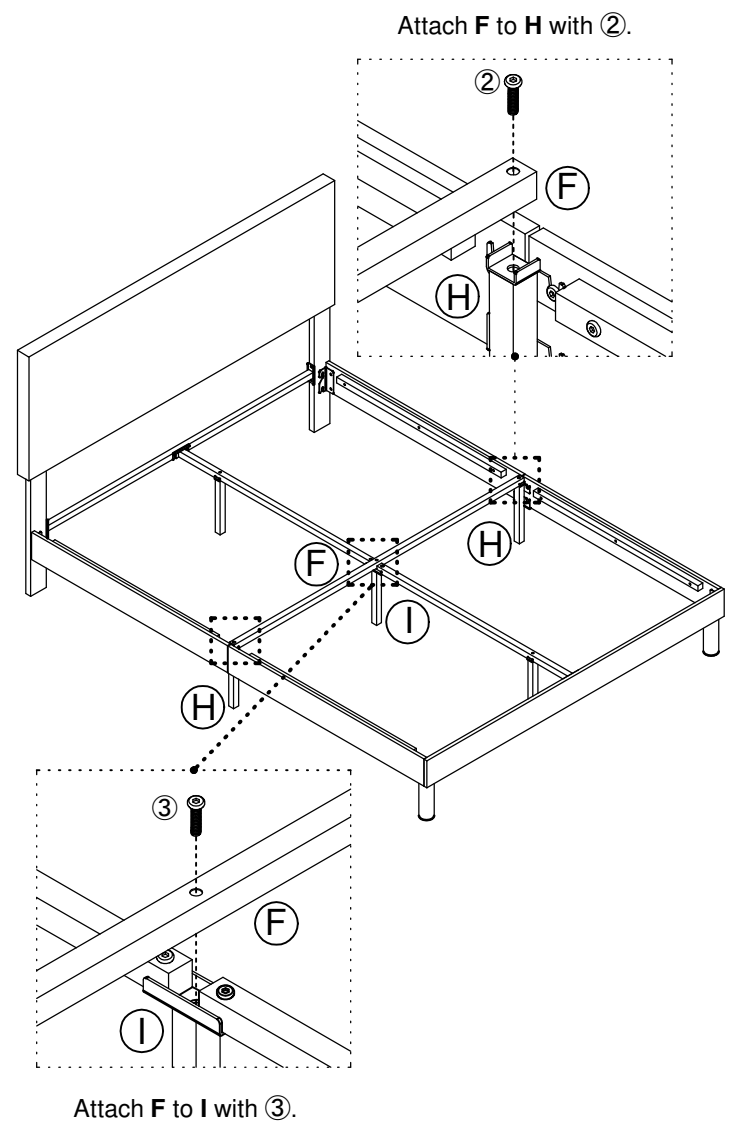

②X 2PCS ③X 1PC

Step 11

