HOGA-F1333 Shoes Cabinet





Thanks for purchasing one of our products, please read carefully the assembly instructions before the installation (Attention: Do not tighten the screws before all screws are in place). THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



PART NO.	PARTS	QTY
1		X1
2		X1
3		X1
4		X2
5		X1
6		X1
7		X1
8		X1
9		X1
10		X4
1		X2


PART NO.	PARTS	QTY			
12		X1			
13		X1			
14		X1			
15		X1			
16		X1			
17		X2			
18		X4			
19		X2			
20		X2			
21		X2			


PART NO.	QTY.	PARTS	
A	8	M6X40mm	(a)))))))))))
B	18	M6X12mm	6))))))
C	6	M4X18mm	
D	24	3.5x16mm	
Œ	6	3.5x14mm	CIIIIII(*)
E	4	M4X8mm	®
G	22	M6X40mm	
H	8	M6X25mm	


PART NO.	QTY.	PARTS	
	4	M6x10xH7mm	
J	4		0
K	3		
	2	Ø12xØ16	P
M	1		
0	2	M4x24.5mm	6)11111111>
P	2		Опина
Q	2	Ø6.2xØ16	


Installation of Cams and Pins:


Screw the Pin into hole. To set Cams correctly, ensure the arrow on the Cam opening to the hole of the Pin it is locking. Lock Cam by turning Cam head with screwdriver to be tighten. Please don't use an electric screwdriver to assemble the unit.

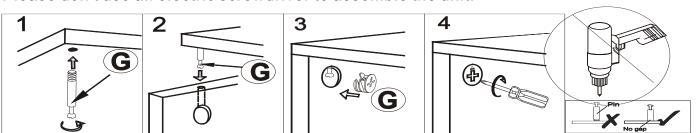

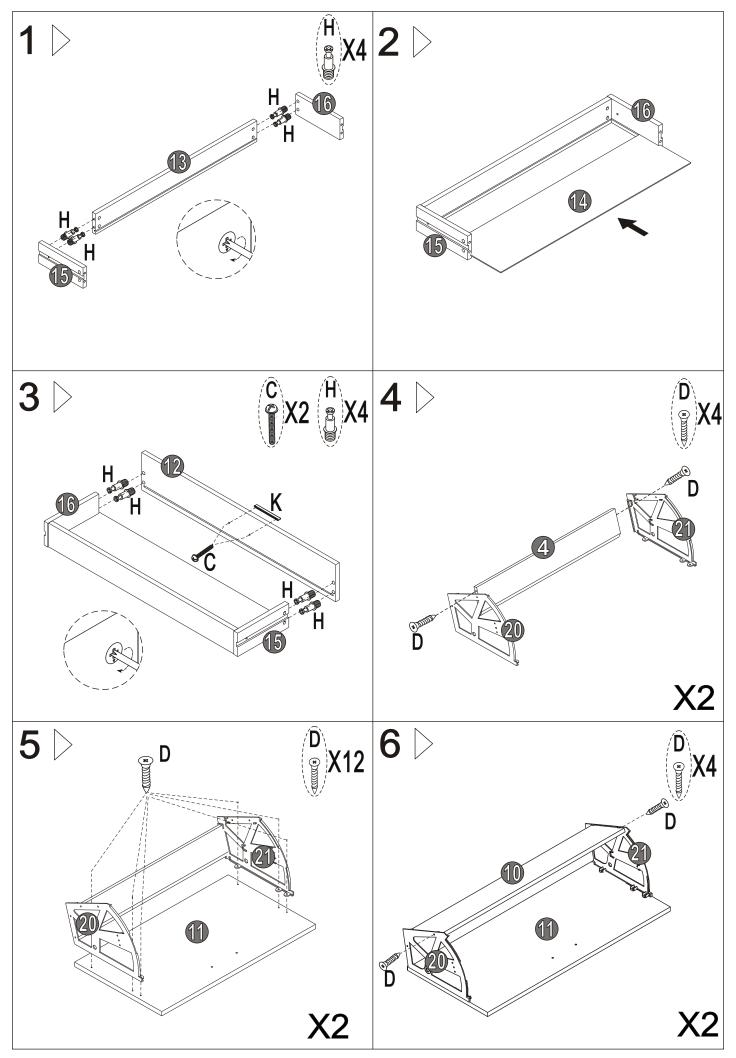

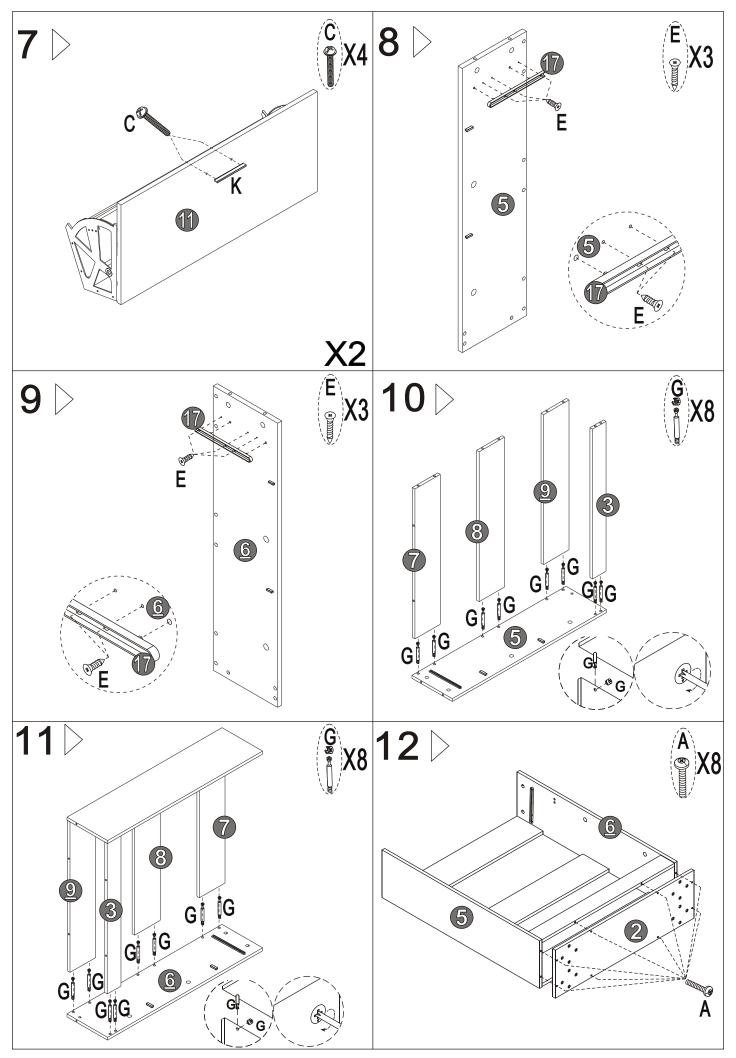

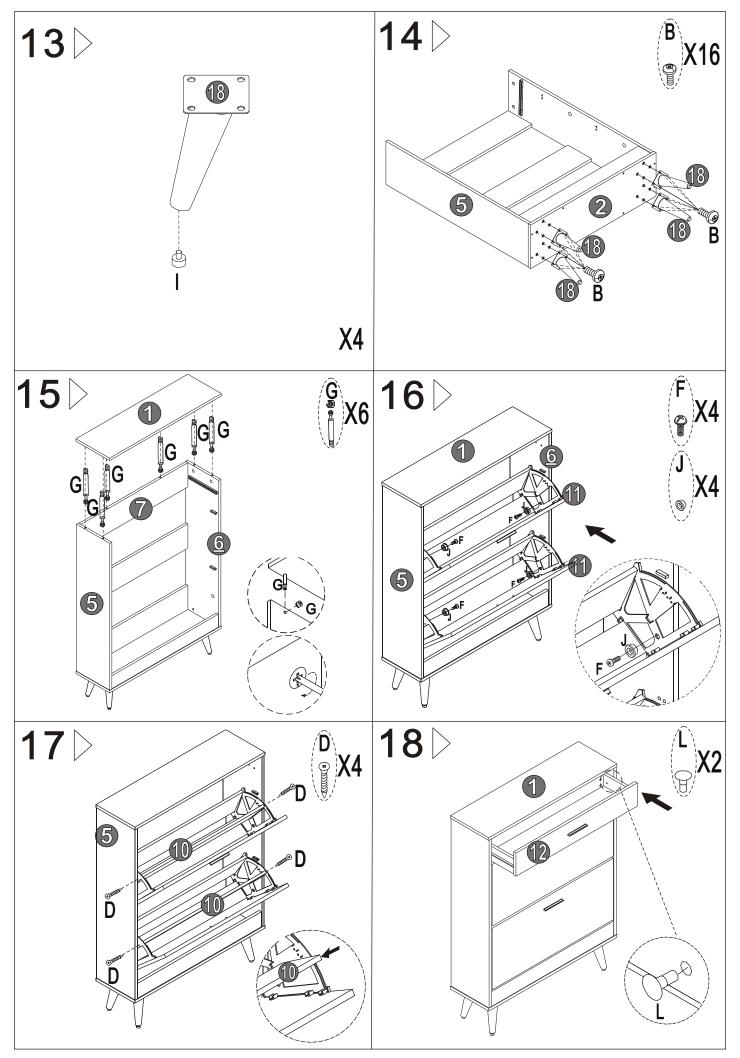

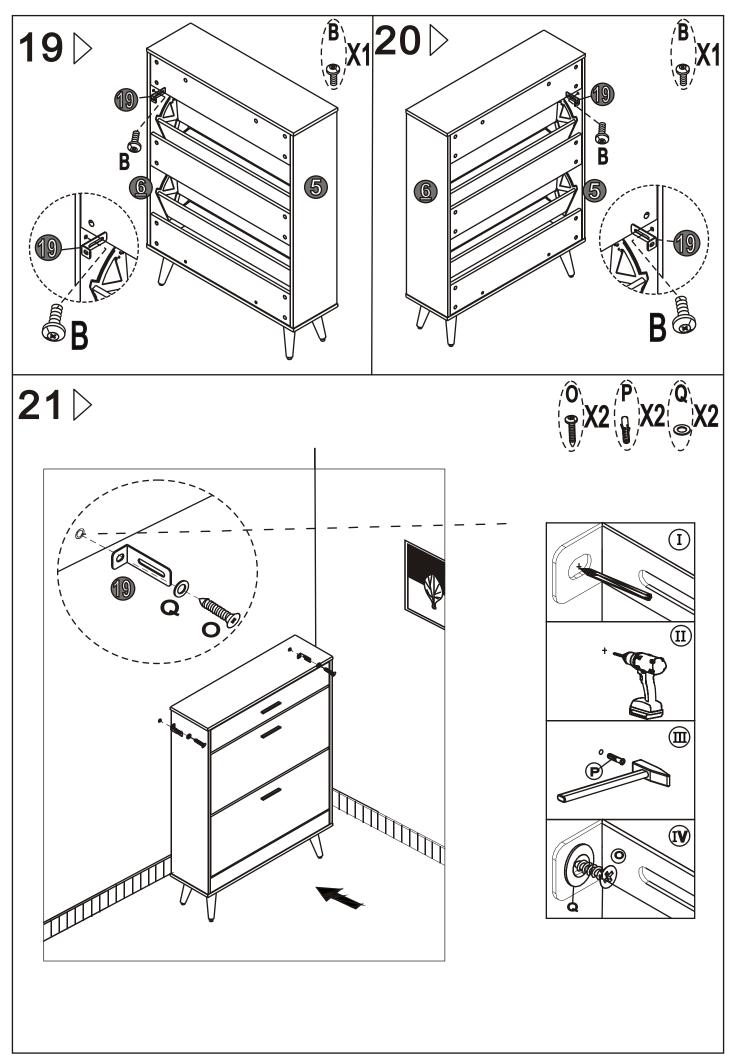



No heartburn, when we handle the return

Give us or shoot us a message, we will arrange you a free replacement with zero hassle

Our way

\bowtie

Give us a Email



Replacement



You

support@tribesigns.com

Their way



Re-package item



Schedule pick-up



Track package



Replacement



You

We really don't want you to go through the hassle of re-packaging your item and sending it back, because let's be honest...nobody has time for that.