

**“To provide world class  
occupant protection  
products, for preservation  
and life”**

**Contact Us**

25 Kalman Drive

Boronia VIC 3155

**Phone:** 1800 353 383

**Fax:** 03 9720 1300

**Email:** [sales@autosafe.com.au](mailto:sales@autosafe.com.au)

**Web:** [www.autosafe.com.au](http://www.autosafe.com.au)

**autosafe**

# Fitting Instructions



**HYUNDAI iLoad**

**02/2008 Onwards**

**MAKE:** Hyundai

**MODEL:** iLoad

**TYPE:** Van

**YEARS OF MANUFACTURE:** 02/2008 Onwards.

**PART NUMBER:** CBHILD

**POSITION:** Behind the 1<sup>st</sup> row of seats.

**KIT:**

- ☐ 2- Grab Handle Brackets (165)
- ☐ 2- 150mm Offset Brackets
- ☐ 2- 400mm Slight Offset Brackets
- ☐ 4- M6x20mm Set Screws
- ☐ 4- M6x20 Washers
- ☐ 6- M10 Whiz Nuts
- ☐ 4- M10x20mm Set Screws

*Your kit was packed by:* \_\_\_\_\_

**IMPORTANT:**


PLACE THE CARGO BARRIER IN VEHICLE WITH MESH TO THE REAR.

ALWAYS CHECK FOR FUEL LINES ETC BEFORE DRILLING AND  
ALWAYS USE A DRILL STOP.

CHECK OVER SYTEMATICALLY TO MAKE SURE THEY ARE ALL TIGHT.

**TOP:**

Secure the grab handle bracket supplied into the M6 captives located in the side can't rail above the doors using M6x20mm set screws and M6x20 washers. Secure one end of the 400mm slight offset bracket to the top tag on the barrier using an M10x20mm set screws and an M10 whiz nut. Secure the other end of the 400mm slight offset bracket to the 10mm thread protruding out on the grab handle bracket using an M10 whiz nut.

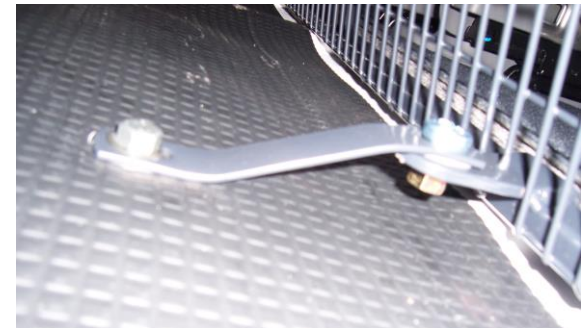

**BASE:**

Remove the two luggage tie down points closest to the Cargo Barrier. Secure one end of the 150mm offset bracket to the base tags on the Cargo Barrier using an M10x20mm set screw and an M10 whiz nut. Secure the other end of 150mm offset bracket to the existing hole from the luggage tie down point using the existing bolt.

