


INSTALLATION INSTRUCTIONS

First, determine if there is an existing magnet already mounted to the lid of the humidor or hidden underneath the wood veneer of the lid. To do so, hold the included metal plate up to the lid to see if it magnetizes. If it does magnetize, skip step one and proceed to step two. If not, make sure the area where the magnet will be mounted is clean and dry, then proceed to step one.




For video instructions
scan QR code or visit
boveda.com/QR15


STEP 1: MOUNT THE MAGNET

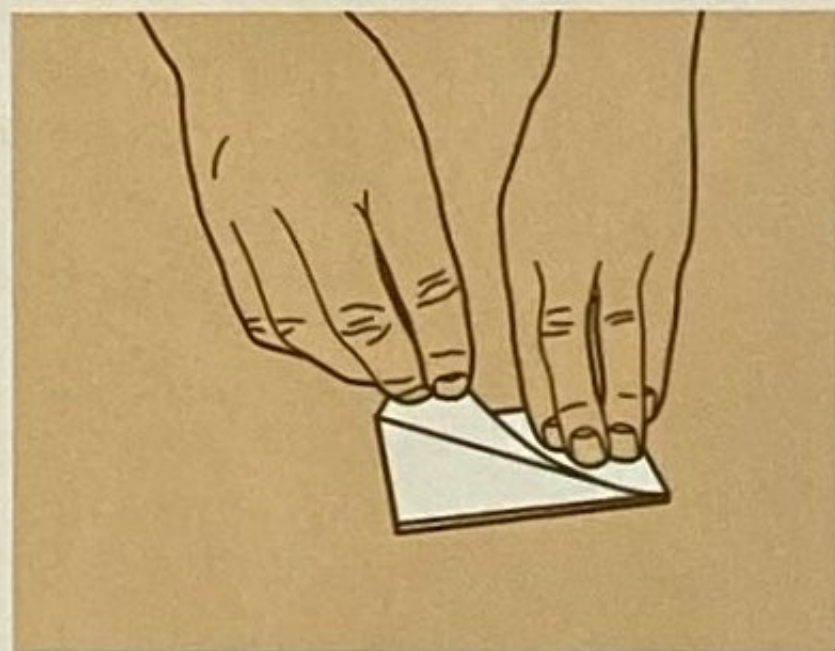

A. Remove the paper backing from the mounting magnet to expose the adhesive.

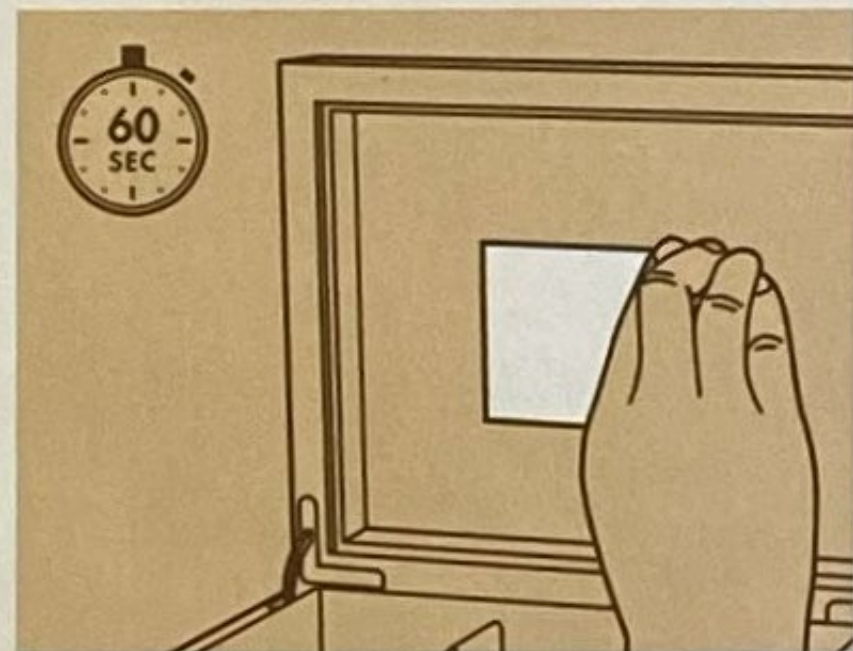

B. Apply the magnet to the lid of the humidor by pressing and holding it with constant pressure for 60 seconds.

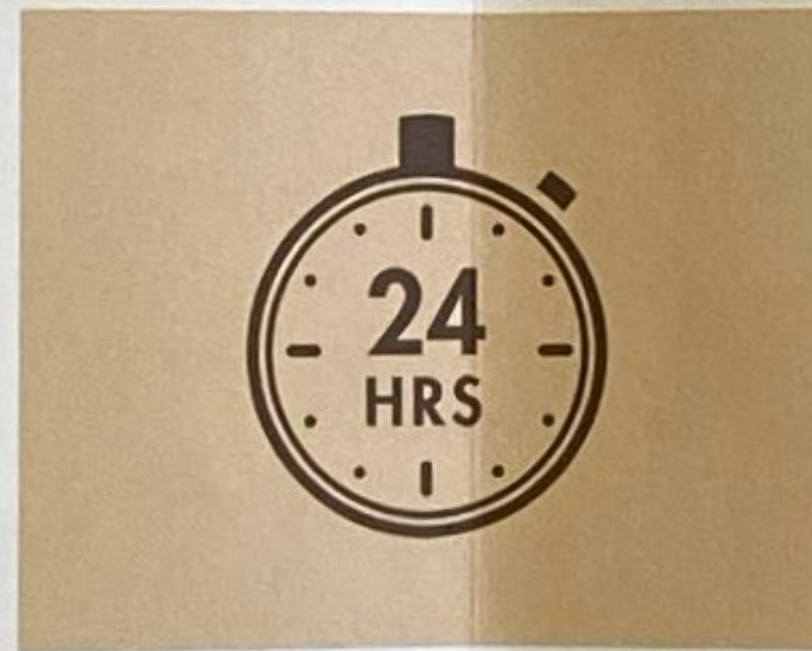


C. Wait 24 hours for the adhesive to cure before use.

STEP 2: MOUNT THE BOVEDA 320g



A. Find the arrow on the bottom of the 320g carton and align it with the notch on the mounting plate.

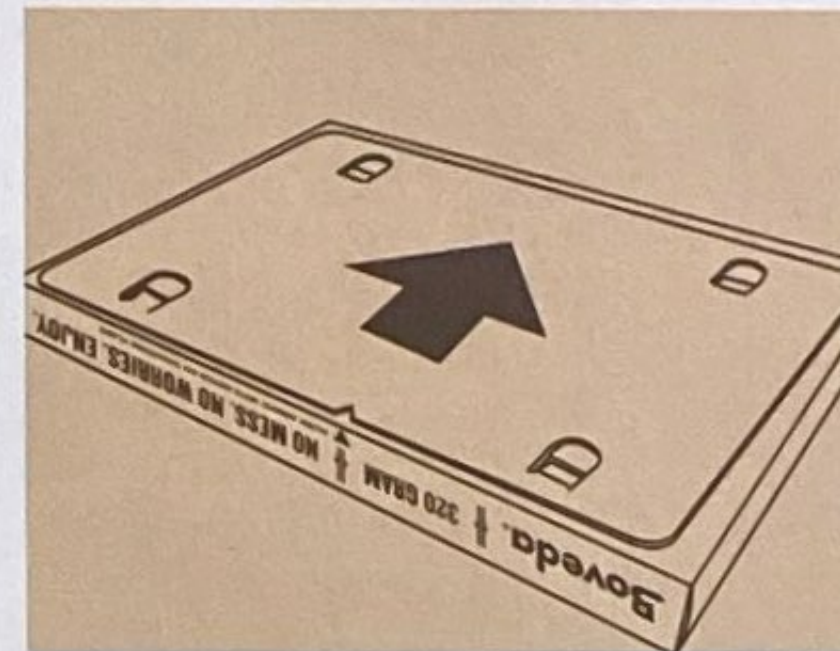

B. Using the arrow and notch as a guide, insert the tabs that are on the mounting plate into the square slots on the back of the 320g carton.