


Assembly Instructions

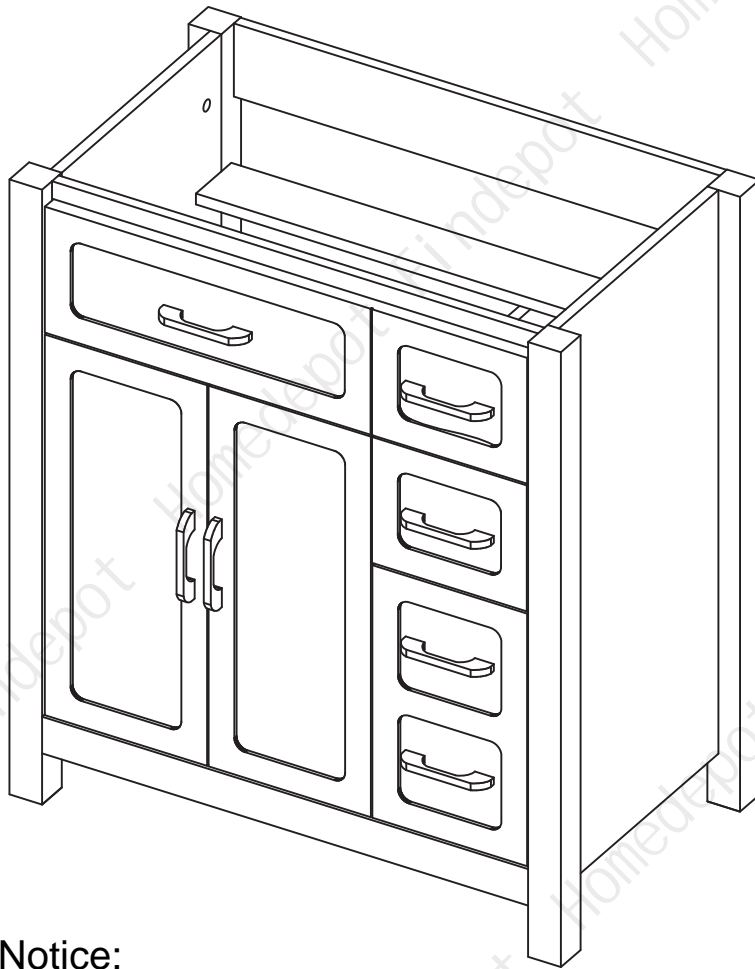

Installation Guide Notice:

This bathroom cabinet comes with a detailed installation video guide for your convenience. **Please review the installation instructions thoroughly before proceeding with the assembly.** This will ensure a smooth and accurate installation process.


After-Sales Contact Information:

Should you encounter any issues or have questions during the installation, do not hesitate to reach out to our support team promptly at cc90522@outlook.com. We are committed to providing you with timely assistance and ensuring your satisfaction with your purchase.




IMPORTANT INFORMATION PLEASE READ CAREFULLY


- *Please follow the assembly instructions precisely and use the product accordingly
- *Please wear gloves, open the item slowly and cautiously to avoid pinching your hands by metal joints.
- *After receiving the product, please check the quantity of plates and accessories first. If you find any missing items, please contact customer service as soon as possible;
- *During installation, all accessories cannot be disassembled and mixed together at one time. It is recommended to take out the required number of accessories from the bag according to each step in the instructions;
- *It is recommended that 2-3 or more people install it together, and the required time is between 3 hours and 4 hours.

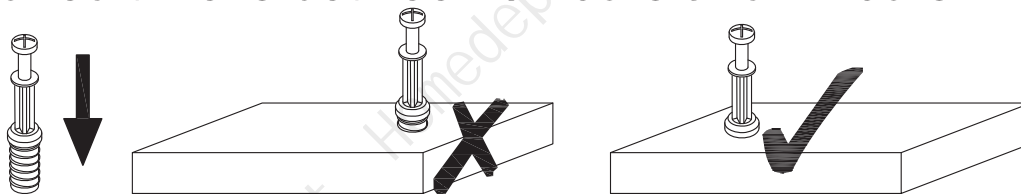


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

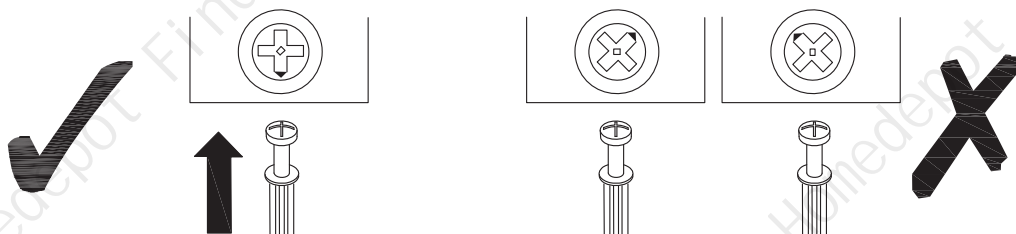

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

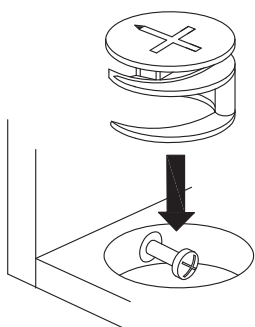



head should be in the centre of the cam lock when the two panels are joined.

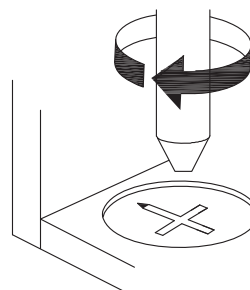




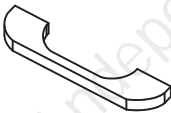
Turn cam lock clockwise to tighten.







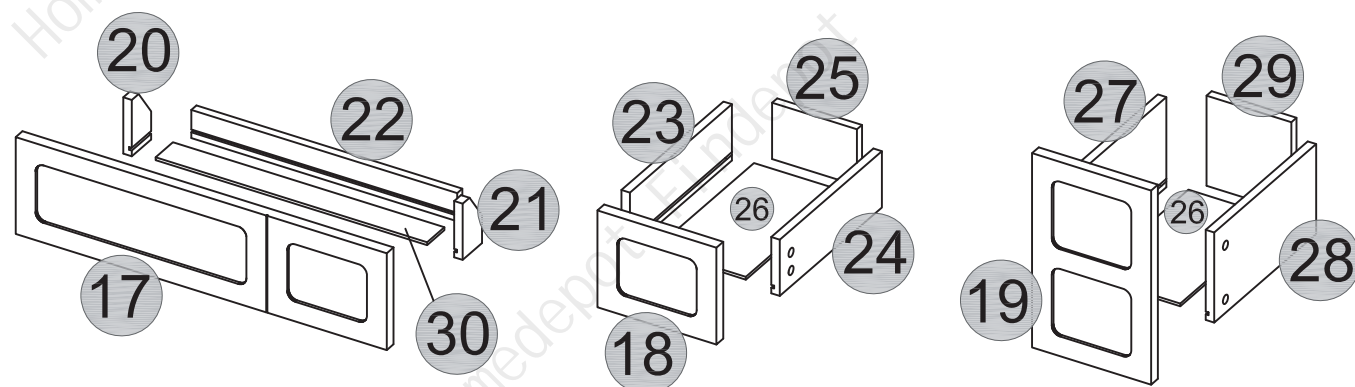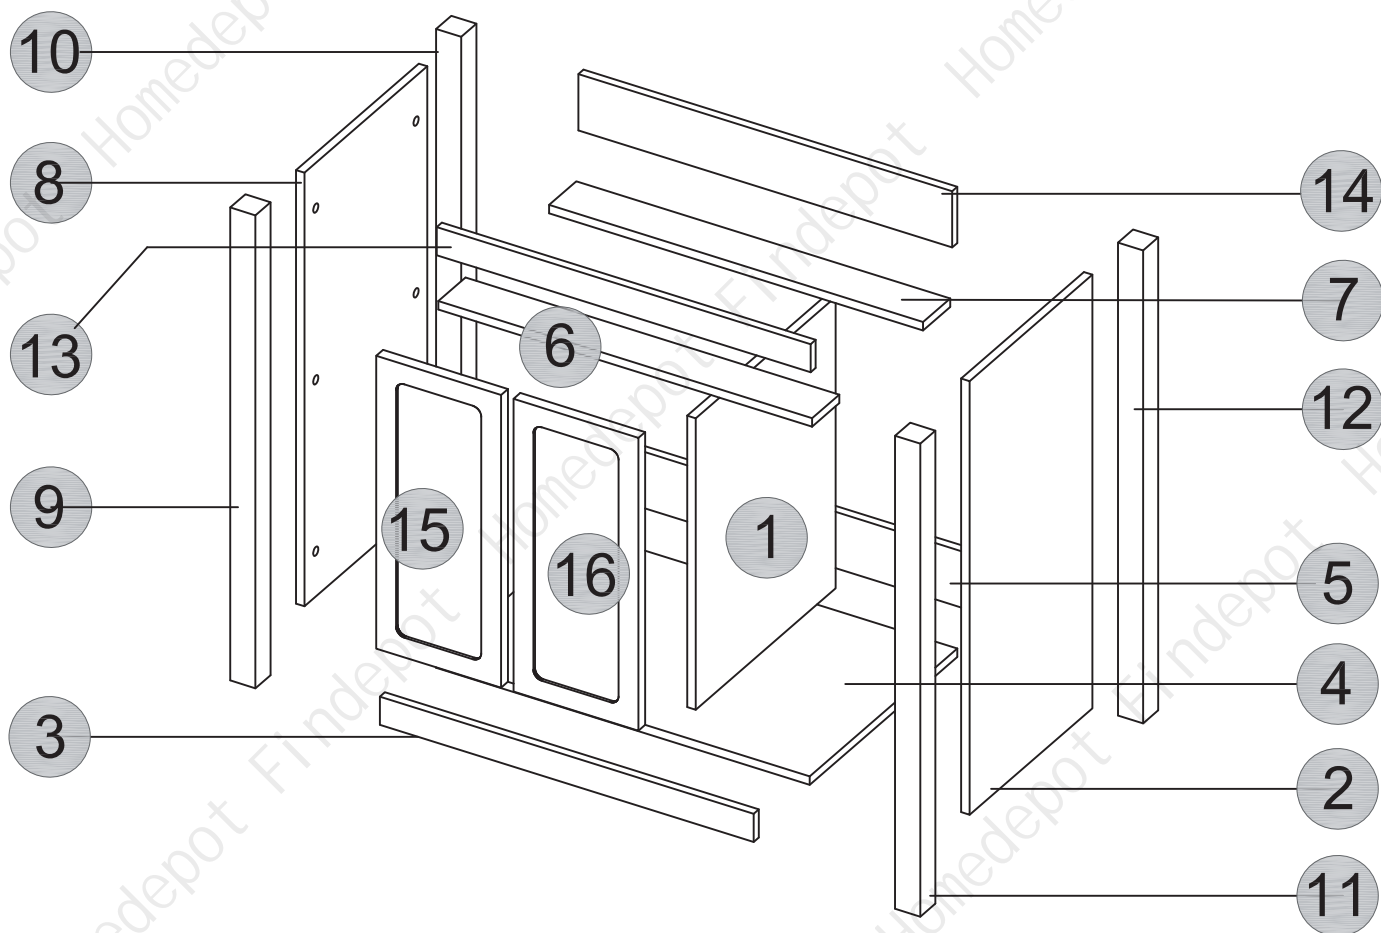
HARDWARE LIST (Bathroom cabinet)

1 X1	2 X1	3 X1	4 X1	5 X1	6 X1	7 X1	8 X1
9 X1	10 X1	11 X1	12 X1	13 X2	14 X1	15 X1	16 X1
17 X1	18 X1	19 X1	20 X1	21 X1	22 X1	23 X1	24 X1
25 X1	26 X2	27 X1	28 X1	29 X1	30 X1		




HARDWARE LIST

Name	Part	Qty.	Spare
A		57	3
B		57	3
C1		4	
C2		4	
D	 3.5*12	32	4
E	 Large bend hinge	6	
F	 4*14	36	
G		7	

Name	Part	Qty.	Spare
H	 4*18	10	
I	 4*40	12	2
J		1	
K		2	1
L		2	
M		2	
N	 4*24	4	

**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

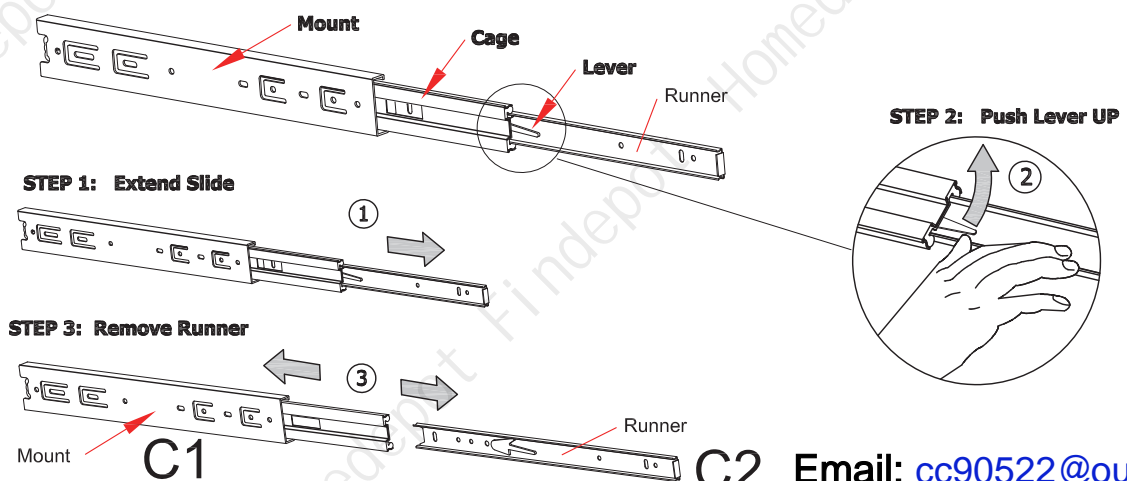


Email: cc90522@outlook.com

The guide rail needs to be divided into two parts: C1 and C2.


STEP 1



A x5 pcs




B x5 pcs

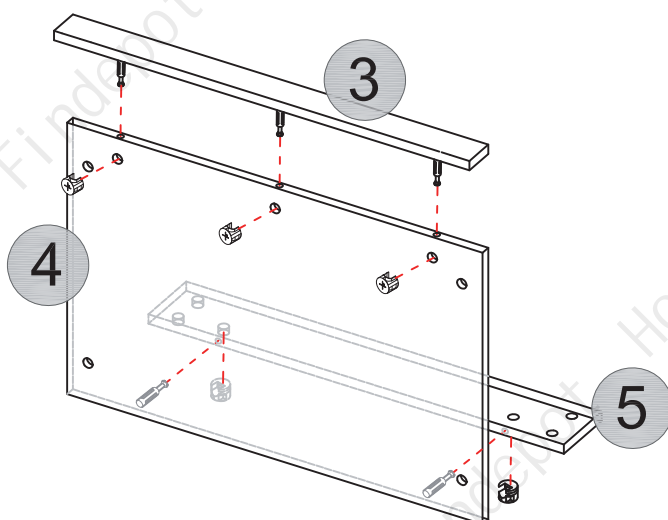


STEP 2



A x6 pcs



B x6 pcs

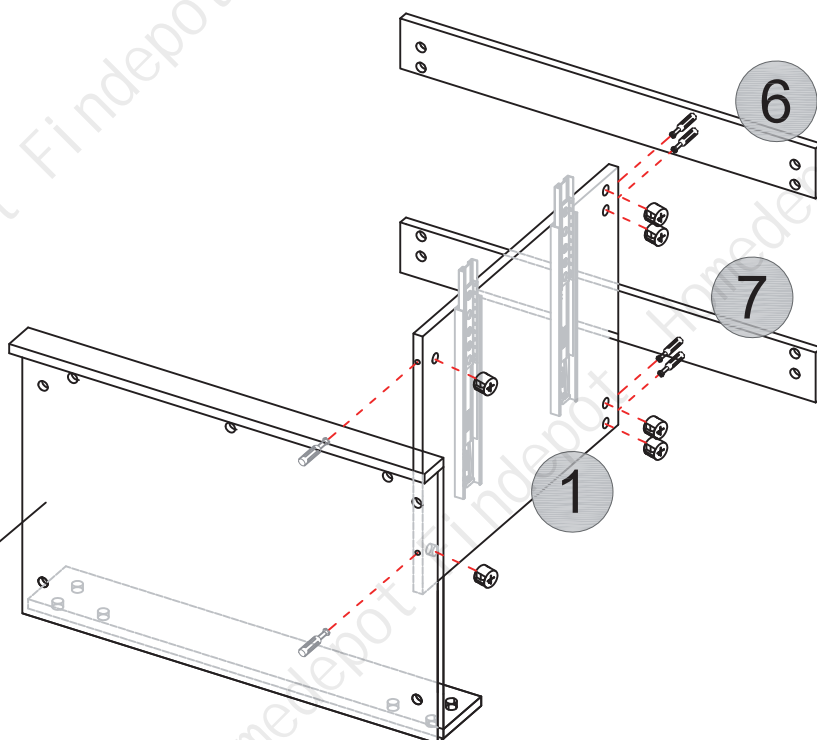

STEP 1



STEP 3



A x13 pcs 

B x13 pcs 

K x1 pc 

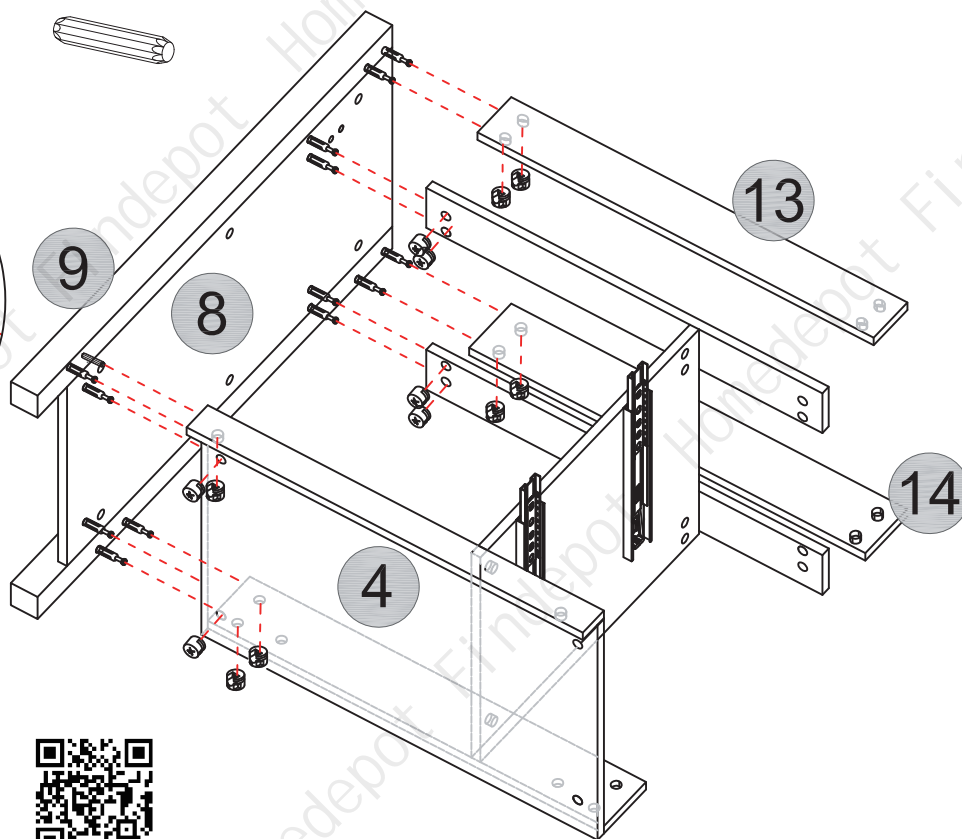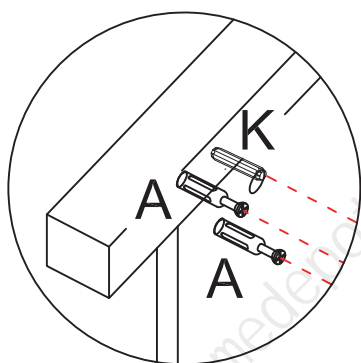

STEP 4





A x13 pcs 

B x13 pcs 

K x1 pc 


STEP 3

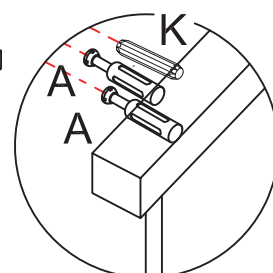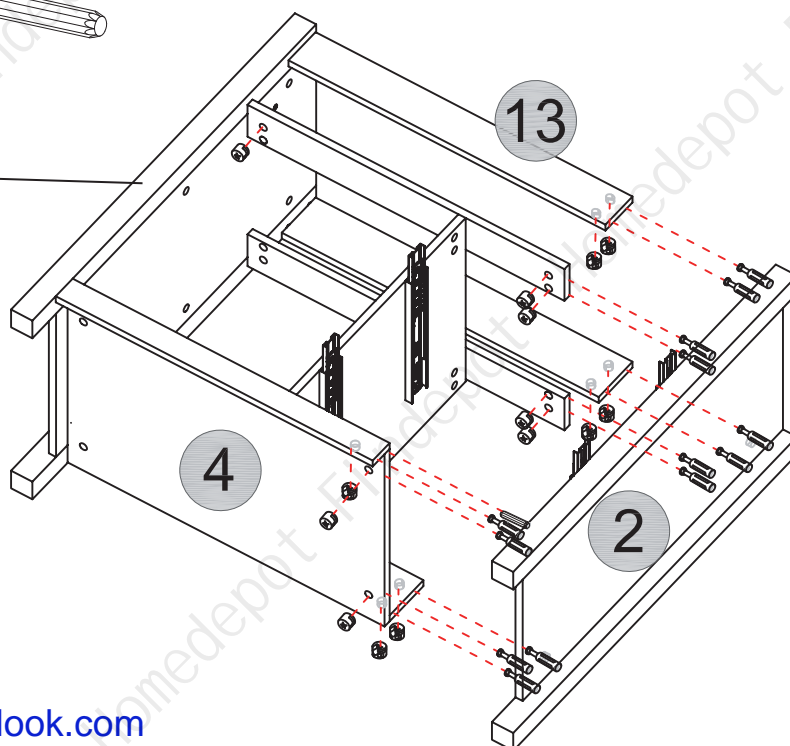



STEP 5



F x12 pcs




E x4 pcs

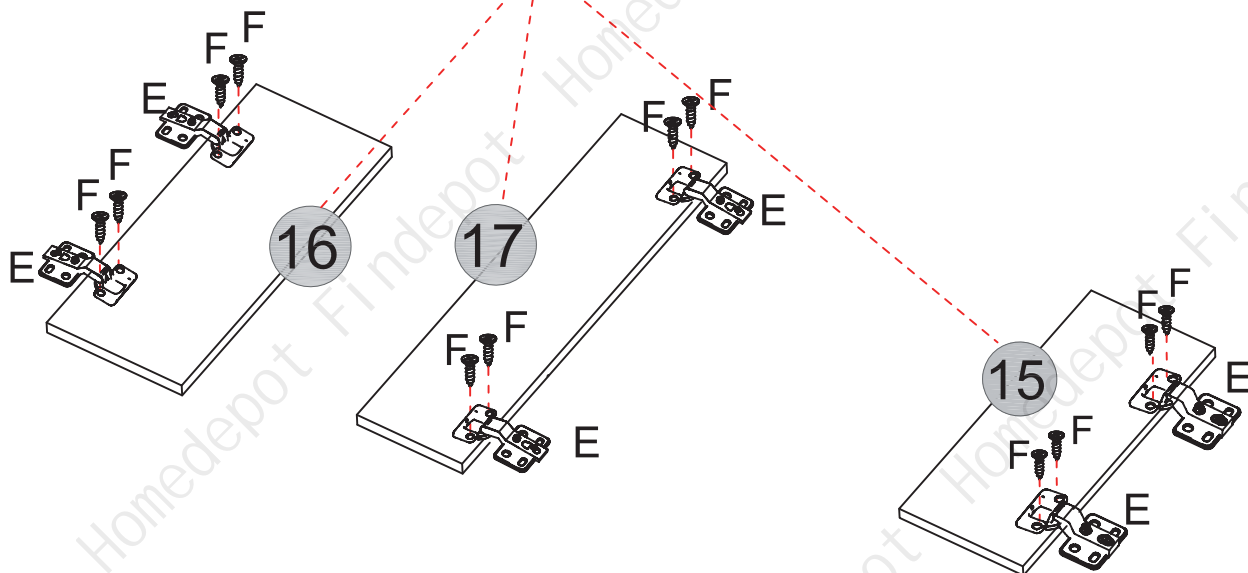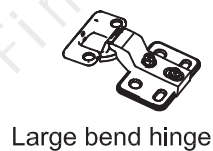

STEP 6





G x7 pcs



H x10 pcs



N x4 pcs

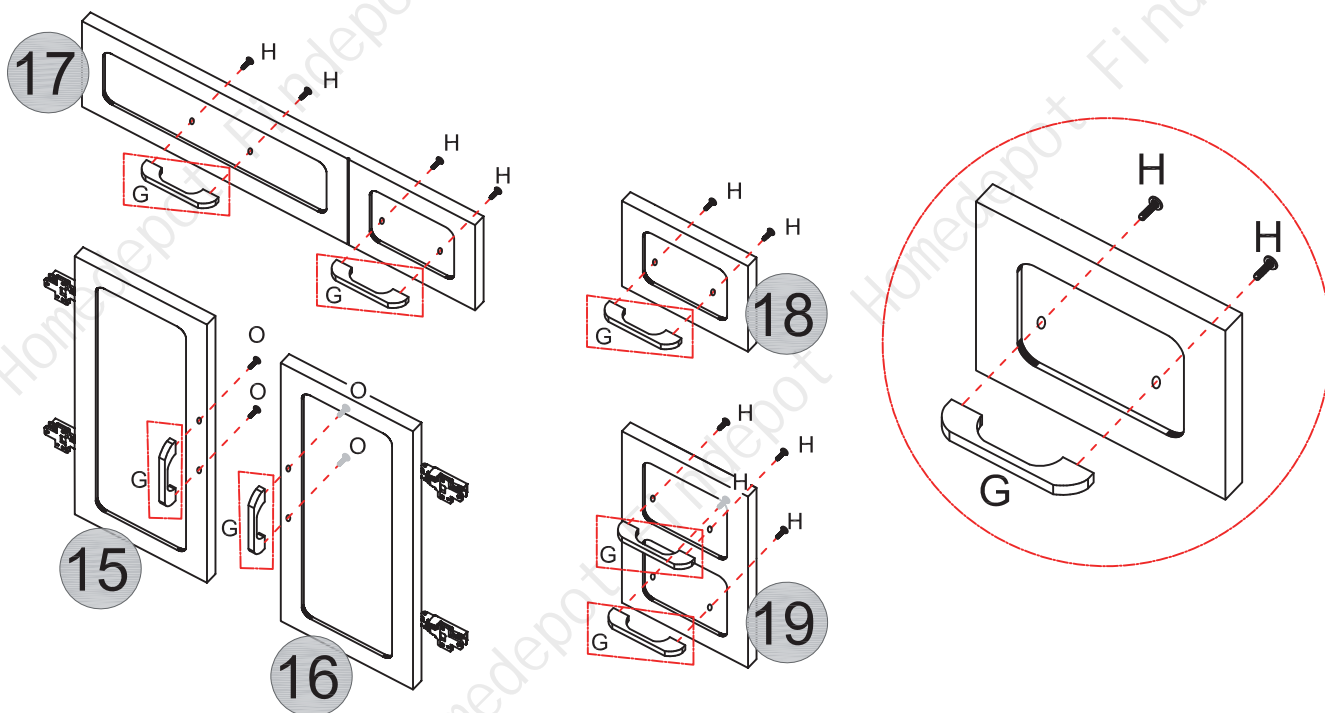





STEP 7



A x8 pcs 

B x8 pcs 

I x8 pcs 
4*40

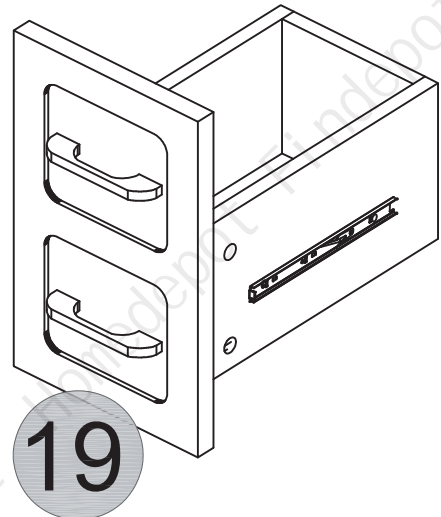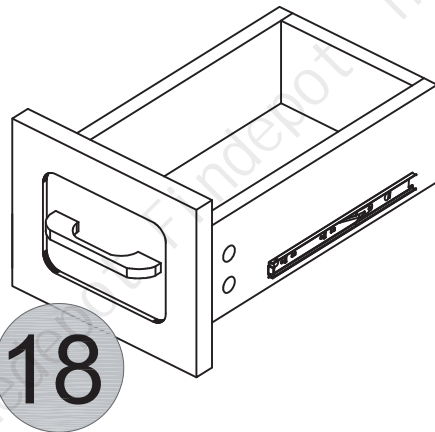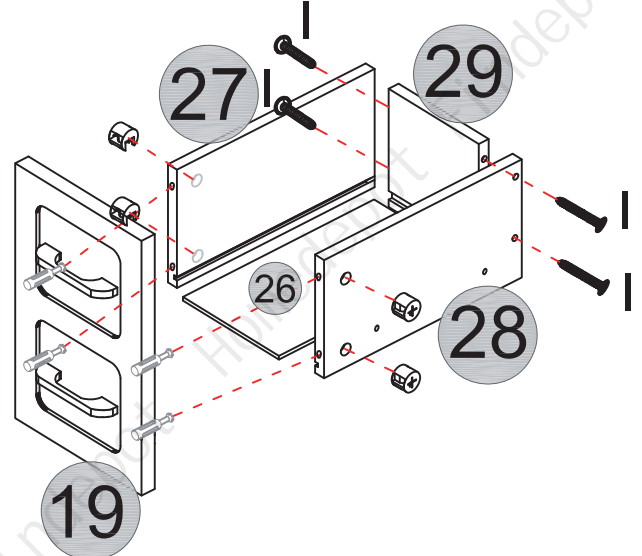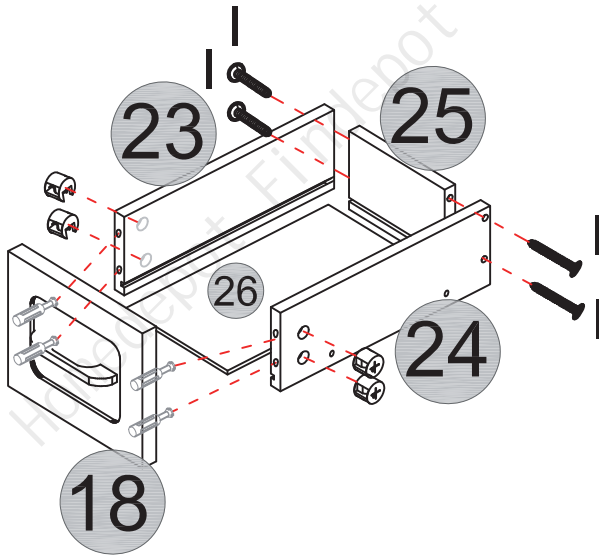

STEP 8




I x4 pcs  4*40

D x6 pcs  3.5*12

J x1 pc 

L x4 pcs 

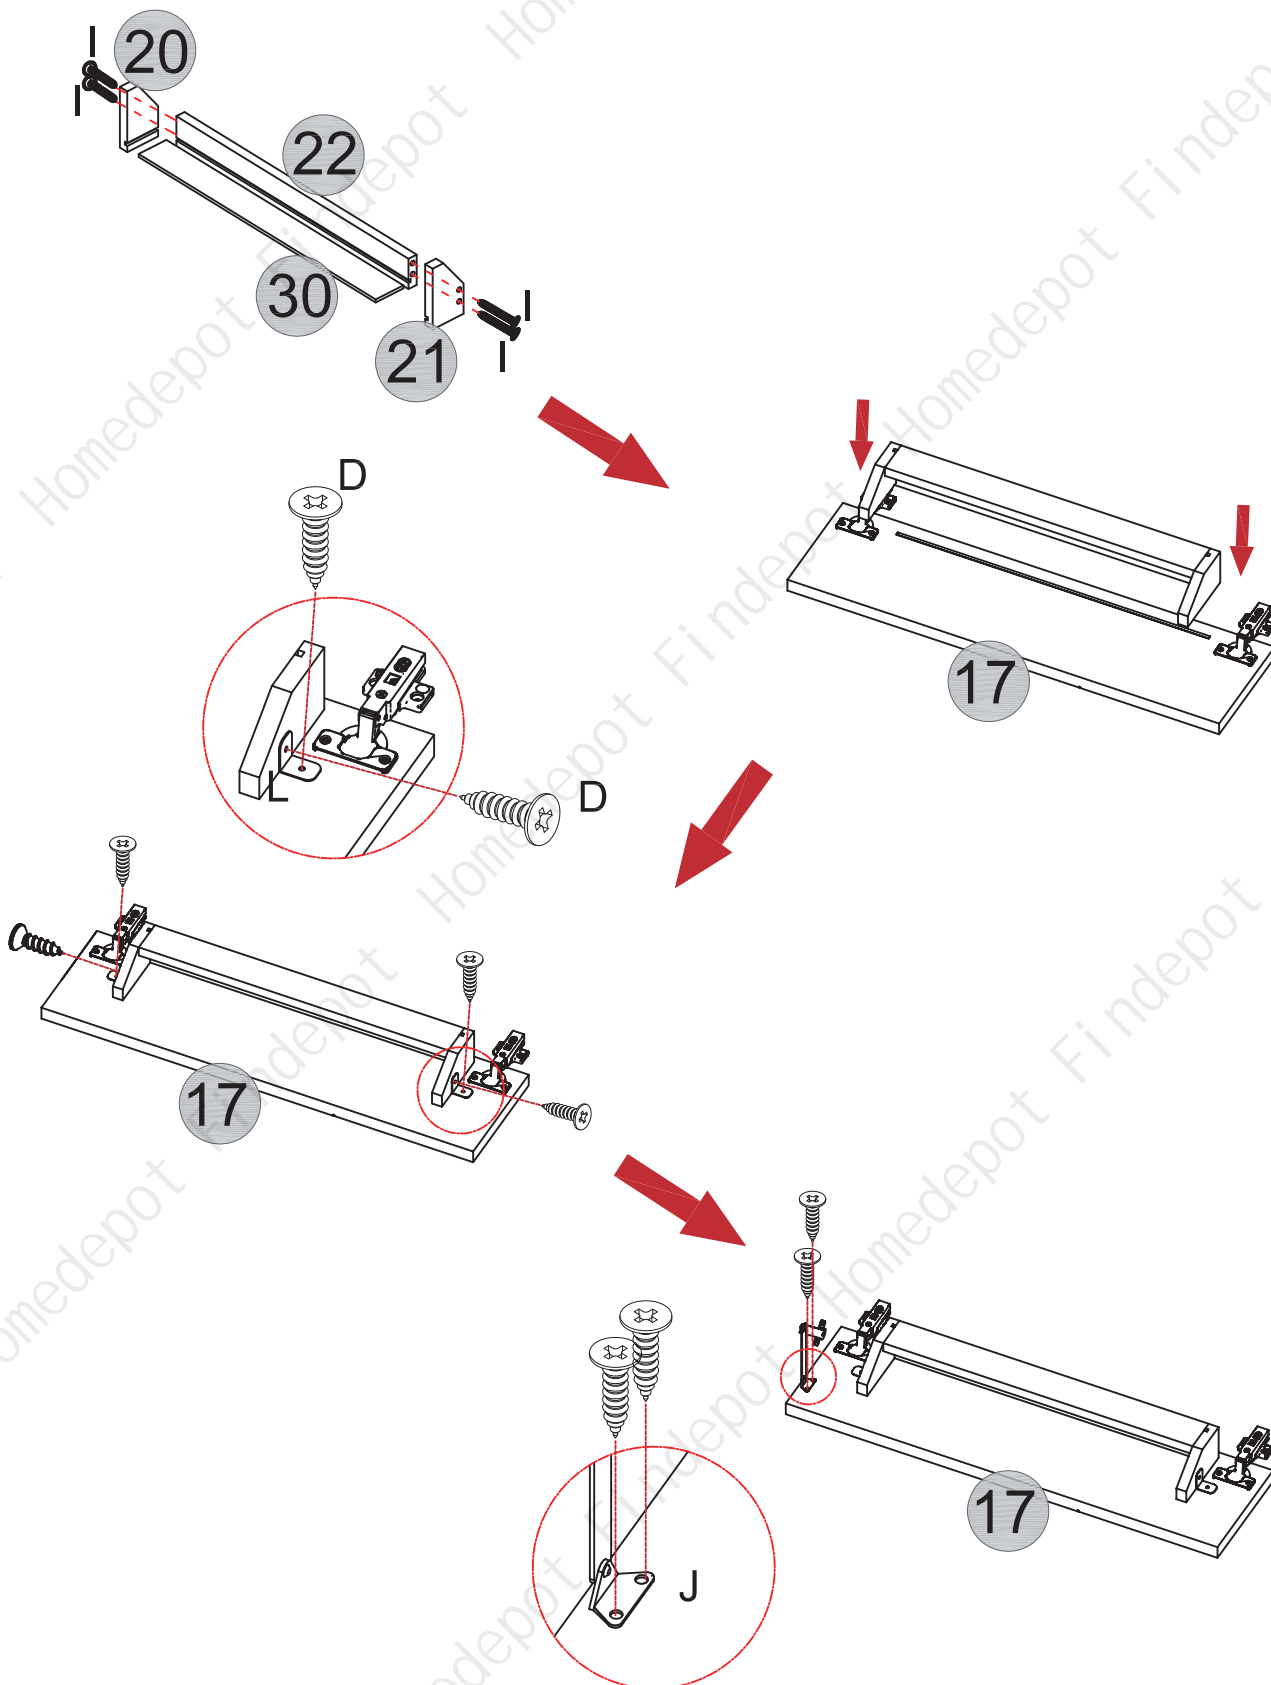




STEP 9



F x8 pcs  4*14

D x10 pcs  3.5*12

M x2 pcs 

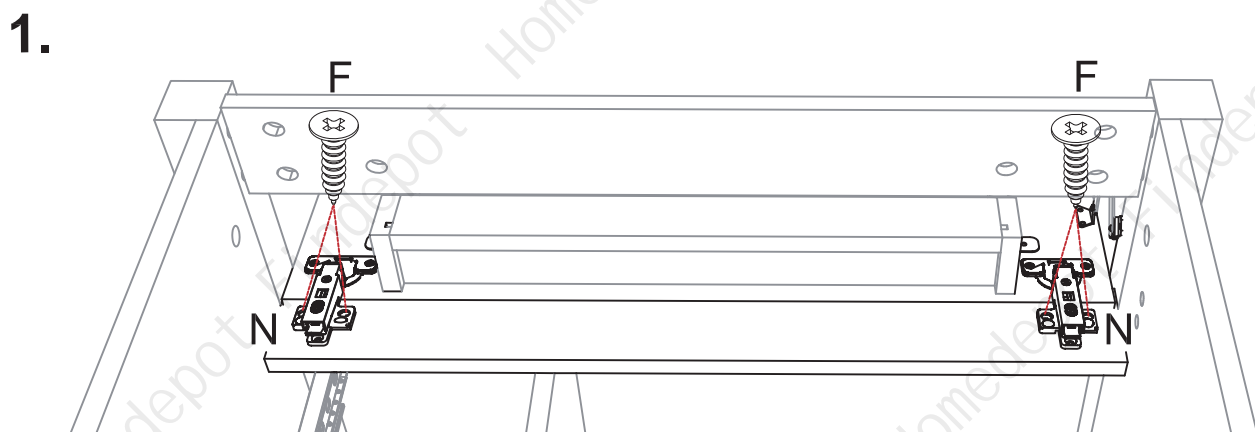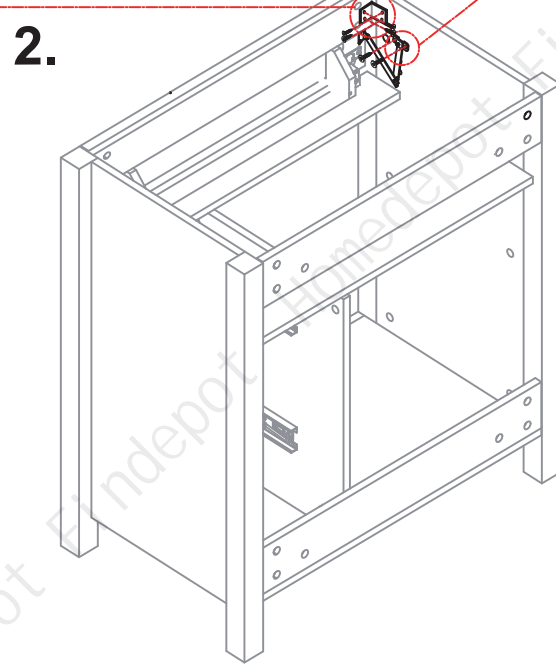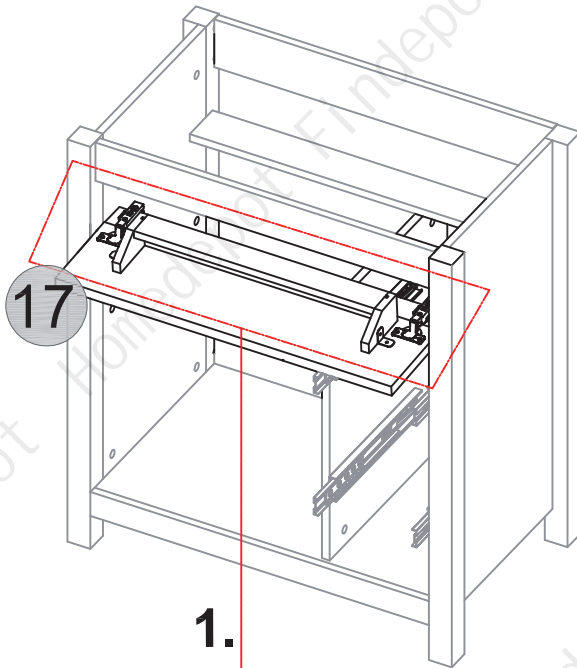

STEP 10





F x16 pcs



4*14

This is the location for the hole

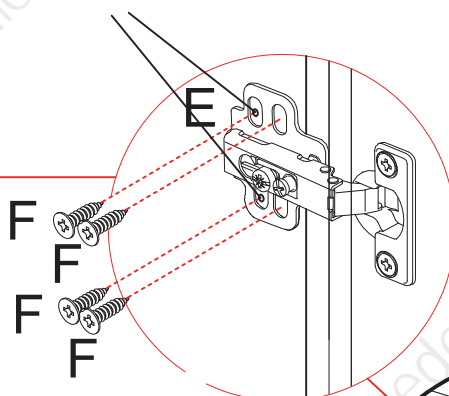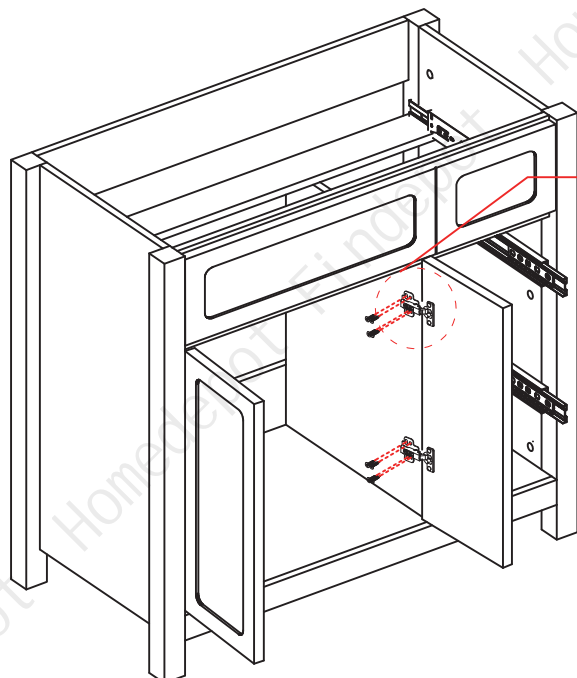



Adjust the Gap
(Left and Right)

Adjust Height
(Up and Down)


Manual drilling is required to install
this two screws

Adjust the Depth
(Forward and Backward)

STEP 11

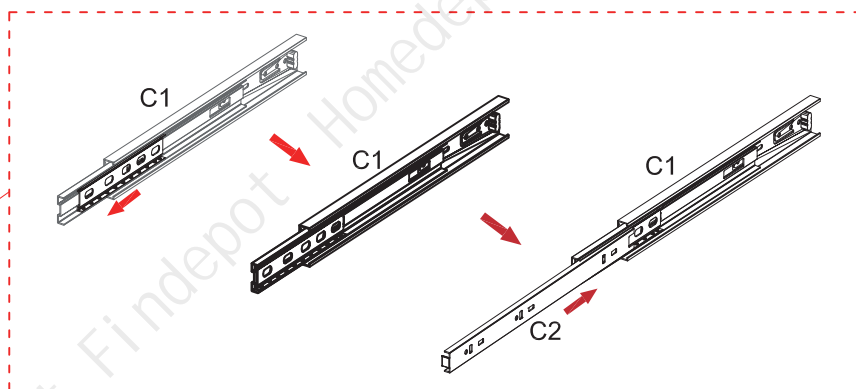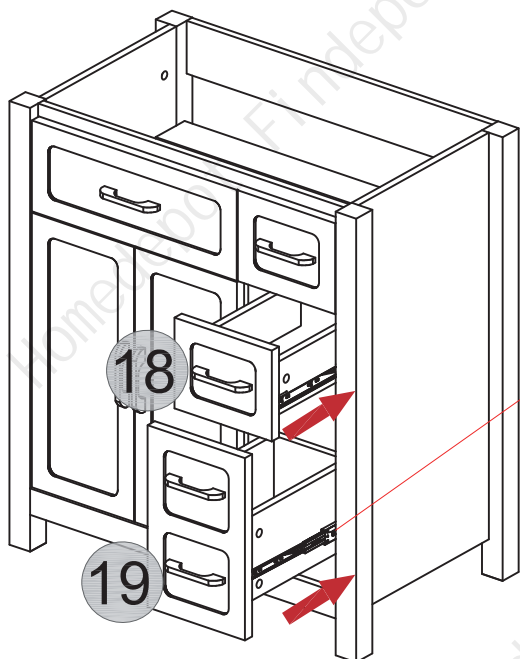


HINGE ADJUSTMENTS

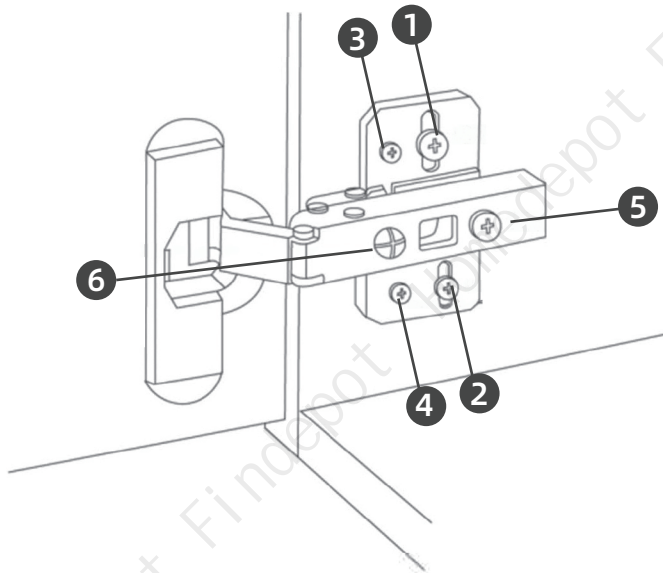


1 Height Adjustment by Screws No. 1, 2, 3, and 4.

- Loosen all screws located on the sideboards.
- Move the door to the desired height.
- Tighten all screws securely.

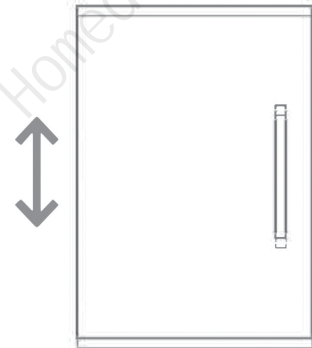

2 Forward and Backward Adjustment by Screw No. 5:

- Loosen the screw found on the hinge.
- Position the door in the appropriate location.
- Tighten the screw to secure the door.

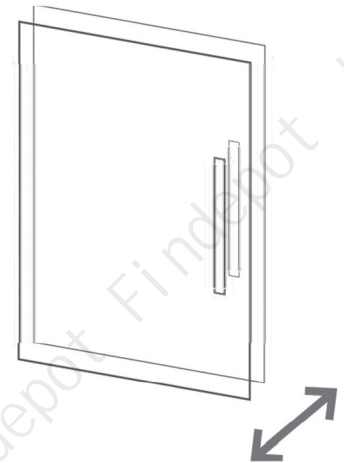

3 Sideways/Tilt Adjustment by Screw No. 6:

- Turn the screw clockwise to shift the door further away from the cabinet sideboard.
- Turn the screw counterclockwise to bring the door closer to the cabinet sideboard.

