



RANGER

SCAN TO WATCH  
THE INSTALL VIDEO



## POLARIS® RANGER SUBWOOFER OUTPUT HARNESS

PART #: UTVS-RNG-RC-SUB-OUT



1  
PULL UP ON THE REAR DRIVER SIDE  
SEAT TO REMOVE THE BOTTOM HALF



2  
REMOVE 4 BOLTS IN SEAT  
MOUNT AS SHOWN




3  
REMOVE ENTIRE REAR DRIVER  
SIDE SEAT FROM CAR



4  
REMOVE OEM PLUG SHOWN HERE



5  
PLUG INTO THE SUBWOOFER HARNESS

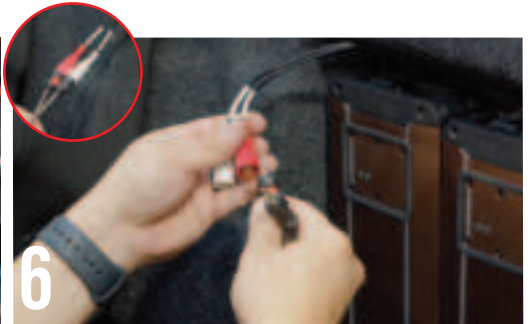

6  
MAKE CONNECTIONS TO AMPLIFIER



7  
CONNECT YOUR REMOTE WIRE  
AS SHOWN