


Register your product online at

www.scosche.com/register



PSQ3-SP

POWERSPORTS QUICK CHARGE PORT

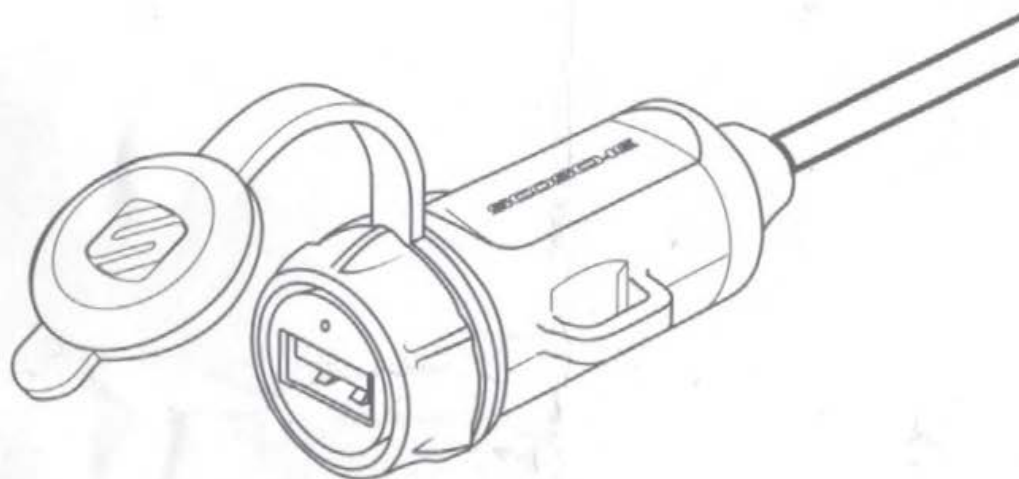

STOP

IMPORTANT!

DO NOT RETURN PRODUCT TO THE RETAILER

IF YOU NEED ASSISTANCE OR REPLACEMENT PARTS CALL US TOLL FREE: 1-800-363-4490 x1

HOURS: MON-FRI 8AM-5:30PM (PST) SATURDAY 8AM-2PM (PST)


LIABILITY DISCLAIMER

This Instruction manual is based on carefully documented data and research. Scosche Industries Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the vehicle manufacturing changes or options, or damages that may occur in the vehicle during the installation of components while using this manual.


If you have any further questions, call our toll free technical help line: 1-800-363-4490 x1 or visit us online at www.scosche.com/contact

MOUNTING PREPARATION OPTION**CUSTOM INSTALL**


1. Remove the lock nut from the PSQ3.
2. Remove the weather cap from the PSQ3.

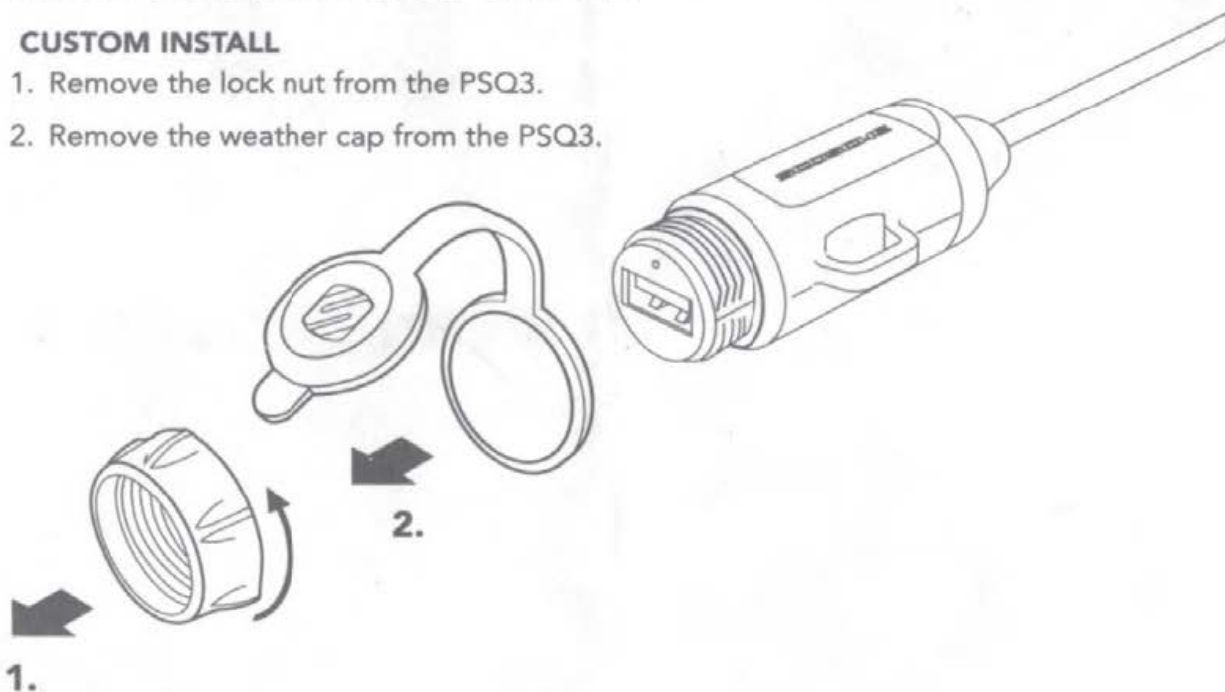

3. Choose an area of the dash that is free of obstructions behind the panel and allows the cables to reach the rear inputs of the stereo.
4. Use a hole saw or step drill bit to drill a 1" (26mm) hole for the **12V POWER** plug (Figure 4).


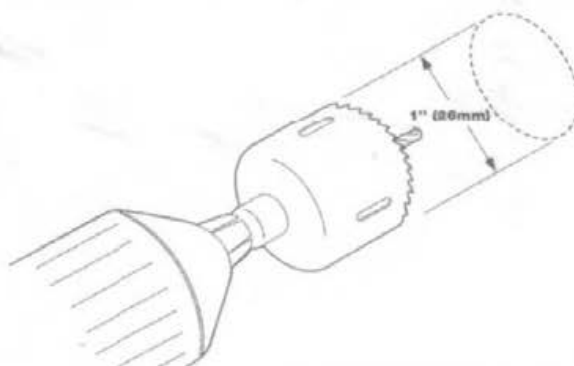


5. Feed PSQ3 from behind custom drilled panel hole.
6. Secure weather cap to the exposed PSQ3 on front of panel.
7. Secure tightening lock to the PSQ3 to secure into place

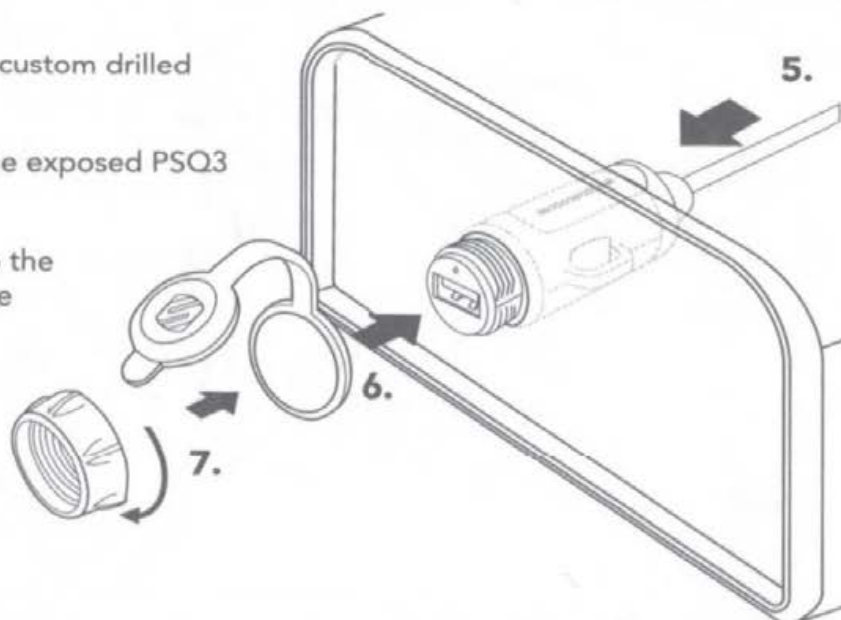

ZIP TIE MOUNTING OPTION

Secure nut to protective cover, then zip tie to the wire loom.

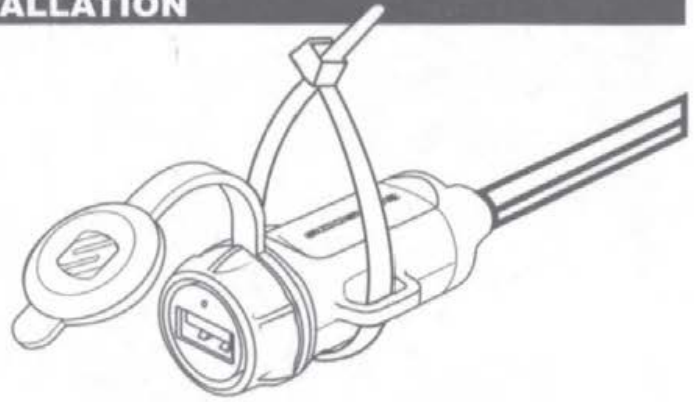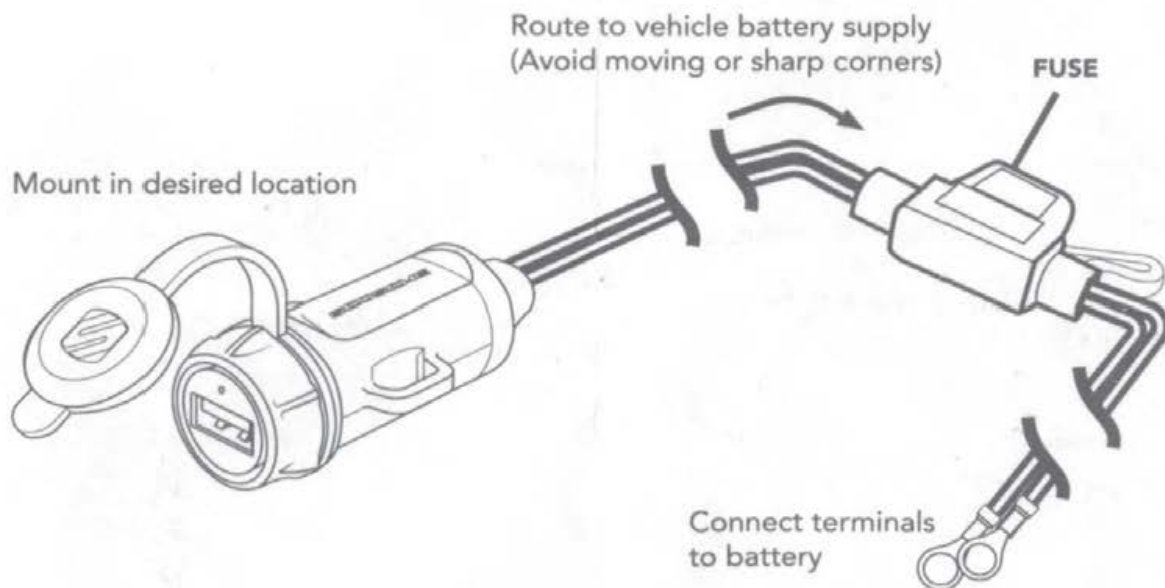**WIRING DIAGRAM**



Scosche Industries
1550 Pacific Avenue
Oxnard, California 93030
Phone: 800-363-4490x1 / 805-486-4450x1

www.scosche.com

©Scosche Industries 2021

PSQ3 5/21



Find instructions, warranty information,
and register your product online at scosche.com
customerservice@scosche.com 800-363-4490 X1 | 805-486-4450 X1